

S

E

C

T

I

O


N

2

Beechcraft

BONANZA
MODEL 35

ILLUSTRATED PARTS LIST

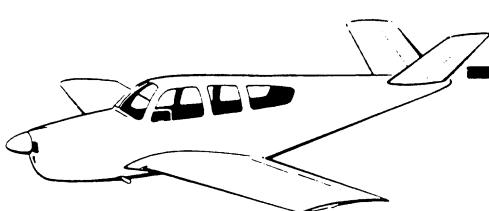

MODEL 35 THRU G35 PARTS CATALOG

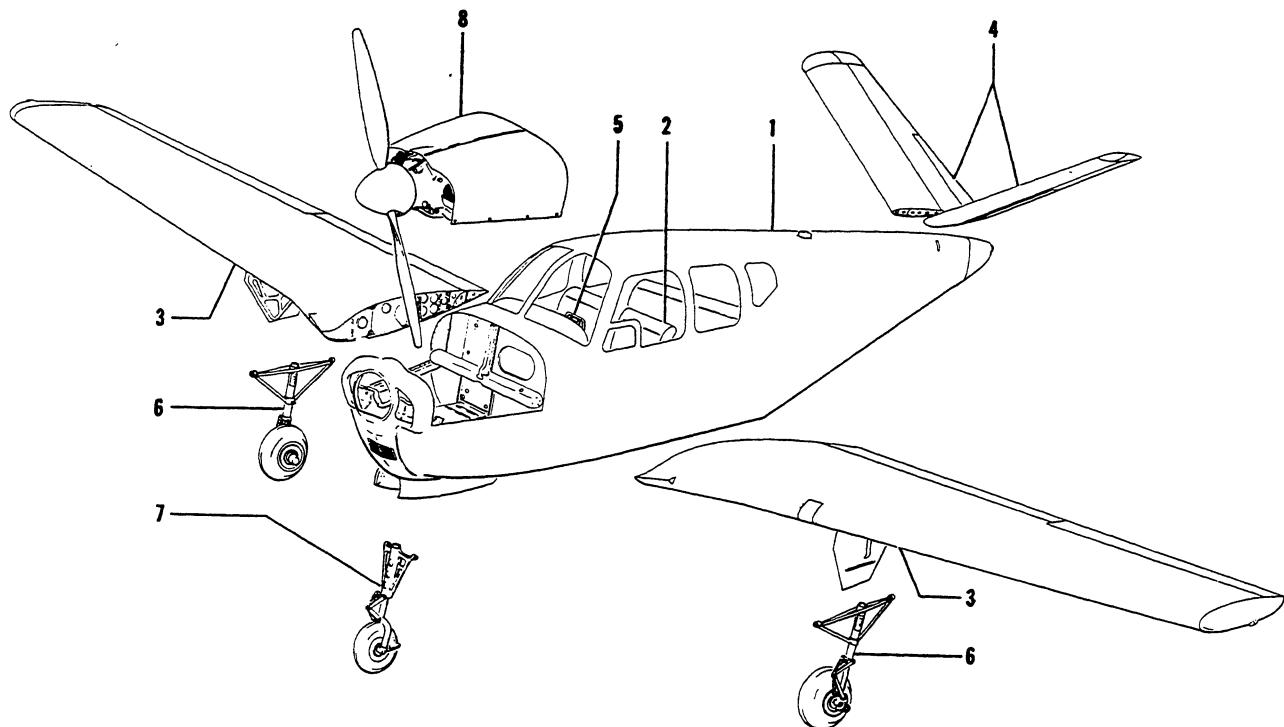


Figure 1. General Arrangement of Complete Aircraft

Index No.		Figure No.	Page No.
1. Fuselage Structure		4	2-4
2. Cabin Furnishing		105	2-186
3. Wing		8	2-13
4. Empennage Group.		12	2-27
5. Flight Controls		14	2-32
6. Main Landing Gear		43	2-72
7. Nose Landing Gear		49	2-83
8. Power Plant		72	2-120

MODEL 35 THRU G35 PARTS CATALOG

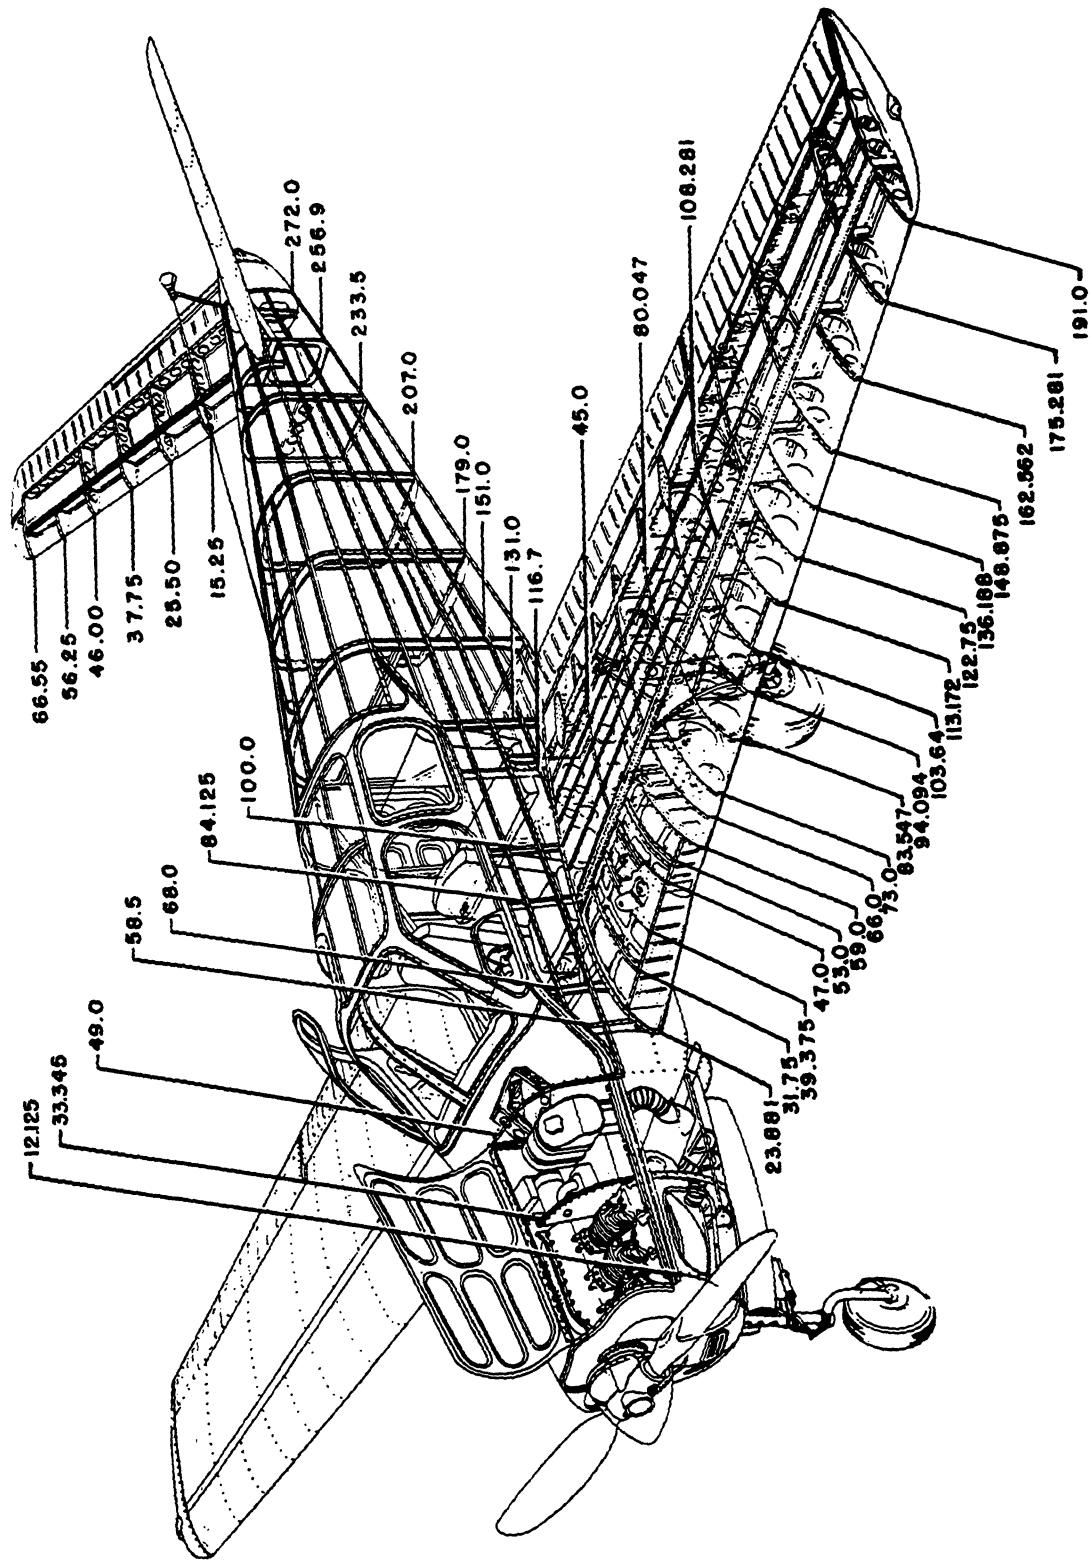


Figure 2. Station Diagram

MODEL 35 THRU G35 PARTS CATALOG

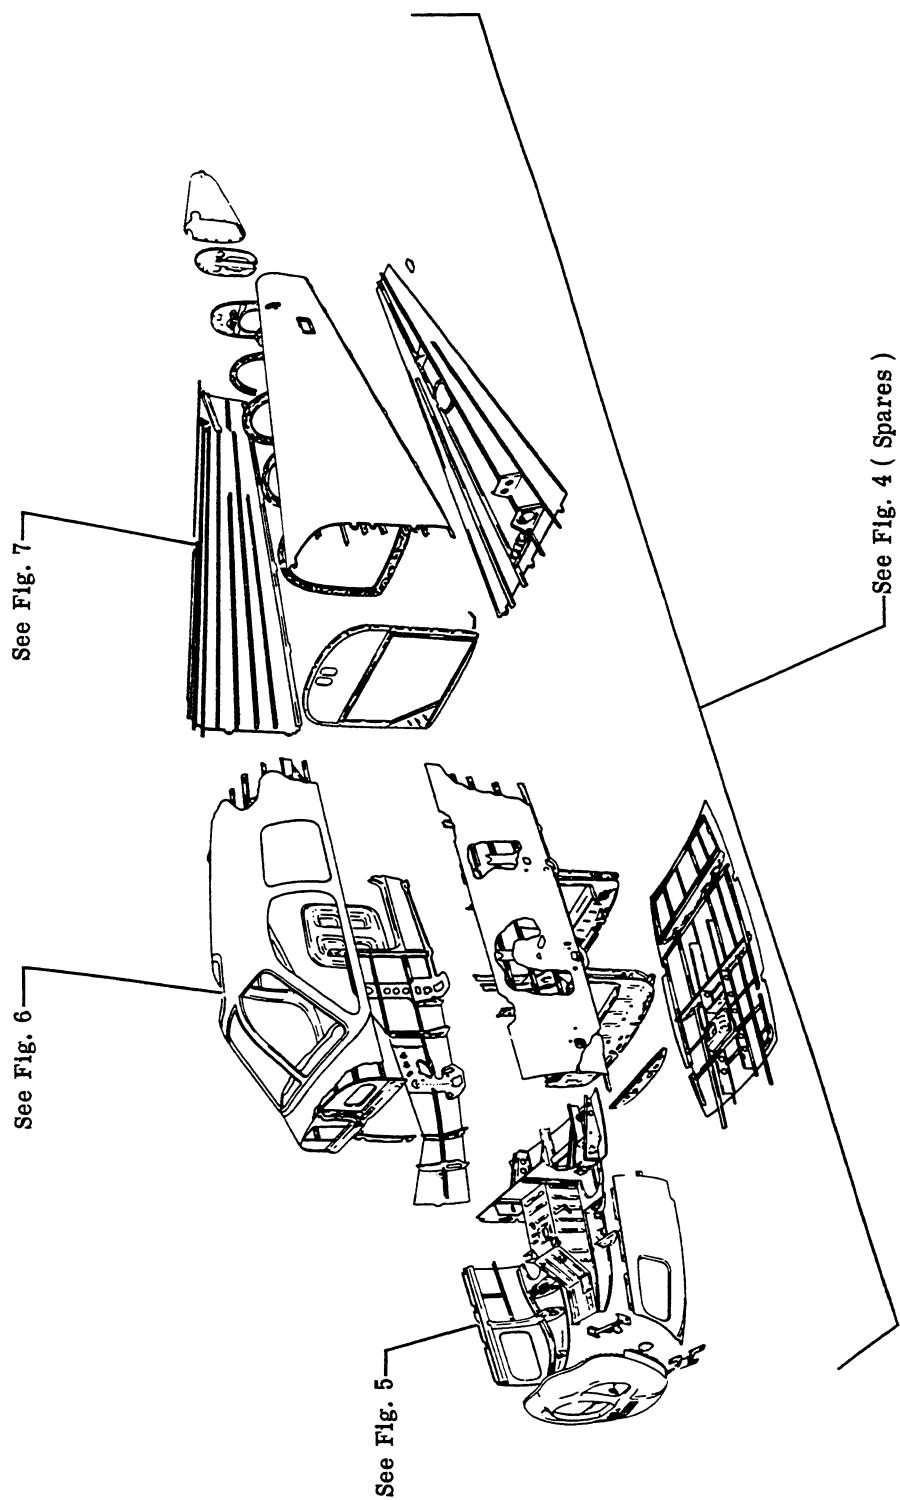


Figure 3. Fuselage Figure Breakdown

MODEL 35 THRU G35 PARTS CATALOG

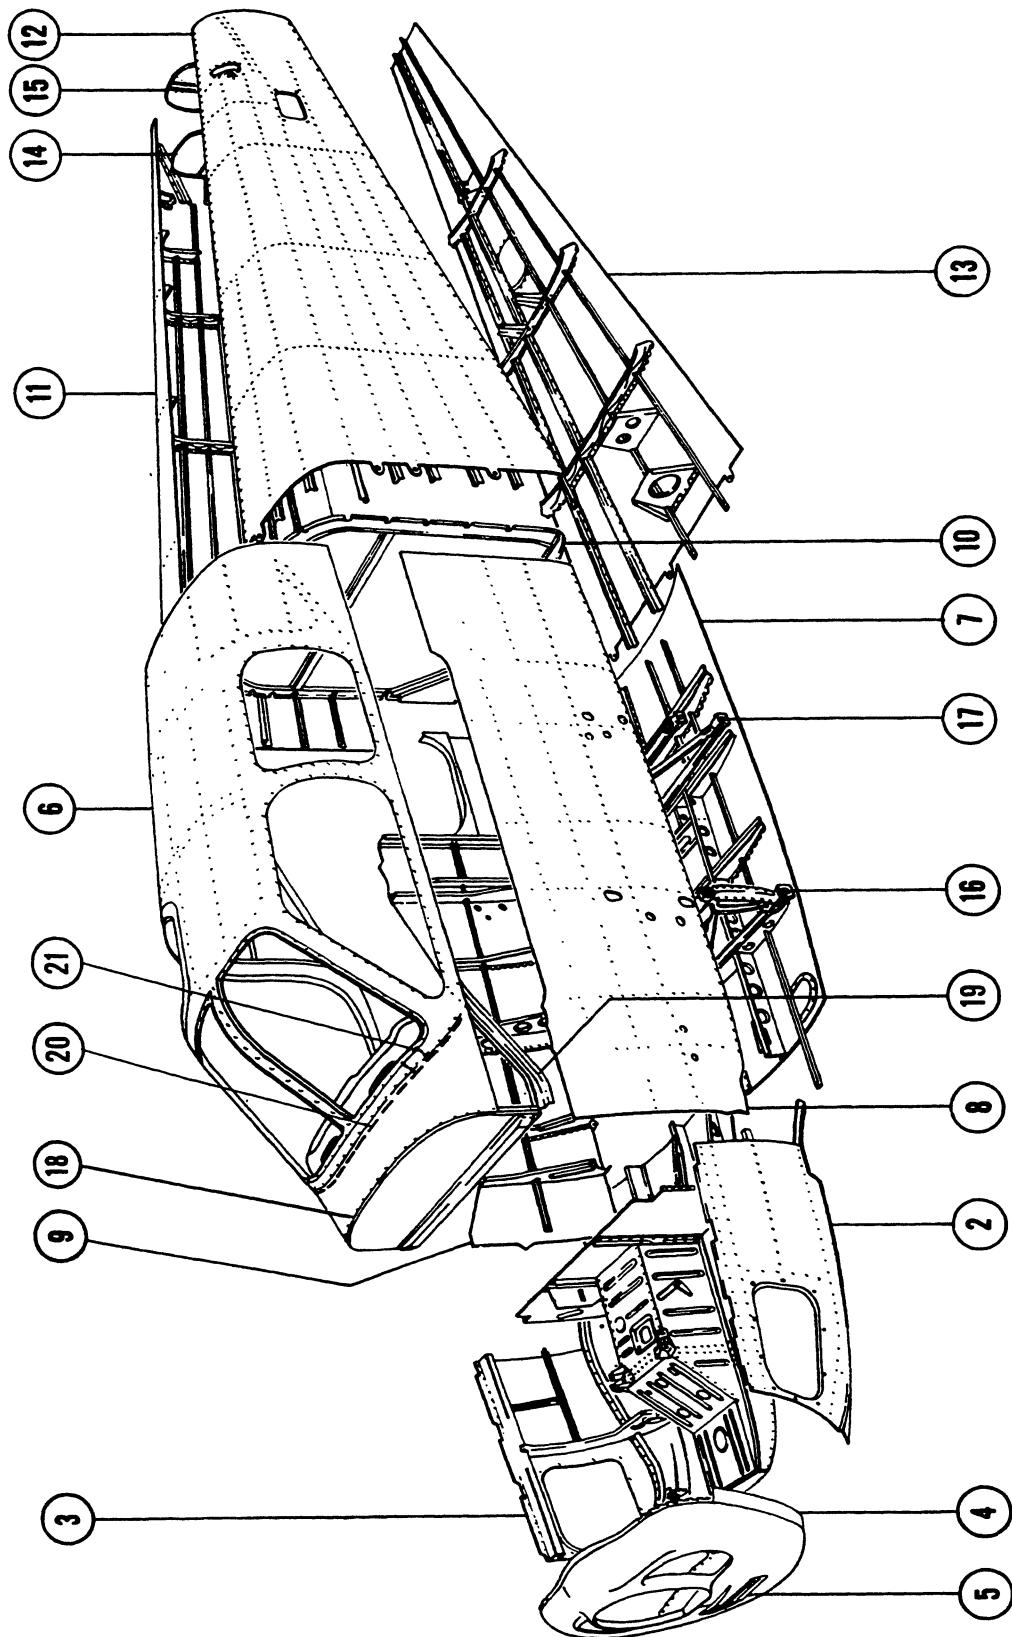


Figure 4. Fuselage Structure Assembly (Spares)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
4 - 1	35-410000-716	DELETED		1	
- 2	35-410000-616	. PANEL, ENGINE COMPARTMENT LH		1	
- 3	35-410000-617	. PANEL, ENGINE COMPARTMENT RH		1	
	35-410020-4	DOOR, ENGINE ACCESS LH		1	
	35-410020-5	DOOR, ENGINE ACCESS RH		1	
	98-2-MSP	. SPRING, FASTENER		10	
	98-2-CP	. PIN		10	
	98-2-9	. STUD		10	
	48143	. PLUG, 1 INCH		1	
	51026	. PLUG, 3/4 INCH		1	
- 4	35-410001-610	COWL ASSY, NOSE.		1	A1
	35-410000 SA222	COWL ASSY, NOSE.		1	A2BCDEFG
- 5	35-410446-79	. GRILL, NOSE COWL		1	
- 6	35-410001-636	CANOPY ASSY, FUSELAGE		1	A1
	35-410000-636	CANOPY ASSY, FUSELAGE		1	A2BCDE
	35-410000-120	CANOPY ASSY, FUSELAGE		1	FG
- 7	35-410001-634	PANEL ASSY, CABIN BOTTOM		1	A1
	35-410000-634	PANEL ASSY, CABIN BOTTOM		1	A2BCDE
- 8	35-410001-632	PANEL ASSY, CABIN LH		1	A1
	35-410000-632	PANEL ASSY, CABIN LH		1	A2BCDE
- 9	35-410001-633	PANEL ASSY, CABIN RH		1	A1
	35-410000-633	PANEL, CABIN RH		1	A2BCDE
- 10	35-410160-614	BULKHEAD ASSY, STA 151 MATING		1	
- 11	35-410001-663	PANEL ASSY, REAR RH		1	A1
	35-410000-663	PANEL ASSY, REAR RH		1	A2BCDE
- 12	35-410001-662	PANEL ASSY, REAR LH		1	A1
	35-410000-662	PANEL ASSY, REAR RH		1	A2BCDE
- 13	35-410001-664	PANEL ASSY, TAIL BOTTOM		1	A1
	35-410000 SA64	PANEL ASSY, TAIL BOTTOM		1	A2BCDE
- 14	35-410120-602	BULKHEAD ASSY, STA 256.9		1	
- 15	35-410110-602	BULKHEAD ASSY, STA 272		1	
- 16	35-410030	TRUSS ASSY, FUSELAGE FRONT		1	A1
	35-410217-602	STRUCTURE, FRONT SPAR CARRY THRU		1	A2BCDE
- 17	35-410040	TRUSS ASSY, FUSELAGE REAR		1	A1
	35-410158-602	STRUCTURE, REAR SPAR CARRY THRU		1	A2BCDE
	35-400213	FITTING, TAIL TIE DOWN		1	
- 18	35-410006-10	SKIN ASSY		1	AB
	35-410006-14	SKIN ASSY		1	
- 19	35-410038-68	LONGERON, LH		1	
	35-410000-6	LONGERON, RH		1	
- 20	35-410038-62	HAT SECTION		1	
- 21	35-410038-64	SPLICER, LH		1	
	35-410038-65	SPLICER, RH		1	

MODEL 35 THRU G35 PARTS CATALOG

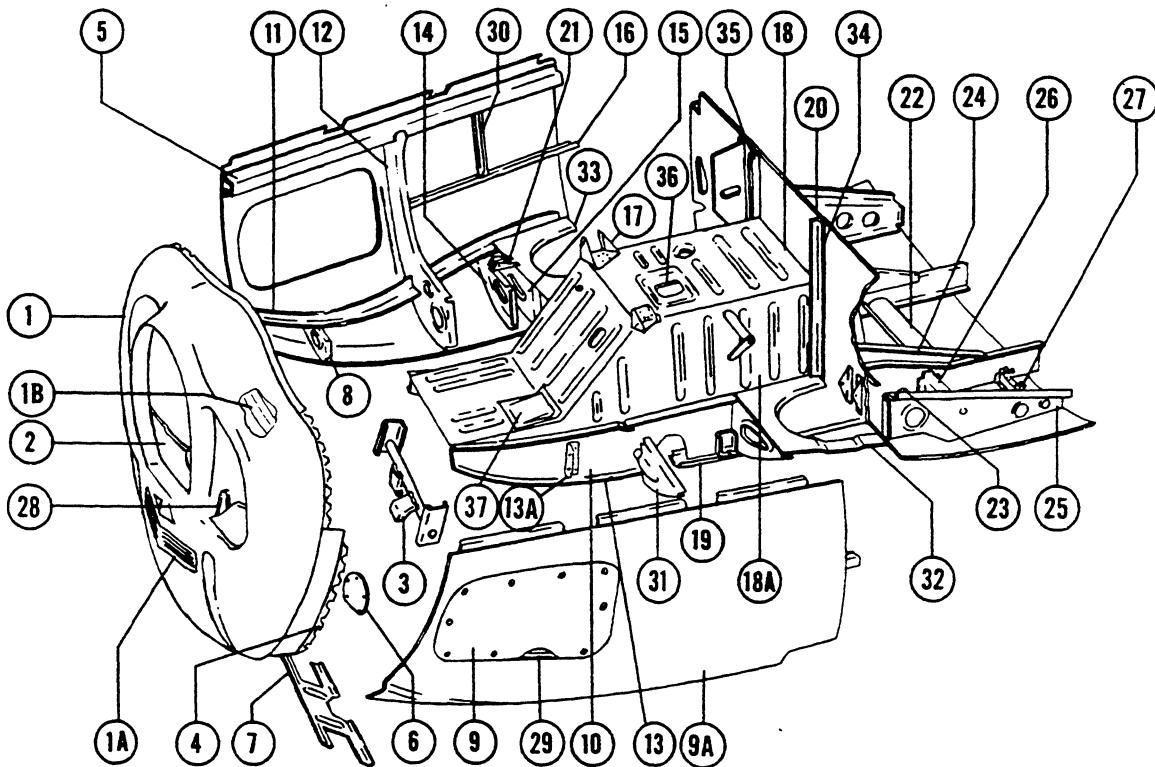


Figure 5. Fuselage Nose Section

FIG. & INDEX NO.	PART NO.	DESCRIPTION						UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6		
-	1 35-410446-45	NOSE ASSY, COWL / SHELL ONLY/							1
-	1A 35-410446-79	GRILL		1
-	1B 35-910226-2	CHANNEL, NOSE COWL		1
-	2 35-415348	PAN ASSY, NOSE COWL		1
	35-410384	PAN ASSY, NOSE COWL		1
-	3 35-825008	SUPPORT ASSY		1
-	4 35-415346	BULKHEAD ASSY		1
	35-410385	BULKHEAD ASSY		A3A33
	45-410385	BULKHEAD ASSY		A34BCDEFG
-	5 35-410000-44	LONGERON, LH		1
	35-410000-45	LONGERON, RH		1
-	6 35-410390	COVER		1
-	7 35-415349	PLATE		1
-	8 35-415352	BULKHEAD ASSY, LH		1
	35-415352-1	BULKHEAD ASSY, RH		1
-	9 35-410020-4	DOOR ASSY, LH		1
	35-410020-5	DOOR ASSY, RH		1
-	9A 35-410452-142	SKIN, LH / CUT ACCESS DOOR AT INSTL/		1
	35-410452-143	SKIN, RH / CUT ACCESS DOOR AT INSTL/		1
-	10 35-415343-602	KEEL ASSY, LH		1
	35-415343-603	KEEL ASSY, RH		1
-	11 35-410001-26	ANGLE, LH		1
	35-410001-27	ANGLE, RH		1
-	12 35-415340	BULKHEAD, LH		1
	35-415340-1	BULKHEAD, RH		1
-	13 35-415343-6	ANGLE, LH		1
	35-415343-7	ANGLE, RH		1
-	13A 35-415343-14	ANGLE, LH	2	A2BCDEFG
	35-415343-15	ANGLE, RH		A2BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
5 - 14	35-415341	BULKHEAD,LH	1	
	35-415341-1	BULKHEAD,RH	1	
- 15	35-415342	BULKHEAD,LH	1	
	35-415342-1	BULKHEAD,RH	1	
- 16	35-410001-24	STRINGER,LH	1	A1
	35-410001-25	STRINGER,RH	1	A1
	35-410000-24	STRINGER,LH	1	A2BCDEFG
	35-410000-25	STRINGER,RH	1	A2BCDEFG
- 17	35-415377	MOUNT,REAR ENGINE	2	
	35-415364	MOUNT,FWD ENGINE LH	1	
	35-415364-1	MOUNT,FWD ENGINE RH	1	
	35-415350 SA2	COVER ASSY.	1	A3
	35-415350-602	COVER ASSY.	1	A23BCDEFG
	35-415350-6	• ANGLE,LH.	1	
	35-415350-7	• ANGLE,RH.	1	
	35-415350-8	• FORMER,LH	1	
	35-415350-9	• FORMER,RH	1	
- 18	35-415350 SA102	• SKIN ASSY,TOP	1	
	35-415350-2	• SKIN, TOP	1	
- 18A	35-415350-4	• SKIN,LH	1	
	35-415350-28	• SKIN,RH	1	
- 19	35-415343-24	STIFFENER,LH.	1	
	35-415343-27	STIFFENER,RH.	1	
- 20	35-415330 SA2	BULKHEAD ASSY,LOWER FIREWALL	1	
- 21	35-410123	BRACKET	1	ABCDE5
	35-410123-1	BRACKET	1	ABCDE5
- 22	35-410107	SUPPORT	1	
	35-410067	GUARD	2	
	35-410106	BRACKET	2	
- 23	35-400359-10	SUPPORT ASSY,PILOTS SIDE	1	
	35-400359-12	SUPPORT ASSY,COPILOTS SIDE	1	
- 24	35-410035	ANGLE,LH.	1	
	35-410035-1	ANGLE,RH.	1	
- 25	35-400364	CHANNEL ASSY,LH	1	
	35-400364-1	CHANNEL ASSY,RH	1	
- 26	35-400366	CHANNEL ASSY,LH	1	
	35-400366-1	CHANNEL ASSY,RH	1	
- 27	35-410164	STOP INSTL,RUDDER PEDAL	1	
- 28	35-910275	SUPPORT ASSY	1	
- 29	35-410020 SA2	DOUBLER,LH.	1	
	35-410020 SA3	DOUBLER,RH.	1	
- 30	35-410001-122	STIFFENER,LH.	1	
	35-410001-123	STIFFENER,RH.	1	
- 31	35-415320	BULKHEAD	1	
- 32	35-400314	REINFORCEMENT,LH	1	
- 33	35-400314-1	REINFORCEMENT,RH	1	
- 34	35-415330-36	ANGLE	1	
- 35	35-415330-37	ANGLE	1	
- 36	35-415350-14	PLATE	1	
- 37	35-415350-36	PLATE	1	

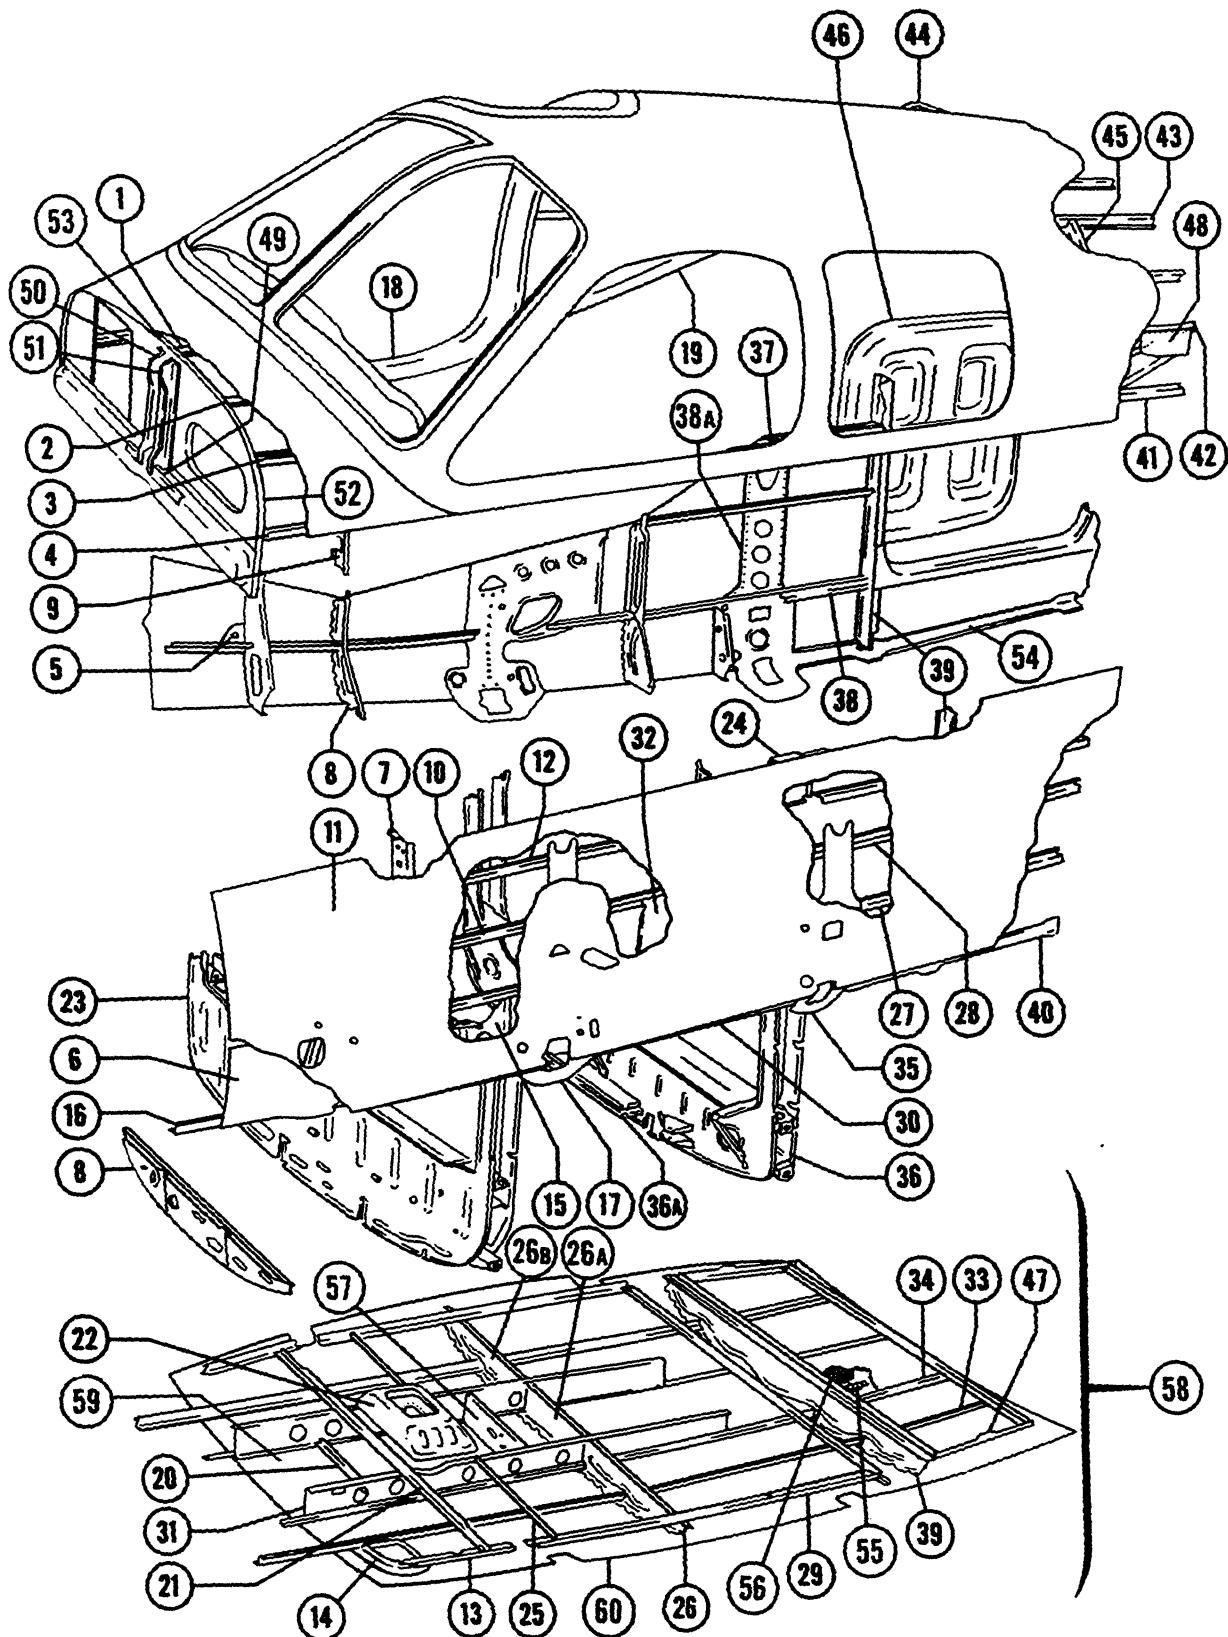


Figure 6. Fuselage Cabin Section

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
6	35-410000 SA30	SECTION,CABIN	SECTION,CABIN	1	
	35-410000 SA38	SECTION,CABIN /LESS CANOPY/	SECTION,CABIN /LESS CANOPY/	1	
- 1	35-410001-14	STRINGER,LH	STRINGER,LH	1	
	35-410001-15	STRINGER,RH	STRINGER,RH	1	
- 2	35-410001-16	STRINGER,LH	STRINGER,LH	1	
	35-410001-17	STRINGER,RH	STRINGER,RH	1	
- 3	35-410001-112	STRINGER,LH	STRINGER,LH	1	
- 4	35-410001-18	STRINGER,LH	STRINGER,LH	1	
	35-410001-22	STRINGER,RH	STRINGER,RH	1	
- 5	35-410001-134	DOUBLER,RH.	DOUBLER,RH.	1	
- 6	35-410001-136	DOUBLER,LH.	DOUBLER,LH.	1	
- 7	35-410215-8	BULKHEAD ASSY,LH.	BULKHEAD ASSY,LH.	1	
	35-410215-11	BULKHEAD ASSY,RH.	BULKHEAD ASSY,RH.	1	
- 8	35-415373	BULKHEAD ASSY	BULKHEAD ASSY	1	A2BCDEFG
	35-410210	BULKHEAD ASSY	BULKHEAD ASSY	1	A1
- 9	35-410211	BULKHEAD ASSY,RH.	BULKHEAD ASSY,RH.	1	
- 10	35-410001-40	STRINGER,LH	STRINGER,LH	1	A1
	35-410001-42	STRINGER,RH	STRINGER,RH	1	A1
- 11	35-410001-66	STRINGER,LH	STRINGER,LH	1	A1
	35-410001-68	STRINGER,RH	STRINGER,RH	1	A1
	35-410000-30	STRINGER,LH	STRINGER,LH	1	A2BCDEFG
	35-410000-31	STRINGER,RH	STRINGER,RH	1	A2BCDEFG
- 12	35-410001-20	STRINGER,LH	STRINGER,LH	1	A1
	35-410000-40	STRINGER,LH	STRINGER,LH	1	A2BCDEFG
- 13	35-410000-26	SUPPORT,LH.	SUPPORT,LH.	1	A2BCDEFG
	35-410000-29	SUPPORT,RH.	SUPPORT,RH.	1	A2BCDEFG
	35-410001-78	ANGLE	ANGLE	1	A1
- 14	35-410145 SA2	DOOR.	DOOR.	1	
- 15	35-410146	BRACKET	BRACKET	1	
- 16	35-410001-2	STRINGER,LH	STRINGER,RH	1	A1
	35-410001-3	STRINGER,RH	STRINGER,LH	1	A1
	35-410000-24	STRINGER,LH	STRINGER,RH	1	A2BCDEFG
	35-410000-25	STRINGER,RH	STRINGER,LH	1	A2BCDEFG
- 17	35-410111-2	DOUBLER,LH.	DOUBLER,RH.	1	A1
	35-410112-2	DOUBLER,RH.	DOUBLER,LH.	1	A1
	35-410217-18	GUSSET,LH	GUSSET,RH	1	A2BCDEFG
	35-410217-16	GUSSET,RH	LONGERON.	1	A2BCDEFG
- 18	35-410001-98	LONGERON.	LONGERON.	1	A1
- 19	35-410001-96	LONGERON.	LONGERON.	1	A1
	35-410000-6	LONGERON.	STIFFENER	1	A2BCDEFG
- 20	35-410001-138	STIFFENER	ANGLE ASSY.	1	
- 21	35-410272	ANGLE ASSY.	SUPPORT	1	
- 22	35-410063	SUPPORT,LANDING GEAR ACTUATOR	SUPPORT,LANDING GEAR ACTUATOR	1	A1
	35-410259	SUPPORT,LANDING GEAR ACTUATOR	SUPPORT,LANDING GEAR ACTUATOR	1	A2BCDEFG
- 23	35-410217	STRUCTURE,FRONT SPAR CARRY THRU	STRUCTURE,FRONT SPAR CARRY THRU	1	A2BCDEFG
	35-410200	BULKHEAD ASSY	BULKHEAD ASSY	1	A1
	35-410030	TRUSS ASSY,FUSELAGE FRONT	TRUSS ASSY,FUSELAGE FRONT	1	A1
- 24	35-410109	SUPPORT	ANGLE ASSY,FLOORBOARD LH.	2	
- 25	35-410279	ANGLE ASSY,FLOORBOARD RH.	ANGLE ASSY,FLOORBOARD RH.	1	A2BCDEFG
	35-410279-1	BULKHEAD ASSY,LH.	BULKHEAD ASSY,LH.	1	A2BCDEFG
- 26	35-410170 SA2	BULKHEAD ASSY,RH.	BULKHEAD ASSY,CENTER.	1	A1
	35-415374 SA2	BULKHEAD ASSY,RH.	BULKHEAD ASSY,CENTER.	1	A2BCDEFG
- 26A	35-410170 SA4	BULKHEAD ASSY,RH.	BULKHEAD ASSY,RH.	1	A1
	35-415374 SA4	BULKHEAD ASSY,RH.	BULKHEAD ASSY,RH.	1	A2BCDEFG
- 26B	35-410170 SA6	BULKHEAD ASSY,RH.	BULKHEAD ASSY,RH.	1	A1
	35-415374 SA6	BULKHEAD ASSY,RH.	BULKHEAD ASSY,RH.	1	A2BCDEFG
- 27	35-410000-8	STRINGER,LH	STRINGER,RH	1	A2BCDEFG
	35-410000-11	STRINGER,RH	STRINGER,LH	1	A2BCDEFG
	35-410001-110	STRINGER,RH	ANGLE,RH.	1	A1
- 28	35-410000-12	STRINGER,LH	ANGLE,LH.	1	A2BCDEFG
	35-410000-15	STRINGER,RH	ANGLE,RH.	1	A2BCDEFG
	35-410001-6	STRINGER,LH	ANGLE,LH.	1	A1
	35-410001-8	STRINGER,RH	ANGLE,LH.	1	A1
- 29	35-410000-22	ANGLE,LH.	ANGLE,RH.	1	A2BCDEFG
	35-410000-23	ANGLE,RH.	ANGLE,LH.	1	A2BCDEFG
	35-410001-76	ANGLE,LH.	ANGLE,LH.	1	A1

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
					A1
6	35-410001-77	ANGLE,RH.	.	1	A1
- 30	35-410000-36	STRINGER,LH.	.	1	A2BCDEFG
	35-410000-37	STRINGER,RH	.	1	A2BCDEFG
	35-410001-4	STRINGER,LH	.	1	A1
	35-410001-5	STRINGER,RH	.	1	A1
- 31	35-410330	KEEL,FUSELAGE AFT LH.	.	1	A2BCDEFG
	35-410330-1	KEEL,FUSELAGE AFT RH.	.	1	A2BCDEFG
	35-415334-2	KEEL,FUSELAGE AFT LH.	.	1	A1
	35-415334-7	KEEL,FUSELAGE AFT RH.	.	1	A1
- 32	35-410230	SUPPORT	.	1	A1
- 33	35-410000-18	STRINGER,LH	.	1	A2BCDEFG
	35-410000-21	STRINGER,RH	.	1	A2BCDEFG
	35-410001-82	STRINGER,LH	.	1	A1
	35-410001-83	STRINGER,RH	.	1	A1
- 34	35-410000-16	STRINGER,LH	.	1	A2BCDEFG
	35-410000-17	STRINGER,RH	.	1	A2BCDEFG
	35-410001-86	STRINGER,LH	.	1	A1
	35-410001-87	STRINGER,RH	.	1	A1
- 35	35-410005	DOUBLER,LH.	.	1	A1
	35-410158-10	DOUBLER,LH.	.	1	A2
	35-410005-1	DOUBLER,RH.	.	1	A1
	35-410158-11	DOUBLER,RH.	.	1	A2
- 36	35-410158	STRUCTURE,REAR SPAR CARRY THRU.	.	1	A2BCDEFG
	35-410003	BULKHEAD ASSY	.	1	A1
	35-410040	TRUSS ASSY,FUSELAGE REAR.	.	1	A1
- 36A	35-410125	BRACKET	.	1	A1
	35-410258	FITTING,AFT JACK POINT	.	1	
- 37	35-410001-50	STRINGER.	.	1	
- 38	35-410001-110	STRINGER.	.	1	A1
	35-410150-10	DOUBLER,LH.	.	1	A2
- 38A	35-410150-11	DOUBLER,RH.	.	1	A2
- 39	35-410331 SA2	BULKHEAD ASSY	.	1	A2BCDEFG
	35-410180	BULKHEAD ASSY	.	1	A1
- 40	35-410001-28	CHANNEL,LH.	.	1	
	35-410001-126	CHANNEL,RH.	.	1	
	35-410000-2	CHANNEL,LH.	.	1	A2BCDEFG
	35-410000-5	CHANNEL,RH.	.	1	A2BCDEFG
- 41	35-410001-56	STRINGER,LH	.	1	
- 42	35-410001-60	STRINGER,LH	.	1	ABCDE
	35-410001-61	STRINGER,RH	.	1	ABCDE
	35-410000-106	STRINGER,LH	.	1	FG
	35-410000-107	STRINGER,RH	.	1	FG
- 43	35-410001-64	STRINGER,LH	.	1	ABCDE
	35-410001-65	STRINGER,RH	.	1	ABCDE
	35-410000-104	STRINGER,LH	.	1	FG
	35-410000-105	STRINGER,RH	.	1	FG
- 44	35-410147	HANDLE	.	1	
- 45	35-410148	FORMER	.	1	ABCDE
- 46	35-410070-602	DOOR ASSY,BAGGAGE	.	1	
	F6605-DX2	LOCKSET,/YA/	.	1	
- 47	35-410000-32	ANGLE,LH.	.	1	A2BCDEFG
	35-410000-35	ANGLE,RH.	.	1	A2BCDEFG
	35-410001-80	ANGLE,LH.	.	1	A1
	35-410001-81	ANGLE,RH.	.	1	A1
- 48	35-410029	GUSSET	.	2	ABCDE
	35-410000-102	GUSSET	.	2	FG
	35-410000-114	CHANNEL,LH.	.	1	FG
	35-410000-115	CHANNEL,RH.	.	1	FG
- 49	35-415330-130	ANGLE	.	1	
- 50	35-415330-132	STIFFENER,RH.	.	1	
- 51	35-415330-135	STIFFENER,LH.	.	1	
	35-415330-136	CHANNEL	.	1	
	35-415381	STIFFENER ASSY	.	1	
- 52	35-415330-10	ANGLE,LH.	.	1	
- 53	35-415330-11	ANGLE,RH.	.	1	
- 54	35-410000-5	CHANNEL,RH.	.	1	
- 55	50-554105	PLATE	.	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
6 - 56	35-410000-68	REINFORCEMENT	• • • • • • • • • • • • • • • •	1	
- 57	35-410063-8	CHANNEL	• • • • • • • • • • • • • • • •	1	
- 58	35-410001 SA34	PANEL ASSY,CABIN BOTTOM SECTION	• • • • • • • • • • • • • • • •	1	A1
	35-410000 SA34	PANEL ASSY,CABIN BOTTOM SECTION	• • • • • • • • • • • • • • • •	1	A2
- 59	35-413003-6	SKIN,CENTER	• • • • • • • • • • • • • • • •	1	A,B,C-14
	35-413003-16	SKIN,CENTER	• • • • • • • • • • • • • • • •	1	C-15, D,E,F,G
- 60	35-413003-10	SKIN,LH	• • • • • • • • • • • • • • • •	1	A,B,C-14
	35-413003-18	SKIN,LH	• • • • • • • • • • • • • • • •	1	C-15, D,E,F,G
	35-413003-8	SKIN,RH	• • • • • • • • • • • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

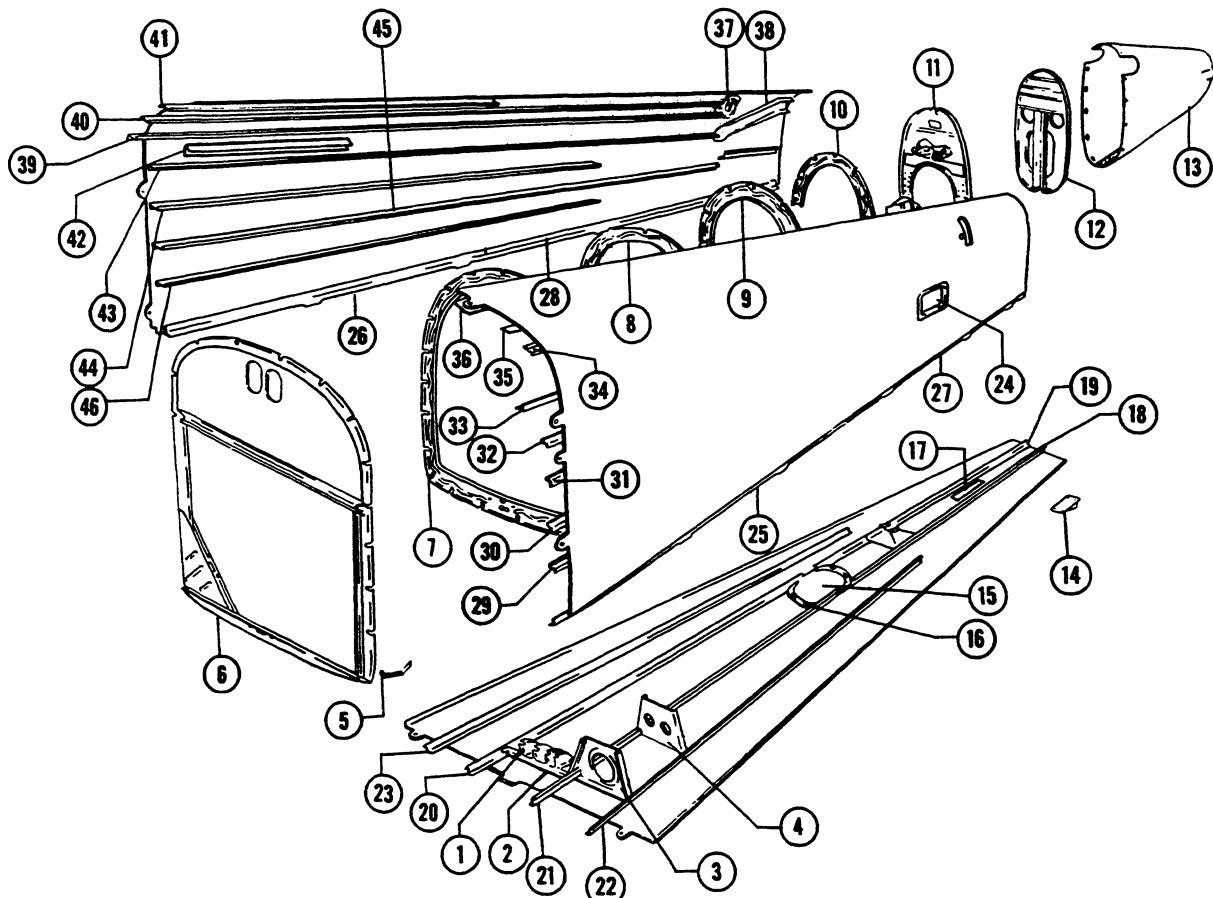


Figure 7. Fuselage Rear Section

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
7	35-410000 SA60	SECTION, TAIL.								1	
- 1	35-410015	BRACKET, LH.								2	
	35-410015-1	BRACKET, RH.								2	
- 2	35-410016	ANGLE								1	
- 3	35-410104	SUPPORT								1	
- 4	35-410103	SUPPORT								1	
- 5	35-410372	SUPPORT								1	A2BCDEFG
- 6	35-410160	BULKHEAD ASSY, STA 151								1	
- 7	35-410150-4	BULKHEAD ASSY, LOWER STA 179								1	
	35-410150-2	FRAME, LH.								1	
	35-410150-6	FRAME, RH.								1	
- 8	35-410140-4	BULKHEAD ASSY, LOWER STA 207								1	
	35-410140-2	FRAME, LH.								1	
	35-410140-6	FRAME, RH.								1	
- 9	35-410130-4	BULKHEAD ASSY, LOWER STA 233.5								1	
	35-410130-2	FRAME, LH.								1	
	35-410130-6	FRAME, RH.								1	
- 10	35-410165	BULKHEAD ASSY, STA 246.3								1	
- 11	35-410379 SA2	BULKHEAD ASSY, STA 256.9								1	C,D,E,F,G
	35-410120 SA2	BULKHEAD ASSY, STA 256.9								1	A,B
- 12	35-410378 SA2	BULKHEAD ASSY, STA 272								1	C,D,E,F,G
	35-410110 SA2	BULKHEAD ASSY, STA 272								1	A,B
- 13	35-380001	CONE ASSY								1	
- 14	35-400213	FITTING, TAIL TIE DOWN								1	
	35-410023	BULKHEAD, FWD TIE DOWN								1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
7	35-410011-4	DOUBLER,AFT TIE DOWN.	1	
- 15	35-410011-8	DOOR.	1	AB
	35-410410-10	DOOR.	1	CDEFG
- 16	35-410011-20	DOUBLER	1	
- 17	35-410012	DOOR.	1	AB
	35-410405	DOOR.	1	CDEFG
- 18	35-410011-10	STRINGER,LH	1	
- 19	35-410011-11	STRINGER,RH	1	
- 20	35-410011-12	STRINGER,RH	1	
- 21	35-410011-13	STRINGER,LH	1	
- 22	35-410011-14	STRINGER,LH	1	
- 23	35-410011-15	STRINGER,RH	1	
- 24	35-410007-6	DOOR.	1	
- 25	35-410001-30	CHANNEL,LH.	1	
- 26	35-410001-128	CHANNEL,RH.	1	
- 27	35-410001-132	CHANNEL,LH.	1	
- 28	35-410001-133	CHANNEL,RH.	1	
- 29	35-410007-20	STRINGER,LH	1	
- 30	35-410007-18	STRINGER,LH	1	
- 31	35-410007-16	STRINGER,LH	1	
- 32	35-410007-14	STRINGER,LH	1	
- 33	35-410008-16	STRINGER,LH	1	
- 34	35-410008-14	STRINGER,LH	1	
- 35	35-410008-12	STRINGER,LH	1	
- 36	35-410008-10	STRINGER,LH	1	
- 37	35-410008-4	BRACKET,LH.	1	
	35-410008-5	BRACKET,RH.	1	
- 38	35-410066	CHANNEL,LH.	1	
	35-410066-1	CHANNEL,RH.	1	
- 39	35-410009-10	STRINGER.	1	
- 40	35-410009-8	STRINGER.	1	
- 41	35-410009-6	STRINGER.	1	
- 42	35-410009-20	STRINGER.	1	
	35-410008-24	STRINGER,LH	1	
- 43	35-410010-8	STRINGER,RH	1	
- 44	35-410010-10	STRINGER.	1	
- 45	35-410010-12	STRINGER.	1	
- 46	35-410010-14	STRINGER.	1	

MODEL 35 THRU G35 PARTS CATALOG

BLANK PAGE

MODEL 35 THRU G35 PARTS CATALOG


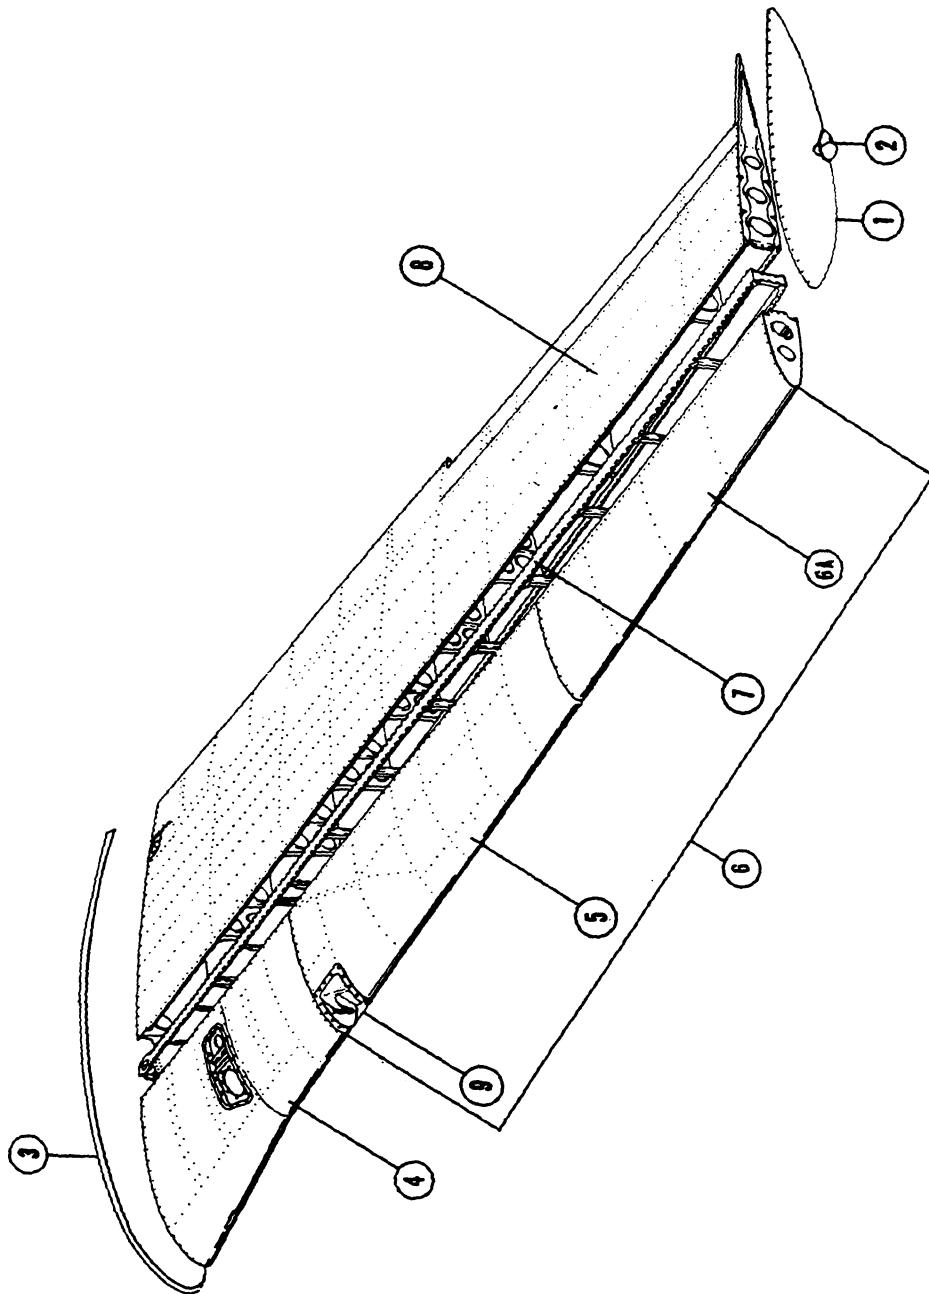


Figure 8. Wing Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
8	35-115001-602	WING ASSY,LEFT.	• • • • • • •	1	A1
	35-115300-620	WING ASSY,LEFT.	• • • • • • •	1	A2B
	35-115300 SA120	WING ASSY,LEFT.	• • • • • • •	1	C22
	35-115300 SA320	WING ASSY,LEFT.	• • • • • • •	1	C23D1
	35-115388 SA101	WING ASSY,LEFT.	• • • • • • •	1	D2E
	35-115388 SA103	WING ASSY,LEFT.	• • • • • • •	1	FG
	35-115001-603	WING ASSY,RIGHT	• • • • • • •	1	A1
	35-115300 SA231	WING ASSY,RIGHT	• • • • • • •	1	A2B
	35-115300 SA130	WING ASSY,RIGHT	• • • • • • •	1	C22
	35-115300 SA331	WING ASSY,RIGHT	• • • • • • •	1	C23D1
	35-115388 SA102	WING ASSY,RIGHT	• • • • • • •	1	D2E
	35-115388 SA104	WING ASSY,RIGHT	• • • • • • •	1	FG
- 1	35-175001 SA2	TIP ASSY,LH WING /WITH POSITION LIGHT/	• • • • • • •	1	
	35-175001 SA3	TIP ASSY,RH WING /WITH POSITION LIGHT/	• • • • • • •	1	
	35-175001	TIP ASSY,LH WING /LESS POSITION LIGHT/	• • • • • • •	1	
	35-175001-1	TIP ASSY,RH WING /LESS POSITION LIGHT/	• • • • • • •	1	
	AN526-832R7	SCREW,WING TIP ATTACHING.	• • • • • • •	20	
	AN526-832R8	SCREW,WING TIP ATTACHING.	• • • • • • •	7	
- 2	35-361702-2	LAMP ASSY,RED WING TIP.	• • • • • • •	1	
	35-361702-4	LAMP ASSY,GREEN WING TIP.	• • • • • • •	1	
	AN3122-1512	BULB,WING TIP LAMP.	• • • • • • •	1	
	AN3042-1	LENS,RED WING TIP LIGHT	• • • • • • •	1	
	AN3042-2	LENS,GREEN WING TIP LIGHT	• • • • • • •	1	
	35-361703	INDICATOR,WING TIP LIGHT	• • • • • • •	1	
	35-361701-1	INDICATOR,WING TIP LIGHT	• • • • • • •	1	
- 3	35-115001-8	EXTRUSION,SEAL UPPER RUBBER	• • • • • • •	2	
	35-115382	TIP,LH.	• • • • • • •	1	CDEFG
	35-115382-1	TIP,RH.	• • • • • • •	1	CDEFG
	35-115381	FILLET ASSY,LH.	• • • • • • •	1	CDEFG
	35-115381-1	FILLET ASSY,RH.	• • • • • • •	1	CDEFG
	35-115010 SA20	EDGE ASSY,LH LEADING.	• • • • • • •	1	AB
	35-115010 SA31	EDGE ASSY,RH LEADING.	• • • • • • •	1	ABC22
	35-115010 SA224	EDGE ASSY,LH LEADING.	• • • • • • •	1	C22
	35-115010 SA324	EDGE ASSY,RH LEADING.	• • • • • • •	1	C23D1
	35-115010 SA341	EDGE ASSY,RH LEADING.	• • • • • • •	1	C23D1
	35-115010 SA151	EDGE ASSY,LH LEADING.	• • • • • • •	1	D2E
	35-115010 SA152	EDGE ASSY,RH LEADING.	• • • • • • •	1	D2E
	35-115010 SA344	EDGE ASSY,LH LEADING.	• • • • • • •	1	FG
	35-115010 SA345	EDGE ASSY,RH LEADING.	• • • • • • •	1	FG
- 4	35-115010 SA110	EDGE ASSY,LH INBD LEADING	• • • • • • •	1	ABC22
	35-115010 SA111	EDGE ASSY,RH INBD LEADING	• • • • • • •	1	ABC22
	35-115010 SA10	EDGE ASSY,LH INBD LEADING	• • • • • • •	1	C23D1
	35-115010 SA11	EDGE ASSY,RH INBD LEADING	• • • • • • •	1	C23D1
	35-115010 SA176	EDGE ASSY,LH INBD LEADING	• • • • • • •	1	D2E
	35-115010 SA177	EDGE ASSY,RH INBD LEADING	• • • • • • •	1	D2E
	35-115010 SA26	EDGE ASSY,LH INBD LEADING	• • • • • • •	1	FG
	35-115010 SA27	EDGE ASSY,RH INBD LEADING	• • • • • • •	1	FG
- 5	35-115010 SA52	EDGE ASSY,LH CENTER LEADING /STA 66-136/	• • • • • • •	1	
	35-115010 SA55	EDGE ASSY,RH CENTER LEADING /STA 66-136/	• • • • • • •	1	
- 6	35-115010 SA112	EDGE ASSY,LH OUTBD LEADING /STA 66-191/	• • • • • • •	1	AB
	35-115010 SA12	EDGE ASSY,LH OUTBD LEADING /STA 66-191/	• • • • • • •	1	CDEFG
	35-115010 SA13	EDGE ASSY,RH OUTBD LEADING /STA 66-191/	• • • • • • •	1	
- 6A	35-115010 SA53	EDGE ASSY,LH OUTBD LEADING /STA 136-191/	• • • • • • •	1	
	35-115010 SA54	EDGE ASSY,RH OUTBD LEADING /STA 136-191/	• • • • • • •	1	
- 7	35-115020	SPAR ASSY,LH FRONT.	• • • • • • •	1	A1
	35-115020-1	SPAR ASSY,RH FRONT.	• • • • • • •	1	A1
- 8	35-115001-604	SECTION ASSY,LH MAIN.	• • • • • • •	1	A1
	35-115001-605	SECTION ASSY,RH MAIN.	• • • • • • •	1	A1
	35-115388-4	WIRE,SPAR ATTACHING HINGE	• • • • • • •	2	
	35-115028-20	DOOR ASSY,LH FUEL CELL ACCESS	• • • • • • •	1	
	35-115028-21	DOOR ASSY,RH FUEL CELL ACCESS	• • • • • • •	1	
	35-115028-14	DOOR,LH FILLER NECK ACCESS	• • • • • • •	1	
	35-115028-15	DOOR,RH FILLER NECK ACCESS	• • • • • • •	1	
- 9	35-115136-2	PANE ASSY,LH LANDING LIGHT.	• • • • • • •	1	
	35-115136-3	PANE ASSY,RH LANDING LIGHT.	• • • • • • •	1	

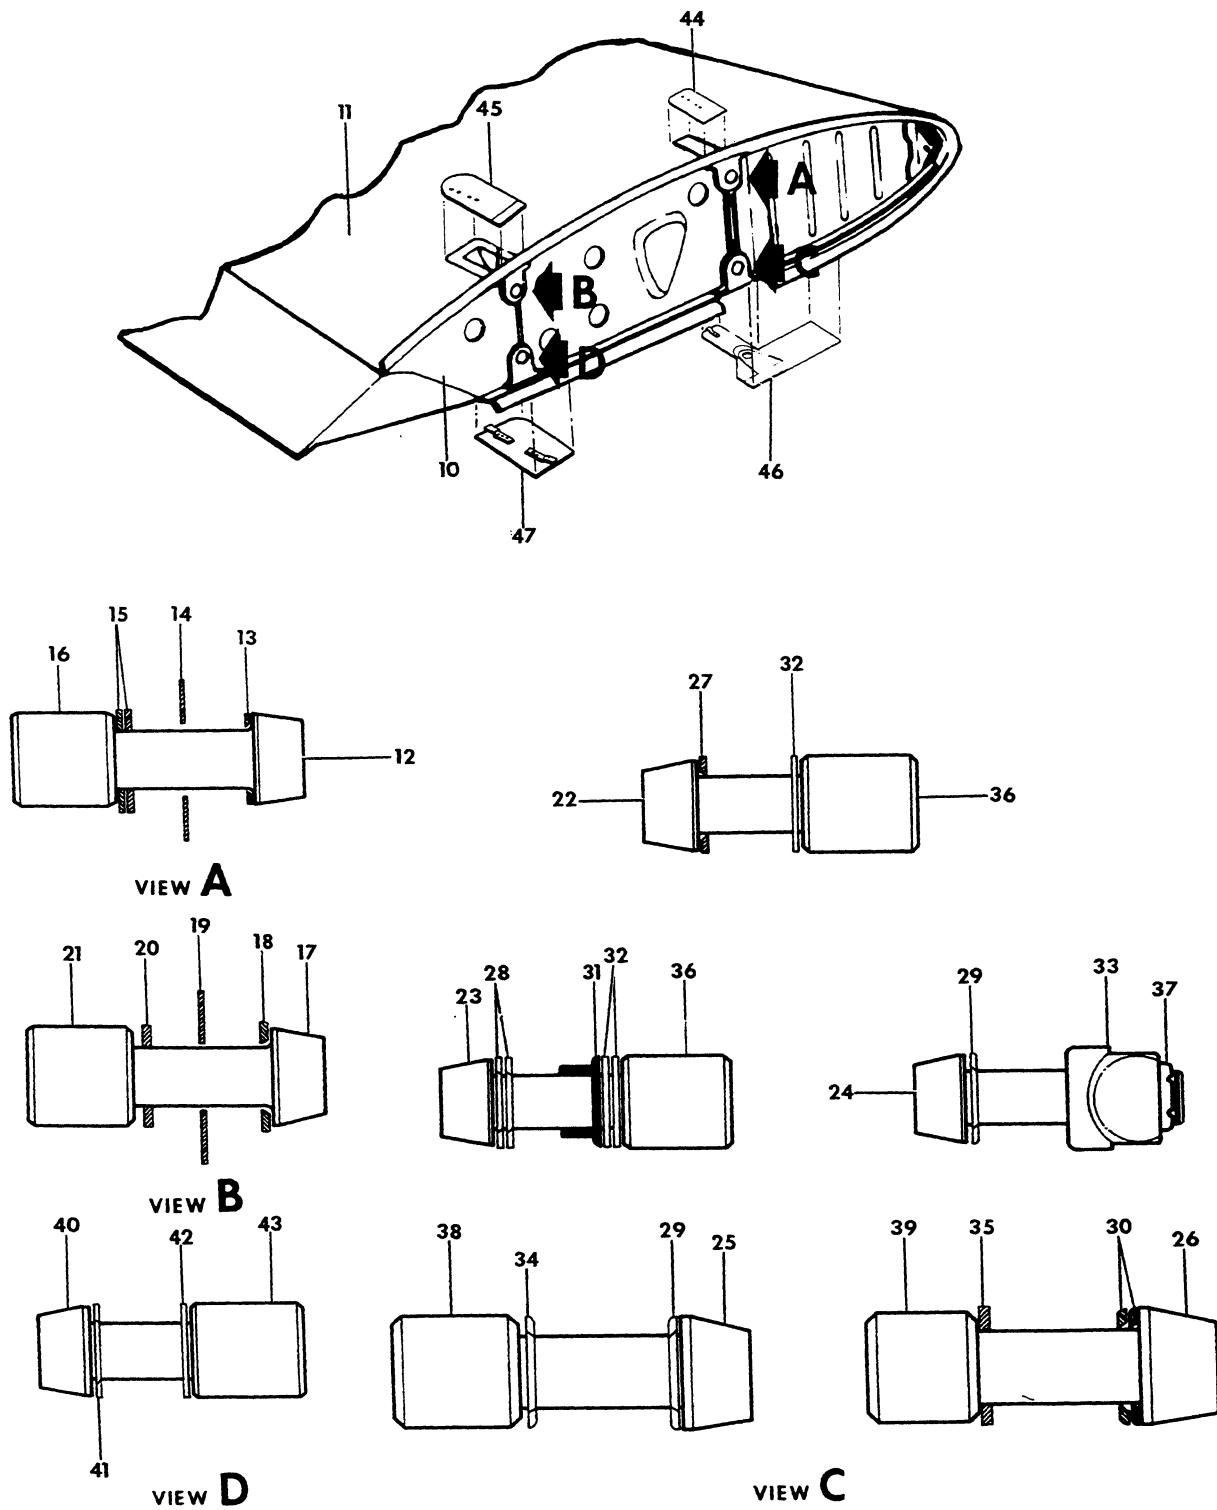

35-31-43

MODEL 35 THRU G35 PARTS CATALOG

FIG. & ITEM NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
8 - 10	35-115030	SA50	• EDGE ASSY, REAR SPAR & TRAILING.	1	AB
	35-115301	SA50	• EDGE ASSY, REAR SPAR & TRAILING.	1	CDE3
	35-115301-630		• EDGE ASSY, REAR SPAR & TRAILING.	1	E4FG
	35-115030	SA51	• EDGE ASSY, REAR SPAR & TRAILING.	1	AB
	35-115301	SA51	• EDGE ASSY, REAR SPAR & TRAILING.	1	CDE3
	35-115301-631		• EDGE ASSY, REAR SPAR & TRAILING.	1	E4FG
- 11	35-115265		• SKIN, TRAILING EDGE.	1	
	35-115265-1		• SKIN, TRAILING EDGE.	1	
- 12	NAS150-29/M/		BOLT, UPR FWD WING/W/O KIT 35-694S/	1	A1
	NAS150-33/M/		BOLT, UPR FWD WING/W/KIT 35-694S/	1	A1
	NAS150-33/M/		BOLT, UPR FWD WING	1	A2BCDEFG
- 13	NAS143-10C		WASHER/UNDER BOLT HEAD/	1	A1
	MS20002C10		WASHER/UNDER BOLT HEAD/	1	A2BCDEFG
- 14	105090A032-10J		WASHER/BETWEEN WING & CARRY THRU FITTING/	1	
- 15	NAS143-10		WASHER/UNDER NUT/	AR	A1
	MS20002-10		WASHER/UNDER NUT/	AR	A2BCDEFG
- 16	12NB108		NUT, UPPER FORWARD WING.	1	
- 17	NAS150-29/M/		BOLT, UPPER AFT.	1	A1
	NAS150-33/M/		BOLT, UPPER AFT.	1	A2BCDEFG
- 18	NAS143-10C		WASHER/UNDER BOLT HEAD/	1	A1
	35-105111		WASHER/UNDER BOLT HEAD/	1	A2BCDEFG
- 19	105090A032-10J		WASHER/BETWEEN WING & CARRY THRU FITTING/	1	
- 20	NAS143-10		WASHER/UNDER NUT/	AR	A1
	MS20002-10		WASHER/UNDER NUT/	AR	A2BCDEFG
- 21	12NB108		NUT, UPPER AFT	1	
- 22	NAS150-29/M/		BOLT, LWR FWD/W/O 35R MOD,W/O KIT 35-694S/	1	A1
- 23	MS20010-26		BOLT, LWR FWD/W/O 35R MOD,W/KIT 35-694S/	1	A1
- 24	NAS152-35/M/		BOLT, LWR FWD/W/ 35R MOD,W/O KIT 35-694S/	1	A1
- 25	NAS152-43/M/		BOLT, LWR FWD/W/ 35R MOD,W/KIT 35-694S/	1	A1
- 26	NAS152-43/M/		BOLT, LWR FWD.	1	A2BCDEFG
- 27	NAS143-10C		WASHER/UNDER BOLT HEAD/W/O 35R MOD, W/O KIT 35-694S/	1	A1
- 28	NAS143-10C		WASHER/UNDER BOLT HEAD/W/O 35R MOD, W/ KIT 35-694S/	2	A1
- 29	35-105011		WASHER/UNDER BOLT HEAD/W/ 35R MOD/	1	A1
- 30	35-105011		WASHER/UNDER BOLT HEAD/	2	A2BCDEFG
- 31	35-420010		BUSHING, FUSELAGE FITTING. /W/O 35R MOD,W/KIT 35-394S/	1	A1
- 32	NAS143-10		WASHER/UNDER NUT/W/O 35R MOD/	AR	A1
	MS20002-10		WASHER/UNDER NUT/W/O 35R MOD/	AR	A1
- 33	35-190010		WASHER/UNDER NUT/W/ 35R MOD,W/O KIT 35-394S/	1	A1
- 34	35-105011		WASHER/UNDER NUT/W/ 35R MOD,W/KIT 35-694S/	1	A1
- 35	MS20002-12		WASHER/UNDER NUT/	AR	A2BCDEFG
- 36	12NB108		NUT, LWR FWD/W/O 35R MOD/	1	A1
- 37	35-190014		NUT, LWR FWD/W/ 35R MOD,W/O KIT 35-694S/	1	A1
- 38	12NB126		NUT, LWR FWD/W/ 35R MOD,W/ KIT 35-694S/	1	A1
- 39	12NB126		NUT, LOWER FORWARD	1	A2BCDEFG
- 40	NAS150-29/M/		BOLT, LOWER AFT.	1	A1
	NAS150-35/M/		BOLT, LOWER AFT.	1	A2BCDEFG
- 41	NAS143-10C		WASHER/UNDER BOLT HEAD/	1	A1
	35-105111		WASHER/UNDER BOLT HEAD/	1	A2BCDEFG
- 42	NAS143-10		WASHER/UNDER NUT/	AR	A1
	MS20002-10		WASHER/UNDER NUT/	AR	A2BCDEFG
- 43	12NB108		NUT, LOWER AFT	1	
- 44	35-105005-10		COVER, UPPER FORWARD WING BOLT LH.	1	
	35-105005-11		COVER, UPPER FORWARD WING BOLT RH.	1	
- 45	35-105005-12		COVER, UPPER AFT WING BOLT LH.	1	
	35-105005-13		COVER, UPPER AFT WING BOLT RH.	1	
- 46	35-105005-8		COVER, LOWER FORWARD WING BOLT LH.	1	
	35-105005-9		COVER, LOWER FORWARD WING BOLT RH.	1	
- 47	35-105005-14		COVER, LOWER AFT WING BOLT LH.	1	A1
	35-105110		COVER, LOWER AFT WING BOLT LH.	1	A2BCD
	35-105005-15		COVER, LOWER AFT WING BOLT RH.	1	A1
	35-105110-1		COVER, LOWER AFT WING BOLT RH.	1	A2BCD
	35-115210-30		STRIP, STALL	1	
	119-50727		PLUG, METAL.	1	

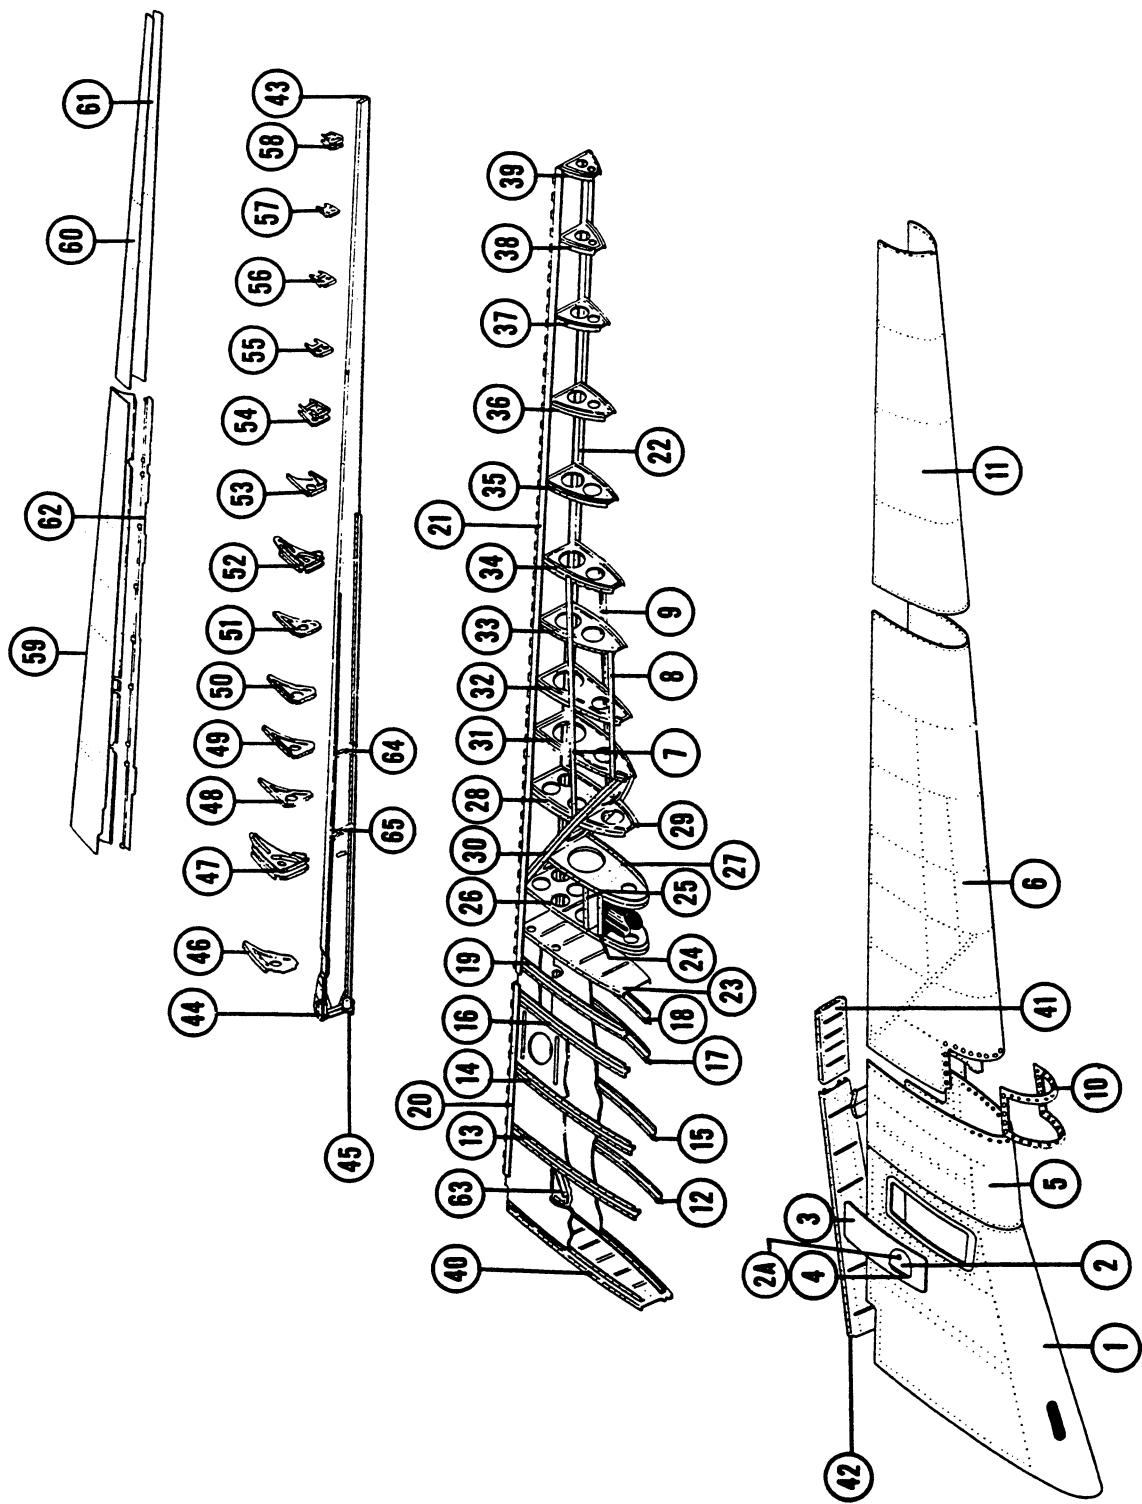


Figure 9. Wing Leading and Trailing Edge

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
9	35-115010 SA20	EDGE ASSY,LH LEADING.	.	NP	AB
	35-115010 SA31	EDGE ASSY,RH LEADING.	.	NP	ABC22
	35-115010 SA224	EDGE ASSY,LH LEADING.	.	NP	C22
	35-115010 SA324	EDGE ASSY,LH LEADING.	.	NP	C23D1
	35-115010 SA341	EDGE ASSY,RH LEADING.	.	NP	C23D1
	35-115010 SA151	EDGE ASSY,LH LEADING.	.	1	D2E
	35-115010 SA152	EDGE ASSY,RH LEADING.	.	1	D2E
	35-115010 SA344	EDGE ASSY,LH LEADING.	.	1	FG
	35-115010 SA345	EDGE ASSY,RH LEADING.	.	1	FG
	35-115010 SA110	EDGE ASSY,LH INBD LEADING	.	1	ABC22
	35-115010 SA111	EDGE ASSY,RH INBD LEADING	.	1	ABC22
	35-115010 SA10	EDGE ASSY,LH INBD LEADING	.	1	C23D1
	35-115010 SA11	EDGE ASSY,RH INBD LEADING	.	1	C23D1
	35-115010 SA176	EDGE ASSY,LH INBD LEADING	.	1	D2E
	35-115010 SA177	EDGE ASSY,RH INBD LEADING	.	1	D2E
	35-115010 SA26	EDGE ASSY,LH INBD LEADING	.	1	FG
	35-115010 SA27	EDGE ASSY,RH INBD LEADING	.	1	FG
	35-115010 SA52	EDGE ASSY,LH CENTER LEADING	.	1	
	35-115010-655	EDGE ASSY,RH CENTER LEADING	.	1	
	35-115010 SA112	EDGE ASSY,LH OUTBD LEADING	.	1	AB
	35-115010 SA12	EDGE ASSY,LH OUTBD LEADING	.	1	CDEFG
	35-115010 SA13	EDGE ASSY,RH OUTBD LEADING	.	1	
- 1	35-115028-2	SKIN ASSY,INBD LEADING EDGE LH.	.	1	ABCDEF12
	35-115028-3	SKIN ASSY,INBD LEADING EDGE RH.	.	1	ABCDEF12
	35-115028-56	SKIN ASSY,INBD LEADING EDGE LH.	.	1	F13G
	35-115028-57	SKIN ASSY,INBD LEADING EDGE RH.	.	1	F13G
- 2	35-115028-14	DOOR,LH	.	1	
	35-115028-15	DOOR,RH	/ATTACHING PARTS/	1	
	99834-1-070	STUD.	.	1	
	99833-P098	RECEPTACLE.	.	1	
	99836	PIN	.	1	
- 3	35-115028-20	DOOR,LH	.	1	
	35-115028-21	DOOR,RH	.	1	
- 4	35-115028-32	HINGE	.	1	
- 5	35-115210-46	SKIN ASSY,INBD LEADING EDGE LH STA 47 TO 66	.	1	
	35-115210-47	SKIN ASSY,INBD LEADING EDGE RH STA 47 TO 66	.	1	
- 6	35-115210-48	SKIN ASSY,CENTER LEADING EDGE LH STA 66 TO.	136.88	1	
	35-115210-49	SKIN ASSY,CENTER LEADING EDGE RH STA 66 TO.	136.88	1	
- 7	35-115210-6	STRINGER,LH	.	1	
	35-115210-7	STRINGER,RH	.	1	
- 8	35-115210-8	STRINGER,LH	.	1	
	35-115210-9	STRINGER,RH	.	1	
- 9	35-115210-36	STRINGER,LH	.	1	
	35-115210-37	STRINGER,RH	.	1	
- 10	35-115210-10	FRAME,LH	.	1	
	35-115210-11	FRAME,RH	.	1	
	AN507-8R9	SCREW	.	32	
- 11	35-115211-12	SKIN ASSY,OUTBD LEADING EDGE LH	.	1	AB
	35-115211-13	SKIN ASSY,OUTBD LEADING EDGE RH	.	1	AB
	35-115211-2	SKIN ASSY,OUTBD LEADING EDGE LH	.	1	CDEFG
	35-115211-3	SKIN ASSY,OUTBD LEADING EDGE RH	.	1	CDEFG
- 12	35-115010-2	FORMER,LOWER LH STA 31.75	.	1	
	35-115010-3	FORMER,LOWER RH STA 31.75	.	1	
- 13	35-115010-24	FORMER,UPPER LH	.	1	ABCDEF12
	35-115010-62	FORMER,UPPER LH	.	1	F13G
	35-115010-27	FORMER,UPPER RH STA 31.75	.	1	
- 14	35-115010-12	FORMER,UPPER LH STA 39.375	.	1	
	35-115010-13	FORMER,UPPER RH STA 39.375	.	1	
- 15	35-115010-4	FORMER,LOWER LH STA 39.375	.	1	
	35-115010-5	FORMER,LOWER RH STA 39.375	.	1	
- 16	35-115010-14	FORMER,UPPER LH STA 47	.	1	
	35-115010-15	FORMER,UPPER RH STA 47	.	1	
- 17	35-115010-6	FORMER,LOWER LH STA 47	.	1	
	35-115010-7	FORMER,LOWER RH STA 47	.	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
9 - 18	35-115010-8		• FORMER,LOWER LH STA 53.	.	1
	35-115010-9		• FORMER,LOWER RH STA 53.	.	1
- 19	35-115010-16		• FORMER,UPPER LH	1
	35-115010-17		• FORMER,UPPER RH	1
- 20	35-115010-18		• HINGE,UPPER LH	1
	35-115010-19		• HINGE,UPPER RH	1
	35-115010-20		• HINGE,LOWER LH	1
	35-115010-21		• HINGE,LOWER RH	1
- 21	35-115010-28		• HINGE,UPPER LH	1
	35-115010-29		• HINGE,UPPER RH	1
- 22	35-115010-30		• HINGE,LOWER LH	1
	35-115010-31		• HINGE,LOWER RH	1
- 23	35-115168		• RIB ASSY,NOSE LH STA 59	.	1
	35-115168-1		• RIB ASSY,NOSE RH STA 59	.	1
- 24	35-115017		• SUPPORT ASSY,LH	1
	35-115017-1		• SUPPORT ASSY,RH	1
- 25	35-115209		• REINFORCEMENT,LH	1
	35-115209-1		• REINFORCEMENT,RH	1
- 26	35-115143		• RIB ASSY,NOSE LH STA 66	.	1
	35-115143-1		• RIB ASSY,NOSE RH STA 66	.	1
- 27	35-115016		• RIB ASSY,NOSE LH STA 73	.	1
	35-115016-1		• RIB ASSY,NOSE RH STA 73	.	1
- 28	35-115196		• RIB ASSY,AFT LH STA 83.547	.	1
	35-115196-1		• RIB ASSY,AFT RH STA 83.547	.	1
- 29	35-115195		• RIB ASSY,NOSE LH STA 83.547	.	1
	35-115195-1		• RIB ASSY,NOSE RH STA 83.547	.	1
- 30	35-115009		• RIB ASSY,DIAGONAL LH	1
	35-115009-1		• RIB ASSY,DIAGONAL RH	1
- 31	35-115043		• RIB ASSY,NOSE LH STA 94.094	.	1
	35-115043-1		• RIB ASSY,NOSE RH STA 94.094	.	1
- 32	35-115197		• RIB ASSY,NOSE LH STA 103.641	.	1
	35-115197-1		• RIB ASSY,NOSE RH STA 103.641	.	1
- 33	35-115198		• RIB ASSY,NOSE LH STA 113.172	.	1
	35-115198-1		• RIB ASSY,NOSE RH STA 113.172	.	1
- 34	35-115046		• RIB ASSY,NOSE LH STA 122.750	.	1
	35-115046-1		• RIB ASSY,NOSE RH STA 122.750	.	1
- 35	35-115037		• RIB ASSY,NOSE LH STA 136.188	.	1
	35-115037-1		• RIB ASSY,NOSE RH STA 136.188	.	1
- 36	35-115038		• RIB ASSY,NOSE LH STA 148.875	.	1
	35-115038-1		• RIB ASSY,NOSE RH STA 148.875	.	1
- 37	35-115036		• RIB ASSY,NOSE LH STA 162.563	.	1
	35-115036-1		• RIB ASSY,NOSE RH STA 162.563	.	1
- 38	35-115035		• RIB ASSY,NOSE LH STA 175.281	.	1
	35-115035-1		• RIB ASSY,NOSE RH STA 175.281	.	1
- 39	35-115034		• RIB ASSY,NOSE LH STA 191. .	.	1
	35-115034-1		• RIB ASSY,NOSE RH STA 191. .	.	1
- 40	35-115166		• RIB ASSY,CANTED NOSE LH STA 23.881	.	1
	35-115166-1		• RIB ASSY,CANTED NOSE RH STA 23.881	.	1
- 41	35-115178		• BULKHEAD ASSY,LH	1
	35-115178-1		• BULKHEAD ASSY,RH	1
- 42	35-115177-2		• BULKHEAD ASSY,LH	1
	35-115177-3		• BULKHEAD ASSY,RH	1
- 43	35-115050-604		• SPAR ASSY,REAR LH	1
	35-115050-605		• SPAR ASSY,REAR RH	1
- 44	35-115059		• • FITTING,UPPER LH SPAR	1
	35-115059-1		• • FITTING,UPPER RH SPAR	1
- 45	35-115058		• • FITTING,LOWER LH SPAR	1
	35-115058-1		• • FITTING,LOWER RH SPAR	1
- 46	35-115096		• RIB ASSY,TRAILING EDGE LH STA 23.881	.	1
	35-115131		• RIB ASSY,TRAILING EDGE RH STA 23.881	.	1
- 47	35-115065		• BRACKET ASSY,INBD FLAP TRACK LH	1
	35-115065-1		• BRACKET ASSY,INBD FLAP TRACK RH	1
- 48	35-115121		• RIB ASSY,TRAILING EDGE LH STA 45.	1
	35-115106		• RIB ASSY,TRAILING EDGE RH STA 45.	1

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
9 - 49	35-115122-6		• RIB ASSY,TRAILING EDGE LH STA 55.5.	.	1
	35-115122-7		• RIB ASSY,TRAILING EDGE RH STA 55.5.	.	1
- 50	35-115123		• RIB ASSY,TRAILING EDGE LH STA 66.	.	1
	35-115123-1		• RIB ASSY,TRAILING EDGE RH STA 66.	.	1
- 51	35-115124		• RIB ASSY,TRAILING EDGE LH STA 80.047.	.	1
	35-115124-1		• RIB ASSY,TRAILING EDGE RH STA 80.047.	.	1
- 52	35-115052		• BRACKET ASSY,OUTBD FLAP TRACK LH.	.	1
	35-115052-601		• BRACKET ASSY,OUTBD FLAP TRACK RH.	.	1
	35-115052-1		• BRACKET ASSY,OUTBD FLAP TRACK RH.	.	1
	35-115052-602		• BRACKET ASSY,OUTBD FLAP TRACK RH.	.	1
- 53	35-115078		• RIB ASSY,LH .	.	1
	35-115078-1		• RIB ASSY,RH .	.	1
- 54	35-115160		• BRACKET ASSY,INBD AILERON HINGE LH.	.	1
	35-115160-1		• BRACKET ASSY,INBD AILERON HINGE RH.	.	1
- 55	35-115047		• RIB ASSY,TRAILING EDGE LH STA 136.188	.	1
	35-115047-1		• RIB ASSY,TRAILING EDGE RH STA 136.188	.	1
- 56	35-115048		• RIB ASSY,TRAILING EDGE LH STA 148.875	.	1
	35-115048-1		• RIB ASSY,TRAILING EDGE RH STA 148.875	.	1
- 57	35-115049		• RIB ASSY,TRAILING EDGE LH STA 162.563	.	1
	35-115049-1		• RIB ASSY,TRAILING EDGE RH STA 162.563	.	1
- 58	35-115071		• BRACKET ASSY,OUTBD AILERON HINGE LH .	.	1
	35-115071-1		STA 175.281 • BRACKET ASSY,OUTBD AILERON HINGE RH .	.	1
- 59	35-115194		STA 175.281 • SKIN ASSY,TRAILING EDGE LH.	.	1
	35-115194-1		STA 23.881 TO 108.281 • SKIN ASSY,TRAILING EDGE RH.	.	1
	35-115137-16		STA 23.881 TO 108.281 • SKIN ASSY,TRAILING EDGE UPPER LH.	.	1 A,B,C,D,E11
	35-115137-20		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE UPPER LH.	.	1 E12,F,G
	35-115137-17		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE UPPER RH.	.	1 A,B,C,D,E11
	35-115137-21		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE UPPER RH.	.	1 E12,F,G
- 61	35-115199		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE LOWER LH.	.	1 A,B,C,D,E11
	35-115199-22		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE LOWER LH.	.	1 E12,F,G
	35-115199-1		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE LOWER RH.	.	1 A,B,C,D,E11
	35-115199-23		STA 108.281 TO 191 • SKIN ASSY,TRAILING EDGE LOWER RH.	.	1 E12,F,G
- 62	35-115265		• SKIN ASSY,TRAILING EDGE LOWER LH.	.	1
	35-115265-1		• SKIN ASSY,TRAILING EDGE LOWER RH.	.	1
- 63	35-115028-42		• GUSSET,LH .	.	1
	35-115028-43		• GUSSET,RH .	.	1
	35-115383		• RIB ASSY,LH .	.	C23DEFG
	35-115383-1		• RIB ASSY,RH .	.	C23DEFG
	45-115011		• RIB,LH .	.	C23DEFG
	45-115011-1		• RIB,RH .	.	C23DEFG
	45-115011-2		• RIB,LH .	.	FG
- 64	35-115063		FITTING ASSY,LH OUTBD LANDING GEAR.	.	A,B
	45-115063		FITTING ASSY,LH OUTBD LANDING GEAR.	.	C,D,E,F,G
	35-115063-1		FITTING ASSY,RH OUTBD LANDING GEAR.	.	A,B
	45-115063-1		FITTING ASSY,RH OUTBD LANDING GEAR.	.	C,D,E,F,G
- 65	35-115061		FITTING ASSY,LH INBD LANDING GEAR .	.	1
	35-115061-1		FITTING ASSY,RH INBD LANDING GEAR .	.	1

MODEL 35 THRU G35 PARTS CATALOG

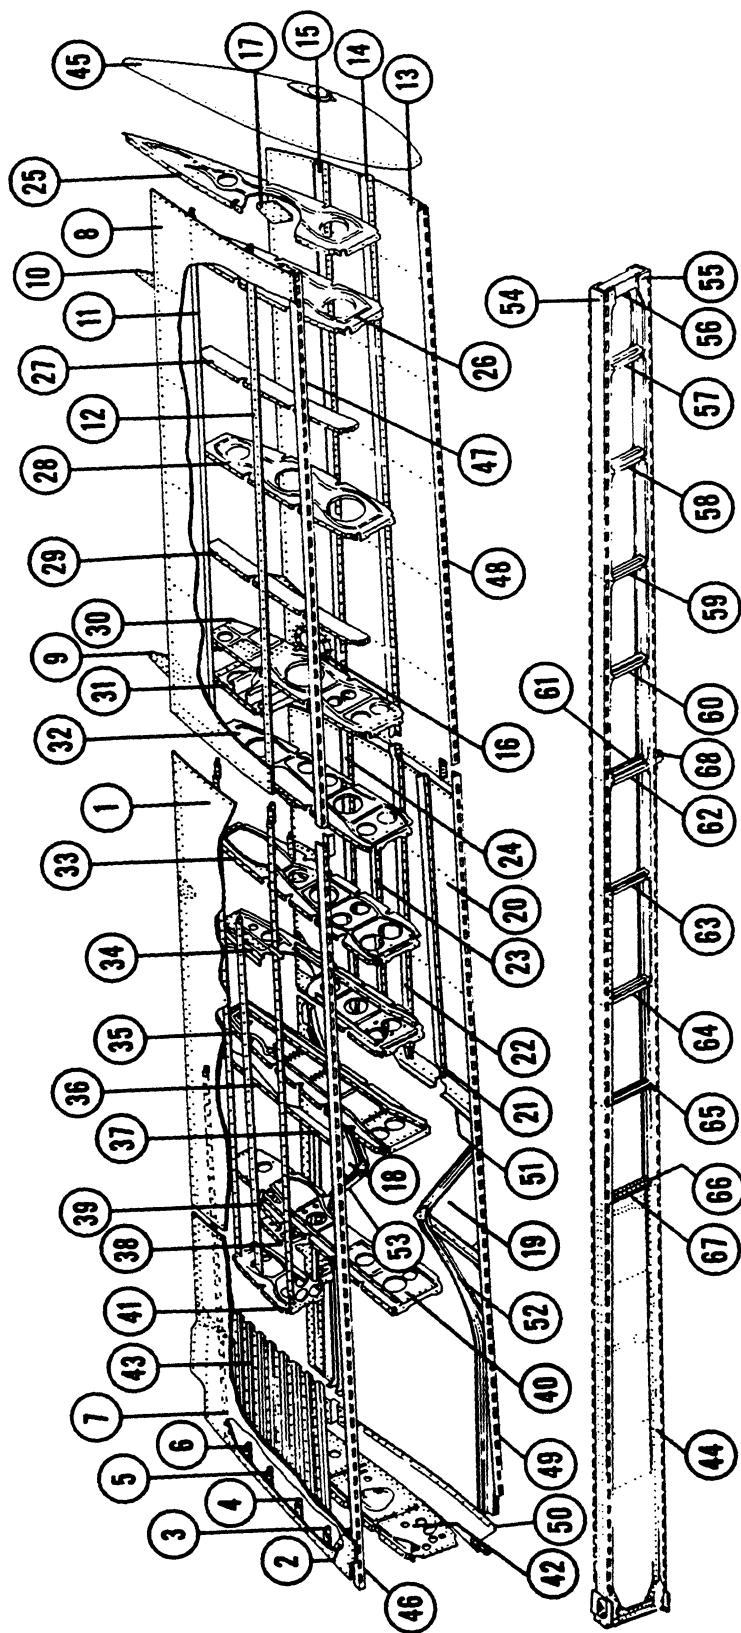


Figure 10. Wing Main Section

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
10	35-115001-604	SECTION ASSY,LH MAIN.	• • • • • • •	1	A1
	35-115001-605	SECTION ASSY,RH MAIN.	• • • • • • •	1	A1
	35-115300 SA260	SECTION ASSY,LH MAIN.	• • • • • • •	1	A2B
	35-115300 SA271	SECTION ASSY,RH MAIN.	• • • • • • •	1	A2B
	35-115301	SECTION ASSY,LH MAIN. /AUXILIARY FUEL SYSTEM OPT. REF FIG. 79/	• • • • • • •	1	FG
	35-115300 SA160	SECTION ASSY,MAIN LH.	• • • • • • •	1	CDE
	35-115300 SA171	SECTION ASSY,MAIN RH.	• • • • • • •	1	CDE
	35-115300 SA360	SECTION ASSY,MAIN LH.	• • • • • • •	1	FG
	35-115301-1	SECTION ASSY,MAIN RH. /AUXILIARY FUEL SYSTEM OPT. REF FIG. 79/	• • • • • • •	1	FG
- 1	35-115142 SA110	SKIN ASSY,UPPER LH.	• • • • • • •	1	
	35-115142 SA111	SKIN ASSY,UPPER RH.	• • • • • • •	1	
- 2	35-115142-44	• • GUSSET,LH	• • • • • • •	1	
- 3	35-115142-22	• • STRINGER,LH	• • • • • • •	1	
	35-115142-25	• • STRINGER,RH	• • • • • • •	1	
- 4	35-115142-18	• • STRINGER,LH	• • • • • • •	1	
	35-115142-21	• • STRINGER,RH	• • • • • • •	1	
- 5	35-115142-14	• • STRINGER,LH	• • • • • • •	1	
	35-115142-17	• • STRINGER,RH	• • • • • • •	1	
- 6	35-115142-10	• • STRINGER,LH	• • • • • • •	1	
	35-115142-13	• • STRINGER,RH	• • • • • • •	1	
- 7	35-115142-6	• • STRINGER,LH	• • • • • • •	1	
	35-115142-9	• • STRINGER,RH	• • • • • • •	1	
	35-115137-2	• • SKIN ASSY,UPPER LH STA 108.281 TO 191	• • •	1	
	35-115137-3	• • SKIN ASSY,UPPER RH STA 108.281 TO 191	• • •	1	
	35-115137-4	• • SKIN ASSY,UPPER TRAILING EDGE LH. STA 108.281 TO 191	• • • •	1	
	35-115137-5	• • SKIN ASSY,UPPER TRAILING EDGE RH. STA 108.281 TO 191	• • • •	1	
- 8	35-115137 SA110	• • SKIN ASSY,UPPER LH STA 108.281 TO 191	• • •	1	
	35-115137 SA111	• • SKIN ASSY,UPPER RH STA 108.281 TO 191	• • •	1	
- 9	35-115137-8	• • GUSSET,LH	• • • • • • •	1	
	35-115137-9	• • GUSSET,RH	• • • • • • •	1	
- 10	35-115137-6	• • GUSSET,LH	• • • • • • •	1	
	35-115137-7	• • GUSSET,RH	• • • • • • •	1	
- 11	35-115137-10	• • STRINGER,LH	• • • • • • •	1	
	35-115137-11	• • STRINGER,RH	• • • • • • •	1	
- 12	35-115137-12	• • STRINGER,LH	• • • • • • •	1	
	35-115137-13	• • STRINGER,RH	• • • • • • •	1	
	35-115199	• • SKIN ASSY,LOWER LH STA 108.281 TO 191	• • •	1	
	35-115199-1	• • SKIN ASSY,LOWER RH STA 108.281 TO 191	• • •	1	
- 13	35-115199 SA10	• • SKIN ASSY,LH.	• • • • • • •	1	
	35-115199 SA11	• • SKIN ASSY,RH.	• • • • • • •	1	
- 14	35-115199-4	• • STRINGER,LH	• • • • • • •	1	
	35-115199-5	• • STRINGER,RH	• • • • • • •	1	
- 15	35-115199-6	• • STRINGER,LH	• • • • • • •	1	
	35-115199-7	• • STRINGER,RH	• • • • • • •	1	
- 16	35-115199 SA80	• • REINFORCEMENT,LH DOOR	• • • • • • •	1	
	35-115199 SA90	• • REINFORCEMENT,RH DOOR	• • • • • • •	1	
- 17	35-115199-14	• • GUSSET,LH	• • • • • • •	1	
	35-115199-15	• • GUSSET,RH	• • • • • • •	1	
- 18	35-115200-50	• • SKIN ASSY,LOWER LH.	• • • • • • •	1	
	35-115200-51	• • SKIN ASSY,LOWER RH.	• • • • • • •	1	
- 19	35-115200-52	• • SKIN ASSY,LOWER LH.	• • • • • • •	1	
	35-115200-53	• • SKIN ASSY,LOWER RH.	• • • • • • •	1	
- 20	35-115200-8	• • SKIN ASSY,LOWER LH.	• • • • • • •	1	
	35-115200-9	• • SKIN ASSY,LOWER RH.	• • • • • • •	1	
- 21	35-115200-38	• • STRINGER,LH	• • • • • • •	1	
	35-115200-39	• • STRINGER,RH	• • • • • • •	1	
- 22	35-115200-36	• • STRINGER,LH	• • • • • • •	1	
	35-115200-37	• • STRINGER,RH	• • • • • • •	1	
- 23	35-115200-34	• • STRINGER,LH	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
10	35-115200-35	.	STRINGER,RH	.	1		
- 24	35-115200-32	.	STRINGER,LH	.	1		
	35-115200-33	.	STRINGER,RH	.	1		
- 25	35-115031	.	RIB ASSY,LH STA 191	.	1		
	35-115031-1	.	RIB ASSY,RH STA 191	.	1		
- 26	35-115032 SA2	.	RIB ASSY,LH STA 175.281	.	1		
	35-115032 SA3	.	RIB ASSY,RH STA 175.281	.	1		
- 27	35-115273	.	FORMER,UPPER LH STA 162.563	.	1		
	35-115273-1	.	FORMER,UPPER RH STA 162.563	.	1		
	45-115072	.	FORMER,LOWER LH	.	1		
	45-115072-1	.	FORMER,LOWER RH	.	1		
- 28	35-115033 SA2	.	RIB ASSY,LH STA 148.875	.	1		
	35-115033 SA3	.	RIB ASSY,RH STA 148.875	.	1		
- 29	35-115272	.	FORMER,UPPER LH STA 136.188	.	1		
	35-115272-1	.	FORMER,UPPER RH STA 136.188	.	1		
	45-115060	.	FORMER,LOWER LH	.	1		
	45-115060-1	.	FORMER,LOWER RH	.	1		
- 30	35-115045 SA2	.	RIB ASSY,LH STA 122.750	.	1		
	35-115045 SA3	.	RIB ASSY,RH STA 122.750	.	1		
- 31	35-115253	.	BRACKET,AILERON CONTROL LH.	.	1	A2BCDEFG	
	35-115253-1	.	BRACKET,AILERON CONTROL RH.	.	1	A2BCDEFG	
	35-115202	.	BRACKET,AILERON CONTROL LH.	.	1	A1	
	35-115202-1	.	BRACKET,AILERON CONTROL RH.	.	1	A1	
- 32	35-115044	.	RIB ASSY,LH STA 108.281	.	1	CDEFG	
	45-115044 SA2	.	RIB ASSY,LH STA 108.281	.	1		
	35-115044-1	.	RIB ASSY,RH STA 108.281	.	1		
	45-115044 SA3	.	RIB ASSY,RH STA 108.281	.	1	CDEFG	
- 33	35-115041	.	RIB ASSY,LH STA 94.094	.	1		
	35-115041-1	.	RIB ASSY,RH STA 94.094	.	1		
- 34	35-115302	.	RIB ASSY,LH STA 80.047	.	1	A2BCDEFG	
	35-115302-1	.	RIB ASSY,RH STA 80.047	.	1	A2BCDEFG	
	35-115042	.	RIB ASSY,LH STA 80.047	.	1	A1	
	35-115042-1	.	RIB ASSY,RH STA 80.047	.	1	A1	
- 35	35-115305	.	RIB ASSY,LH STA 66.	.	1	A2BCDEFG	
	35-115305-1	.	RIB ASSY,RH STA 66.	.	1	A2BCDEFG	
	35-115051	.	RIB ASSY,LH STA 66.	.	1	A1	
	35-115051-1	.	RIB ASSY,RH STA 66.	.	1	A1	
- 36	35-115274	.	FORMER,LH	.	1		
	35-115274-1	.	FORMER,RH	.	1		
- 37	35-115275	.	FORMER,LH	.	1		
	35-115275-1	.	FORMER,RH	.	1	A8	
- 38	35-115247	.	SUPPORT ASSY,INBOARD FLAP ACTUATOR LH	.	1	A8BCDEFG	
	35-115246	.	SUPPORT ASSY,OUTBD FLAP ACTUATOR RH	.	1	A8BCDEFG	
- 39	35-115242	.	SUPPORT ASSY,INBD FLAP ACTUATOR LH.	.	1	A8BCDEFG	
	35-115241	.	SUPPORT ASSY,OUTBD FLAP ACTUATOR RH	.	1	A8BCDEFG	
	35-115193	.	SUPPORT ASSY,INBD FLAP ACTUATOR RH.	.	1	A7	
- 40	35-115303	.	RIB ASSY,LH STA 45.	.	1	A2BCDEFG	
	35-115304 SA2	.	RIB ASSY,RH STA 45.	.	1	A2BCDEFG	
	35-115100	.	RIB ASSY,LH STA 45.	.	1	A1	
	35-115109	.	RIB ASSY,RH STA 45.	.	1	A1	
- 41	35-115079	.	RIB ASSY,LH STA 34.375	.	1		
	35-115110	.	RIB ASSY,RH STA 34.375	.	1		
- 42	35-115070 SA2	.	RIB ASSY,LH STA 23.881	.	1		
	35-115130 SA3	.	RIB ASSY,RH	.	1		
- 43	35-115201	.	WALKWAY ASSY,RH	.	1		
	35-115278	.	WALKWAY ASSY,RH	.	1		
	35-115111	.	BULKHEAD,WALKWAY	.	1		
- 44	35-115020	.	SPAR ASSY,LH FRONT	.	1	A1	
	35-115020-1	.	SPAR ASSY,RH FRONT	.	1	A1	
	35-115022	.	FITTING,FRONT SPAR UPPER LH	.	1		
	35-115022-1	.	FITTING,FRONT SPAR UPPER RH	.	1		
	35-115021	.	FITTING,FRONT SPAR LOWER LH	.	1		
	35-115021-1	.	FITTING,FRONT SPAR LOWER RH	.	1		

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
10	35-115020-88	SPAR ASSY, FRONT	LH.	.	1	A2BCDEF12
	35-115020-89	SPAR ASSY, FRONT	RH.	.	1	A2BCDEF12
	35-115020-120	SPAR ASSY, FRONT	LH.	.	1	F13G
	35-115020-121	SPAR ASSY, FRONT	RH.	.	1	F13G
- 45	35-175004-17	• TIP ASSY, LH.	.	.	1	
	35-175004-18	• TIP ASSY, RH.	.	.	1	
- 46	35-115142-30	• HINGE, LH.	.	.	1	
	35-115142-33	• HINGE, RH.	.	.	1	
- 47	35-115137-14	• HINGE, LH.	.	.	1	
	35-115137-15	• HINGE, RH.	.	.	1	
- 48	35-115199-16	• HINGE, LH.	.	.	1	
	35-115199-17	• HINGE, RH.	.	.	1	
- 49	35-115200-40	• HINGE, LH.	.	.	1	
	35-115200-41	• HINGE, RH.	.	.	1	
	35-115388-4	• HINGE, PIN	.	.	8	
- 50	35-115200-6	• STRIP, LH GAP.	.	.	1	
	35-115200-7	• STRIP, RH GAP.	.	.	1	
- 51	35-115200-18	• DOUBLER, LH.	.	.	1	
	35-115200-19	• DOUBLER, RH.	.	.	1	
- 52	35-115203	• CHANNEL, LH.	.	.	1	
	35-115203-1	• CHANNEL, RH.	.	.	1	
- 53	35-115205	• CHANNEL, LH.	.	.	1	
	35-115205-1	• CHANNEL, RH.	.	.	1	
- 54	35-115020-2	• CAP, UPPER LH.	.	.	1	A1
	35-115020-3	• CAP, UPPER RH.	.	.	1	A1
	35-115020-114	• CAP, UPPER LH.	.	.	1	A2BCDEF12
	35-115020-115	• CAP, UPPER RH.	.	.	1	A2BCDEF12
	35-115020-122	• CAP, UPPER LH.	.	.	1	F13G
	35-115020-123	• CAP, UPPER RH.	.	.	1	F13G
- 55	35-115020-4	• CAP, LOWER LH.	.	.	1	A1
	35-115020-5	• CAP, LOWER RH.	.	.	1	A1
	35-115020-116	• CAP, LOWER LH.	.	.	1	A2BCDEF12
	35-115020-117	• CAP, LOWER RH.	.	.	1	A2BCDEF12
	35-115020-124	• CAP, LOWER LH.	.	.	1	F13G
	35-115020-125	• CAP, LOWER RH.	.	.	1	F13G
- 56	35-115020-8	• STIFFENER, LH.	.	.	1	
	35-115020-9	• STIFFENER, RH.	.	.	1	
- 57	35-115020-10	• STIFFENER, LH.	.	.	1	
	35-115020-11	• STIFFENER, RH.	.	.	1	
- 58	35-115020-12	• STIFFENER, LH.	.	.	1	
	35-115020-13	• STIFFENER, RH.	.	.	1	
- 59	35-115020-14	• STIFFENER, LH.	.	.	1	
	35-115020-15	• STIFFENER, RH.	.	.	1	
- 60	35-115020-16	• STIFFENER, LH.	.	.	1	
	35-115020-17	• STIFFENER, RH.	.	.	1	
- 61	35-115020-76	• STIFFENER, LH.	.	.	1	
	35-115020-77	• STIFFENER, RH.	.	.	1	
- 62	35-115020-78	• STIFFENER, LH.	.	.	1	
	35-115020-79	• STIFFENER, RH.	.	.	1	
- 63	35-115020-20	• STIFFENER, LH.	.	.	1	A1
	35-115020-21	• STIFFENER, RH.	.	.	1	A1
	35-115020-110	• STIFFENER, LH.	.	.	1	A2BCDEFG
	35-115020-111	• STIFFENER, RH.	.	.	1	A2BCDEFG7
- 64	35-115020-22	• STIFFENER, LH.	.	.	1	A1
	35-115020-23	• STIFFENER, RH.	.	.	1	A1
	35-115020-106	• STIFFENER, LH.	.	.	1	A2BCDEFG
	35-115020-107	• STIFFENER, RH.	.	.	1	A2BCDEFG
- 65	35-115020-24	• STIFFENER, LH.	.	.	1	A1
	35-115020-25	• STIFFENER, RH.	.	.	1	A1
	35-115020-100	• STIFFENER, LH.	.	.	1	A2BCDEFG
	35-115020-101	• STIFFENER, RH.	.	.	1	A2BCDEFG
- 66	35-115020-58	• STIFFENER, LH.	.	.	1	A1
	35-115020-59	• STIFFENER, RH.	.	.	1	A1

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
10	35-115020-90	.	STIFFENER,LH.	1	A2BCDEFG
	35-115020-91	.	STIFFENER,RH.	1	A2BCDEFG
- 67	35-115020-62	.	STIFFENER,LH.	1	
	35-115020-63	.	STIFFENER,RH.	1	
- 68	35-115232	.	LUG,TIE DOWN.	2	
	35-115070-8	.	ANGLE,INBD DOOR HINGE FWD LH.	1	
	35-115070-10	.	ANGLE,INBD DOOR HINGE FWD LH.	1	
	35-115070-16	.	ANGLE,INBD DOOR HINGE AFT LH.	1	
	35-115070-18	.	ANGLE,INBD DOOR HINGE AFT LH.	1	
	35-115070-9	.	ANGLE,INBD DOOR HINGE FWD RH.	1	
	35-115070-11	.	ANGLE,INBD DOOR HINGE FWD RH.	1	
	35-115130-22	.	ANGLE,INBD DOOR HINGE AFT RH.	1	
	35-115130-24	.	ANGLE,INBD DOOR HINGE AFT RH.	1	

MODEL 35 THRU G35 PARTS CATALOG

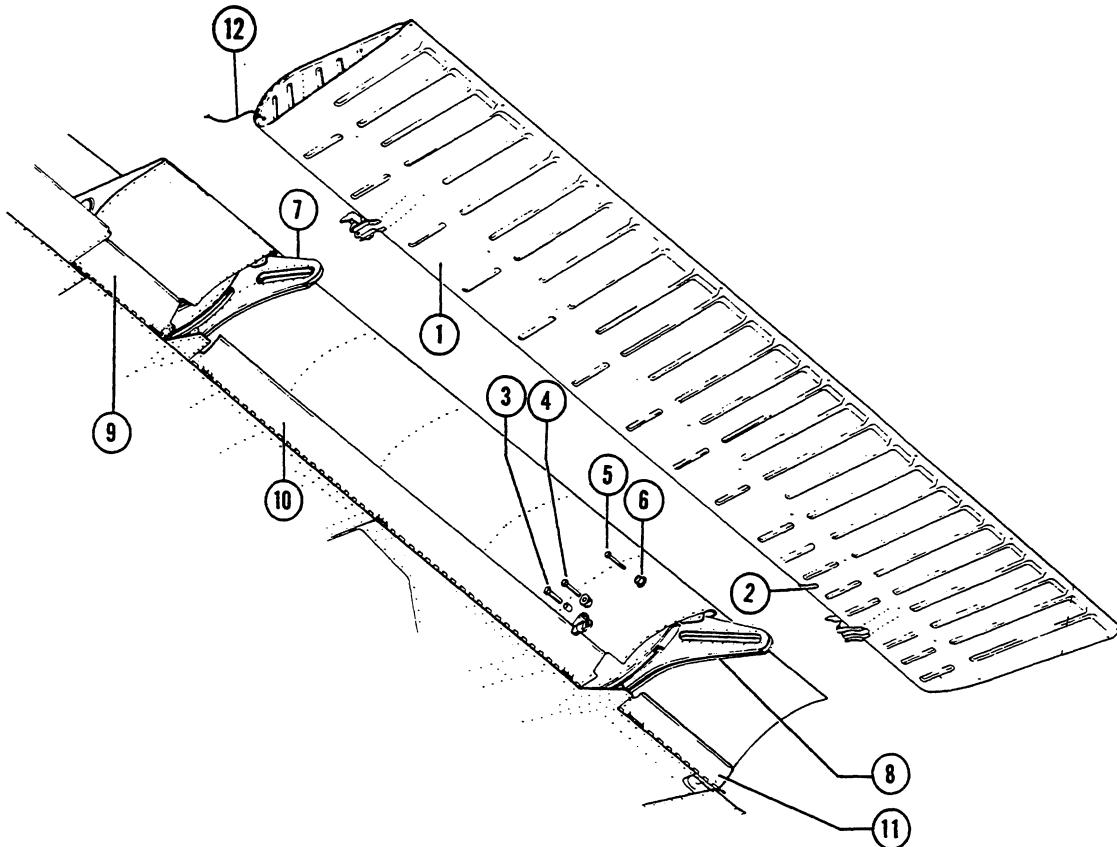


Figure 11. Flap, Flap Track and Flap Gap Doors

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
11	35-165050-605	FLAP ASSY,LH.	• • • • • • • • • • • • • • • •	1	ABCD
- 1	35-165050-607	FLAP ASSY,LH.	• • • • • • • • • • • • • • • •	1	EFG
-	35-165050-606	FLAP ASSY,RH.	• • • • • • • • • • • • • • • •	1	
- 2	AN20-10-8	• SCREW,ACTUATOR BRACKET ATTACHING.	• • • • • • • • • • • • • • • •	3	
	100951-5-007-02	• WASHER.	• • • • • • • • • • • • • • • •	3	
	A6914-1024-1	• PLATE,ACCESS /TIN/.	• • • • • • • • • • • • • • • •	4	
- 3	AN4-12A	BOLT,LH FLAP ACTUATOR	• • • • • • • • • • • • • • • •	1	
	AN4-10A	BOLT,RH FLAP ACTUATOR	• • • • • • • • • • • • • • • •	1	
	100801S5-0437	BUSHING.	• • • • • • • • • • • • • • • •	1	
	100801S5-0062	BUSHING,/LH SIDE ONLY/.	• • • • • • • • • • • • • • • •	2	
	105090-091-4-	WASHER,/LH SIDE ONLY/	• • • • • • • • • • • • • • • •	2	
	016				
	AN960-416L	WASHER,LH	• • • • • • • • • • • • • • • •	1	
	AN960-416	WASHER,RH	• • • • • • • • • • • • • • • •	1	
	AN365-428	NUT	• • • • • • • • • • • • • • • •	1	
- 4	AN3-21A	BOLT,AFT FLAP ATTACHING	• • • • • • • • • • • • • • • •	2	
- 5	AN3-11A	BOLT,FWD FLAP ATTACHING	• • • • • • • • • • • • • • • •	2	
	AN960-10	WASHER.	• • • • • • • • • • • • • • • •	4	
	AN365-1032	NUT	• • • • • • • • • • • • • • • •	4	
- 6	35-165004	ROLLER ASSY,FLAP TRACK.	• • • • • • • • • • • • • • • •	4	
- 7	35-115052	TRACK,OUTBD FLAP LH	• • • • • • • • • • • • • • • •	1	
	35-115052-1	TRACK,OUTBD FLAP RH	• • • • • • • • • • • • • • • •	1	
- 8	35-115301-601	TRACK,INBD FLAP LH.	• • • • • • • • • • • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
11	35-115301-602		TRACK, INBD FLAP RH.	1	ABCDE1
	45-115066-2		TRACK, INBD FLAP RH.	1	E2FG
	35-115030-14		STOP, RUBBER	2	
- 9	35-115240-6		DOOR ASSY, FLAP GAP LH OUTBD	1	A3
	35-115240-7		DOOR ASSY, FLAP GAP RH OUTBD	1	A3
- 10	35-115240-4		DOOR ASSY, FLAP GAP LH CENTER	1	A3
	35-115240-5		DOOR ASSY, FLAP GAP RH CENTER	1	A3
- 11	35-115240-2		DOOR ASSY, FLAP GAP LH INBD	1	A3
	35-115240-3		DOOR ASSY, FLAP GAP RH INBD	1	A3
	35-115265		SKIN, TRAILING EDGE LH WING /REPLACES 35-115240/	1	A4BCDEFG
	35-115265-1		SKIN, TRAILING EDGE RH WING /REPLACES 35-115240/	1	A4BCDEFG
	104215-01130		PIN, INBD GAP DOOR HINGE	1	A3
	105774C063-		PIN, OUTBD GAP DOOR HINGE	1	A3
	07516				
	45-361118		BRACKET, LH FLAP LIMIT SWITCH	1	E2FG
- 12	AN749-1-6		JUMPER, BONDING	1	

MODEL 35 THRU G35 PARTS CATALOG

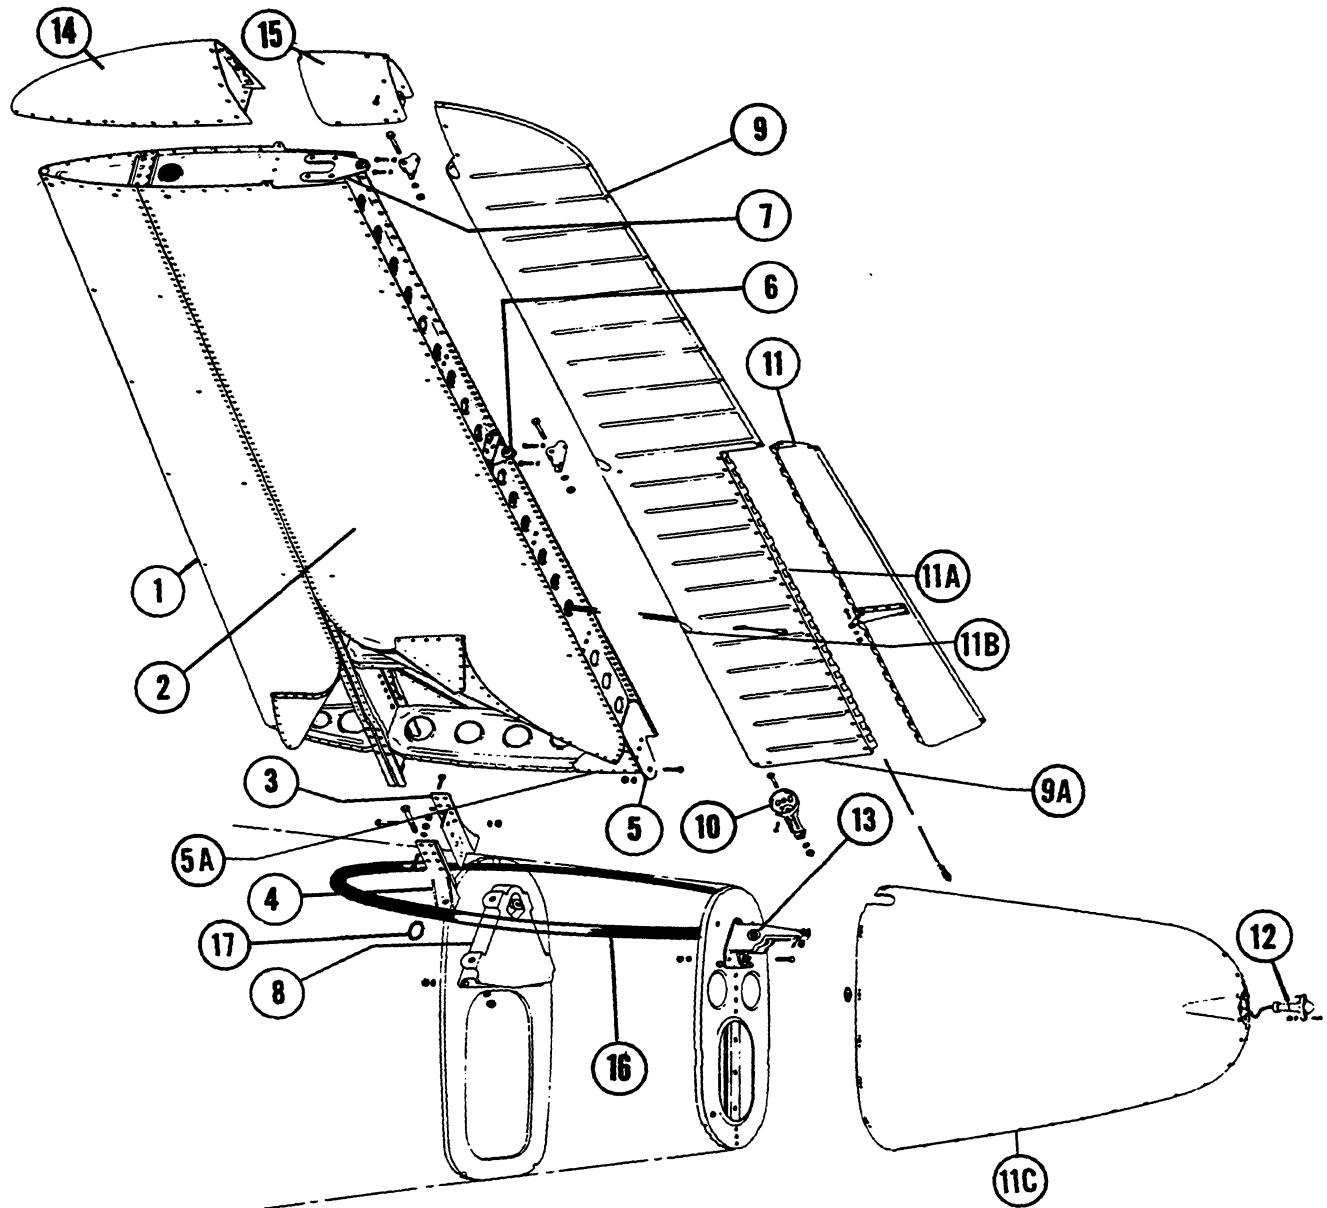


Figure 12. Empennage Group (D1 Thru D2680)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
12	35-650001-602	STABILIZER ASSY,LH.	• • • • • • •	1	A2B
	35-650001-603	STABILIZER ASSY,RH.	• • • • • • •	1	A2B
- 1	35-650001-604	• EDGE ASSY,LH STABILIZER LEADING	• • • • • • •	1	A2B
	35-650001-605	• EDGE ASSY,RH STABILIZER LEADING	• • • • • • •	1	A2B
- 2	35-650001-606	• SECTION,LH STABILIZER MAIN.	• • • • • • •	1	A2B
	35-650001-607	• SECTION,RH STABILIZER MAIN.	• • • • • • •	1	A2B
	AN7-15A	• BOLT,STABILIZER ATTACHING FWD	• • • • • • •	2	A2B
	AN960-716	• WASHER.	• • • • • • •	2	A2B
	AN365-720	• NUT	• • • • • • •	2	A2B
	AN4-4A	• BOLT,STABILIZER ATTACHING AFT	• • • • • • •	1	A2B
~	AN960-416	• WASHER.	• • • • • • •	1	A2B
	AN365-428	• NUT	• • • • • • •	1	A2B
- 3	35-650021	• FITTING,MAIN SPAR UPPER	• • • • • • •	1	A2B
- 4	35-650021-1	• FITTING,MAIN SPAR LOWER	• • • • • • •	1	A2B
	AN4-7A	• BOLT,FITTING ATTACHING	• • • • • • •	8	A2B
	AN960-416	• WASHER.	• • • • • • •	8	A2B
	AN365-428	• NUT	• • • • • • •	8	A2B
- 5	35-650120	• HINGE,STABILIZER REAR SPAR	• • • • • • •	2	A2B
- 5A	35-650100-4	• DOUBLER,LH STABILIZER REAR	• • • • • • •	1	
	35-650100-5	• DOUBLER,RH STABILIZER REAR	• • • • • • •	1	
	35-650113-8	• DOOR,LH STABILIZER INSPECTION	• • • • • • •	1	A2B
	35-650113-9	• DOOR,RH STABILIZER INSPECTION	• • • • • • •	1	A2B
	PK59Z-6-6	• SCREW,/PK/	• • • • • • •	7	A2B
- 6	35-650120	• HINGE,ELEVATOR CENTER	• • • • • • •	1	A2B
	35-650120-6	• BRACKET	• • • • • • •	1	A2B
	35-600003	• BUSHING,CENTER HINGE	• • • • • • •	1	A2B
	B-55	• BEARING,/TOR/	• • • • • • •	1	A2B
- 7	35-650121	• HINGE ASSY,OUTBD ELEVATOR	• • • • • • •	1	
	35-650121-6	• BRACKET	• • • • • • •	1	
	35-600003	• BUSHING,OUTBD HINGE	• • • • • • •	1	
	B-55	• BEARING,/TOR/	• • • • • • •	1	
- 8	35-405130	SUPPORT,STABILIZER	• • • • • • •	1	A2B
	35-660040-607	ELEVATOR ASSY,LH /SPARE ASSY.	• • • • • • •	1	
		WITH TORQUE FITTING & LESS TAB/			
	35-660040-608	ELEVATOR ASSY,RH /SPARE ASSY.	• • • • • • •	1	
		WITH TORQUE FITTING & LESS TAB/			
- 9	35-660040	ELEVATOR ASSY	• • • • • • •	NP	
	AN4-12A	BOLT,ELEVATOR INBD ATTACHING.	• • • • • • •	1	
	AN960-416L	WASHER.	• • • • • • •	2	
	AN365-428	NUT	• • • • • • •	1	
	AN4-14A	BOLT,ELEVATOR CENTER ATTACHING.	• • • • • • •	1	
	AN960-416	WASHER.	• • • • • • •	1	
	AN365-428	NUT	• • • • • • •	1	
- 9A	35-660040-26	• RIB,ELEVATOR.	• • • • • • •	1	
- 10	35-660031	• FITTING,LH ELEVATOR TORQUE	• • • • • • •	1	
	35-660031-1	• FITTING,RH ELEVATOR TORQUE	• • • • • • •	1	
	AN1032-10	• SCREW,FITTING ATTACHING	• • • • • • •	3	
- 11	35-660040-2	• TAB ASSY,ELEVATOR	• • • • • • •	1	A1
	35-660040-52	• TAB ASSY,LH ELEVATOR	• • • • • • •	1	A2B
	35-660040-53	• TAB ASSY,RH ELEVATOR	• • • • • • •	1	A2B
- 11A	35-660040-14	• HINGE,ELEVATOR TAB	• • • • • • •	2	
	35-660040-32	• PIN,ELEVATOR TAB HINGE	• • • • • • •	1	A2B
	NAS302-27-0590	CABLE,ELEVATOR TAB.	• • • • • • •	2	
- 11B	35-660033	FAIRLEAD,ELEVATOR TAB CABLE	• • • • • • •	1	
- 11C	35-380001	CONE ASSY,TAIL.	• • • • • • •	1	
	PK76XZ-8-6	SCREW,TAIL CONE ATTACHING /PK/	• • • • • • •	AR	
	35-410422 SA2	CONE ASSY,TAIL /USED WITH ADF/	• • • • • • •	1	
	35-410423	• BRACKET,/USED WITH ADF/	• • • • • • •	1	
	35-410424	• BRACKET,/USED WITH ADF/	• • • • • • •	1	
	35-410425	• DOUBLER,/USED WITH ADF/	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
12 - 12	35-364010		LIGHT ASSY, TAIL CONE.	1	
	93		BULB, TAIL LIGHT /MAZD/	1	
	A2103-1		LENS.	1	
	49158		CLAMP, HARNESS /UC/	2	
	AN6191-823		NUT	9	
	AN6191-821		NUT	4	
- 13	35-600002		SUPPORT, ELEVATOR INBD HINGE	1	
	AN4-13A		BOLT, SUPPORT ATTACHING.	2	
	AN4-6A		BOLT, SUPPORT ATTACHING.	1	
	AN960-416		WASHER.	3	
	AN365-428		NUT	3	
	AN200KS4		BEARING, SUPPORT	2	
	AN200K5		BEARING, SUPPORT	1	
	35-534123		BOLT, ELEVATOR STOP.	4	
	AN316-4R		NUT, STOP ADJUSTING.	2	
- 14	35-650112		TIP, STABILIZER.	1	A2B
- 15	35-660040-48		BALANCE, ELEVATOR COUNTER.	1	
	35-660040-40		WEIGHT, COUNTER BALANCE.	1	
- 16	35-650001-6		EXTRUSION, RUBBER.	1	A2B
- 17	M33705		BUTTON, PLUG /GP/.	1	A2B
	35-660040		JIG, LH ELEVATOR TRAVEL.	1	
	35-660040-1		JIG, RH ELEVATOR TRAVEL.	1	

MODEL 35 THRU G35 PARTS CATALOG


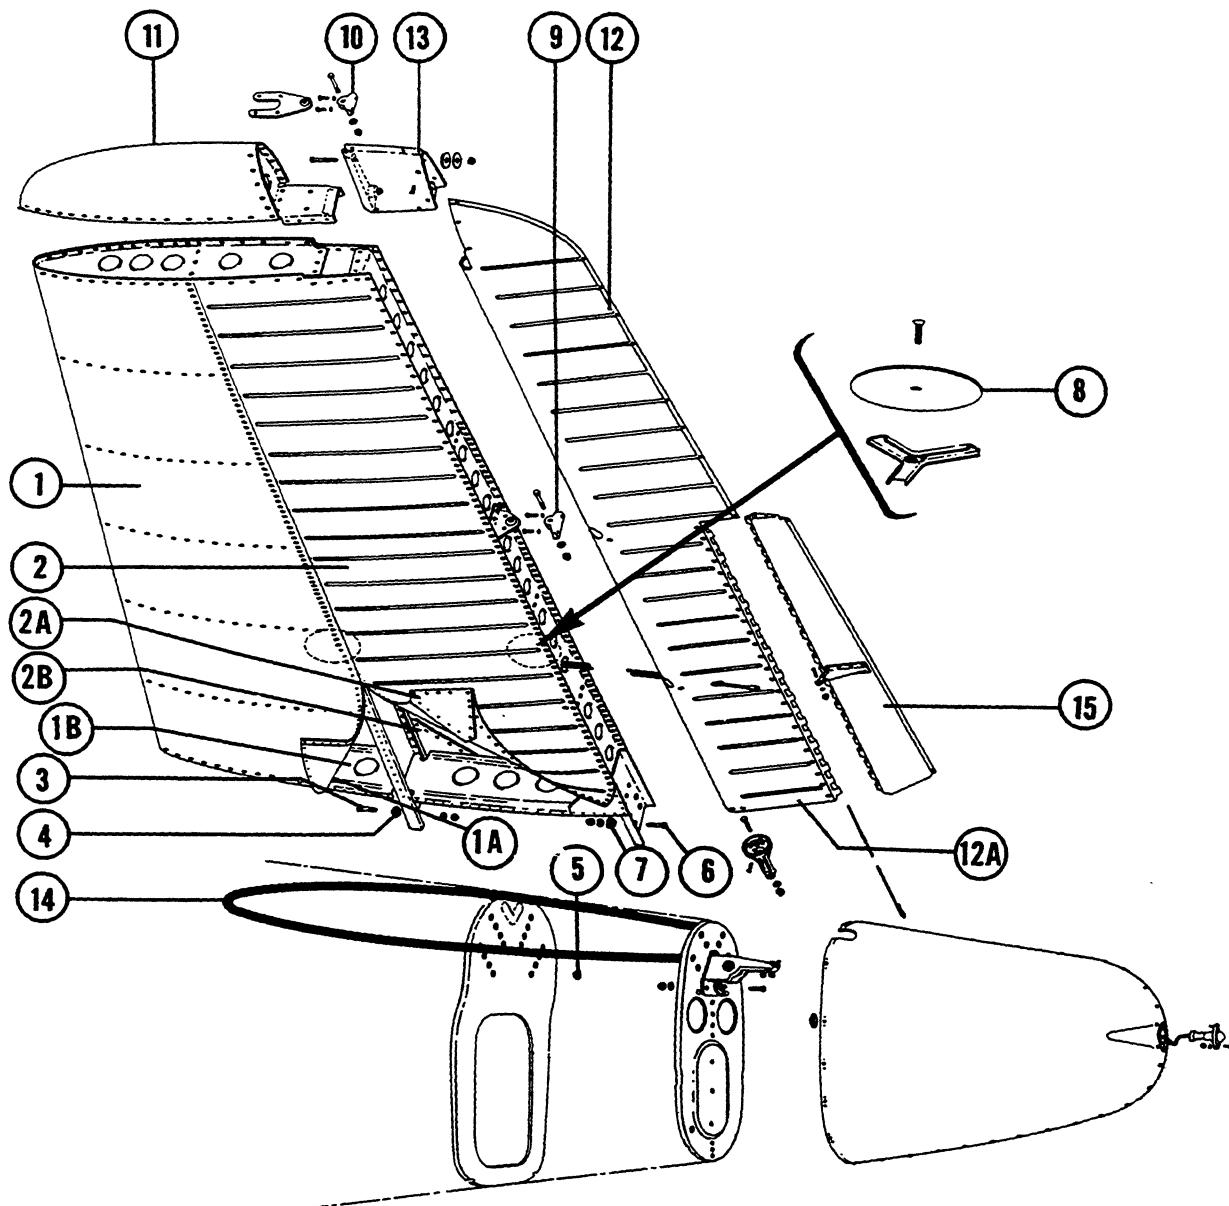


Figure 13. Empennage Group (D2681 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
13	35-650009-602		STABILIZER ASSY,LH.	1	CDEFG
	35-650009-603		STABILIZER ASSY,RH.	1	CDEFG
- 1	35-650009-604	.	EDGE ASSY,LH STABILIZER LEADING	1	CDEFG
	35-650009-605	.	EDGE ASSY,RH STABILIZER LEADING	1	CDEFG
- 1A	35-650009-2	.	SKIN,LH LEADING EDGE.	1	
	35-650009-3	.	SKIN,RH LEADING EDGE.	1	
- 1B	35-650133	.	RIB	1	
- 2	35-650009-606	.	SECTION,LH STABILIZER MAIN.	1	CDEFG
	35-650009-607	.	SECTION,RH STABILIZER MAIN.	1	CDEFG
- 2A	35-650009-34	.	SKIN,LH STABILIZER UPPER.	1	
	35-650009-5	.	SKIN,RH STABILIZER UPPER.	1	
	35-650009-6	.	SKIN,LH STABILIZER LOWER.	1	
	35-650009-37	.	SKIN,RH STABILIZER LOWER.	1	
- 2B	35-650010-8	.	RIB	1	
- 3	AN5-6A	.	BOLT,STABILIZER FRONT ATTACHING	8	CDEFG
	AN960-516	.	WASHER	16	CDEFG
	AN365-524	.	NUT	8	CDEFG
- 4	35-650017-4	.	BUSHING	8	CDEFG
- 5	35-650017-2	.	BUSHING	8	CDEFG
- 6	AN4-5A	.	BOLT,STABILIZER REAR ATTACHING	4	CDEFG
	AN960-416	.	WASHER	8	CDEFG
	AN365-428	.	NUT	4	CDEFG
- 7	45-620011-8	.	BUSHING	8	CDEFG
- 8	35-650010-22	.	COVER	1	
	35-650010-20	.	CLIP	1	
	AN507-832-8	.	SCREW	1	
	22A3-82	.	NUT,/EN/	1	
- 9	35-650122	.	HINGE ASSY,ELEVATOR CENTER	1	CDEFG
- 10	35-650121	.	HINGE ASSY,ELEVATOR OUTBD	1	
- 11	35-650009-58	.	TIP,STABILIZER	1	CDEFG
- 12	35-660040-607	.	ELEVATOR ASSY,LH	1	
	35-660040-608	.	ELEVATOR ASSY,RH	1	
- 12A	35-660040-26	.	RIB,ELEVATOR	1	
- 13	35-660040-48	.	SKIN ASSY,COUNTER BALANCE	1	
	35-660040-40	.	WEIGHT,COUNTER BALANCE	1	
- 14	35-650009-20	.	EXTRUSION,RUBBER /MAKE FR 111722/	1	CDEFG
- 15	35-660040-52	.	TAB ASSY,LH	1	CDEFG
	35-660040-53	.	TAB ASSY,RH	1	CDEFG
	35-660040	.	JIG,LH ELEVATOR TRAVEL	1	
	35-660040-1	.	JIG,RH ELEVATOR TRAVEL	1	

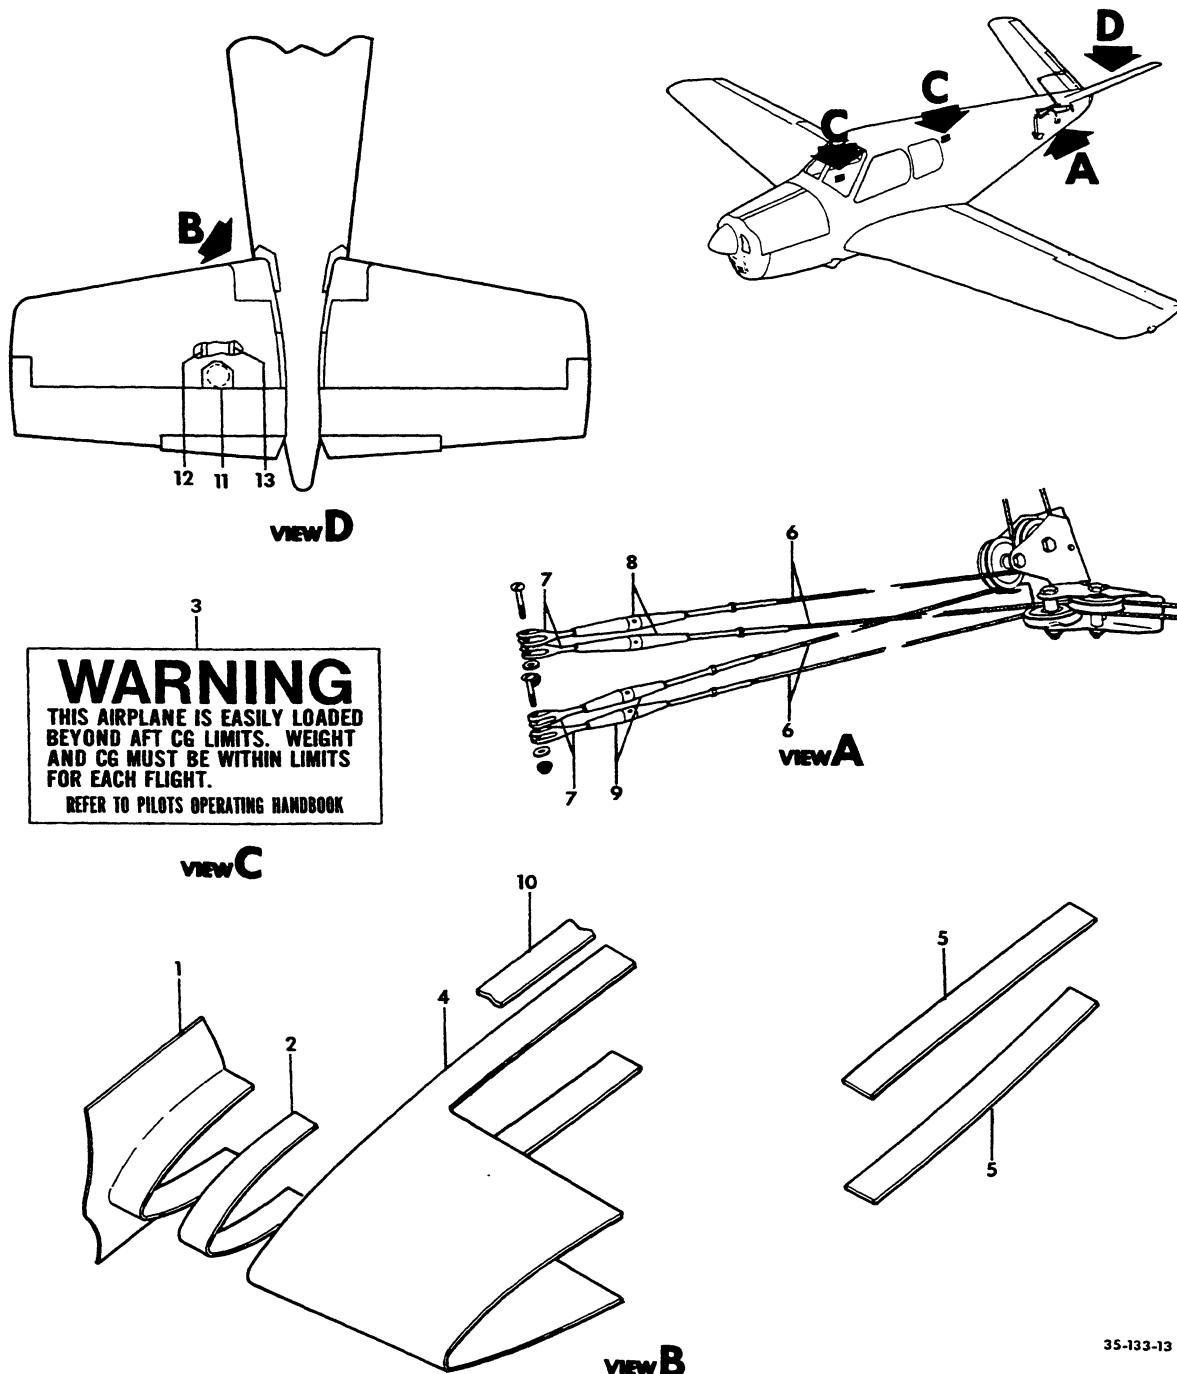

35-133-13

FIGURE 13A-STABILIZER REINFORCEMENT KIT

MODEL 35 THRU G35 PARTS CATALOG

FIG. & ITEM NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
13A	R 35-4016-3		KIT,STABILIZER REINFORCEMENT.	1	CDEFG
- 1	R 35-410504-15		• CUFF,LH	1	CDEFG
	R 35-410504-16		• CUFF,RH	1	CDEFG
- 2	R 35-410504-13		• GASKET.	2	CDEFG
- 3	R 35-440021-1		• PLACARD,/LOCATED ON PASSENGER AND BAGGAGE DOORS/ /ATTACHING PARTS/	2	CDEFG
	R AN530-4R4		• SCREW	2	
	R NAS446-1-1		• NUT	2	
<hr/>											
- 4	R 35-650135-17		• DOUBLER,LH	1	CDEFG
	R 35-650135-18		• DOUBLER,RH	1	CDEFG
- 5	R 35-650135-19		• DOUBLER,LH & RH	4	CDEFG
- 6	R NAS303-27-059J		• CABLE ASSY,STABILIZER TAB	4	CDEFG
- 7	R AN161-16RS		• FORK.	4	CDEFG
- 8	R MS2125183L		• BARREL.	2	CDEFG
	R MS21256-2		• LOCK PIN.	4	CDEFG
- 9	R MS2125183S		• BARREL.	2	CDEFG
	R MS21256-1		• LOCK PIN.	4	CDEFG
- 10	R 111722-05000		• RUBBER EXTRUSION.	2	CDEFG
	R 35-4016-9		KIT,STABILIZER PATCH PLATE.	1	CDEFG
- 11	R 35-650135-11		• DOUBLER	1	CDEFG
- 12	R 35-650135-13		• STIFFENER	1	CDEFG
- 13	R 35-650135-15		• STIFFENER	1	CDEFG

MODEL 35 THRU G35 PARTS CATALOG

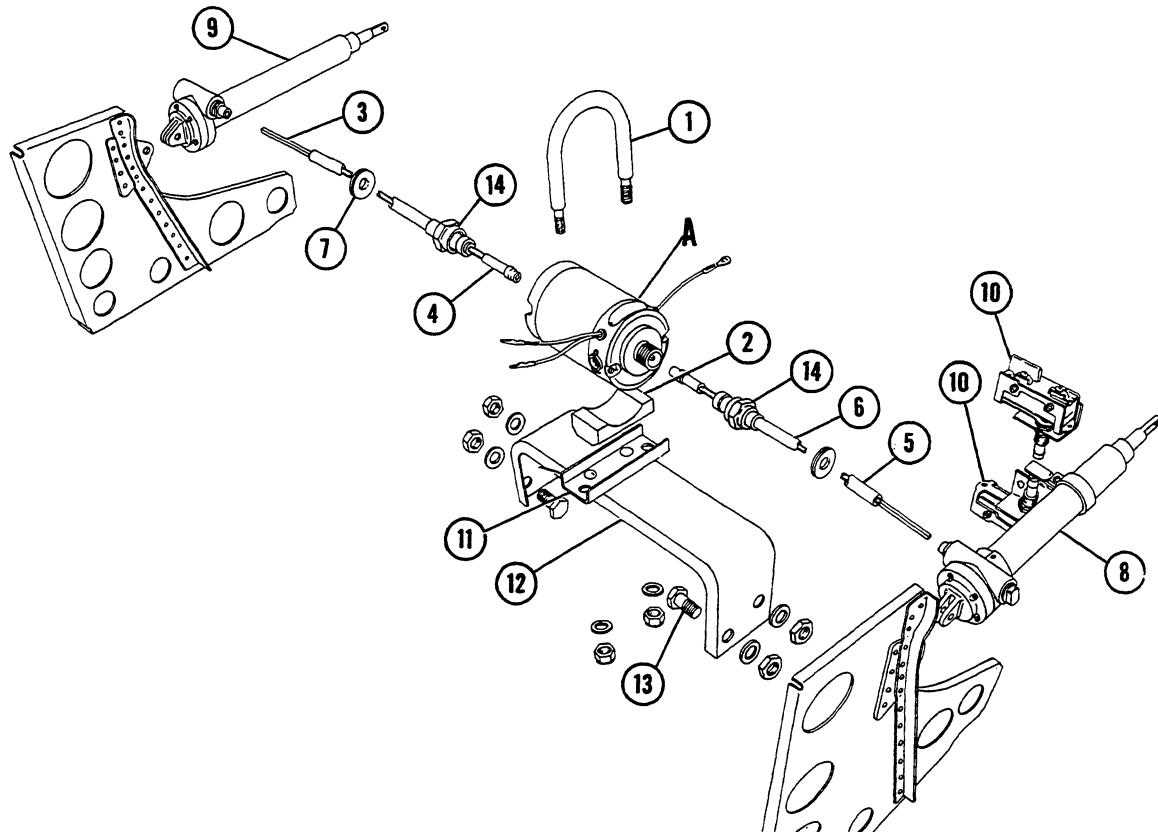


Figure 14. Flap Control Mechanism (D1 thru D837)

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
14 - A	35-521160-2	MOTOR,FLAP MECHANISM /SEE FIG. 18/.	1	A5
	35-521183	MOTOR,FLAP MECHANISM /SEE FIG. 18/.	1	A6
- 1	35-521176	BOLT,MOTOR ATTACHING.	1	A7
	AN960-10	WASHER.	2	A7
	AN365-1032	NUT .	2	A7
- 2	35-521177	BLOCK,MOTOR MOUNTING.	1	A7
- 3	35-521173-4	SHAFT,RH FLEXIBLE	1	A7
- 4	35-521174-8	HOUSING,RH SHAFT.	1	A7
- 5	35-521173-8	SHAFT,LH FLEXIBLE	1	A7
- 6	35-521174-6	HOUSING,LH SHAFT.	1	A7
- 7	AN931-4-7	GROMMET,FLAP SHAFT.	2	A7
- 8	35-524210	ACTUATOR ASSY,LH FLAP /SEE FIG. 16/	1	A7
- 9	35-524210-1	ACTUATOR ASSY,RH FLAP /SEE FIG. 16/	1	A7
- 10	35-361119	SWITCH ASSY,FLAP ACTUATOR LIMIT /SEE FIG. 16/	2	A7
- 11	35-410124-2	BRACKET,MOTOR MOUNTING.	1	A7
- 12	35-410124-4	BRACKET,MOTOR SUPPORT	1	A7
- 13	AN3-4A	BOLT,SUPPORT ATTACHING.	4	A7
- 14	D177756	NUT,SHAFT ATTACHING	1	

MODEL 35 THRU G35 PARTS CATALOG

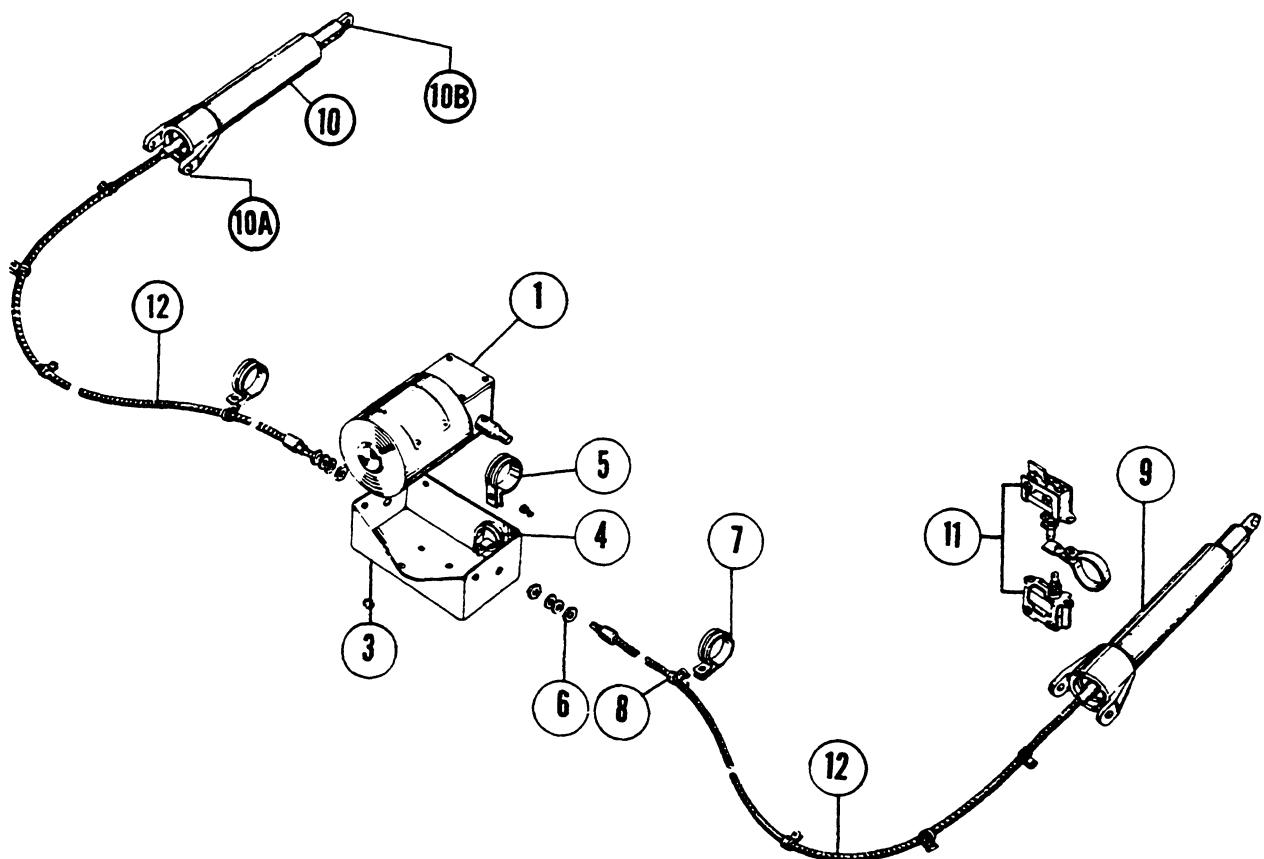


Figure 15. Flap Control Mechanism (D-838 thru D-4865)

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
	1 2 3 4 5 6 7			
15 - 1	35-521225	MOTOR ASSY,FLAP /SEE FIG. 19/	1	A8BCDEFG
- 3	35-521222	SUPPORT,FLAP MOTOR.	1	A8BCDEFG
- 4	AN742D16C	CLAMP	2	A8BCDEFG
- 5	AN742D28C	CLAMP	2	A8BCDEFG
- 6	AN3066-4	NUT,CABLE ATTACHING	4	A8BCDEFG
- 7	AN742D26	CLAMP	2	A8BCDEFG
- 8	AN742D9C	CLAMP	8	A8BCDEFG
- 9	35-521212	ACTUATOR ASSY,LH FLAP /SEE FIG. 17/	1	A8
- 10	35-521212-1	ACTUATOR ASSY,RH FLAP /SEE FIG. 17/	1	A8
45-521212		ACTUATOR ASSY,LH FLAP /SEE FIG. 17/	1	BCDEFG
45-521212-1		ACTUATOR ASSY,RH FLAP /SEE FIG. 17/	1	BCDEFG
- 10A	1057395-YH0230	BUSHING,ACTUATOR ATTACHING.	2	
- 10B	10080155-0437	BUSHING,ACTUATOR ATTACHING.	1	
- 11	35-361119	SWITCH ASSY,FLAP LIMIT /SEE FIG. 17/.	2	DE3
45-361115		SWITCH ASSY,FLAP LIMIT /SEE FIG. 17/.	2	E4
- 12	45-521212-10	SHAFT & CABLE ASSY,FLAP	2	A8BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

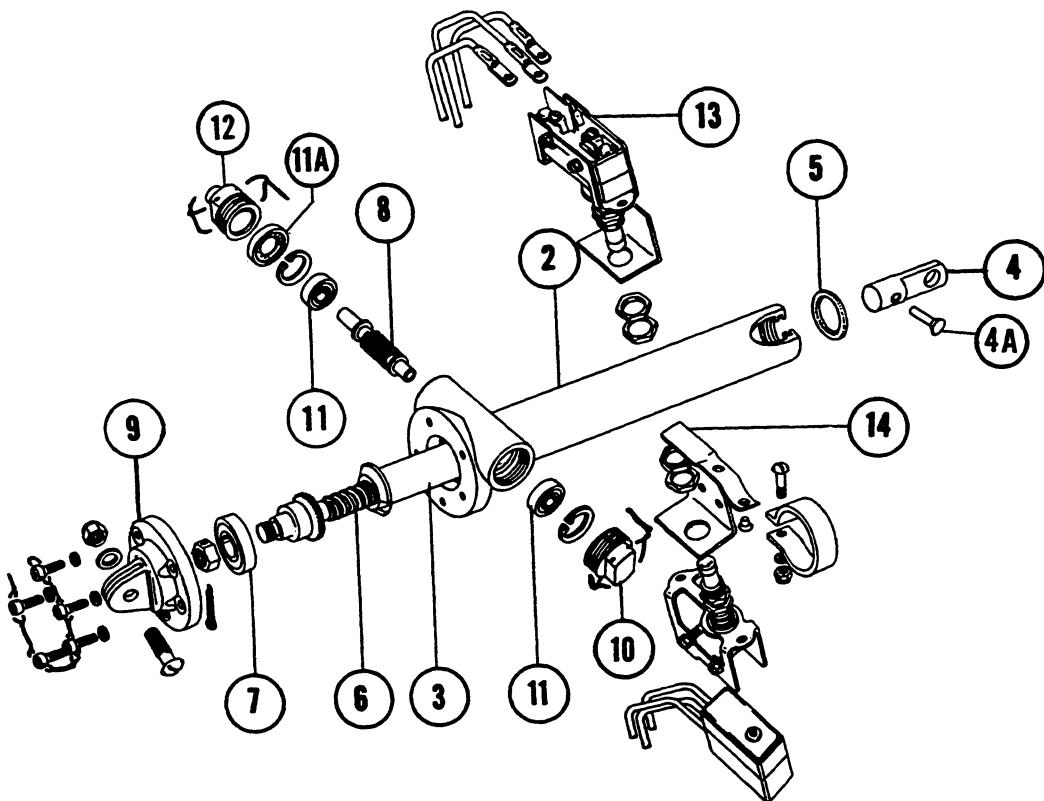


Figure 16. Flap Actuator And Limit Switch (D1 thru D837)

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
16	35-524210	ACTUATOR ASSY,LH /SEE FIG. 14 FOR NHA/	1	A7
	35-524210-1	ACTUATOR ASSY,RH /SEE FIG. 14 FOR NHA/	1	A7
- 2	35-524216	• HOUSING,ACTUATOR	1	A7
- 3	35-524214	• PISTON,ACTUATOR	1	A7
- 4	35-524215	• PLUG,ACTUATOR PISTON	1	A7
- 4A	AN426AD6-14	• RIVET,PLUG ATTACHING	1	A7
- 5	AN6227-13	• RING,PISTON SEAL	1	A7
- 6	35-524212	• SCREW,ACTUATOR	1	A7
	AN360-7	• NUT,SCREW RETAINING	1	A7
- 7	S-5-S	• BEARING,/MRC/	1	A7
- 8	35-524211	• WORM,ACTUATOR	1	A7
- 9	35-524213	• COVER,ACTUATOR	1	A7
- 10	35-524218	• PLUG,ACTUATOR HOUSING	1	A7
- 11	XA-134	• BEARING,ACTUATOR WORM	2	A7
- 11A	NAS50-62	• RING,BEARING RETAINING	2	A7
- 12	07580	• SEAL,WORM BEARING /CHI/	1	A7
	35-524217	• HOLDER,WORM GEAR	1	A7
	35-361119-602	SWITCH ASSY,FLAP ACTUATOR LIMIT /SEE FIG. 14 FOR NHA/	2	A7
- 13	AN3210-1	• SWITCH,LIMIT	2	A7
	BZR31	• SWITCH,LIMIT /MCS/ /ALTERNATE FOR AN3210-1/	2	A7
- 14	MC-2711	• ACTUATOR,LIMIT SWITCH /MCS/	2	A7
- 14	35-521221	TAB,LIMIT SWITCH ACTUATOR	1	A7
	AN742D20	CLAMP,ACTUATOR TAB	1	A7
	35-115256	COVER ASSY,RH FLAP ACTUATOR ACCESS	1	A7
	35-115264	COVER ASSY,LH FLAP LIMIT SWITCH	1	A7

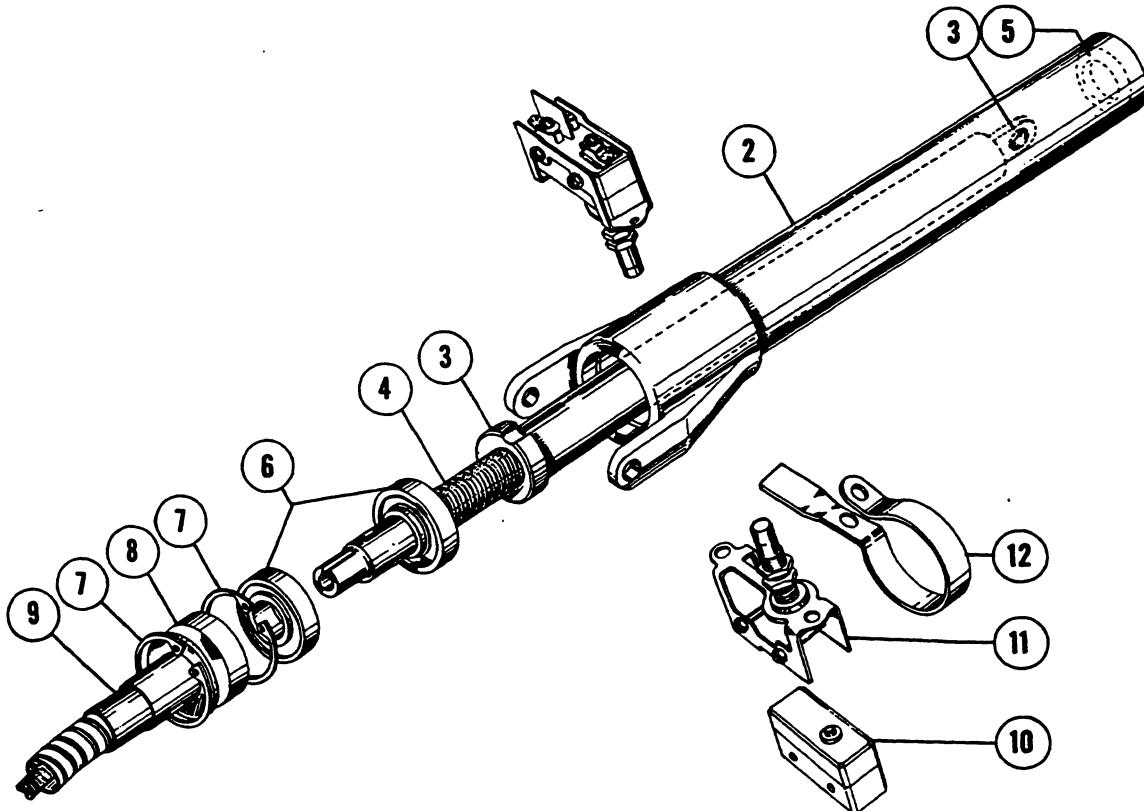


Figure 17. Flap Actuator And Limit Switch

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
17 - 1	35-521212		ACTUATOR ASSY,LH FLAP /SEE FIG. 15 FOR NHA/	1	A8BCDEFG
	35-521212-1		ACTUATOR ASSY,RH FLAP /SEE FIG. 15 FOR NHA/	1	A8BCDEFG
	45-521212		ACTUATOR ASSY,LH FLAP /SEE FIG. 15 FOR NHA/	1	BCDEFG
	45-521212-1		ACTUATOR ASSY,RH FLAP /SEE FIG. 15 FOR NHA/	1	BCDEFG
- 2	35-521213	• HOUSING,ACTUATOR	1	A8BCDEFG
- 3	35-521212-4	• PISTON ASSY,LH ACTUATOR	1	A8BCDEFG
	35-521212-5	• PISTON ASSY,RH ACTUATOR	1	A8BCDEFG
	45-521212-4	• PISTON ASSY,LH ACTUATOR	1	BCDEFG
	45-521212-5	• PISTON ASSY,RH ACTUATOR	1	BCDEFG
- 4	35-521216	• SCREW,LH ACTUATOR	1	A8BCDEFG
	35-521216-1	• SCREW,RH ACTUATOR	1	A8BCDEFG
	45-521216	• SCREW,LH ACTUATOR	1	BCDEFG
	45-521216-1	• SCREW,RH ACTUATOR	1	BCDEFG
- 5	AN6227-13	• SEAL	1	A8BCDEFG
- 6	S-5-S	• BEARING	2	A8BCDEFG
- 7	NAS50-112	• RING,BEARING RETAINING	2	A8BCDEFG
- 8	11116-M1	• SEAL/SUPERCEDES 11216/ /TWO ADDITIONAL	1	A8BCDEFG
			35-521230 SPACERS REQUIRED WHEN 11216 IS REPLACED BY 11116-M1/		
- 9	35-521230	• SPACER	2	
- 9	5192Y	• SHAFT & HOUSING,FLAP	1	A8BCDEFG
	35-361119-602		SWITCH ASSY,FLAP LIMIT /SEE FIG. 15 FOR NHA/	2	A8BCDE3
- 10	AN3210-1	• SWITCH,LIMIT	2	A8BCDE3
	BZR31	• SWITCH,LIMIT /MCS/ /ALTERNATE FOR AN3210-1/	2	A8BCDE3
- 11	MC-2711	• ACTUATOR+LIMIT SWITCH /MCS/	2	A8BCDE3
	45-361115	SWITCH ASSY,FLAP LIMIT /SEE FIG. 15 FOR NHA/	1	E4
	45-361116	• SWITCH,UP LIMIT	1	E4
	45-361117	• SWITCH,DOWN LIMIT	1	E4
	AN3169-1	• ACTUATOR,LIMIT SWITCH	1	E4
- 12	35-361146	TAB,LIMIT SWITCH ACTUATOR	1	A8BCDE3
	35-115256	COVER ASSY,RH FLAP ACTUATOR ACCESS	1	A8BCDEFG
	35-115256	COVER ASSY,LH FLAP ACTUATOR ACCESS	1	A8BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

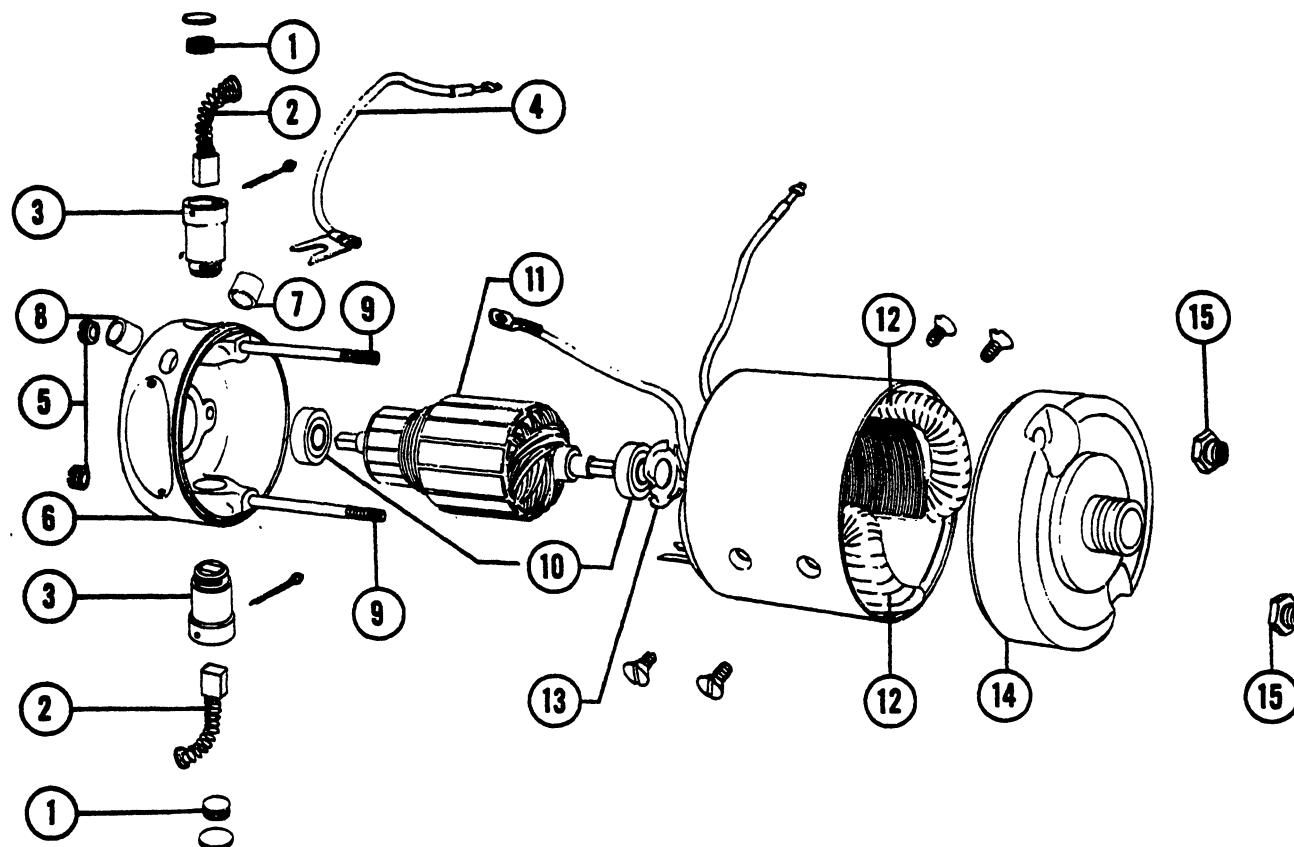


Figure 18. Flap Motor Assembly (D1 thru D837)

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS	USABLE
			PER ASSY	ON CODE
18	35-521160-2	MOTOR ASSY,FLAP /SEE FIG. 14 FOR NHA/	1	A5
- 1	5705	• SCREW,BRUSH HOLDER /BD/	2	A5
- 2	35107A	• BRUSH & SPRING ASSY,/BD/	2	A5
- 3	33107A	• HOLDER ASSY,BRUSH /BD/	2	A5
- 4	39109A	• LEAD & CLIP ASSY,/BD/	1	A5
- 5	7978	• SCREW,BRUSH HOLDER SEAT /BD/	2	A5
- 6	22196A	• BRACKET,COMMUTATOR /BD/	1	A5
- 7	0-3896	• BUSHING,CORD INSULATOR /BD/	1	A5
- 8	0-3883	• BUSHING,CORD INSULATOR /BD/	1	A5
- 9	10-7888	• STUD,MOTOR ASSEMBLING /BD/	2	A5
- 10	20-7641	• BEARING,SHAFT ROLLER /BD/	2	A5
- 11	32495-A	• ARMATURE ASSY,/BD/	1	A5
- 12	27395-A	• FIELD ASSY,/BD/	1	A5
- 13	0-3518	• SPRING+BEARING LOAD /BD/	1	A5
- 14	22197	• BRACKET,BEARING SUPPORT END /BD/	1	A5
- 15	7458	• NUT,MOTOR ASSEMBLING /BD/	2	A5
	35-521183	MOTOR ASSY,FLAP /SEE FIG. 14 FOR NHA/	1	A6
	35-521184	• SHAFT	1	A6
	35-521185	• GASKET	2	A6

MODEL 35 THRU G35 PARTS CATALOG

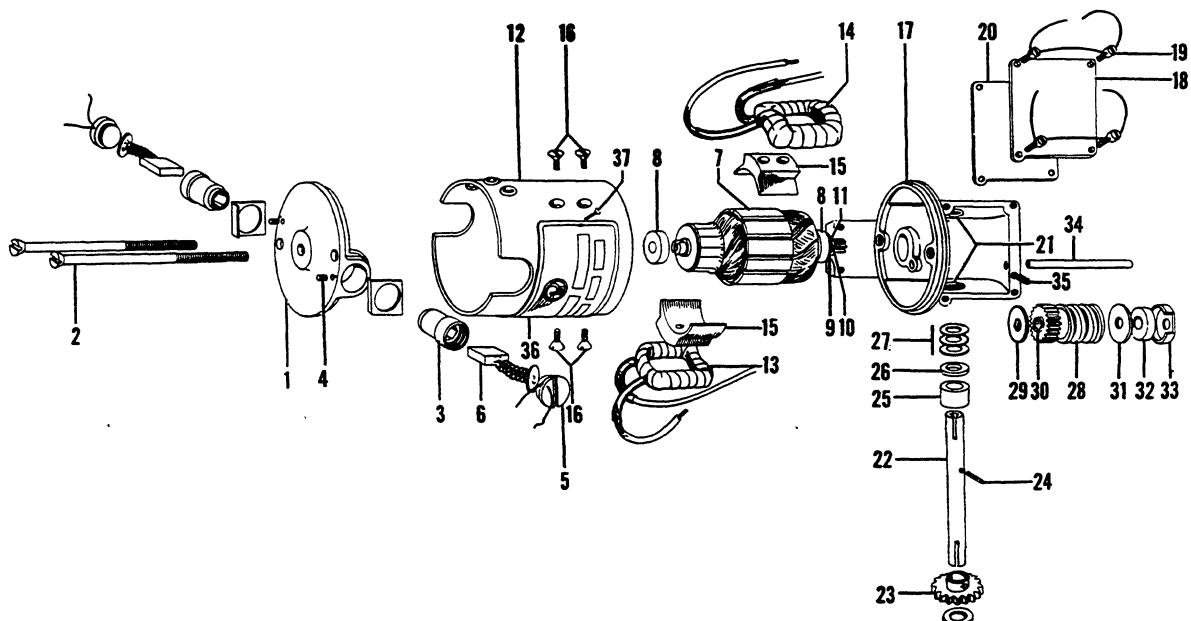


Figure 19. Flap Motor Assembly (D838 thru D4865)

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
19	35-521225		MOTOR ASSY,FLAP /SEE FIG. 15 FOR NHA/	1	A8BCDEFG
- 1	589-0068-401	.	• HOUSING,BRUSH END /DU/	1	A8BCDEFG
- 2	AN505-832-46	.	• SCREW,HOUSING ATTACHING	2	A8BCDEFG
- 3	R-451-0019-475	.	• HOLDER ASSY,BRUSH /DU/	2	A8BCDEFG
- 4	R-822-0311-055	.	• SCREW,HOLDER ATTACHING /DU/	2	A8BCDEFG
	606-0037-026	.	• INSULATOR,BRUSH HOLDER /DU/	2	A8BCDEFG
	449-0003	.	• CLIP,BRUSH HOLDER /DU/	2	A8BCDEFG
	449-0006	.	• CLIP,BRUSH HOLDER /DU/	1	A8BCDEFG
- 5	456-0010-006	.	• PLUG,BRUSH /DU/	2	A8BCDEFG
- 6	R-457-0627-475	.	• BRUSH ASSY,/DU/	2	A8BCDEFG
- 7	408-0293-233	.	• ARMATURE,/DU/	1	A8BCDEFG
- 8	ND77-R4	.	• BEARING,/ND/	2	A8BCDEFG
- 9	R-768-0004	.	• WASHER,/DU/	1	A8BCDEFG
- 10	766-0108	.	• WASHER,OIL RETAINING /DU/	1	A8BCDEFG
- 11	502-0048-404	.	• COLLAR,/DU/	1	A8BCDEFG
- 12	35-521225-2	.	• CASE,MOTOR	1	A8BCDEFG
- 13	35-521225-14	.	• FIELD ASSY.	1	A8BCDEFG
- 14	35-521225-16	.	• FIELD ASSY.	1	A8BCDEFG
- 15	550-0001	.	• POLE,FIELD /DU/	2	A8BCDEFG
- 16	AN505-632-5	.	• SCREW,POLE ATTACHING.	2	A8BCDEFG
- 17	595-0012-401	.	• HOUSING,GEAR /DU/	1	A8BCDEFG
- 18	520-0004-402	.	• COVER,GEAR HOUSING /DU/	1	A8BCDEFG
- 19	AN500A632-4	.	• SCREW,COVER ATTACHING	4	A8BCDEFG
- 20	559-0002-088	.	• GASKET,/DU/	1	A8BCDEFG
- 21	427-0092-014	.	• BEARING,/DU/	2	A8BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
19 - 22	35-521227		• SHAFT,FLAP ACTUATOR	• • • • • • •	1	A8BCDEFG
- 23	35-521227-4		• WHEEL,FLAP ACTUATOR WORM	• • • • • • •	1	A8BCDEFG
- 24	AAF385-30-6		• PIN,WHEEL ATTACHING TAPER	• • • • • • •	1	A8BCDEFG
- 25	100696S18-13-017		• SPACER • • • • • • •	• • • • • • •	1	A8BCDEFG
- 26	AN960-616L		• WASHER • • • • • • •	• • • • • • •	1	A8BCDEFG
- 27	105090B005-6-020		• WASHER • • • • • • •	• • • • • • •	4	A8BCDEFG
- 28	784-0038		• WORM & GEAR,/DU/	• • • • • • •	1	A8BCDEFG
- 29	766-0069-077		• WASHER,/DU/	• • • • • • •	1	A8BCDEFG
- 30	R-428-0008		• BEARING,/TOR/	• • • • • • •	2	A8BCDEFG
- 31	766-0045-077		• WASHER,/DU/	• • • • • • •	1	A8BCDEFG
- 32	R-426-0011		• BEARING,/ND/	• • • • • • •	1	A8BCDEFG
- 33	523-0004-054		• CUP,BEARING /DU/	• • • • • • •	1	A8BCDEFG
- 34	703-0003		• SHAFT,FLAP ACTUATOR COUNTER /DU/	• • • • • • •	1	A8BCDEFG
- 35	R-822-0409-055		• SCREW,SHAFT ATTACHING /DU/	• • • • • • •	1	A8BCDEFG
- 36	R901-311		• PLACARD,IDENTIFICATION	• • • • • • •	1	A8BCDEFG
- 37	AN535-2-2		• SCREW,PLACARD ATTACHING	• • • • • • •	2	A8BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

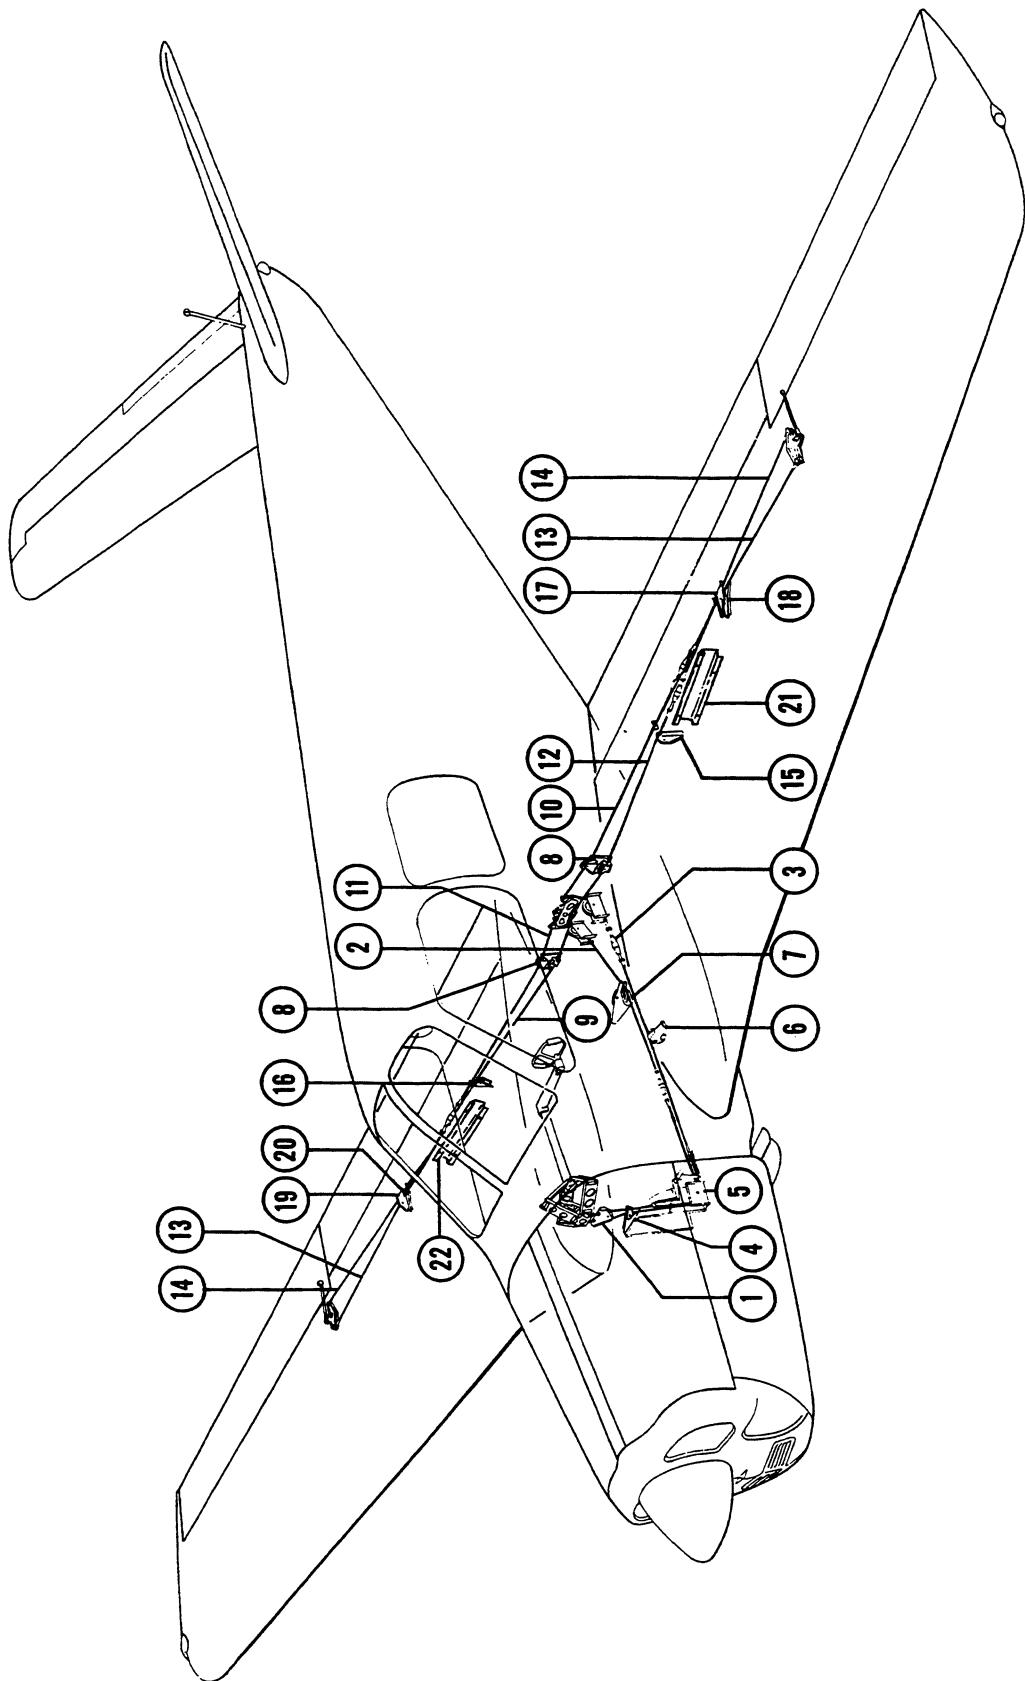


Figure 20. Alleron Control System (D1 thru D1500)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
20 - 1	35-524174		CABLE ASSY,FWD AILERON /SEE FIG. 22/	1	A1
- 2	NAS314-15-0472		CABLE ASSY,AFT RH AILERON	1	A1
- 3	NAS314-15-0152		CABLE ASSY,AFT LH AILERON	1	A1
	AN210-3A		PULLEY,AILERON	2	A1
- 4	35-415332		BRACKET,FWD PULLEY	1	A1
	AN210-4A		PULLEY,AILERON	2	A1
- 5	35-400339-2		BRACKET,FWD PULLEY	1	A1
	AN392-35		PIN,CABLE GUARD	2	A1
	AN210-3A		PULLEY,AILERON	1	A1
- 6	35-410201		BRACKET,CENTER PULLEY	1	A1
	AN155-32L		BARREL,TURNBUCKLE	2	A1
	AN210-4A		PULLEY,AILERON	1	A1
- 7	35-410309		BRACKET,CENTER PULLEY	1	A1
	AN210-4A		PULLEY,REAR FLOOR AILERON	2	A1
	AN210-3A		PULLEY,REAR TRUSS AILERON	4	A1
- 8	35-410024-10		BRACKET,PULLEY	2	A1
- 9	NAS305-24-0514		CABLE ASSY,RH LOWER INBD /RH THREAD/	1	A1
- 10	NAS305-25-0546		CABLE ASSY,RH UPPER INBD /LH THREAD/	1	A1
- 11	NAS305-35-0546		CABLE ASSY,LH UPPER INBD /LH THREAD/	1	A1
- 12	NAS305-34-0514		CABLE ASSY,LH LOWER INBD /RH THREAD/	1	A1
- 13	NAS305-35-0672		CABLE ASSY,LOWER OUTBD /LH THREAD/	1	A1
- 14	NAS305-34-0640		CABLE ASSY,UPPER OUTBD /RH THREAD/	1	A1
	AN210-3A		PULLEY,AILERON	2	A1
- 15	35-115100-6		BRACKET,LH INBD PULLEY	1	A1
- 16	35-115100-7		BRACKET,RH INBD PULLEY	1	A1
- 17	35-115042-6		BRACKET,LH UPPER OUTBD PULLEY	1	A1
- 18	35-115042-8		BRACKET,LH LOWER OUTBD PULLEY	1	A1
- 19	35-115042-7		BRACKET,RH UPPER OUTBD PULLEY	1	A1
- 20	35-115042-9		BRACKET,RH LOWER OUTBD PULLEY	1	A1
	AN155-32L		BARREL,TURNBUCKLE	2	A1
	35-521156		FAIRLEAD,INBD	1	A1
	35-521157		FAIRLEAD,OUTBD	1	A1
- 21	35-115261		COVER,LH AILERON CABLES	1	A1
- 22	35-115261-1		COVER,RH AILERON CABLES	1	A1

MODEL 35 THRU G35 PARTS CATALOG

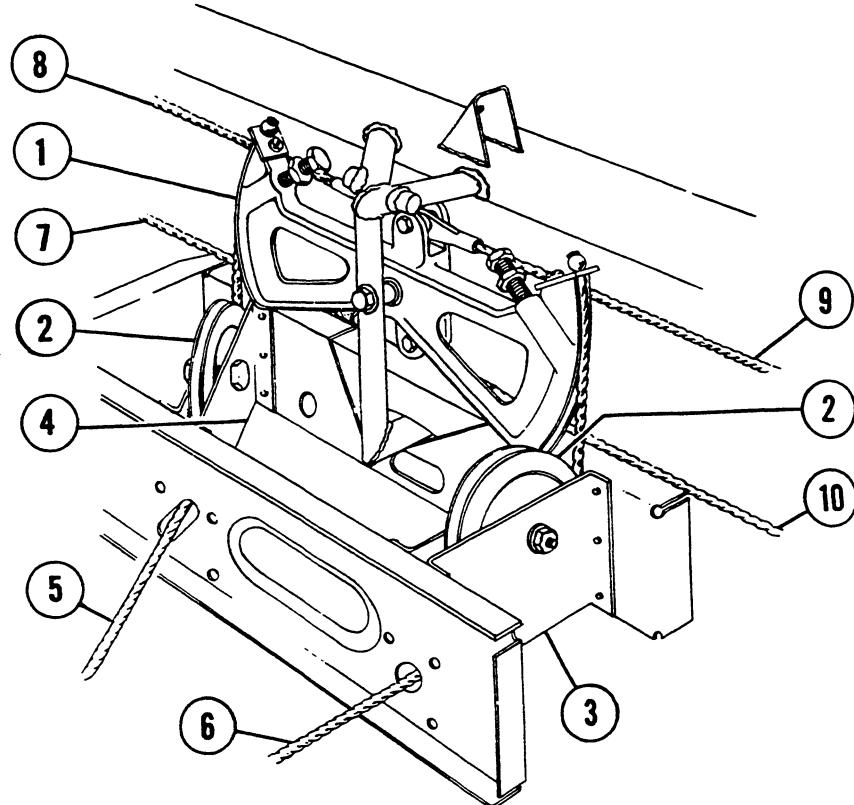


Figure 21. Aileron Control Quadrant Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
21	35-524187	QUADRANT ASSY, CONTROL							1	A1
	AN4-43	BOLT, QUADRANT ATTACHING							1	A1
	AN960-416	WASHER.							3	A1
	AN320-4	NUT							1	A1
- 1	35-524187-2	. QUADRANT, AILERON CONTROL							1	A1
	PN-4A	. BEARING, CONTROL QUADRANT /TOR/							2	A1
	35-524188	. BOLT, QUADRANT STOP.							2	A1
	AN316-5R	. NUT, STOP ADJUSTMENT							2	A1
	35-524189	PLATE, CABLE LOCKING							2	A1
	AN503-8-6	SCREW, PLATE ATTACHING							2	A1
- 2	AN210-4A	PULLEY, AILERON.							2	A1
	AN4-10A	BOLT, PULLEY ATTACHING							2	A1
	AN960-416	WASHER.							1	A1
	AN365-428	NUT							2	A1
- 3	35-410125-2	BRACKET, PULLEY.							1	A1
- 4	35-410125-4	BRACKET, PULLEY.							1	A1
	AN392-19	PIN, CABLE GUARD							4	A1
	35-410126	SUPPORT, PULLEY BRACKET FWD.							1	A1
	35-410003	SUPPORT, PULLEY BRACKET AFT.							1	A1
- 5	NAS314-15-0472	CABLE ASSY, RH AFT AILERON							1	A1
- 6	NAS314-15-0152	CABLE ASSY, LH AFT AILERON							1	A1
- 7	NAS305-24-0514	CABLE ASSY, RH LOWER INBD.							1	A1
- 8	NAS305-25-0546	CABLE ASSY, RH UPPER INBD.							1	A1
- 9	NAS305-35-0546	CABLE ASSY, LH UPPER INBD.							1	A1
- 10	NAS305-34-0514	CABLE ASSY, LH LOWER INBD.							1	A1
	AN4-11	BOLT, CABLE ATTACHING.							2	A1
	AN960-416	WASHER.							2	A1
	AN320-4	NUT							2	A1

MODEL 35 THRU G35 PARTS CATALOG

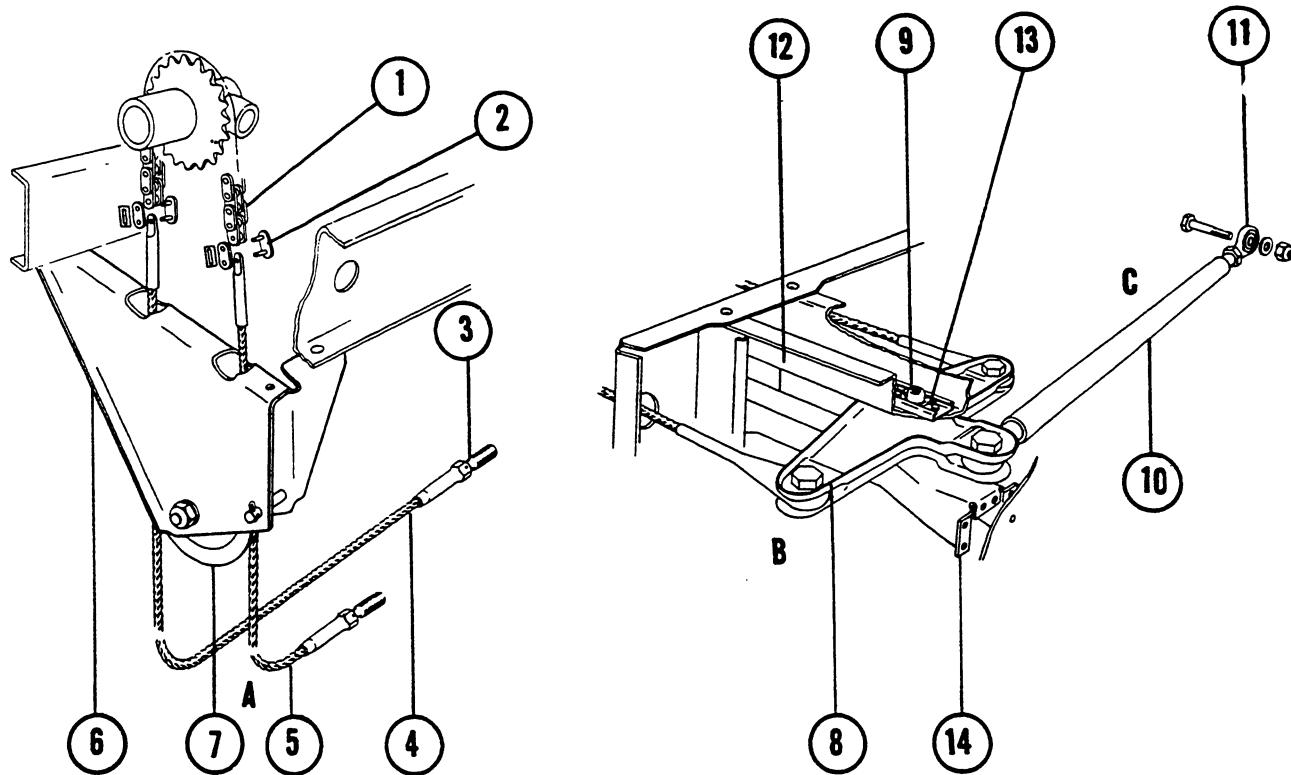


Figure 22. Aileron Control Sprocket And Bellcrank Assembly

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
22 - A	35-524174		CABLE ASSY,AILERON CONTROL/SEE FIG. 20 FOR NHA/	1	A1
- 1	X-1188		• CHAIN ASSY,AILERON CONTROL /DI/	1	A1
- 2	88		• LINK,CHAIN CONNECTING /TYPE A/ /DI/	2	A1
- 3	35-524175		• FITTING,CABLE	2	A1
	AN667-4		• TERMINAL,CABLE	2	A1
- 4	35-524174-2		• CABLE,RH FWD.	1	A1
- 5	35-524174-4		• CABLE,LH FWD.	1	A1
- 6	35-410019		BRACKET,PULLEY.	1	A1
- 7	AN210-3A		PULLEY,AILERON.	1	A1
- B	35-521153		BELLCRANK ASSY,AILERON CONTROL.	2	A1
	AN4-15A		BOLT,BELLCRANK ATTACHING.	1	A1
	AN960-416		WASHER.	1	A1
	AN365-428		NUT	1	A1
- 8	35-521153-2		• BELLCRANK,AILERON	1	A1
- 9	PN-4-A		• BEARING,BELLCRANK /TOR/	1	A1
- C	35-521152		ROD ASSY,AILERON CONTROL.	2	A1
	AN4-10A		BOLT,CONTROL ROD ATTACHING.	1	A1
	AN960-416		WASHER.	1	A1
	AN365-428		NUT	1	A1
- 10	35-521152-4		• ROD,AILERON CONTROL	1	A1
- 11	HM-4		• END,CONTROL ROD /HEC/	1	A1
	HML-4		• END,CONTROL ROD /HEC/	1	A1
	AN316-4R		• NUT,ROD END STOP.	1	A1
	AN316-4L		• NUT,ROD END STOP.	1	A1
- 12	35-115202-6		BRACKET,LH UPPER BELLCRANK SUPPORT.	1	A1
	35-115202-7		BRACKET,RH UPPER BELLCRANK SUPPORT.	1	A1
- 13	22A-21-2-048		• NUT,BELLCRANK RETAINING /EN/.	1	A1
- 14	35-115202-8		BRACKET,LOWER BELLCRANK SUPPORT	1	A1

MODEL 35 THRU G35 PARTS CATALOG

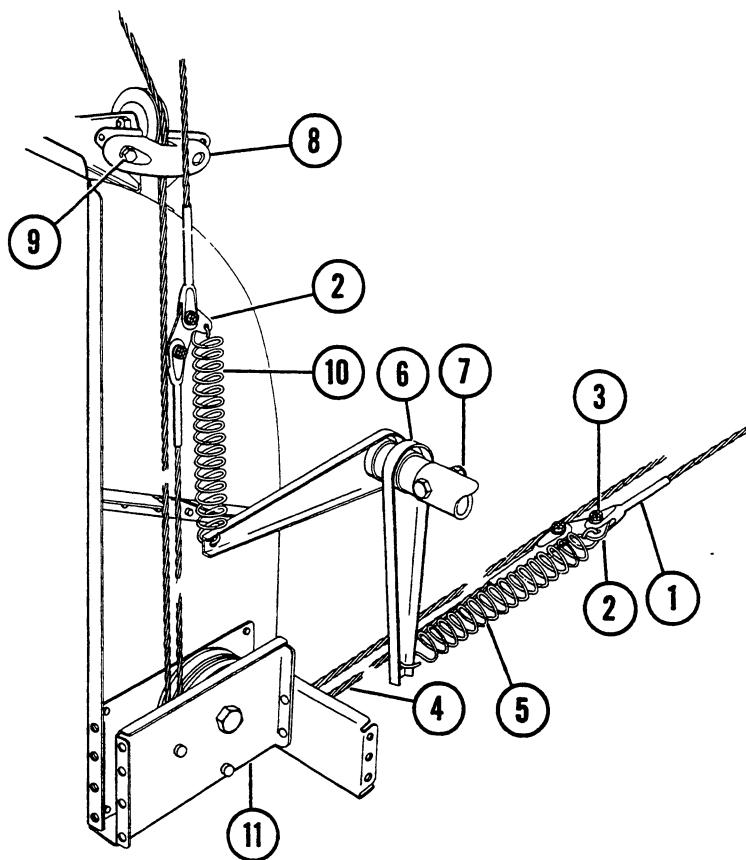


Figure 23. Aileron Bungee Mechanism

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
23 - 1	NAS304-24-0397	CABLE ASSY,LH CENTER AILERON.	1	A1
- 2	35-524302	LINK,CABLE ATTACHING.	2	A1
- 3	AN23-11	BOLT,CABLE ATTACHING.	4	A1
	AN960-10	WASHER.	8	A1
	AN320-3	NUT	4	A1
- 4	NAS304-22-0256	CABLE ASSY,LH FWD AILERON	1	A1
- 5	35-524305	SPRING,AILERON BUNGEE	1	A1
- 6	35-524297	ARM ASSY,AILERON BUNGEE	1	A1
- 7	AN23-22A	BOLT,ARM ATTACHING.	1	A1
	AN960-10	WASHER.	1	A1
	AN365-1032	NUT	1	A1
- 8	35-524309	FAIRLEAD,CABLE GUIDE.	1	A1
- 9	AN515-8-8	SCREW,FAIRLEAD ATTACHING.	2	A1
	AN960-8	WASHER.	4	A1
	AN365-832	NUT	2	A1
- 10	35-524305	SPRING,AILERON BUNGEE	1	A1
- 11	35-400339-2	BRACKET,PULLEY.	1	A1

MODEL 35 THRU G35 PARTS CATALOG

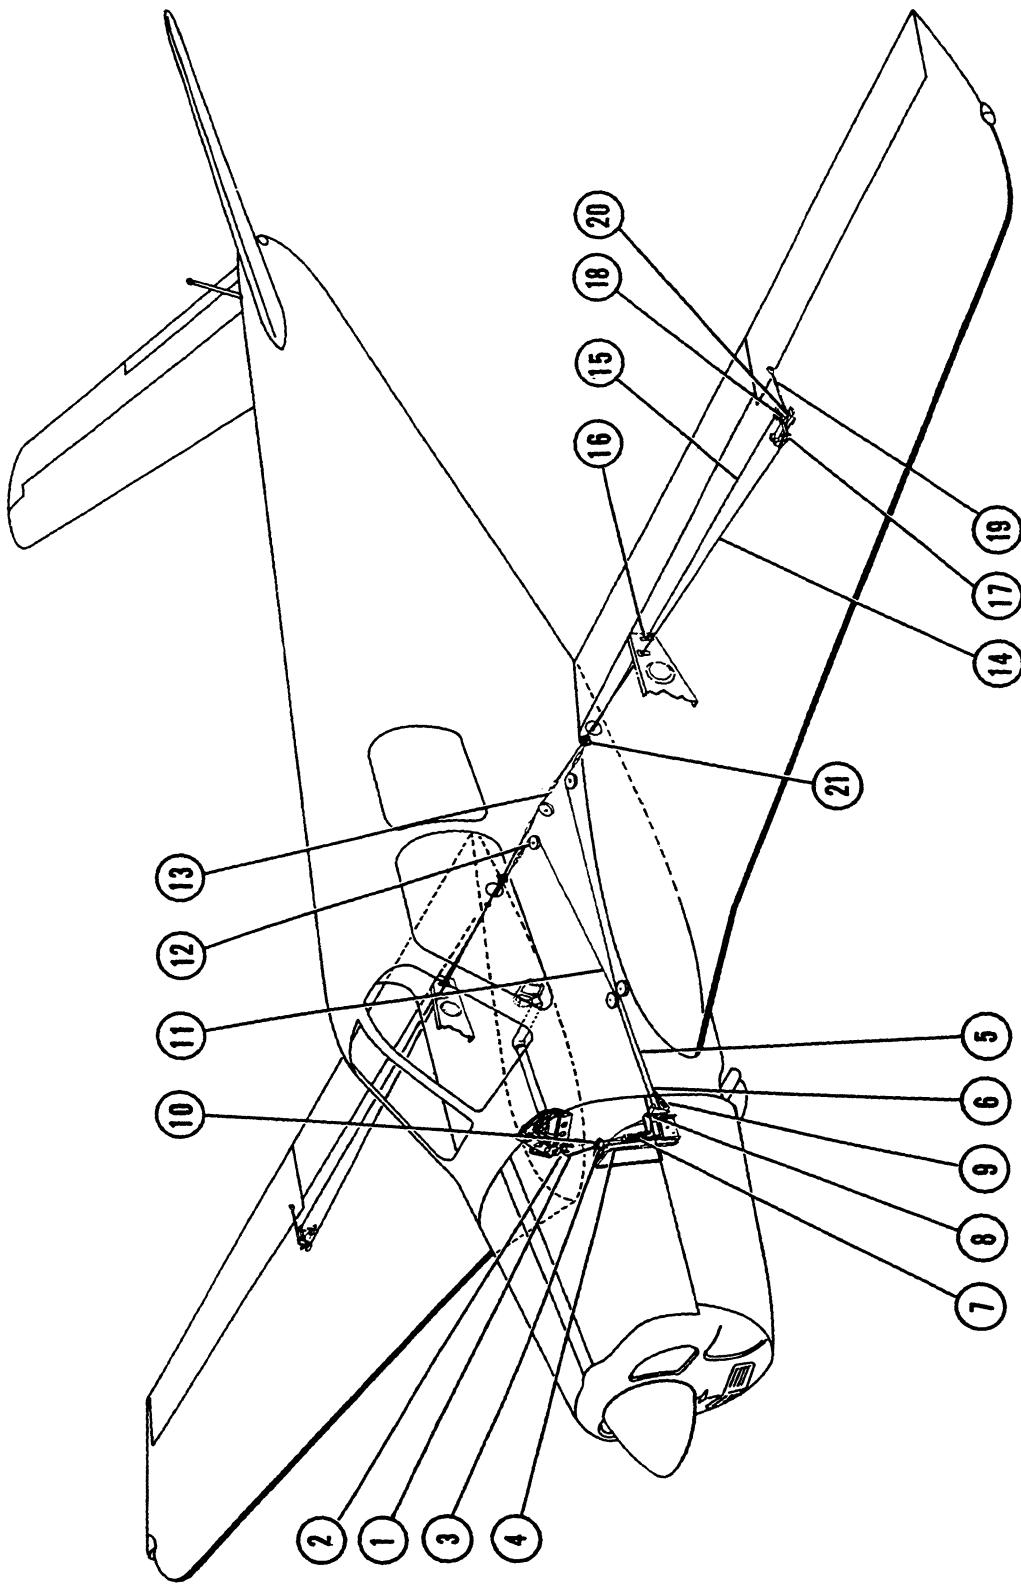


Figure 24. Alleron Control System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
24	35-524314	CABLE ASSY,FWD AILERON CONTROL	• CABLE ASSY,RH FWD AILERON	1	A2BCDEFG
- 1	35-524314-6	• CABLE ASSY,LH FWD AILERON	•	1	A2BCDEFG
	35-524314-8	• CABLE ASSY,AILERON CONTROL /DI/	•	1	A2BCDEFG
- 2	X-1188	/27 LINKS - 17 INCHES/	•	1	A2BCDEFG
	88	• LINK,CHAIN CONNECTING /TYPE A/ /DI/	•	2	A2BCDEFG
- 3	35-524309	FAIRLEAD,CABLE GUARD	•	1	A2BCDEFG
- 4	NAS304-22-0256	CABLE ASSY,LH FWD AILERON	•	1	A2BCDEFG
- 5	NAS304-26-0603	CABLE ASSY,LH CENTER AILERON	•	1	A2BCDEFG
- 6	35-524302	LINK,CABLE ATTACHING	•	2	A2BCDEFG
	AN23-11	BOLT,LINK ATTACHING	•	4	A2BCDEFG
	AN960-10	WASHER	•	4	A2BCDEFG
	AN320-3	NUT	•	4	A2BCDEFG
- 7	35-524305	SPRING,AILERON BUNGEE	•	1	A2BCDEFG
- 8	35-524297	ARM ASSY,AILERON BUNGEE	•	1	A2BCDEFG
	AN386-2-12A	PIN,ARM ATTACHING TAPER	•	1	A2BCDEFG
	AN975-3	WASHER	•	1	A2BCDEFG
	AN364-1032	NUT	•	1	A2BCDEFG
- 9	35-524305	SPRING,AILERON BUNGEE	•	1	A2BCDEFG
- 10	AN210-3A	PULLEY,AILERON CABLE	•	2	A2BCDEFG
- 11	NAS304-24-610	CABLE ASSY,RH CENTER AILERON	•	1	A2BCDEFG
- 12	AN210-4A	PULLEY,AILERON CABLE	•	6	A2BCDEFG
- 13	NAS304-66-0170	CABLE ASSY,CENTER AILERON BALANCE	•	1	A2BCDEFG
	AN155-32L	BARREL,TURNBUCKLE	•	4	A2BCDEFG
- 14	35-521188	CABLE ASSY,OUTBD AILERON BALANCE	•	1	A2BCDEFG
- 15	35-521189	CABLE ASSY,OUTBD AILERON CONTROL	•	1	A2BCDEFG
	AN24-12	BOLT,CABLE ATTACHING	•	4	A2BCDEFG
	AN960-416L	WASHER	•	4	A2BCDEFG
	AN320-4	NUT	•	4	A2BCDEFG
- 16	35-521181	FAIRLEAD,CABLE	•	2	A2BCDEFG
- 17	35-521190	FITTING,OUTBD CABLE	•	2	A2BCDEFG
	35-521186	BOLT,FITTING ATTACHING	•	2	A2BCDEFG
	AN960-10L	WASHER	•	2	A2BCDEFG
	AN320-3	NUT	•	2	A2BCDEFG
- 18	35-521158	BELLCRANK ASSY,LH AILERON	•	1	A2BCDEFG
	35-521158-1	BELLCRANK ASSY,RH AILERON	•	1	A2BCDEFG
	AN4-16A	BOLT,BELLCRANK ATTACHING	•	1	A2BCDEFG
	AN960-416	WASHER	•	1	A2BCDEFG
	AN365-428	NUT	•	1	A2BCDEFG
	35-521158-2	• BELLCRANK,LH	•	1	A2BCDEFG
	35-521158-3	• BELLCRANK,RH	•	1	A2BCDEFG
	AR-4	• BEARING,BELLCRANK /TOR/	•	1	A2BCDEFG
	S185-111-003	• BOLT,STOP	•	1	A2BCDEFG
	AN316-5R	• NUT,CHECK	•	1	A2BCDEFG
- 19	35-521152	ROD ASSY,AILERON CONTROL	•	1	A2BCDEFG
- 20	35-521187	BOLT,ROD ATTACHING	•	1	A2BCDEFG
	35-521152-4	• ROD,AILERON CONTROL	•	1	A2BCDEFG
	HM-4	END,CONTROL ROD /HEC/	•	1	A2BCDEFG
	HML-4	END,CONTROL ROD /HEC/	•	1	A2BCDEFG
	AN316-4R	NUT,ROD END STOP	•	1	A2BCDEFG
	AN316-4L	NUT,ROD END STOP	•	1	A2BCDEFG
- 21	35-410391	FAIRLEAD,CABLE	•	1	A2BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

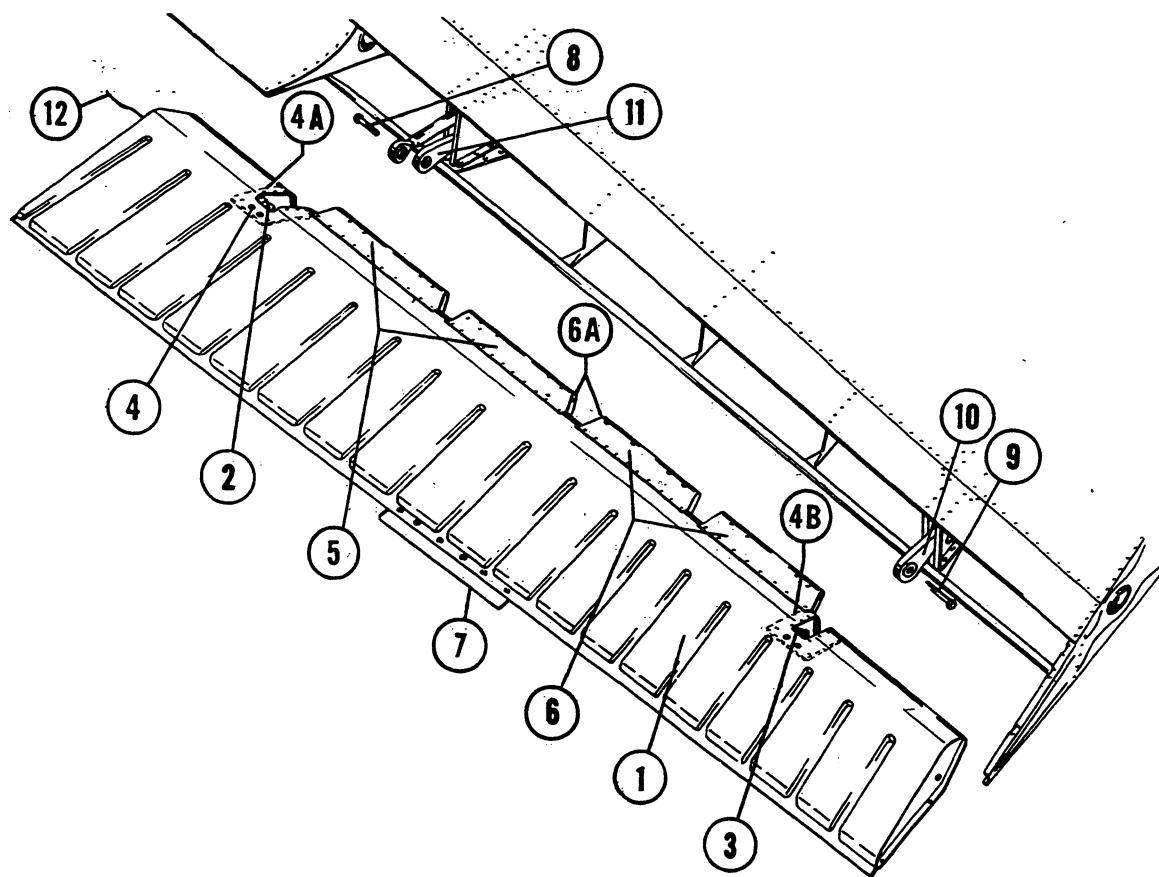


Figure 25. Aileron Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION						UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6		
25 -	1 35-135025	AILERON ASSY.	2
-	2 35-135025-36	• BRACKET, INBD ATTACHING.	1
-	3 35-135025-32	• BRACKET, OUTBD ATTACHING	1
-	4 NAS221-9 AN960-10L 112105	• SCREW, BRACKET ATTACHING	8
-	4A 35-135025-102	• WASHER	8
-	4B 35-135025-100	• WASHER	8
-	5 35-135025-602	• DOUBLER, INBD.	1
-	6 35-135025-604	• DOUBLER, OUTBD	1
-	6A 35-135025-2	• WEIGHT ASSY, BALANCE	2
-	7 35-135025-20	/CONSISTS OF BRACKETS & WEIGHTS/	
-	8 AN4-10A AN960-416 AN365-428	• WEIGHT ASSY, BALANCE	2
-	9 AN3-7A AN960-10 AN365-1032	/CONSISTS OF BRACKETS & WEIGHTS/	
-	10 35-115071-12	• WEIGHT, BALANCE	4
-	11 35-115147	• TAB, AILERON	1
-	12 AN749-1-6	BOLT, AILERON CONTROL ATTACHING.	1
		WASHER	1
		NUT	1
		BOLT, AILERON ATTACHING.	2
		WASHER	2
		NUT	2
		HINGE, OUTBD	1
		HINGE, INBD	1
		JUMPER, BONDING	1

MODEL 35 THRU G35 PARTS CATALOG

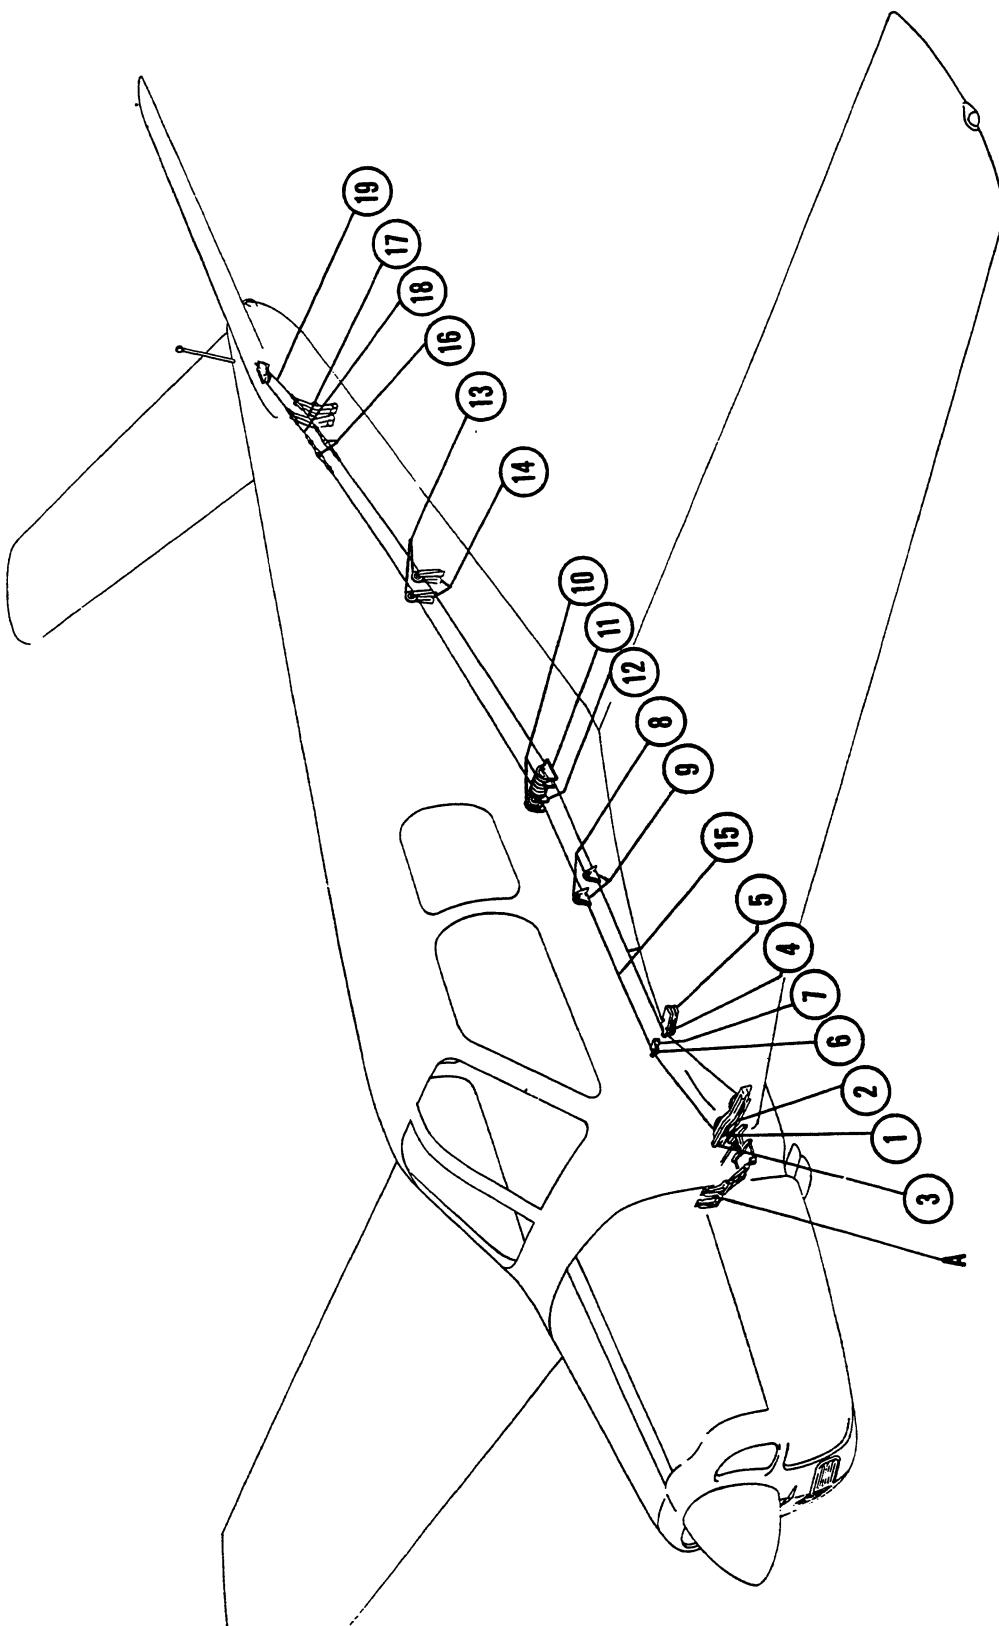


Figure 26. Rudder Control System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
26 - A	35-524061	PEDAL INSTL,RUDDER /SEE FIG. 29/	• • • • • • •	1	
- 1	AN210-4A	PULLEY,RUDDER CONTROL	• • • • • • •	2	
	AN4-10A	BOLT,PULLEY ATTACHING	• • • • • • •	1	
	AN960-416	WASHER• • • • •	• • • • • • •	1	
	AN365-428	NUT • • • • •	• • • • • • •	1	
- 2	35-410210-18	BRACKET,PULLEY LOWER SUPPORT	• • • • • • •	1	
- 3	35-410210-20	BRACKET,PULLEY UPPER SUPPORT	• • • • • • •	1	
	AN392-19	PIN,CABLE GUARD	• • • • • • •	1	
- 4	AN210-4A	PULLEY,RUDDER CONTROL	• • • • • • •	1	A1
	AN4-10A	BOLT,PULLEY ATTACHING	• • • • • • •	1	A1
	AN960-416	WASHER• • • • •	• • • • • • •	1	A1
	AN365-428	NUT • • • • •	• • • • • • •	1	A1
- 5	35-410311	BRACKET,PULLEY	• • • • • • •	1	A1
	AN392-19	PIN,CABLE GUARD	• • • • • • •	2	A1
- 6	AN210-3A	PULLEY,RUDDER CONTROL	• • • • • • •	1	A1
	AN4-10A	BOLT,PULLEY ATTACHING	• • • • • • •	1	A1
	AN960-416	WASHER• • • • •	• • • • • • •	1	
	AN365-428	NUT • • • • •	• • • • • • •	1	
- 7	35-410310	BRACKET,PULLEY	• • • • • • •	1	A1
	AN392-19	PIN,CABLE GUARD	• • • • • • •	2	A1
- 8	AN210-3A	PULLEY,RUDDER CONTROL	• • • • • • •	2	A1
	AN210-4A	PULLEY,RUDDER CONTROL	• • • • • • •	2	A2BCDEFG
	AN4-10A	BOLT,PULLEY ATTACHING	• • • • • • •	2	
	AN960-416	WASHER• • • • •	• • • • • • •	2	
	AN365-428	NUT • • • • •	• • • • • • •	2	
- 9	35-410307-6	BRACKET,PULLEY	• • • • • • •	2	A1
	35-410158-16	BRACKET,PULLEY	• • • • • • •	1	A2BCDEFG
	AN392-19	PIN,CABLE GUARD	• • • • • • •	2	
- 10	AN210-4A	PULLEY,RUDDER CONTROL	• • • • • • •	2	
	AN4-54A	BOLT,PULLEY ATTACHING	• • • • • • •	1	
	AN960-416	WASHER• • • • •	• • • • • • •	2	
	AN365-428	NUT • • • • •	• • • • • • •	2	
	100801S6-1484	SPACER• • • • •	• • • • • • •	1	
	100801S6-0484	SPACER• • • • •	• • • • • • •	1	
- 11	35-410015	BRACKET,PULLEY	• • • • • • •	1	
- 12	35-410015-1	BRACKET,PULLEY	• • • • • • •	1	
	35-524003	PIN,CABLE GUARD	• • • • • • •	1	
- 13	AN210-3A	PULLEY,RUDDER CONTROL	• • • • • • •	2	
	AN4-10A	BOLT,PULLEY ATTACHING	• • • • • • •	2	
	AN960-416	WASHER• • • • •	• • • • • • •	2	
	AN365-428	NUT • • • • •	• • • • • • •	2	
- 14	35-410141	BRACKET,PULLEY	• • • • • • •	2	
- 15	NAS314-14-1875	CABLE ASSY,FWD RUDDER	• • • • • • •	2	A1
	NAS314-14-1871	CABLE ASSY,FWD RUDDER	• • • • • • •	2	A2BCDEFG
	35-524006	PLATE,CABLE ATTACHING	• • • • • • •	2	
	AN502-10-8	SCREW,PLATE ATTACHING	• • • • • • •	2	
- 16	AN155-32L	BARREL,TURNBUCKLE	• • • • • • •	2	
- 17	NAS304-25-0106	CABLE ASSY,LH AFT RUDDER	• • • • • • •	1	
- 18	NAS304-25-0100	CABLE ASSY,RH AFT RUDDER	• • • • • • •	1	
	AN23-18	BOLT,CABLE ATTACHING	• • • • • • •	1	
	AN960-10L	WASHER• • • • •	• • • • • • •	1	
	AN320-3	NUT • • • • •	• • • • • • •	1	
	35-524109	LINK,CABLE ATTACHING	• • • • • • •	1	
- 19	NAS304-33-0255	CABLE ASSY,AFT RUDDER CONTROL	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

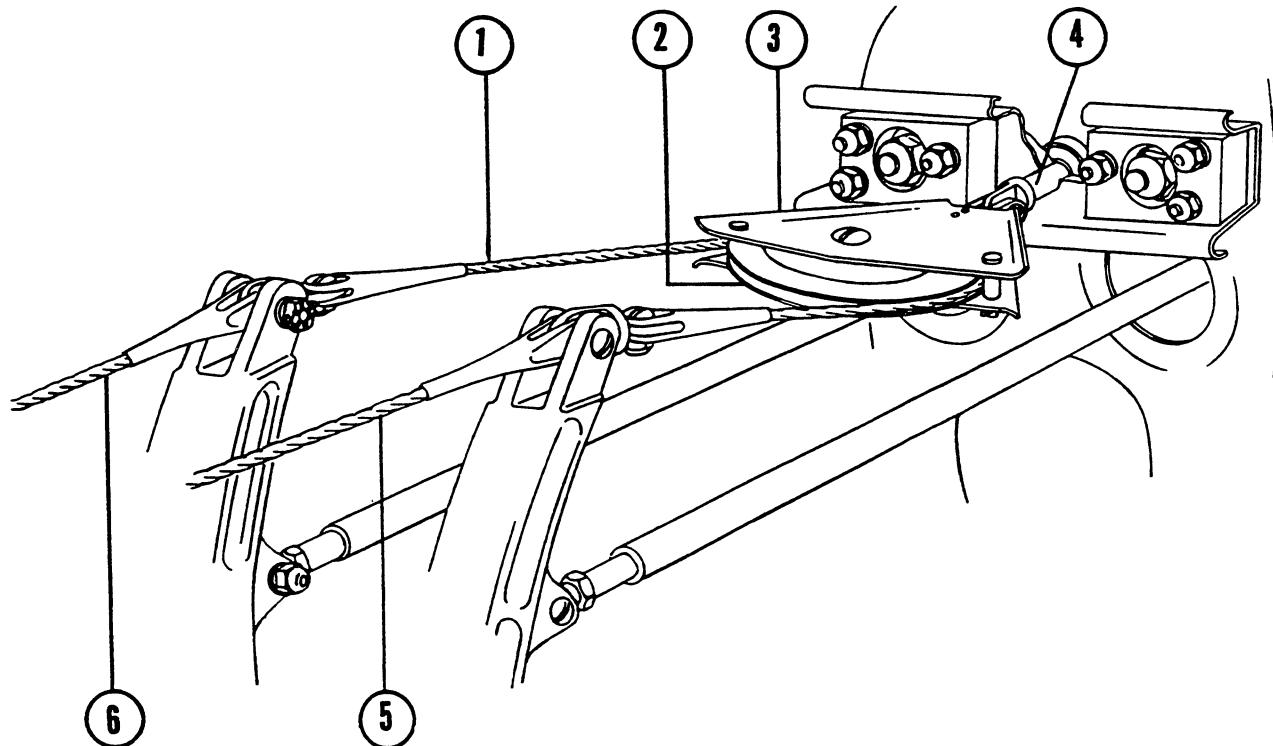


Figure 27. Aft Rudder Control System

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
27 - 1	NAS304-33-0255 35-524109 AN23-14A AN960-10L AN365-1032		CABLE ASSY,AFT RUDDER CONTROL LINK ASSY,CABLE ATTACHING BOLT,CABLE ATTACHING. WASHER. NUT	1	
- 2	AN210-5A AN26-17 AN960-616 AN320-6		PULLEY,RUDDER CONTROL BOLT,PULLEY ATTACHING WASHER. NUT	1	
- 3	35-524245 AN24-13 AN960-416 AN320-4 AN392-25		BRACKET ASSY,PULLEY BOLT,BRACKET ATTACHING. WASHER. NUT	1	
- 4	35-524263 AN310-5 AN960-516 35-524263-2 NO NUMBER		BOLT ASSY,SWIVEL. NUT,BOLT ATTACHING. WASHER. . . BOLT,SWIVEL BEARING,SWIVEL BOLT /AXD/ /.2505 I.D. X .3135 O.D. X .190 LONG/	1	
- 5	NAS304-25-0106		CABLE ASSY,LH RUDDER. CABLE ASSY,RH RUDDER. BOLT,CABLE ATTACHING. WASHER. NUT	1	
- 6	NAS304-25-0100 AN23-18 AN960-10L AN320-3									1	

MODEL 35 THRU G35 PARTS CATALOG

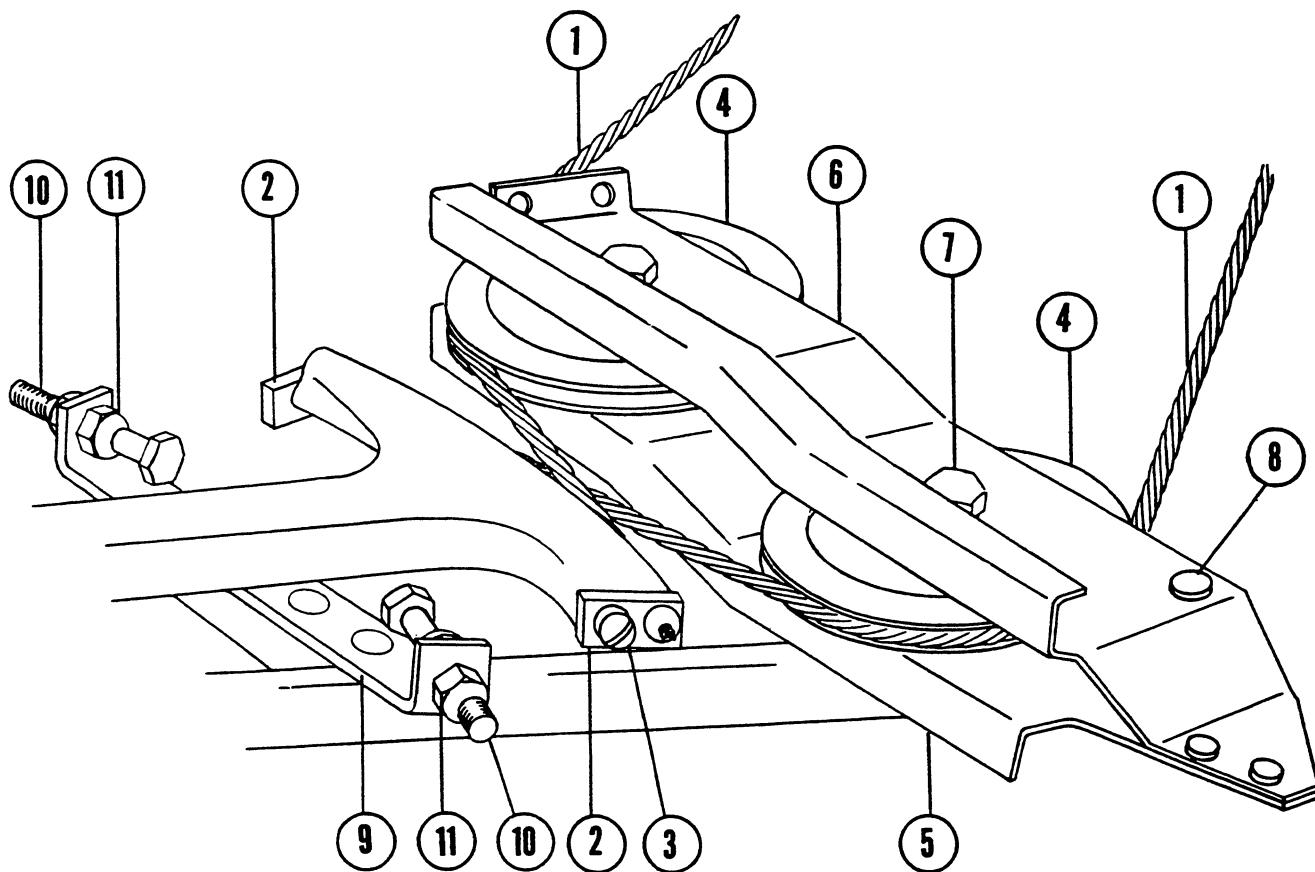


Figure 28. Forward Rudder Control System

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
28 - 1	NAS314-14-1875	CABLE ASSY,FWD RUDDER CONTROL	2	
- 2	35-524006	PLATE,CABLE ANCHOR.	2	
- 3	AN502-10-8	SCREW,PLATE ATTACHING	2	
- 4	AN210-4A	PULLEY,RUDDER CONTROL	2	
- 5	35-410210-18	BRACKET,PULLEY LOWER SUPPORT.	1	
- 6	35-410210-20	BRACKET,PULLEY UPPER SUPPORT.	1	
- 7	AN4-10A	BOLT,PULLEY ATTACHING	2	
	AN960-416	WASHER.	2	
	AN365-428	NUT	2	
- 8	AN392-19	PIN,CABLE GUARD	1	
- 9	35-410164-2	STOP,RUDDER PEDAL	1	
- 10	35-524185	BOLT,STOP	2	
- 11	AN364-428	NUT,STOP ADJUSTING.	4	

MODEL 35 THRU G35 PARTS CATALOG

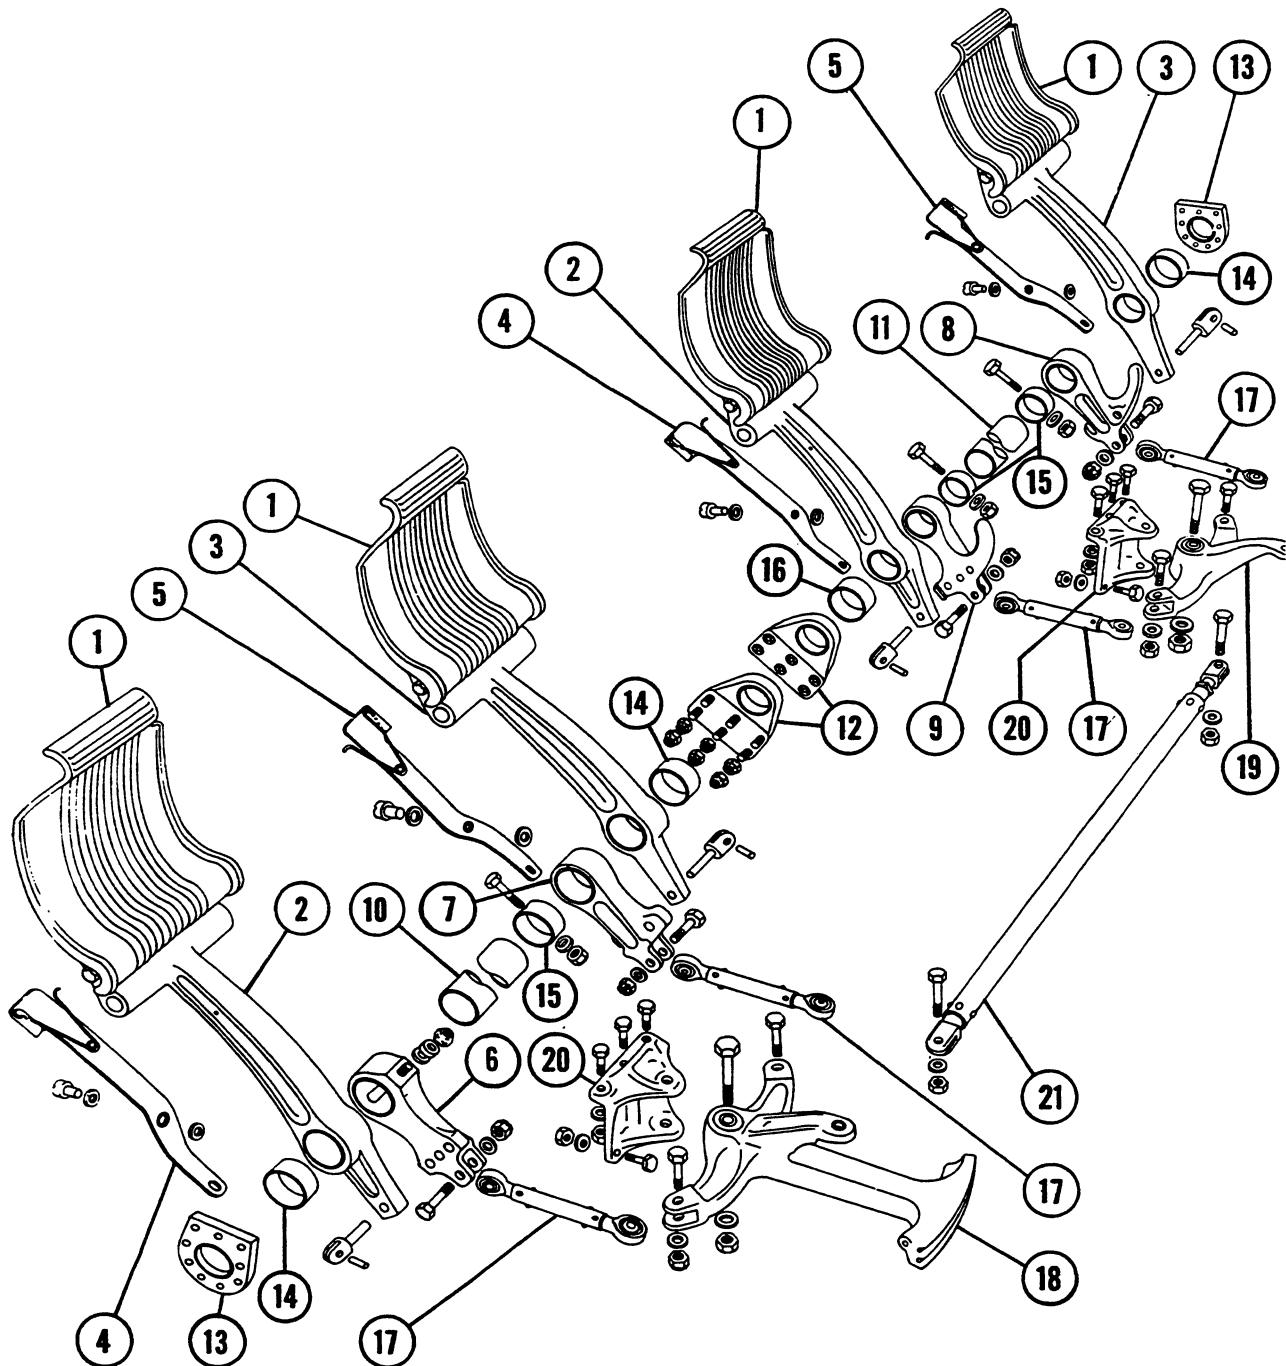


Figure 29. Rudder Pedal Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
29	35-524061	PEDAL INSTL,RUDDER /SEE FIG. 26 FOR NHA/		REF	
- 1	35-524011	• PEDAL,RUDDER.		4	
- 2	35-524060	• ARM ASSY,LH RUDDER PEDAL.		2	
- 3	35-524060-1	• ARM ASSY,RH RUDDER PEDAL.		2	
	A1170-2	• BUSHING,PEDAL ARM /CC/.		2	
- 4	35-524170	• LEVER ASSY,LH PEDAL ADJUSTING		1	
- 5	35-524170-1	• LEVER ASSY,RH PEDAL ADJUSTING		1	
	105739X0190-	• BUSHING,ADJUSTING LEVER		2	
	0250-0135				
	35-524308	• SPRING,ADJUSTING LEVER.		2	
	35-524171	• • PIN,LEVER STOP.		2	
	102809A125-014	• • PIN,STOP ATTACHING.		2	
- 6	35-524143-6	• ARM ASSY,PILOTS PEDAL LOWER		1	
	AN386-2-12A	• PIN,ARM ATTACHING TAPER		1	
	AN975-3	• WASHER.		1	
	AN364-1032	• NUT		1	
	NO NUMBER	• BEARING,LOWER ARM /1.002 I.D. X 1.128 O.D. X .885 LONG/		1	
- 7	35-524300	• ARM ASSY,PILOTS PEDAL LOWER		1	
	NO NUMBER	• • BEARING,LOWER ARM /1.002 I.D. X 1.128 O.D. X .885 LONG/		1	
- 8	35-524367	• ARM ASSY,COPILOTS PEDAL LOWER		1	
- 9	35-524367-1	• ARM ASSY,COPILOTS PEDAL LOWER		1	
	35-524368	• ARM ASSY,COPILOTS PEDAL LOWER /USE WITH DUAL BRAKES/		1	
	A1170-4	• • BEARING,LOWER ARM /CC/.		1	
- 10	35-524301	• TUBE,PILOTS PEDAL TORQUE.		1	
- 11	35-524018	• TUBE,COPILOTS PEDAL TORQUE.		1	
- 12	35-524183	• SUPPORT ASSY,RUDDER PEDAL INBD.		1	
	35-524275	• SCREW,SUPPORT ATTACHING		6	
	A1170-7	• • BEARING,INBD SUPPORT /CC/.		1	
- 13	35-400364-8	• SUPPORT ASSY,RUDDER PEDAL OUTBD		1	
	35-400364-6	• • BEARING,OUTBD SUPPORT		1	
- 14	105739S1000-	• SPACER.		3	
	1125-0563				
- 15	105739S1000-	• BUSHING		3	
	1125-0625				
- 16	105739S1000-	• SPACER.		1	
	1125-0703				
- 17	35-524066	• ROD ASSY,RUDDER PEDAL		2	
- 18	35-524137	• BELLCRANK ASSY,LH RUDDER PEDAL.		1	
- 19	35-524138	• BELLCRANK ASSY,RH RUDDER PEDAL.		1	
	AN301K4A	• • BEARING,BELLCRANK		2	
	A225	• • BEARING,BELLCRANK /CC/.		1	
	102933-05-0625-	• • SPACER,BELLCRANK BEARING.		1	
	0749				
- 20	35-524136	• SUPPORT,BELLCRANK		1	
- 21	35-524144	• ROD ASSY,BELLCRANK PUSH		1	
	35-524258	• FORK,PUSH ROD ATTACHING		1	

MODEL 35 THRU G35 PARTS CATALOG

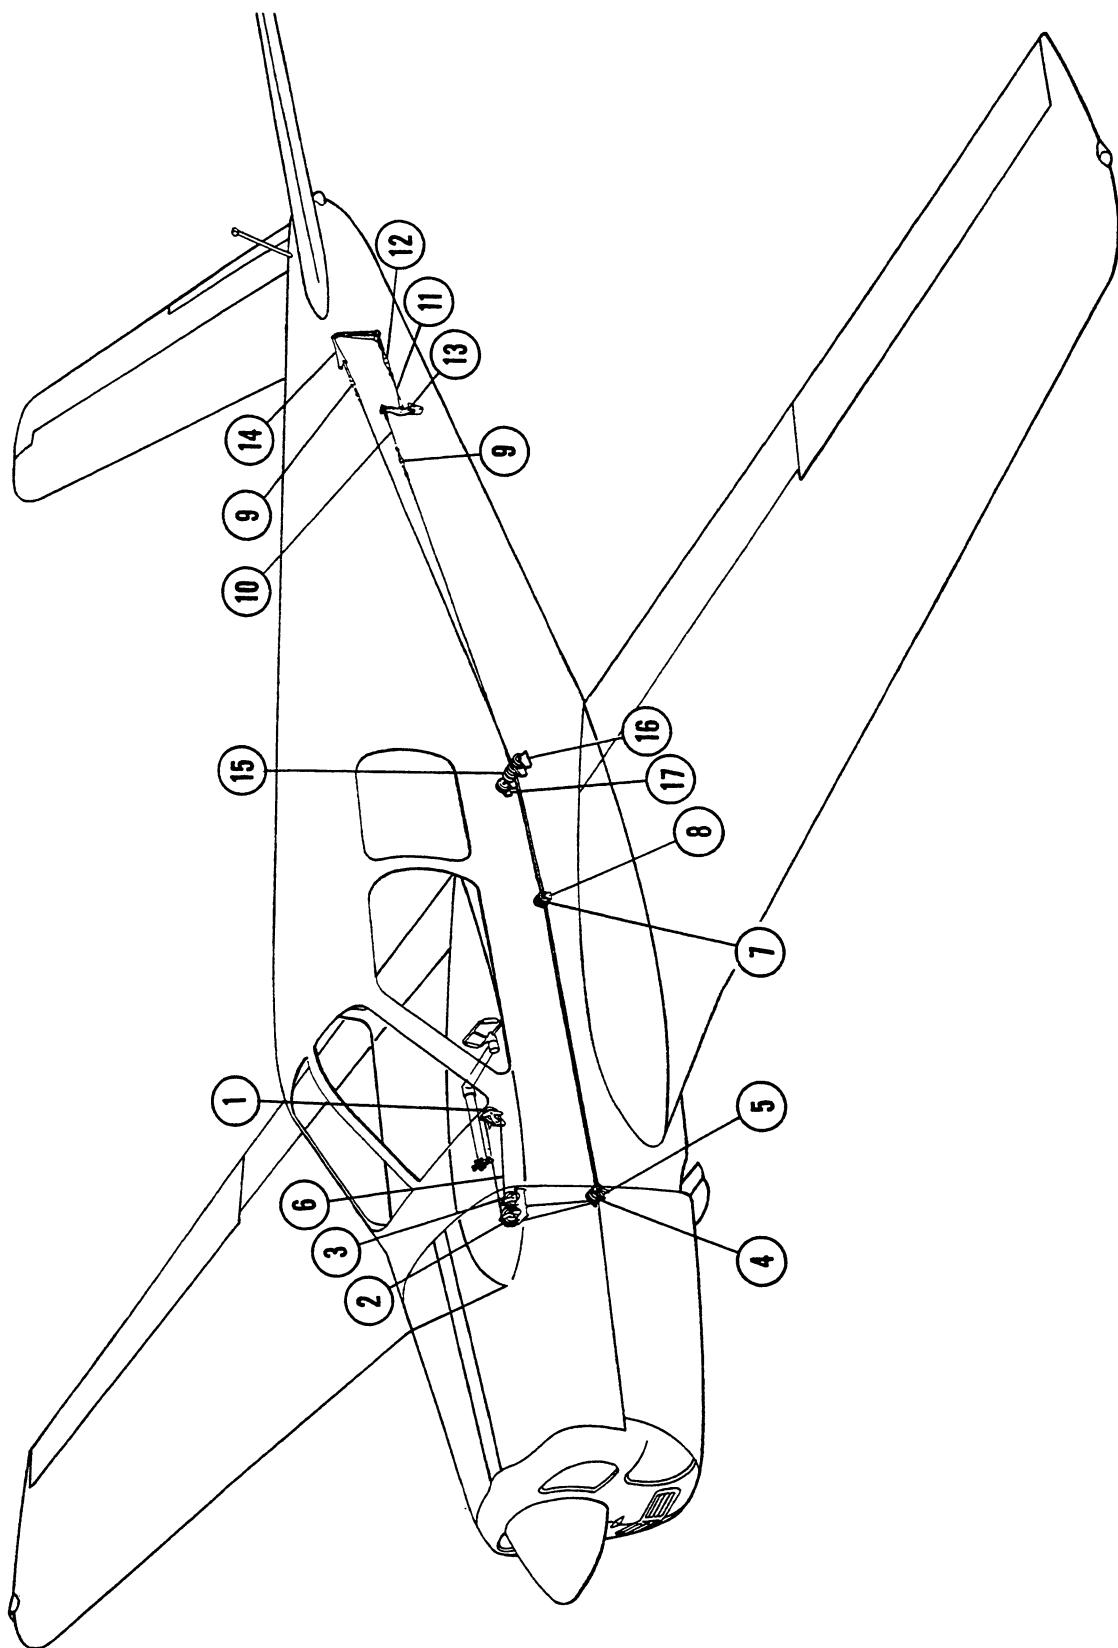


Figure 30. Elevator Control System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
30 - 1	AN210-4A	PULLEY,ELEVATOR CONTROL	• • • • • • •	1			
- 2	AN210-4A	PULLEY,ELEVATOR CONTROL	• • • • • • •	1			
35-524247	PLATE,PULLEY GUARD.	• • • • • • •		2			
105740X-ZF1094	BUSHING,CONTROL PULLEY.	• • • • • • •		1			
- 3	BB120	PULLEY,ELEVATOR CONTROL /FIN/	• • • • • • •	1			
35-524248	PLATE,PULLEY GUARD.	• • • • • • •		1			
- 4	AN210-4A	PULLEY,ELEVATOR CONTROL	• • • • • • •	2			
- 5	35-410017	BRACKET,PULLEY SUPPORT	• • • • • • •	1			
- 6	35-524004	CABLE ASSY,FWD ELEVATOR CONTROL	• • • • • • •	1	A,B		
35-524385	CABLE ASSY,FWD ELEVATOR CONTROL	• • • • • • •		1	C,D,E,F,G		
- 7	AN210-3A	PULLEY,ELEVATOR CONTROL	• • • • • • •	2			
- 8	35-410307-4	BRACKET,PULLEY SUPPORT.	• • • • • • •	1	A1		
35-410158-18	BRACKET,PULLEY SUPPORT.	• • • • • • •		1	A2BCDEFG		
- 9	AN155-32L	BARREL,TURNBUCKLE	• • • • • • •	2			
- 10	NAS304-25-0082	CABLE ASSY,AFT ELEVATOR CONTROL	• • • • • • •	1			
- 11	NAS304-36-0197	CABLE ASSY,AFT ELEVATOR CONTROL	• • • • • • •	1			
- 12	AN155-32S	BARREL,TURNBUCKLE	• • • • • • •	1			
AN161-22LS	FORK,CABLE ATTACHING.	• • • • • • •		1			
35-524109	LINK,CABLE ATTACHING.	• • • • • • •		1			
NO NUMBER	• BEARING,LINK ATTACHING.	• • • • • • •		1			
- 13	35-524249	BELLCRANK ASSY,ELEVATOR /SEE FIG. 32/	• • • • • • •	1			
35-524266	BOLT,BELLCRANK ATTACHING.	• • • • • • •		1			
102933-40ZK0139	SPACER,BELLCRANK ATTACHING.	• • • • • • •		2			
AN200K3L	• BEARING,BELLCRANK	• • • • • • •		2			
102933-24ZK0479	• SPACER,BELLCRANK BEARING.	• • • • • • •		1			
- 14	35-524296	LINK,SPRING & CABLE ATTACHING	• • • • • • •	1			
- 15	AN210-4A	PULLEY,ELEVATOR CONTROL	• • • • • • •	2			
- 16	35-410015	BRACKET,LH PULLEY SUPPORT	• • • • • • •	1			
- 17	35-410015-1	BRACKET,RH PULLEY SUPPORT	• • • • • • •	1			

MODEL 35 THRU G35 PARTS CATALOG

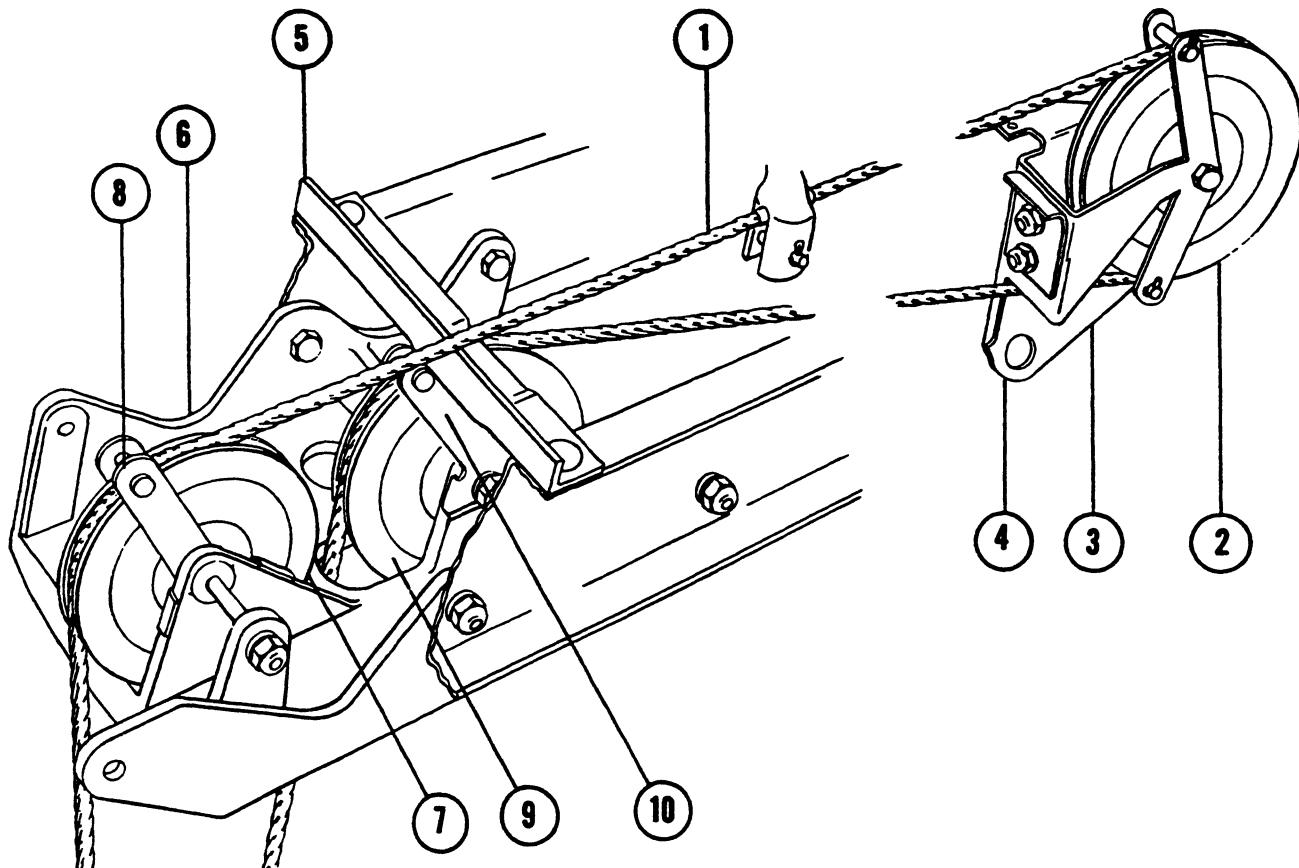


Figure 31. Forward Elevator Control System

FIG. & INDEX NO.	PART NO.	NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
31 - 1	35-524004		CABLE ASSY,FWD ELEVATOR CONTROL	1	A,B
	35-524385		CABLE ASSY,FWD ELEVATOR CONTROL	1	C,D,E,F,G
- 2	AN210-4A		PULLEY,ELEVATOR CONTROL	1	
- 3	35-324073		BRACKET,PULLEY SUPPORT.	1	
- 4	F-723-6		. BEARING,OILITE /AXD/.	1	
- 5	35-524234		STOP,CONTROL COLUMN	1	
- 6	35-524126		BRACKET,PULLEY SUPPORT.	1	
- 7	AN210-4A		PULLEY,ELEVATOR CONTROL	1	
- 8	35-524247		PLATE,CABLE GUARD	2	
- 9	BB120		PULLEY,ELEVATOR CONTROL /FIN/	1	
- 10	35-524248		PLATE,CABLE GUARD	2	

MODEL 35 THRU G35 PARTS CATALOG

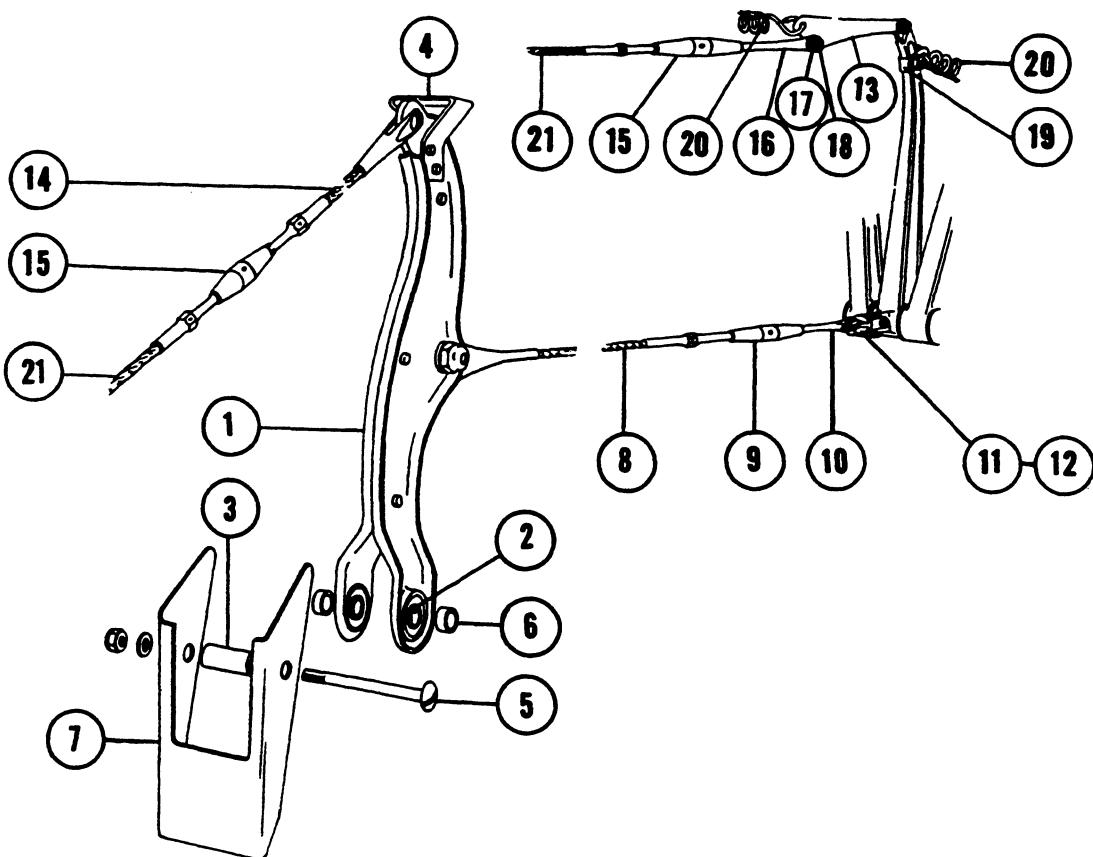


Figure 32. Elevator Differential Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
32 - 1	35-524249	BELLCRANK ASSY,ELEVATOR /SEE FIG. 30 FOR NHA/ .							1	
- 2	AN200K3L	• BEARING,BELLCRANK							2	
- 3	102933S4ZK0479	• SPACER,BELLCRANK BEARING.							1	
- 4	35-524247	• GUARD,CABLE							1	
- 5	35-524266	• BOLT,BELLCRANK ATTACHING.							1	
- 6	102933-40ZK0139	SPACER,BELLCRANK ATTACHING.							2	
- 7	35-524002-4	BRACKET,BELLCRANK SUPPORT							1	
- 8	NAS304-36-0197	CABLE ASSY,ELEVATOR CONTROL							1	
- 9	AN155-32S	BARREL,TURNBUCKLE							1	
- 10	AN161-22LS	FORK,CABLE ATTACHING.							1	
- 11	35-524109	LINK,CABLE ATTACHING.							1	
- 12	NO NUMBER	• BEARING,LINK ATTACHING.							1	
- 13	35-524296	LINK,SPRING & CABLE ATTACHING							1	
- 14	NAS304-25-0082	CABLE ASSY,ELEVATOR CONTROL							1	
- 15	AN155-32L	BARREL,TURNBUCKLE							2	
- 16	AN161-22LL	FORK,CABLE ATTACHING.							1	
- 17	AN960-10	WASHER,CABLE ATTACHING.							1	
- 18	AN3-7	BOLT,CABLE ATTACHING.							1	
- 19	35-524292	CLIP,SPRING ATTACHING							1	
- 20	35-524291	SPRING,ELEVATOR BUNGEE.							2	
- 21	35-524004	CABLE,ELEVATOR CONTROL.							1	A,B C,D,E,F,G
	35-524385	CABLE,ELEVATOR CONTROL.							1	

MODEL 35 THRU G35 PARTS CATALOG

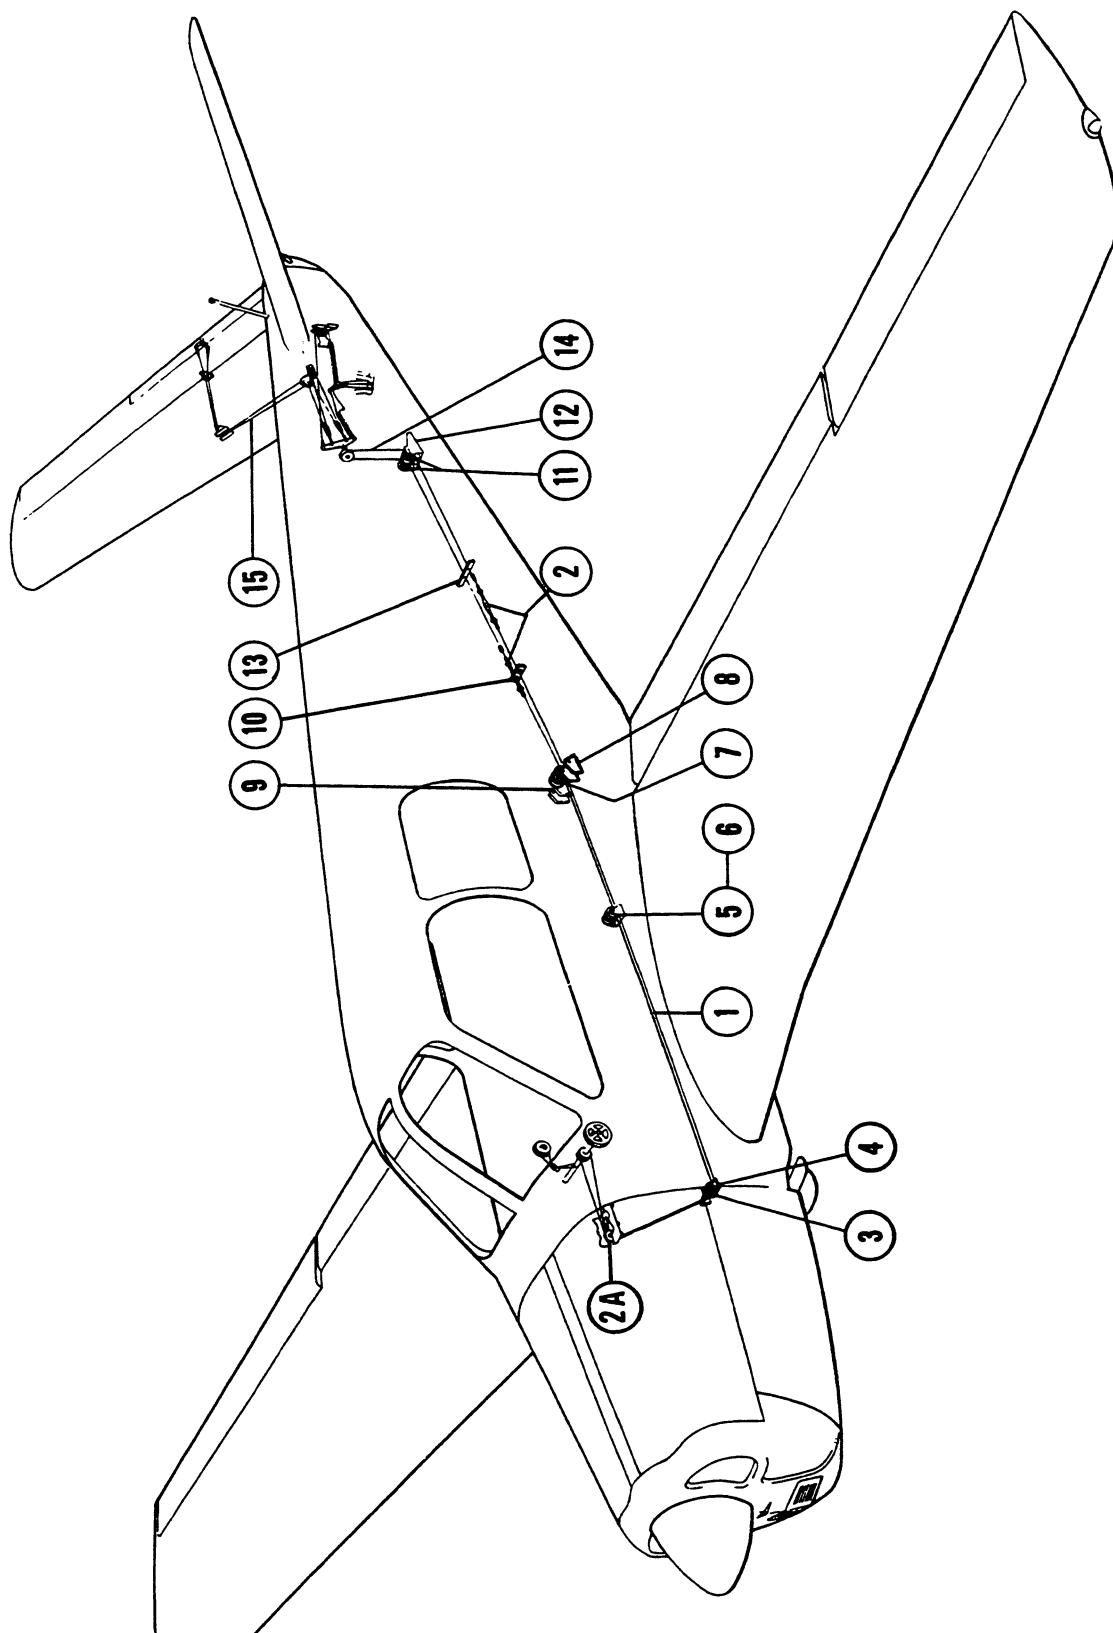


Figure 33. Elevator Trim Tab System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
33 - 1	NAS302-66-3636		CABLE ASSY,FWD TAB CONTROL.	.	1	A9	
	NAS302-66-3500		CABLE ASSY,FWD TAB CONTROL.	.	1	A10BCDEFG	
- 2	AN155-8L		BARREL,TURNBUCKLE	.	2		
- 2A	AN210-2A		PULLEY,TAB CONTROL.	.	2		
	35-524126		BRACKET,PULLEY SUPPORT.	.	1		
	35-524247		PLATE,PULLEY GUARD.	.	2		
- 3	AN210-4A		PULLEY,TAB CONTROL.	.	2		
- 4	35-400339		BRACKET,PULLEY SUPPORT.	.	1		
- 5	AN210-3A		PULLEY,TAB CONTROL.	.	2		
- 6	35-410307-4		BRACKET,PULLEY SUPPORT.	.	1	A1	
	35-410158-18		BRACKET,PULLEY SUPPORT.	.	1	A2BCDEFG	
	100801S6-1484		BUSHING,TAB PULLEY.	.	1		
	100801S6-0484		BUSHING,TAB PULLEY.	.	1		
	35-524003		PIN,CABLE GUARD	.	1		
- 7	AN210-4A		PULLEY,TAB CONTROL.	.	2		
- 8	35-410015		BRACKET,LH PULLEY SUPPORT	.	1		
- 9	35-410015-1		BRACKET,RH PULLEY SUPPORT	.	1		
	100801S6-1484		BUSHING,TAB PULLEY.	.	1		
	100801S6-0484		BUSHING,TAB PULLEY.	.	1		
	35-524003		PIN,CABLE GUARD	.	1		
- 10	35-410151		FAIRLEAD,CABLE GUIDE.	.	1		
- 11	AN210-2A		PULLEY,TAB CONTROL.	.	2		
	100801X4-0250		BUSHING,TAB PULLEY.	.	2		
- 12	35-524002		BRACKET,PULLEY SUPPORT.	.	1		
- 13	35-410142		FAIRLEAD,CABLE GUIDE.	.	1		
- 14	35-524030		CABLE ASSY,TAB DRUM	.	1		
	AN669S2LH		FITTING,CABLE END	.	2		
	35-524288		SCREW,CABLE STOP.	.	2		
	35-524287		NUT	.	2		
- 15	NAS302-27-0590		CABLE ASSY,TAB ACTUATING /SEE FIG. 37/	.	4		

MODEL 35 THRU G35 PARTS CATALOG

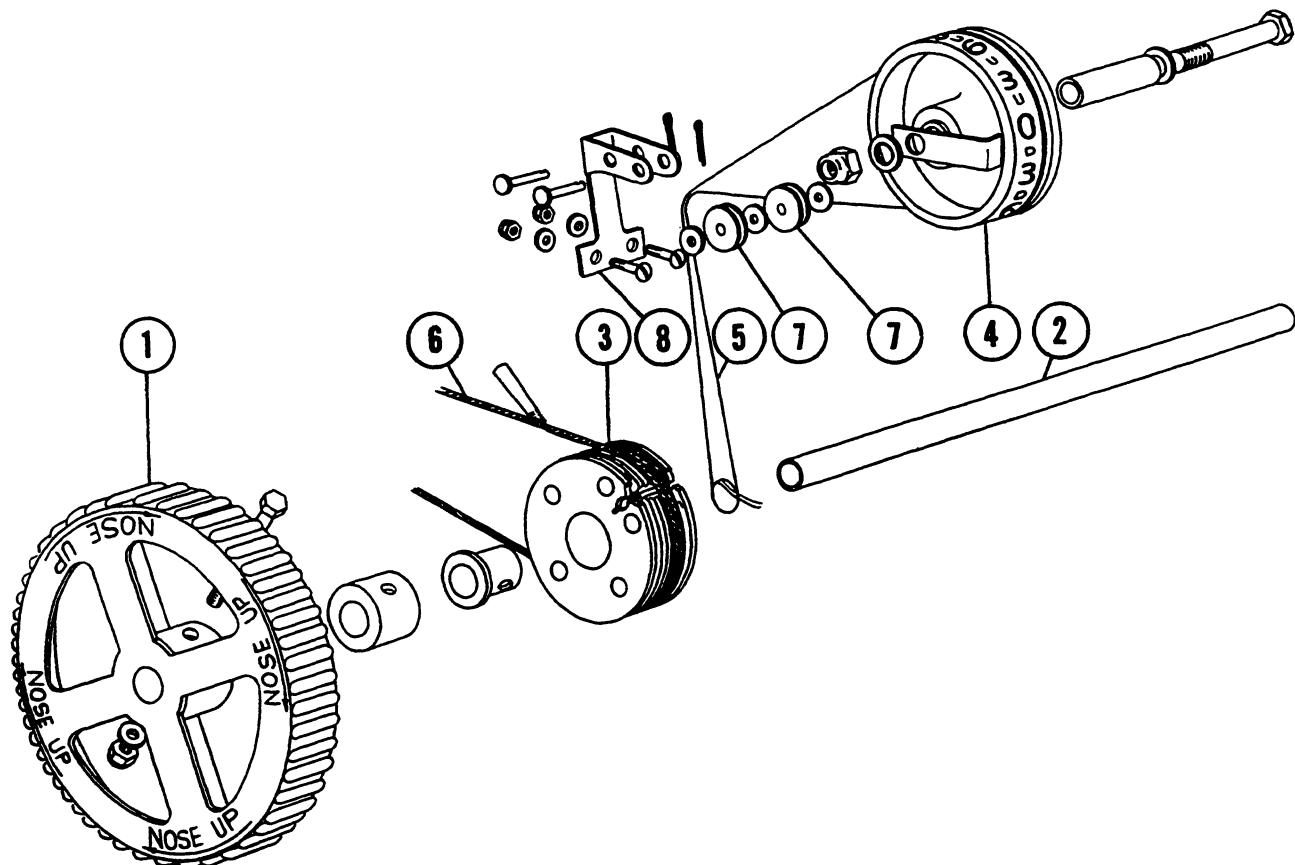


Figure 34. Forward Trim Tab Mechanism

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
34 - 1	35-524542	WHEEL ASSY, TAB CONTROL.	.	1
	35-524555	• PLACARD, CONTROL WHEEL	.	1
	35-524543	• BUSHING, CONTROL WHEEL	.	1
- 2	35-524532	TUBE, TAB CONTROL TORQUE	.	1
- 3	35-524539	DRUM ASSY, TAB CABLE	.	1
	AN386-1-8A	PIN, DRUM ATTACHING.	.	1
	35-524226	• DRUM, TAB CABLE.	.	1
	35-524538	• BUSHING, CABLE DRUM.	.	1
- 4	35-524546	DRUM ASSY, TAB INDICATOR	.	1
	35-524547	• DRUM, INDICATOR.	.	1
	35-524550	• PLACARD, INDICATOR	.	1
	105739X0193-	• BUSHING, INDICATOR DRUM.	.	1
	0248X0828			
- 5	35-524531-2	CABLE, INDICATOR ACTUATING	.	1
- 6	NAS302-66-3636	CABLE ASSY, TAB CONTROL	.	1
	35-524028	PIN, CABLE ATTACHING	.	1
- 7	35-524553	PULLEY, INDICATOR CABLE GUIDE	.	2
	AN392-15	PIN, PULLEY ATTACHING	.	1
	AN392-15	PIN, CABLE GUARD	.	1
- 8	35-524554	BRACKET, PULLEY SUPPORT	.	1

MODEL 35 THRU G35 PARTS CATALOG

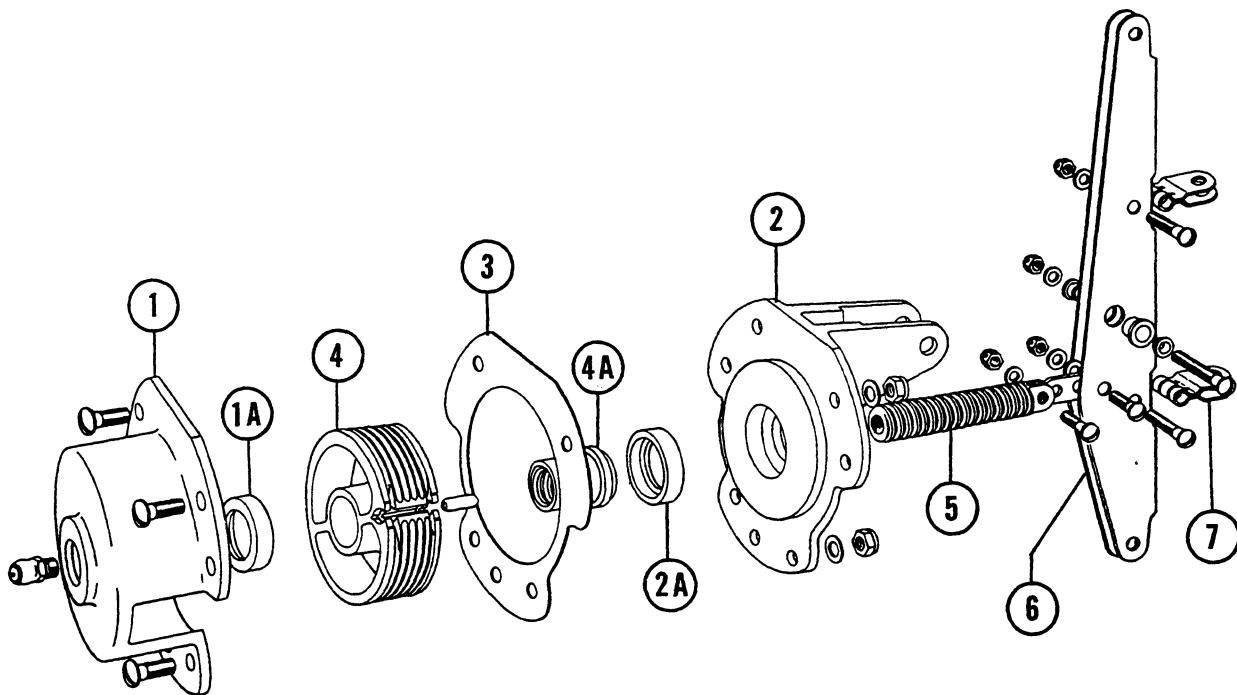


Figure 35. Trim Tab Actuating Mechanism

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
35	35-524280	MECHANISM ASSY,TRIM TAB	1	
-	1 35-524281	• HOUSING ASSY,MECHANISM	1	
	35-524281-2	• • HOUSING,MECHANISM	1	AB
	35-524375	• • HOUSING,MECHANISM	1	CDEFG
-	1A 35-524283	• BUSHING,MECHANISM HOUSING	1	AB
	35-524372	• • BUSHING,MECHANISM HOUSING	1	CDEFG
	35-524371	• • NUT,BUSHING LOCK	1	CDEFG
-	2 35-524282	• CAP ASSY,MECHANISM HOUSING	1	
		/SPECIFY OLD TYPE SERIALS A & B/								
	35-524282-2	• • CAP,MECHANISM HOUSING	1	
		/SPECIFY OLD TYPE SERIALS A & B/								
-	2A 35-524283	• • BUSHING,HOUSING CAP	1	AB
	35-524373	• • BUSHING,HOUSING CAP	1	CDEFG
-	3 35-524284	• SHIM,MECHANISM HOUSING	1	AB
-	4 35-524239	• DRUM ASSY,MECHANISM	1	AB
	35-524226	• DRUM ASSY,MECHANISM	1	CDEFG
-	4A 35-524286	• BUSHING,DRUM THREADED	1	
	35-524028	• PIN,CABLE LOCK	1	
-	5 35-524285	• SCREW,MECHANISM JACK	1	AB
	50-524136	• SCREW,MECHANISM JACK	1	CDEFG
	NAS2-101A	• FITTING,GREASE	1	
-	6 35-524195	• BELLCRANK ASSY,TAB	1	AB
	35-524370	• BELLCRANK ASSY,TAB	1	CDEFG
	35-524389	• • BELLCRANK,TAB	1	AB
	35-524369	• • BELLCRANK,TAB	1	CDEFG
	35-524196	• • BUSHING,BELLCRANK	1	
F-310		• • BUSHING,BELLCRANK /CC/	2	
	35-524199	• LINK,JACK SCREW ATTACHING	1	AB
	50-524137	• LINK,JACK SCREW ATTACHING	1	CDEFG
-	7 35-524242	• CLIP,TAB CABLE ATTACHING	2	

MODEL 35 THRU G35 PARTS CATALOG

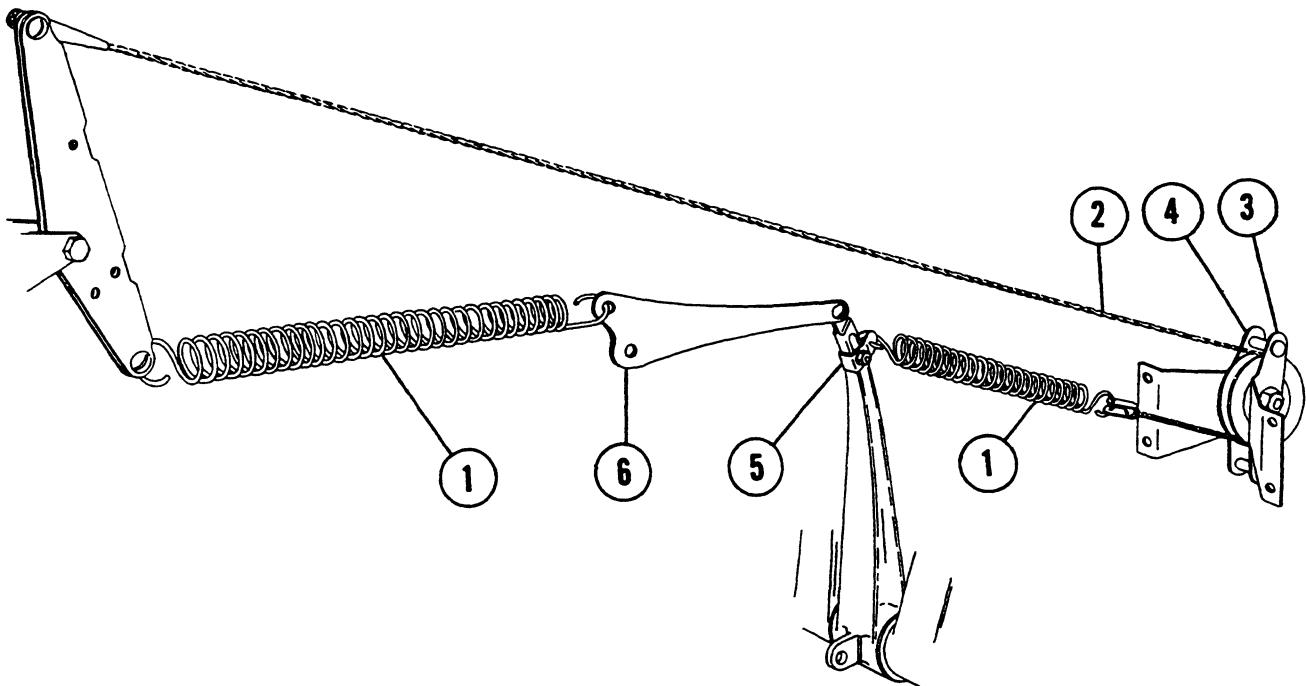


Figure 36. Trim Tab Bungee Mechanism

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
36 - 1	35-524291								SPRING,TAB BUNGEE	2	AB
	35-524380								SPRING,TAB BUNGEE	1	CDEFG
	35-524381								SPRING,TAB BUNGEE	1	CDEFG
- 2	35-524294								CABLE ASSY,BUNGEE	1	AB
	35-524383								CABLE ASSY,BUNGEE	1	CDEFG
	AN210-3A								PULLEY,BUNGEE CONTROL	1	AB
	35-524376								PULLEY,BUNGEE CONTROL	1	CDEFG
- 3	35-410110-18								BRACKET,PULLEY SUPPORT	1	
- 4	35-410110-20								BRACKET,PULLEY SUPPORT	1	
- 5	35-524292								CLIP,SPRING ATTACHING	1	AB
	35-524384								CLIP,SPRING ATTACHING	2	CDEFG
- 6	35-524296								LINK,SPRING ATTACHING	1	AB
	100942-072-328-								LINK,SPRING ATTACHING	1	CDEFG
	50										

MODEL 35 THRU G35 PARTS CATALOG

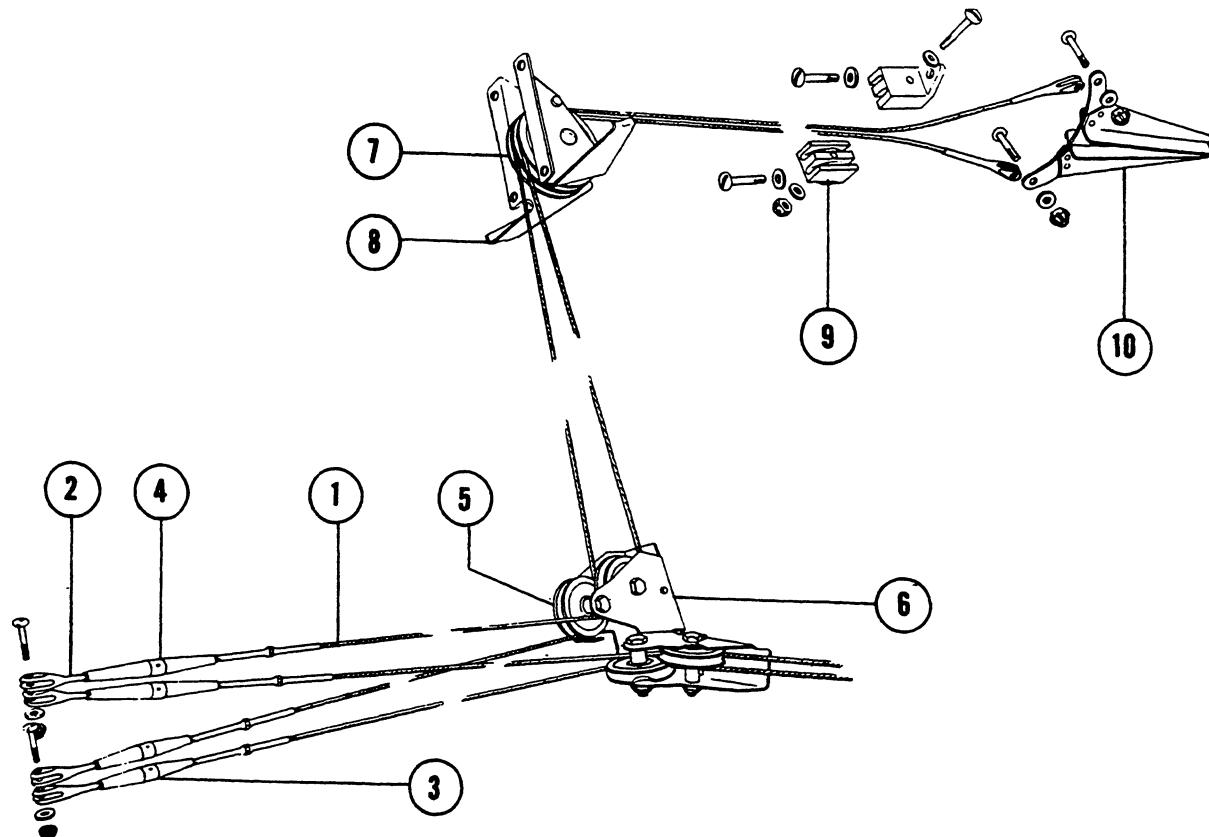


Figure 37. Aft Trim Tab Control

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
37 -	1 NAS302-27-0590	CABLE ASSY, TAB /SEE FIG. 33 FOR NHA/								4	
-	2 AN161-8RS	FORK, CABLE ATTACHING.								4	
-	3 AN155-8S	BARREL, TURNBUCKLE								2	
-	4 AN155-8L	BARREL, TURNBUCKLE								2	
-	5 AN210-38	PULLEY, TAB CONTROL.								4	
	100801D6-0188	BUSHING, TAB PULLEY.								2	
	100801D6-0813	BUSHING, TAB PULLEY.								2	
	100801D6-0875	BUSHING, TAB PULLEY.								2	
	100801D6-0125	BUSHING, TAB PULLEY.								2	
-	6 35-410159	BRACKET ASSY, PULLEY SUPPORT								1	
	35-410159-2	. BRACKET, LH PULLEY SUPPORT								1	
	35-410159-3	. BRACKET, RH PULLEY SUPPORT								1	
	AN392-51	PIN, CABLE GUARD								2	
-	7 AN210-2A	PULLEY, TAB CONTROL.								2	
-	8 35-650050-10	BRACKET ASSY, PULLEY SUPPORT								1	
-	9 35-660033	FAIRLEAD, TAB CABLE.								2	
-	10 35-660040-8	ARM, TAB ACTUATING								1	

MODEL 35 THRU G35 PARTS CATALOG

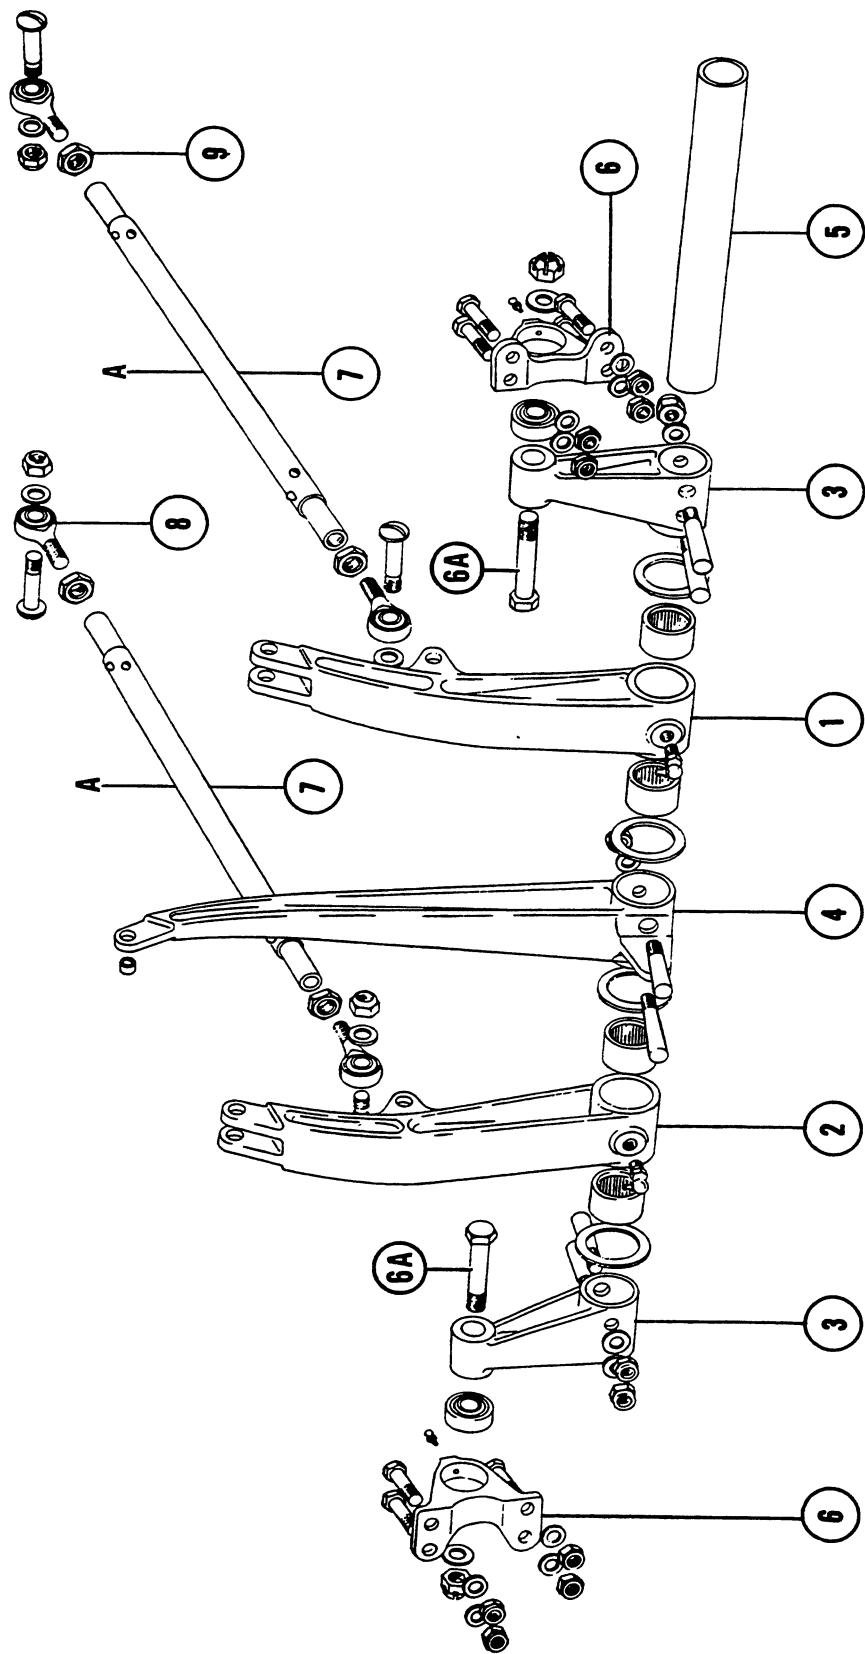


Figure 38. Differential System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
38	35-524100	MECHANISM ASSY, DIFFERENTIAL	1	
- 1	35-524102	• ARM ASSY,LH CONTROL	1	
- 2	35-524102-1	• ARM ASSY,RH CONTROL	1	
	NO NUMBER	• BUSHING,CONTROL ARM	1	
	B-128	• BEARING,CONTROL ARM /TOR/	1	
	NAS2-301	• FITTING,GREASE.	1	
	100951B032-024-	• WASHER,CONTROL ARM.	4	
	108										
- 3	35-524105	• YOKE,DIFFERENTIAL CONTROL	2	
	AN386-1-9A	• PIN,YOKE ATTACHING.	2	
	AN975-3	• WASHER.	2	
- 4	AN364-1032	• NUT	2	
- 4	35-524103	• ARM,DIFFERENTIAL ELEVATOR	1	
	AN386-1-9A	• PIN,ARM ATTACHING	2	
	AN975-3	• WASHER.	2	
	AN364-1032	• NUT	2	
	NO NUMBER	• BUSHING,ELEVATOR ARM. /.252 O.D. X .1885 I.D. X .190 LONG/	2	
- 5	35-524111	• SHAFT,DIFFERENTIAL CROSS.	1	
- 6	35-524108	SUPPORT ASSY,CONTROL.	2	
	AN3-5A	BOLT,SUPPORT ATTACHING.	4	
	AN960-10	WASHER.	4	
	AN365-1032	NUT	4	
	KS6A	• BEARING,CONTROL SUPPORT /FAF/	1	
	1736	• FITTING,GREASE /SW/	1	
- 6A	NAS56-17	BOLT.	2	
	AN960-616L	WASHER.	2	
	100951X063-012-	WASHER.	2	
	108										
	AN310-6	NUT	2	
- A	35-524106	ROD ASSY,CONTROL.	2	
	AN24-18A	BOLT,ROD ATTACHING.	1	
	AN960-416	WASHER.	1	
	AN364-428	NUT	1	
	AN24-20A	BOLT,ROD ATTACHING.	1	
	AN960-416	WASHER.	1	
	AN364-428	NUT	1	
- 7	35-524106-2	• ROD,CONTROL	1	
- 8	MD46-15	• END,CONTROL ROD /HEC/	2	
- 9	AN316-6R	• NUT,LOCK.	2	

MODEL 35 THRU G35 PARTS CATALOG

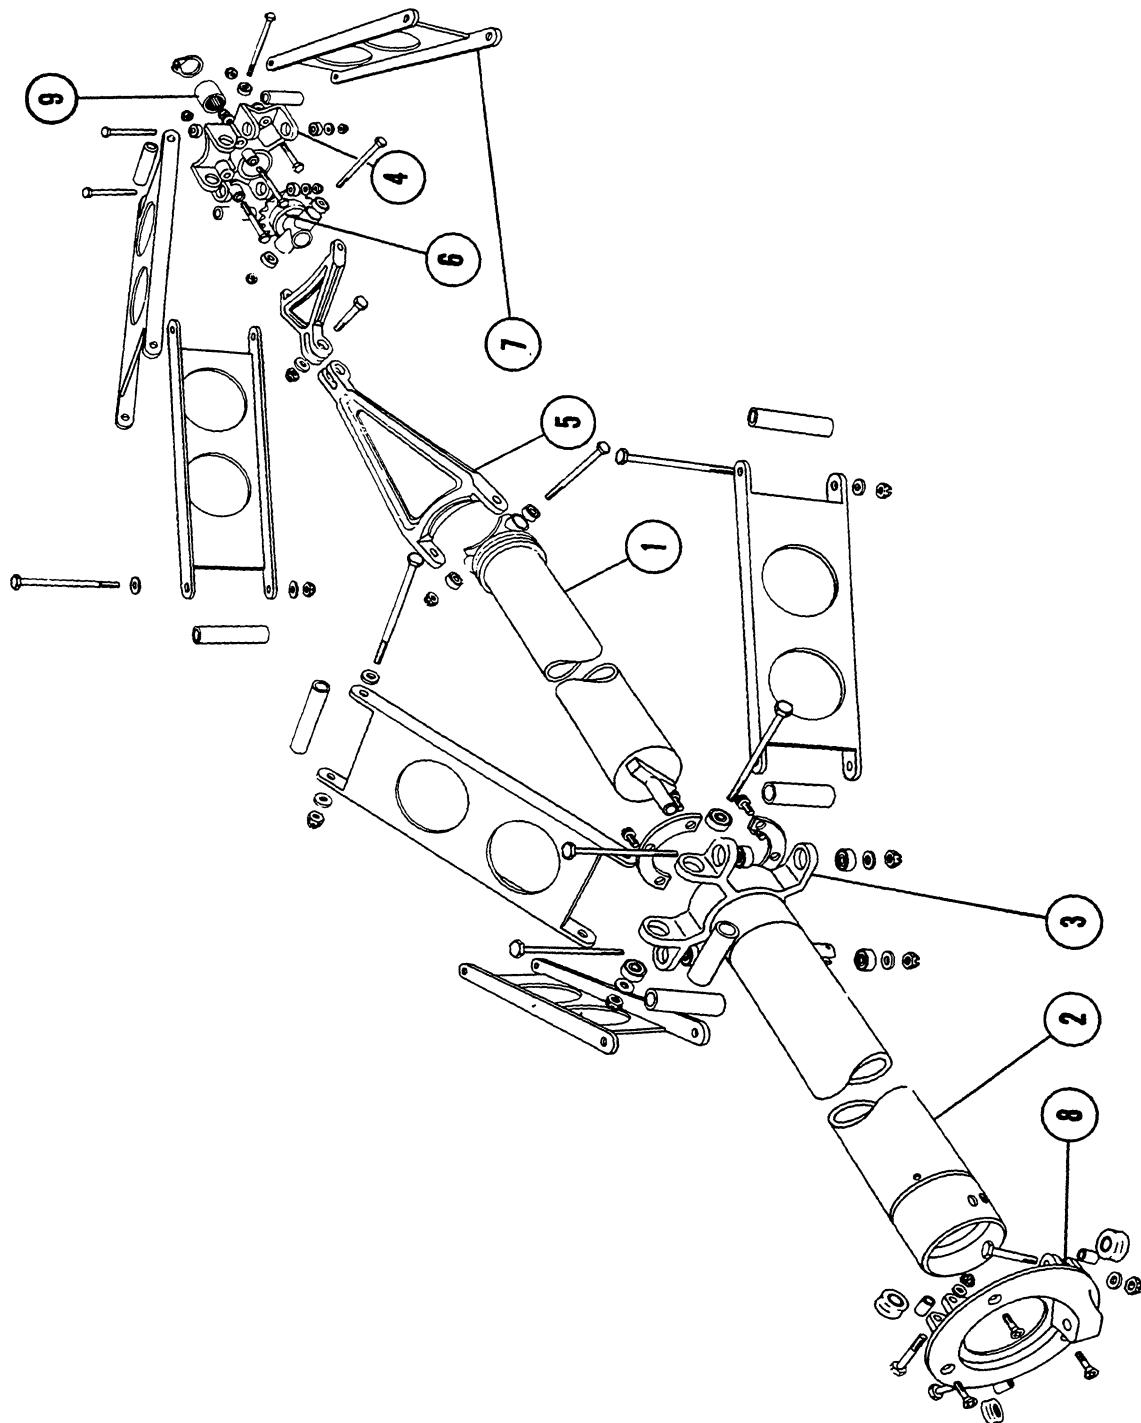


Figure 39. Control Column Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
39	35-524041-602	COLUMN ASSY, CONTROL	1	
- 1	35-524227	• COLUMN, INNER CONTROL	1	
- 2	35-524202	• COLUMN, OUTER CONTROL	1	
- 3	35-524278	• • FITTING, TORQUE KNEE	1	
	105739A0562-	• • BUSHING, TORQUE KNEE	3	
	0624-2162										
	AN200K3L	• • BUSHING, TORQUE KNEE	6	
	35-524230	• HANGER ASSY, CONTROL COLUMN	1	
- 4	35-524231	• • FITTING, HANGER	1	
	B-1416	• • BEARING, CONTROL COLUMN HANGER	1	
	AN200K3L	• • BEARING, CONTROL COLUMN HANGER	6	
	105739A0562-	• • BUSHING, CONTROL COLUMN HANGER	3	
	0624-2162										
- 5	35-524047	• KNEE, CONTROL COLUMN TORQUE	2	
	AN4-10	• BOLT, TORQUE KNEE HINGE	1	
	AN310-4	• NUT, TORQUE KNEE HINGE	1	
	AN960-416	• WASHER, TORQUE KNEE HINGE	1	
	AN3-26	• BOLT, TORQUE KNEE ATTACHING	2	
	AN310-3	• NUT, TORQUE KNEE ATTACHING	2	
- 6	35-524274	• SPROCKET ASSY, CONTROL COLUMN	1	
	AN200K3L	• • BEARING, CONTROL COLUMN SPROCKET	2	
- 7	35-524240	• RETAINER, SPROCKET	1	
	NAS51-87	• LINK, CONTROL COLUMN	6	
	NAS54-33	• BOLT, LINK HINGE	3	
	AN310-4	• NUT, LINK HINGE	3	
	AN960-416	• WASHER, LINK HINGE	4	
	AN960-416L	• WASHER, LINK HINGE	6	
	35-524269	• BOLT, AFT LINK ATTACHING	3	
	AN310-3	• NUT, AFT LINK ATTACHING	3	
	AN960-10	• WASHER, AFT LINK ATTACHING	3	
	NAS53-32	• BOLT, FWD LINK ATTACHING	3	
	AN310-3	• NUT, FWD LINK ATTACHING	3	
	AN960-10	• WASHER, FWD LINK ATTACHING	3	
	35-524038	• WASHER, CONTROL COLUMN	2	
	AN503-8-10	• SCREW, WASHER ATTACHING	6	
	35-524007	• GUARD, ATTACHING BOLT	2	
	AN3-16A	• BOLT, GUARD ATTACHING	2	
	AN365-1032	• NUT, GUARD ATTACHING	2	
	AN960-10	• WASHER, GUARD ATTACHING	2	
	AN3-5A	• BOLT, GUARD ATTACHING	2	
	AN365-1032	• NUT, GUARD ATTACHING	2	
	AN960-10	• WASHER, GUARD ATTACHING	2	
- 8	35-524125	HANGER ASSY	1	
	AN507-832-10	SCREW, HANGER ATTACHING	3	
	35-524197	• ROLLER ASSY	3	
	35-524264	• BUSHING, ROLLER	3	
	AN3-12A	• BOLT, ROLLER ATTACHING	3	
	AN365-1032	• NUT, ROLLER ATTACHING	3	
	AN960-10L	• WASHER, ROLLER ATTACHING	3	
	35-524038	WASHER	1	
	NAS51-87	RING, SNAP	1	
- 9	B-148	BUSHING	1	

MODEL 35 THRU G35 PARTS CATALOG

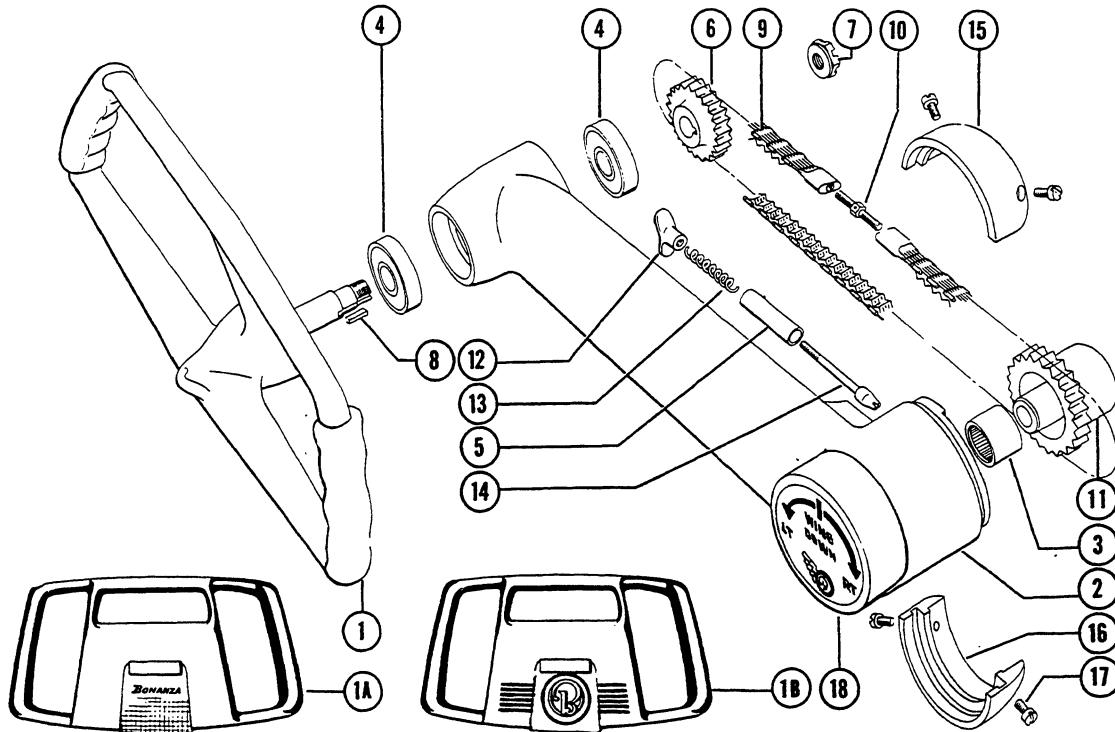


Figure 40. Single Control Arm

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
40	35-524585 SA8		CONTROL ASSY,WHEEL & COLUMN COMPLETE. /INCL. FIG. 39/	1	
	35-524585 SA40		ARM,CONTROL	1	ABCDE
	35-524585 SA50		ARM,CONTROL	1	FG
- 1	35-524050-6		• WHEEL ASSY,CONTROL	1	A
- 1A	35-524591-10		• WHEEL ASSY,CONTROL	1	BC5C6
- 1B	35-524591-28		• WHEEL ASSY,CONTROL	1	DEFG
- 2	35-524087		• THROWOVER,CONTROL COLUMN	1	ABCDE
	35-524087-8		• THROWOVER,CONTROL COLUMN	1	FG
	35-524587		• COVER,CHAIN & SPROCKET	1	ABCDE
	35-524587-2		• COVER,CHAIN & SPROCKET	1	FG
	51020		• PLUG,SPROCKET COVER	1	
- 3	B-78X		• BEARING,CONTROL COLUMN	1	
- 4	AN201K10A		• BEARING,CONTROL WHEEL	2	
- 5	35-524241		• BUSHING,POSITION LOCK	1	
- 6	35-524048		• SPROCKET,CONTROL WHEEL	1	
- 7	AN320-7		• NUT,SPROCKET RETAINING	1	
- 8	35-524576		• KEY,SPROCKET RETAINING	1	
- 9	35-524139		• CHAIN ASSY.	2	
- 10	35-524141		• CONNECTOR,CHAIN	1	
- 11	35-524051		• SPROCKET,CONTROL ARM ENGAGING	1	ABCD
	35-524051-1		• SPROCKET,CONTROL ARM ENGAGING	1	EFG
- 12	35-524096		• KNOB,POSITION LOCK	1	
- 13	100943-035-005-108-8		• SPRING,POSITION LOCK	1	
- 14	35-524095		• PIN,POSITION LOCK	1	
- 15	35-524238-4		• RETAINER,CONTROL ARM.	1	
- 16	35-524238-6		• RETAINER,CONTROL ARM.	1	
	35-524238-12		• RETAINER,CONTROL ARM.	1	
- 17	AN501-10-5		• SCREW,CONTROL ARM RETAINER.	4	A35
- 18	ATC-35-106		• CONTROL ASSY,AILERON.	4	A36BCDEFG
					FG

MODEL 35 THRU G35 PARTS CATALOG

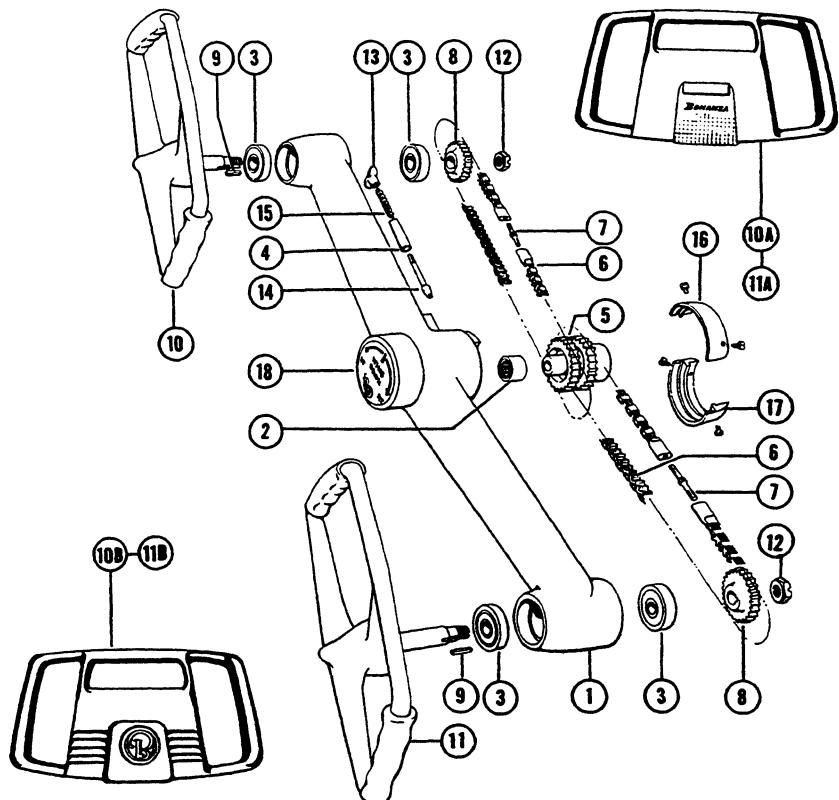


Figure 41. Dual Control Arm Assembly

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
41	35-524575 SA6	ARM ASSY,DUAL CONTROL	1	
	35-524575 SA8	ARM ASSY,DUAL CONTROL	1	FG
	35-524261	• ARM ASSY,DUAL CONTROL	1	
- 1	35-524261-2	• • ARM,DUAL CONTROL	1	
	35-524261-10	• • ARM,DUAL CONTROL	1	FG
- 2	B-78X	• • BEARING,CONTROL ARM CENTER	1	
- 3	AN201K10A	• • BEARING,CONTROL WHEEL	4	
- 4	35-524241	• • BUSHING,CONTROL ARM LOCK	1	
- 5	35-524262	• SPROCKET,CONTROL ARM ENGAGING	1	
	35-524262-1	• SPROCKET,CONTROL ARM ENGAGING	1	ABCD EFG
- 6	35-524139	• CHAIN ASSY,CONTROL ARM	4	
- 7	35-524141	• FITTING,CHAIN CONNECTOR	4	
- 8	35-524048	• SPROCKET,CONTROL WHEEL	2	
- 9	35-524576	• KEY,SPROCKET RETAINER	2	
- 10	35-524050-6	• WHEEL,FLIGHT CONTROL	1	A
- 10A	35-524591-10	• WHEEL,FLIGHT CONTROL	1	BC5C6
- 10B	35-524591-28	• WHEEL,FLIGHT CONTROL	1	DEFG
- 11	35-524050-8	• WHEEL,FLIGHT CONTROL	1	A
- 11A	35-524591-12	• WHEEL,FLIGHT CONTROL	1	BC5C6
- 11B	35-524591-30	• WHEEL,FLIGHT CONTROL	1	DEFG
- 12	AN320-7	• NUT,WHEEL RETAINER	2	
- 13	35-524096	• KNOB,CONTROL ARM LOCK	1	
- 14	35-524095	• PIN,LOCK PISTON RETAINER	1	
- 15	100943-035-005-	• SPRING,POSITION LOCK	1	
	108-8										

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
41 - 16	AN501-10-5		• SCREW,ARM RETAINER ATTACHING.	4	
	51020		• PLUG,CONTROL ARM SPROCKET COVER	2	
	35-524587		• COVER,CONTROL ARM CHAIN	2	
	35-524587-2		• COVER,CONTROL ARM CHAIN	2	FG
- 16	35-524238-4		RETAINER,CONTROL ARM.	1	
- 17	35-524238-6		RETAINER ASSY,CONTROL ARM	1	A35
	35-524238-12		RETAINER ASSY,CONTROL ARM	1	A36BCDEFG
- 18	ATC-35-106		CONTROL ASSY,AILERON.	1	EFG
	212		LITE,PEN.	1	
	35-524587-2		CLIP,PEN LITE	1	

MODEL 35 THRU G35 PARTS CATALOG

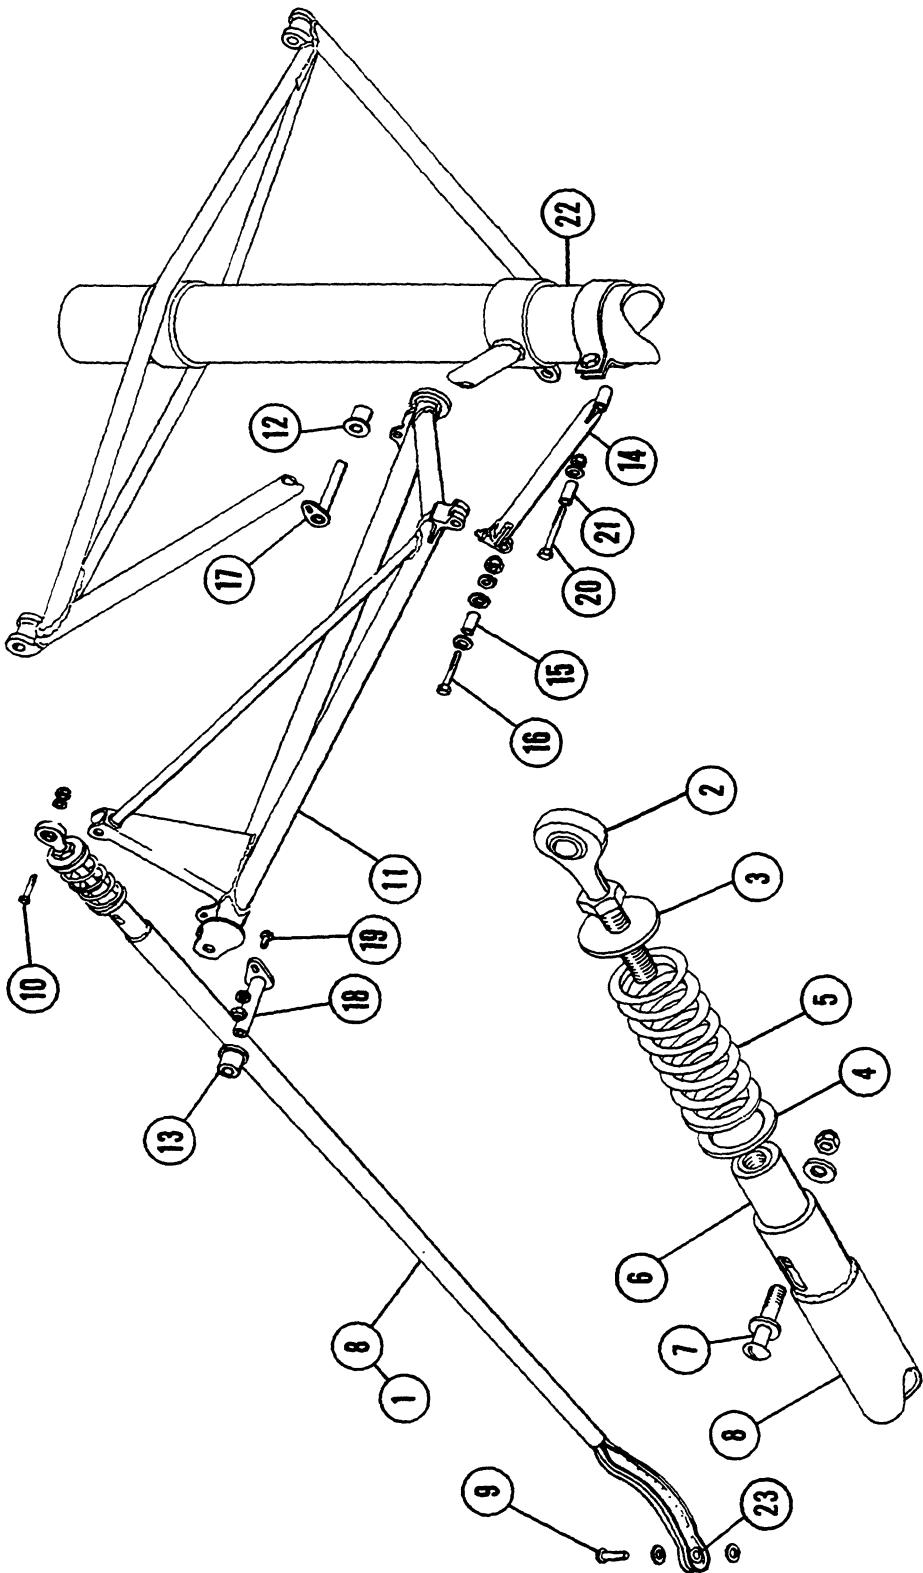


Figure 42. Landing Gear Retract Mechanism

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
42 - 1	35-815125-2	ROD ASSY,LH RETRACT	• • • • • • •	1	
	35-815125-4	ROD ASSY,RH RETRACT	• • • • • • •	1	
- 2	HM-6	• END,ROD RETRACT	• • • • • • •	1	
	AN316-6R	• NUT,ROD END LOCK	• • • • • • •	1	
- 3	100951S063YU	• WASHER,SPRING RETAINING	• • • • • • •	1	
- 4	100951S063ZP	• WASHER,SPRING RETAINING	• • • • • • •	AR	
- 5	45-815091	• SPRING,RETRACT ROD SHOCK	• • • • • • •	1	
- 6	35-815131	• PLUNGER ASSY,RETRACT ROD	• • • • • • •	1	
- 7	AN394-33	• PIN,SHOCK SPRING ADJUSTING	• • • • • • •	1	
	AN960D416L	• WASHER,SHOCK SPRING ADJUSTING	• • • • • • •	1	
	AN380-2-2	• PIN,SHOCK SPRING ADJUSTING	• • • • • • •	1	
- 8	35-815125-12	• SECTION,LH GEAR RETRACT ROD	• • • • • • •	1	
	35-815125-14	• SECTION,RH GEAR RETRACT ROD	• • • • • • •	1	
	LS-6	• BEARING	• • • • • • •	1	
- 9	AN26-22	BOLT,ACTUATOR ROD ATTACHING	• • • • • • •	1	AB
	AN26-23	BOLT,ACTUATOR ROD ATTACHING	• • • • • • •	1	CDEFG
	AN960-616	WASHER	• • • • • • •	1	AB
	AN960-616	WASHER	• • • • • • •	2	CDEFG
	AN960-616L	WASHER	• • • • • • •	1	AB
	AN310-6	NUT	• • • • • • •	1	
- 10	AN6-11A	BOLT,ACTUATOR ROD ATTACHING	• • • • • • •	1	
	AN960-616	WASHER,ACTUATOR ROD ATTACHING	• • • • • • •	1	
	AN365-624	NUT,ACTUATOR ROD ATTACHING	• • • • • • •	1	
	35-815155 SA2	BRACE ASSY,MAIN GEAR LH	• • • • • • •	1	
	35-815155 SA3	BRACE ASSY,MAIN GEAR RH	• • • • • • •	1	
- 11	35-815102	• BRACE ASSY,LH MAIN GEAR	• • • • • • •	NP	
	35-815102-1	/SOLD WITH INDEX 14 IN MATCHED SETS/			
		• BRACE ASSY,RH MAIN GEAR	• • • • • • •	NP	
		/SOLD WITH INDEX 14 IN MATCHED SETS/			
- 12	35-115062	• BUSHING,RETRACT LEG	• • • • • • •	1	
- 13	35-115184	• BUSHING,RETRACT LEG	• • • • • • •	1	
- 14	35-815129	• LEG ASSY,LOWER LIFT	• • • • • • •	NP	
	1646	/SOLD WITH INDEX 11 IN MATCHED SETS/			
	AT-5	• . FITTING,ALEMITE	• • • • • • •	2	
- 15	35-810122	• ROLLER,UPLOCK	• • • • • • •	2	
- 16	NAS55-17	• BUSHING,LIFT LEG	• • • • • • •	1	
	AN960-516	• BOLT,LIFT LEG HINGE	• • • • • • •	1	
	AN960-716	• WASHER,LIFT LEG HINGE	• • • • • • •	1	
	AN310-5	• WASHER,LIFT LEG HINGE	• • • • • • •	2	
- 17	35-815120	• NUT,LIFT LEG HINGE	• • • • • • •	1	
- 18	35-815123	PIN,REAR LANDING GEAR HINGE	• • • • • • •	1	
- 19	AN515-8-8	PIN,FRONT LANDING GEAR HINGE	• • • • • • •	1	
	AN960-8	SCREW,HINGE PIN LOCK	• • • • • • •	2	
	AN365-832	WASHER,HINGE PIN LOCK	• • • • • • •	2	
- 20	AN5-22	NUT,HINGE PIN LOCK	• • • • • • •	2	
	AN960-516	BOLT,LIFT LEG HINGE	• • • • • • •	1	
	AN310-5	WASHER,LIFT LEG HINGE	• • • • • • •	1	
- 21	35-815124	NUT,LIFT LEG HINGE	• • • • • • •	1	
- 22	35-815080-602	BUSHING,LIFT LEG	• • • • • • •	1	AB
	35-815080-603	ABSORBER ASSY,LH LANDING GEAR SHOCK	• • • • • • •	1	
- 23	LS-6	ABSORBER ASSY,RH LANDING GEAR SHOCK	• • • • • • •	1	
		BEARING	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

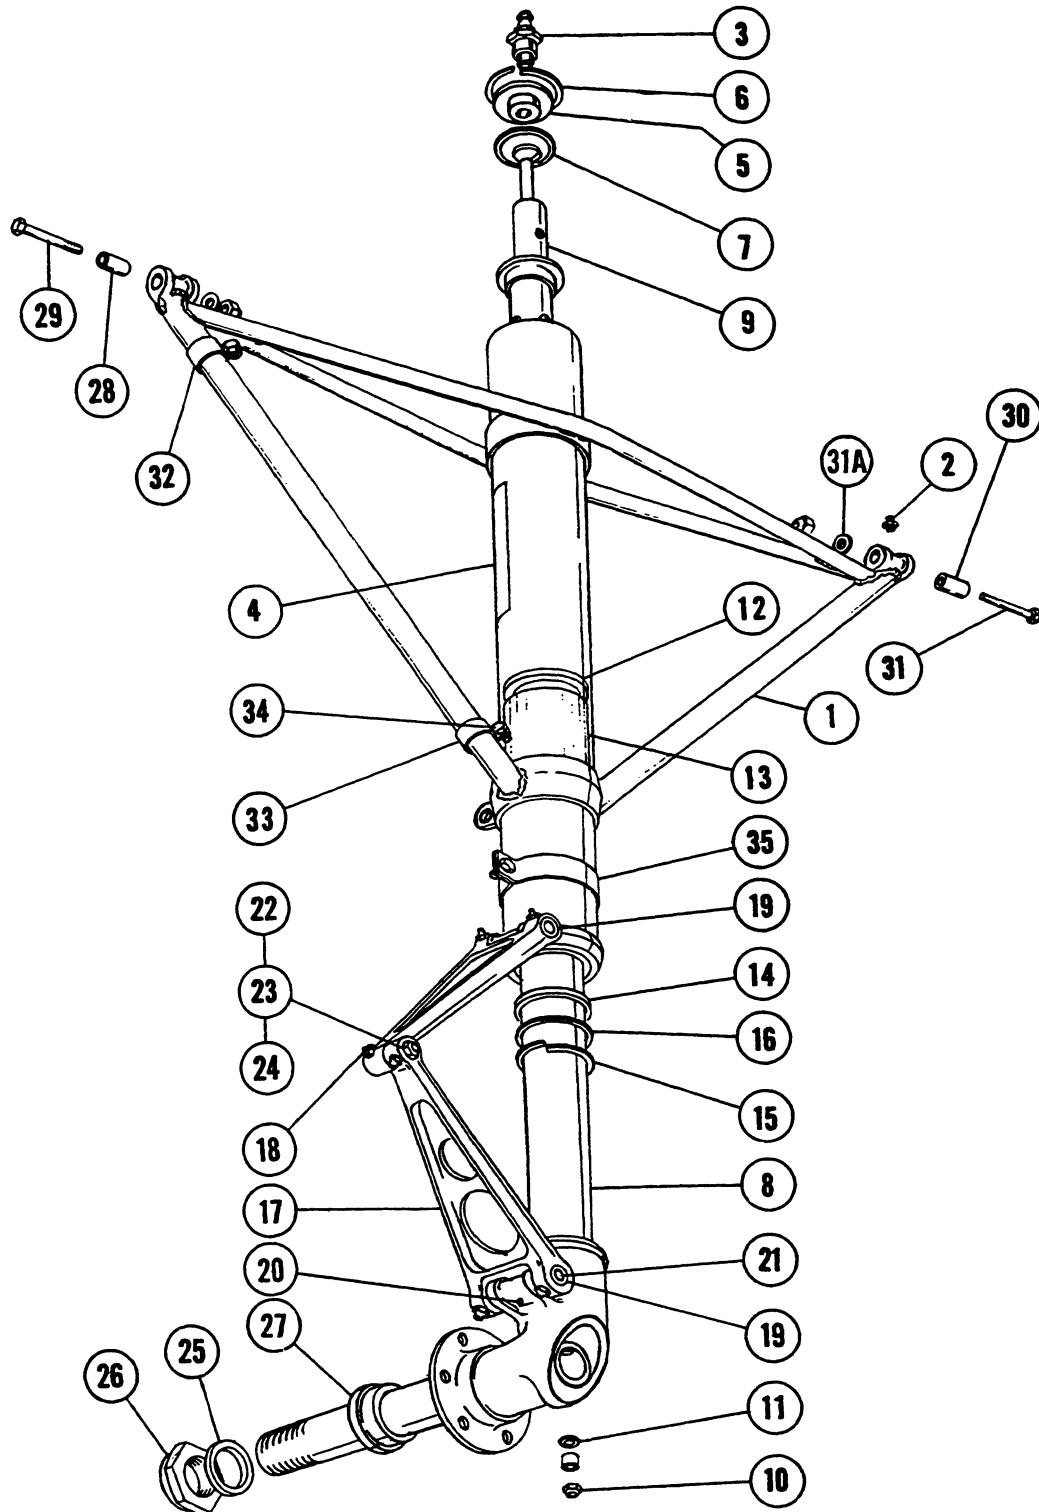


Figure 43. Landing Gear Shock Absorber Assembly (D1 thru D2680)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
43	35-815080-602		ABSORBER ASSY, LANDING GEAR SHOCK LH	1	AB
	35-815080-603		ABSORBER ASSY, LANDING GEAR SHOCK RH	1	AB
- 1	35-815110		• ABSORBER ASSY, UPPER SHOCK LH.	1	AB
	35-815110-1		• ABSORBER ASSY, UPPER SHOCK RH.	1	AB
- 2	1645		• • FITTING, ALEMITE	2	AB
- 3	35-815083		• BODY ASSY, FILLER VALVE	1	AB
	AN809-1		• CORE, FILLER VALVE	1	AB
	AN901-5A		• GASKET, FILLER VALVE	1	AB
	AN813-1A		• CAP, FILLER VALVE	1	AB
- 4	35-815084		• PLACARD, SHOCK STRUT	1	AB
- 5	35-815082		• PLUG, UPPER SHOCK ABSORBER	1	AB
- 6	NAS50-187		• RING, ABSORBER RETAINER	1	AB
- 7	AN6230-1		• GASKET, ABSORBER ASSY	1	AB
- 8	35-815021		• ABSORBER ASSY, LOWER SHOCK LH	1	AB
	35-815021-1		• ABSORBER ASSY, LOWER SHOCK RH	1	AB
- 9	35-815060		• CONTROL ASSY, SHOCK	1	AB
- 10	AN365-524		• NUT, EXTENSION STOP PIN RETAINER	1	AB
	35-815081		• WASHER, EXTENSION STOP PIN	1	AB
- 11	AN6227-6		• PACKING, EXTENSION STOP PIN	1	AB
- 12	AN6227-30		• PACKING, INNER CYLINDER	1	AB
- 13	35-815080-2		• FELT, PISTON LUBRICATING	1	AB
- 14	111506-6		• RING, PISTON WIPER	1	AB
- 15	C.O. 93463-2		• RING, LOWER CYLINDER SANP	1	AB
- 16	111190-6		• RING, PISTON SCRAPER	1	AB
- 17	35-815174-600		• KNEE ASSY, TORQUE	2	AB
	35-815174		• • KNEE, UPPER	1	AB
	35-815175		• • KNEE, UPPER	1	AB
- 18	1645		• • FITTING, ALEMITE	3	AB
- 19	35-815013		• • BUSHING, TORQUE KNEE	2	AB
- 20	AN392-19		• PIN, HINGE PIN LOCK	2	AB
- 21	35-815014		• PIN, UPPER & LOWER HINGE	2	AB
- 22	AN5-13		• BOLT, CENTER HINGE	1	AB
- 23	100951S063-010-024		• WASHER, CENTER HINGE	2	AB
	AN310-5		• NUT, CENTER HINGE	1	AB
- 24	105739S0312-0436-0946		• BUSHING, CENTER HINGE	1	AB
	AN960-716		• WASHER, CENTER HINGE	1	AB
- 25	35-810072		SPACER, WHEEL MOUNTING	1	AB
- 26	AN7502-24		NUT, WHEEL RETAINER	1	AB
- 27	35-815023		BUSHING, WHEEL MOUNTING	1	AB
- 28	105740X0500-0622-1329		BUSHING, FWD SHOCK ABSORBER	1	AB
- 29	NAS58-31		BOLT, FWD MAIN GEAR HINGE	1	AB
	100951X063-016-024		WASHER, HINGE BOLT	1	AB
	AN310-8		NUT, HINGE BOLT	1	AB
- 30	105740X0375-0497-1329		BUSHING, AFT SHOCK ABSORBER	1	AB
- 31	NAS56-27		BOLT, AFT MAIN GEAR HINGE	1	AB
- 31A	AN960-616		WASHER, AFT MAIN GEAR HINGE	1	AB
	AN310-6		NUT, AFT MAIN GEAR HINGE	1	AB
- 32	35-815038		CLAMP, HOSE	1	AB
	AN4-7A		BOLT, CLAMP ATTACHING	2	AB
	AN960-416		WASHER, CLAMP MOUNTING	2	AB
	AN365-428		NUT, CLAMP RETAINER	2	AB
- 33	AN742-6C		CLAMP, HOSE RETAINER	1	AB
- 34	AN742-16		CLAMP, HOSE RETAINER	1	AB
	AN3-4A		BOLT, CLAMP ATTACHING	1	AB
- 35	35-815004		CLAMP, HOSE RETAINER	1	AB
	35-815004-1		CLAMP, HOSE RETAINER	1	AB
	35-815004-4		BRACKET, DOOR LINK ATTACHING	1	AB
	35-815004-5		BRACKET, DOOR LINK ATTACHING	1	AB

MODEL 35 THRU G35 PARTS CATALOG

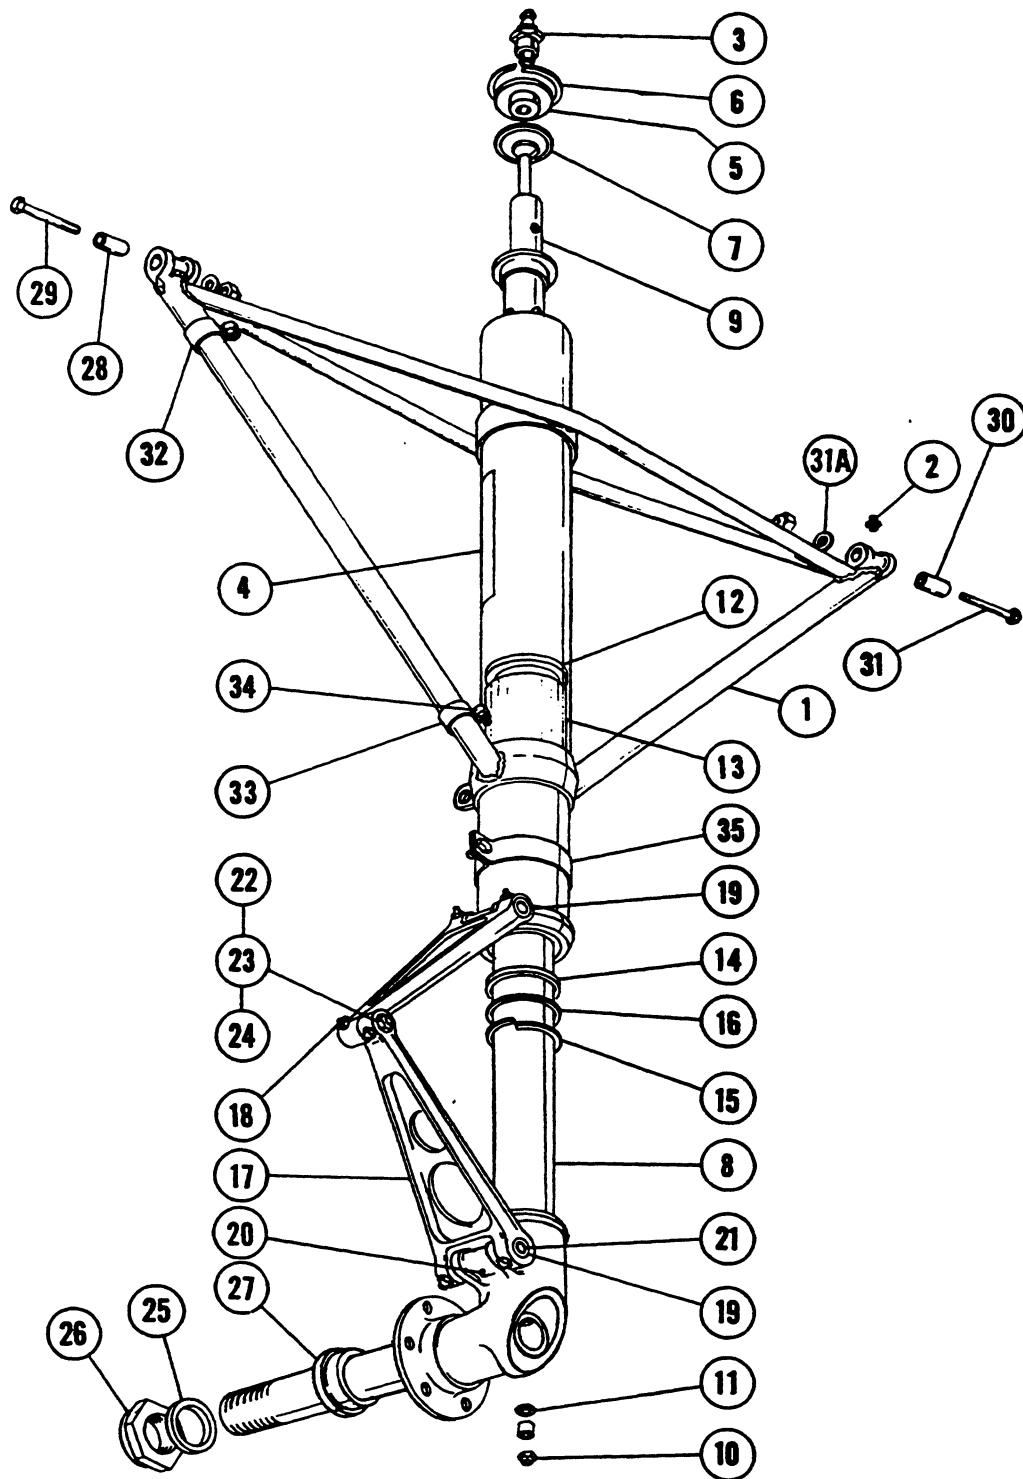


Figure 44. Landing Gear Shock Absorber Assembly (D2681 thru D4098)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
44	45-815201-602		ABSORBER ASSY, LANDING GEAR SHOCK LH	1	C,D,E,F22
	45-815201-603		ABSORBER ASSY, LANDING GEAR SHOCK RH	1	C,D,E,F22
	35-810150		ABSORBER ASSY, LANDING GEAR SHOCK LH	1	C,D,E,F22
	35-810150-1		ABSORBER ASSY, LANDING GEAR SHOCK RH	1	C,D,E,F22
	45-815203	• ABSORBER ASSY, UPPER SHOCK LH / USE 45-815203-2 FOR REPLACEMENT/		NP	C,D,E,F22
- 1	45-815203-2	• ABSORBER ASSY, UPPER SHOCK LH / WHEN 45-815203-2 & -3 ARE USED FOR REPLACEMENT OF 45-815203 & -1, 45-815226 AND 111190-16 MUST BE REPLACED BY 45-815232 AND AN6231A20.		1	F6,G
	45-815203-1	• ABSORBER ASSY, UPPER SHOCK RH / USE 45-815203-3 FOR REPLACEMENT/		NP	C,D,E,F22
	45-815203-3	• ABSORBER ASSY, UPPER SHOCK RH / WHEN 45-815203-2 & -3 ARE USED FOR REPLACEMENT OF 45-815203 & -1, 45-815226 AND 111190-16 MUST BE REPLACED BY 45-815232 AND AN6231A20.		1	F6,G
- 2	1645	• FITTING, ALEMITE		2	
- 3	35-815088-10	• BODY ASSY, FILLER VALVE		1	C,D,E,F22
	AN809-1	• CORE, FILLER VALVE		1	C,D,E,F22
	AN902-5	• GASKET, FILLER VALVE		1	C,D,E,F22
	AN813-1A	• CAP, FILLER VALVE		1	C,D,E,F22
- 4	112406	• PLACARD, SHOCK STRUT		1	C,D,E,F22
- 5	45-815224	• PLUG, UPPER SHOCK ABSORBER		1	C,D,E,F22
- 6	NAS50-200	• RING, ABSORBER RETAINER		1	C,D,E,F22
- 7	AN6230-2	• GASKET, ABSORBER ASSY		1	C,D,E,F22
- 8	45-815202	• ABSORBER ASSY, LOWER SHOCK LH		1	C,D,E,F22
	45-815202-1	• ABSORBER ASSY, LOWER SHOCK RH		1	C,D,E,F22
- 9	45-815217-4	• CONTROL ASSY, SHOCK		1	F6,G
	35-810154	• CONTROL ASSY, SHOCK		1	C,D,E,F22
- 10	AN365-524	• NUT, EXTENSION STOP PIN RETAINING		1	
	35-815081	• WASHER, EXTENSION STOP PIN		1	
- 11	AN6227-6	• PACKING, EXTENSION STOP PIN		1	
- 12	AN6227-31	• PACKING, INNER CYLINDER		1	C,D,E,F22
- 13	35-810150-2	• FELT, PISTON LUBRICATING		1	C,D,E,F22
- 14	45-815226	• RING, PISTON WIPER		1	C,D,E,F22
	45-815232	• ADAPTER, PISTON		1	F6,G
- 15	111200-6	• RING, LOWER CYLINDER SNAP		1	C,D,E,F22
- 16	111190-16	• RING, PISTON SCRAPER		1	C,D,E,F22
	AN6231A20	• RING, PISTON SCRAPER		1	F6,G
- 17	45-815011-6	• KNEE ASSY, UPPER TORQUE		1	C,D,E,F22
	45-815015-6	• KNEE ASSY, LOWER TORQUE		1	C,D,E,F22
- 18	1645	• FITTING, ALEMITE		5	
- 19	45-815013	• BUSHING, TORQUE KNEE		4	C,D,E,F22
- 20	AN392-27	• PIN, HINGE PIN LOCK		2	C,D,E,F22
- 21	45-815014	• PIN, UPPER & LOWER HINGE		2	C,D,E,F22
- 22	AN5-13	• BOLT, CENTER HINGE HINGE		1	C,D,E,F22
- 23	AN960-516	• WASHER, CENTER HINGE		1	C,D,E,F22
	AN310-5	• NUT, CENTER HINGE		1	
- 24	105739S-YK0431	• BUSHING, CENTER HINGE		1	C,D,E,F22
- 25	35-810072	• SPACER, WHEEL MOUNTING		1	
- 26	AN7502-24	• NUT, WHEEL RETAINER		1	
- 27	35-815023	• BUSHING, WHEEL MOUNTING		1	
- 28	105740X-YM1329	• BUSHING, FWD SHOCK ABSORBER		1	C,D,E,F22
	35-815182	• BUSHING, FWD SHOCK ABSORBER		1	C,D,E,F22
- 29	NAS58-31	• BOLT, FWD MAIN GEAR HINGE		1	
	100951X063XD	• WASHER, HINGE BOLT		1	
	AN310-8	• NUT, HINGE BOLT		1	
- 30	105740X-YB1329	• BUSHING, AFT SHOCK ABSORBER		1	C,D,E,F22
	35-815182	• BUSHING, AFT SHOCK ABSORBER		1	C8,D,E,F22
- 31	NAS56-27	• BOLT, AFT MAIN GEAR HINGE		1	
- 31A	AN960-616	• WASHER, AFT MAIN GEAR HINGE		1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION								UNITS PER ASSY	USABLE ON CODE	
									• NUT,AFT MAIN GEAR HINGE	• CLAMP,HOSE	• BOLT,CLAMP ATTACHING	• WASHER,CLAMP MOUNTING	• NUT,CLAMP RETAINER	• CLAMP,HOSE RETAINER	• CLAMP,HOSE RETAINER	• BOLT,CLAMP ATTACHING	• CLAMP,HOSE RETAINER	• CLAMP,HOSE RETAINER	• BRACKET,DOOR LINK ATTACHING
44	AN310-6																		1
- 32	35-815038																		1
	AN4-7A																		2
	AN960-416																		2
	AN365-428																		2
- 33	AN742-6C																		1
- 34	AN742-16																		1
	AN3-4A																		1
- 35	35-815004																		1
	35-815004-1																		1
	35-815004-4																		1
	35-815004-5																		1

MODEL 35 THRU G35 PARTS CATALOG

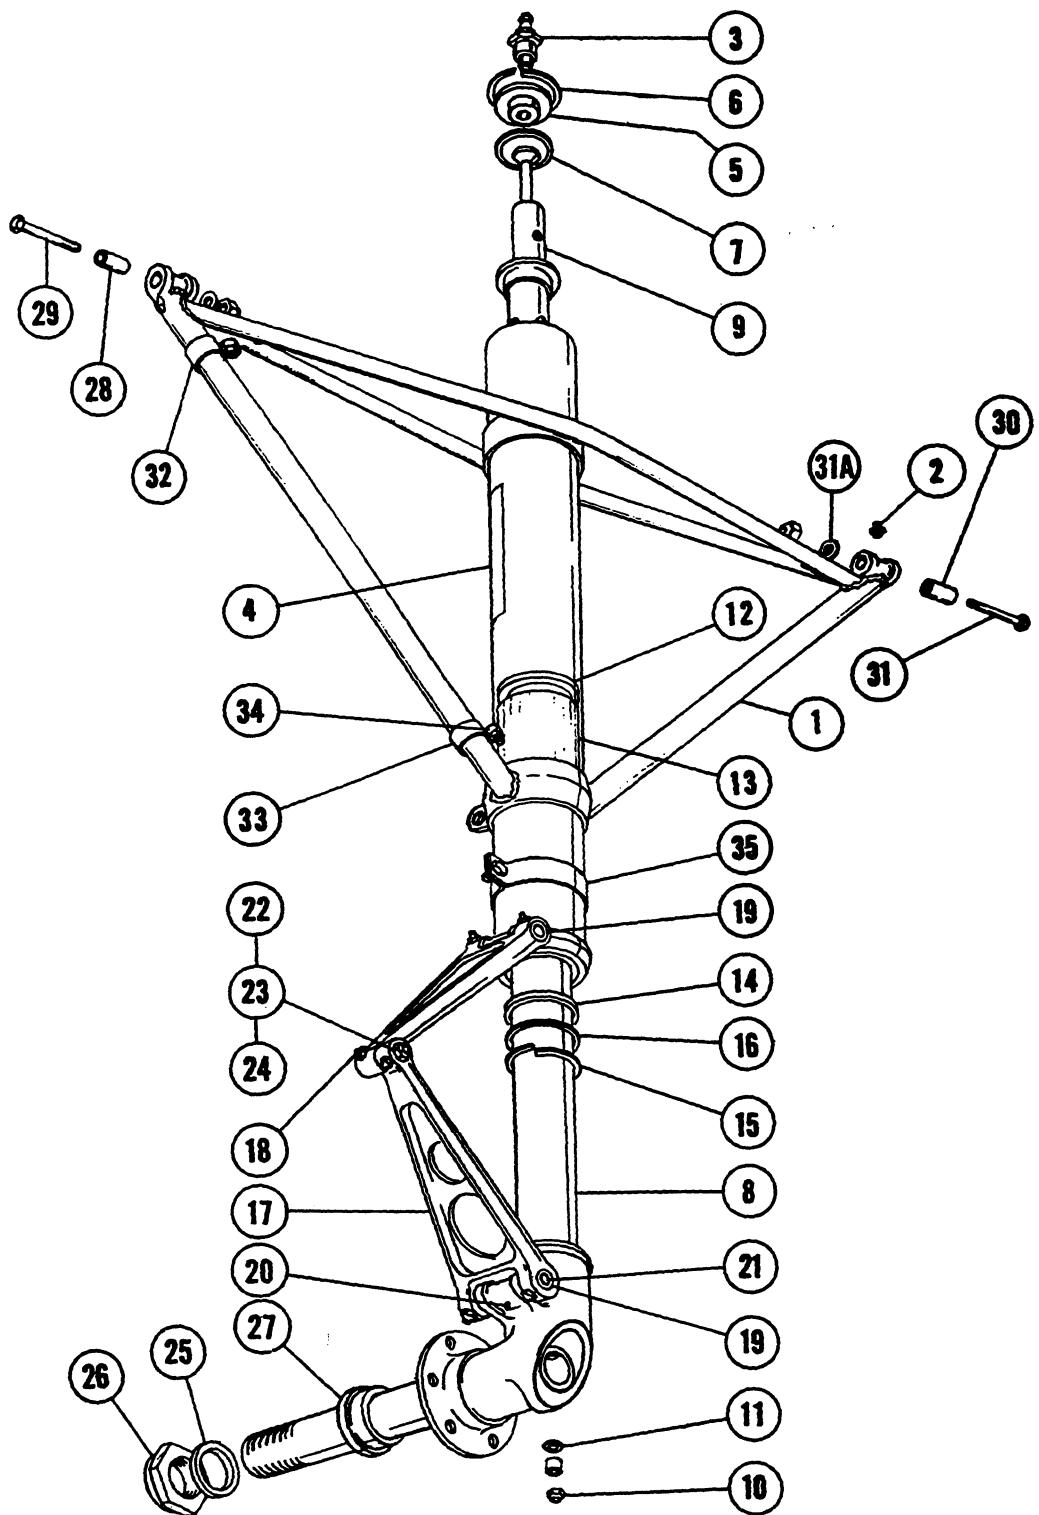


Figure 45. Landing Gear Shock Absorber Assembly (D4099 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
45	35-815001-10	GEAR ASSY, LANDING LH.	• • • • • • •	1	F6G
	35-815001-11	GEAR ASSY, LANDING RH.	• • • • • • •	1	F6G
	35-810150-4	ABSORBER ASSY, LANDING GEAR SHOCK LH	• • • • • • •	1	F6G
	35-810150-5	ABSORBER ASSY, LANDING GEAR SHOCK RH	• • • • • • •	1	F6G
- 1	45-815203-2	• ABSORBER ASSY, UPPER SHOCK LH.	• • • • • • •	1	F6G
	45-815203-3	• ABSORBER ASSY, UPPER SHOCK RH.	• • • • • • •	1	F6G
- 2	1633	• • FITTING, ALEMITE	• • • • • • •	2	
- 3	35-815088-10	• BODY ASSY, FILLER VALVE	• • • • • • •	1	
	AN809-1	• CORE, FILLER VALVE	• • • • • • •	1	
	AN902-5	• GASKET, FILLER VALVE	• • • • • • •	1	
	AN813-1A	• CAP, FILLER VALVE	• • • • • • •	1	
- 4	112406	• PLACARD, SHOCK STRUT	• • • • • • •	1	
	35-810158	• PLACARD, SHOCK STRUT	• • • • • • •	1	
	35-810159	• PLACARD, SHOCK STRUT	• • • • • • •	1	
- 5	45-815224	• PLUG, UPPER SHOCK ABSORBER	• • • • • • •	1	
- 6	NAS50-200	• RING, ABSORBER RETAINER	• • • • • • •	1	
- 7	AN6230-2	• GASKET, ABSORBER ASSY	• • • • • • •	1	
- 8	45-815202	• ABSORBER ASSY, LOWER SHOCK LH	• • • • • • •	1	
	45-815202-1	• ABSORBER ASSY, LOWER SHOCK RH	• • • • • • •	1	
- 9	45-815217-4	• CONTROL ASSY, SHOCK	• • • • • • •	1	F6G
- 10	AN365-524	• NUT, EXTENSION STOP PIN RETAINER	• • • • • • •	1	
	35-815081	• WASHER, EXTENSION STOP PIN	• • • • • • •	1	
- 11	AN6227-6	• PACKING, EXTENSION STOP PIN	• • • • • • •	1	
- 12	AN6227-31	• PACKING, INNER CYLINDER	• • • • • • •	1	
- 13	35-810150-2	• FELT, PISTON LUBRICATING	• • • • • • •	1	
- 14	45-815232	• RING, PISTON ADAPTER	• • • • • • •	1	F6G
- 15	111200-6	• RING, LOWER CYLINDER SNAP	• • • • • • •	1	
- 16	AN6231A20	• RING, PISTON SCRAPER	• • • • • • •	1	F6G
- 17	45-815011-6	• KNEE ASSY, UPPER TORQUE	• • • • • • •	1	
	45-815015-6	• KNEE ASSY, LOWER TORQUE /MATCHED PAIR/	• • • • • • •	1	CDEFG
- 18	1645	• • FITTING, ALEMITE	• • • • • • •	3	
- 19	45-815013	• • BUSHING, TORQUE KNEE	• • • • • • •	4	
- 20	AN392-27	• PIN, HINGE PIN LOCK	• • • • • • •	1	
	AN392-23	• PIN, HINGE PIN LOCK	• • • • • • •	1	
- 21	45-815014	• PIN, UPPER & LOWER HINGE	• • • • • • •	2	
- 22	AN5-13	• BOLT, CENTER HINGE	• • • • • • •	1	
- 23	AN960-516	• WASHER, CENTER HINGE	• • • • • • •	2	
- 24	10573950312-0436-0431	• BUSHING, CENTER HINGE	• • • • • • •	1	
- 25	35-810072	SPACER, WHEEL MOUNTING	• • • • • • •	1	
- 26	AN7502-24	NUT, WHEEL RETAINER	• • • • • • •	1	
- 27	35-815023	BUSHING, WHEEL MOUNTING	• • • • • • •	1	
- 28	35-815182	BUSHING, FWD SHOCK ABSORBER	• • • • • • •	1	
- 29	NAS58-31	BOLT, FWD MAIN GEAR HINGE	• • • • • • •	1	
	100951X063-016-024	WASHER, HINGE BOLT	• • • • • • •	1	
	AN310-8	NUT, HINGE BOLT	• • • • • • •	1	
- 30	35-815182-1	BUSHING, AFT SHOCK ABSORBER	• • • • • • •	1	AB
-	35-815182	BUSHING, AFT SHOCK ABSORBER	• • • • • • •	1	CDEFG
- 31	NAS58-30	BOLT, AFT MAIN GEAR HINGE	• • • • • • •	1	CDEFG
- 31A	100951X063-016-024	WASHER, AFT MAIN GEAR HINGE	• • • • • • •	1	CDEFG
	AN310-8	NUT, AFT MAIN GEAR HINGE	• • • • • • •	1	CDEFG
- 32	35-815038	CLAMP, HOSE	• • • • • • •	1	
- 33	AN742-6C	CLAMP, HOSE RETAINER	• • • • • • •	1	
- 34	AN742-16	CLAMP, HOSE RETAINER	• • • • • • •	1	
- 35	35-815004	CLAMP, HOSE RETAINER	• • • • • • •	1	
	35-815004-1	CLAMP, HOSE RETAINER	• • • • • • •	1	
	35-815004-4	BRACKET, DOOR LINK ATTACHING	• • • • • • •	1	
	35-815004-5	BRACKET, DOOR LINK ATTACHING	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

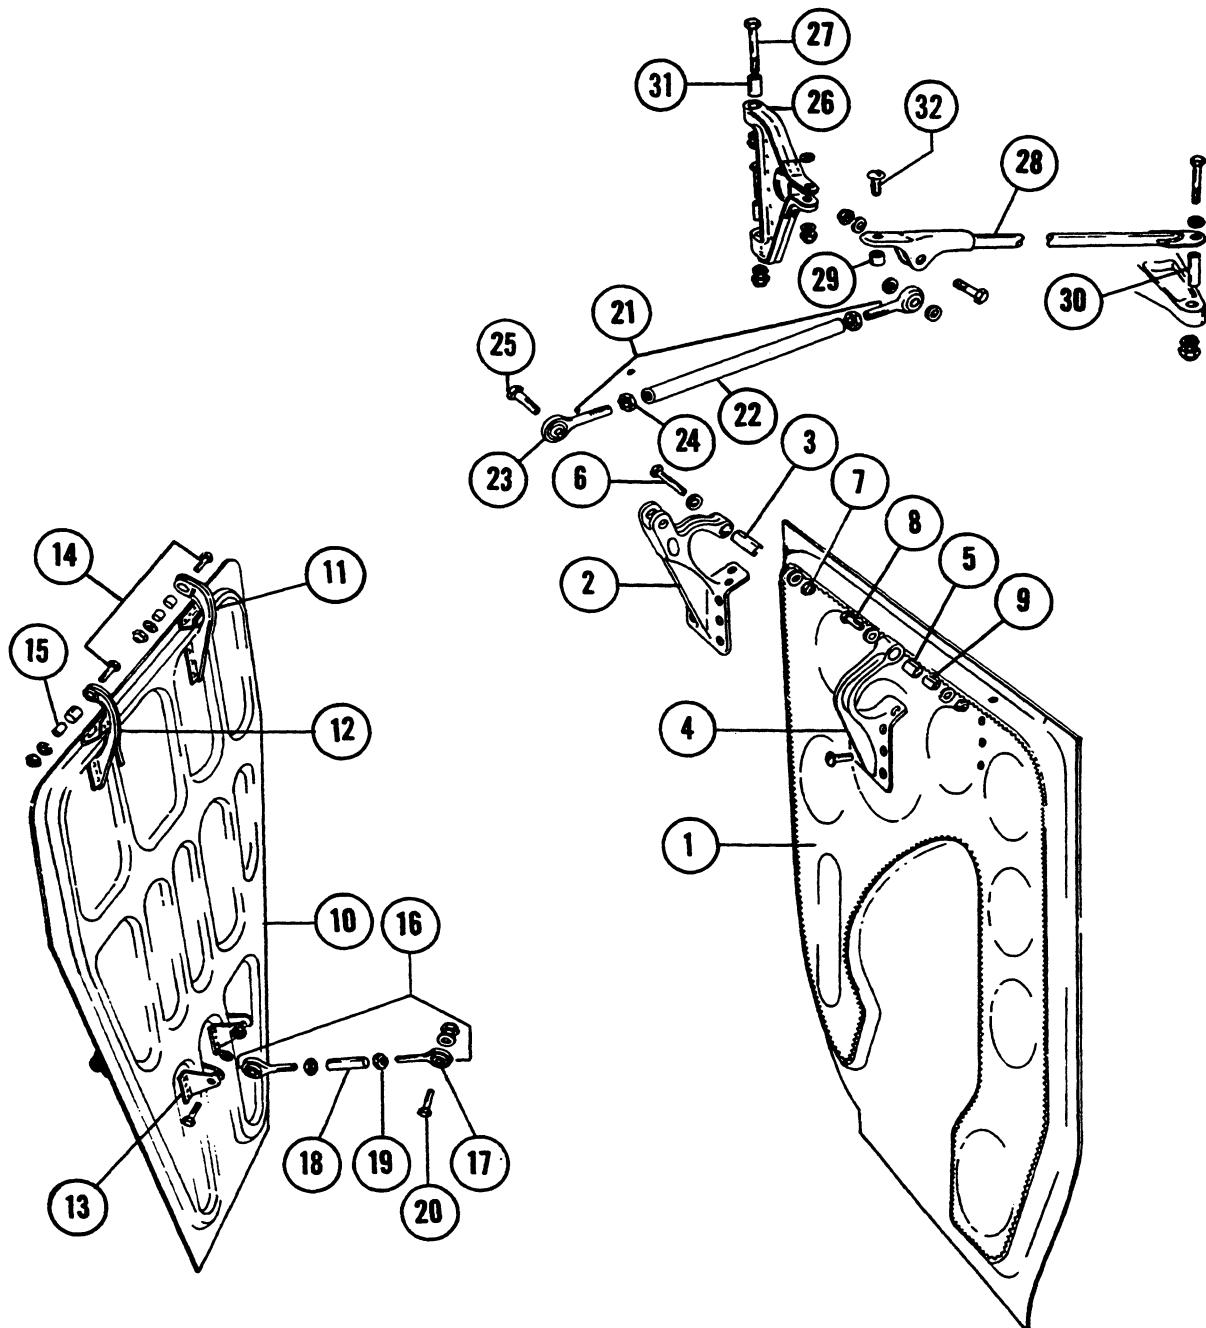


Figure 46. Main Landing Gear Door and Retract Mechanism

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
46	35-815055-4		DOOR ASSY,LH INBD /WITH HINGES/	.	1
	35-815055-5		DOOR ASSY,RH INBD /WITH HINGES/	.	1
- 1	35-815055-6	.	DOOR ASSY,LH INBD /LESS HINGES/	.	1
	35-815055-7	.	DOOR ASSY,RH INBD /LESS HINGES/	.	1
- 2	35-815075	.	HINGE,FWD DOOR	.	1 ABCDE5
	45-815005-1	.	HINGE,FWD DOOR	.	1 E6FG
	35-815075-1	.	HINGE,FWD	.	1 ABCDE5
	45-815005-2	.	HINGE,FWD	.	1 E6FG
- 3	105739X-ZM1050	.	BUSHING,FWD INBD DOOR HINGE	.	1 A35
	105739X-ZP1050	.	BUSHING,FWD INBD DOOR HINGE	.	A36BCDEFG
	AN525-10-10	.	SCREW,HINGE ATTACHING	.	7
	AN365-1032	.	NUT,HINGE RETAINER	.	3
	AN960-10	.	WASHER,HINGE MOUNTING	.	3
- 4	35-815016	.	HINGE ASSY,AFT INBD DOOR	.	1
	35-815016-1	.	HINGE ASSY,AFT INBD DOOR	.	1
- 5	105740X-ZR0480	.	BUSHING,AFT INBD DOOR HINGE	.	1
	AN525-10-10	.	SCREW,HINGE ATTACHING	.	4
	AN365-1032	.	NUT,HINGE RETAINER	.	3
	AN364-1032	.	NUT,HINGE RETAINER	.	1
	AN960-10	.	WASHER,HINGE MOUNTING	.	3
	AN960-10L	.	WASHER,HINGE MOUNTING	.	1
- 6	AN3-15A	.	BOLT,FWD INBD DOOR HINGE	.	1
	AN960-10	.	WASHER,FWD INBD DOOR HINGE	.	2
	AN960-10L	.	WASHER,FWD INBD DOOR HINGE	.	2
- 7	AN365-1032	.	NUT	.	2
- 8	AN3-10A	.	BOLT,AFT INBD DOOR HINGE	.	1
- 9	105739X-ZP0500	.	BUSHING,AFT INBD DOOR HINGE	.	1
- 10	35-815055-68	.	DOOR ASSY,OUTBD LH	.	1
	35-815055-69	.	DOOR ASSY,OUTBD RH	.	1
- 11	35-815055-10	.	HINGE,FWD OUTBD DOOR	.	1
	35-815055-11	.	HINGE,FWD OUTBD	.	1
- 12	35-815055-12	.	HINGE,AFT OUTBD DOOR	.	1
	35-815055-13	.	HINGE,AFT OUTBD DOOR	.	1
	105740X-ZJ0490	.	BUSHING,DOOR HINGE	.	2
- 13	35-815055-15	.	BRACKET,LINK ATTACHING	.	2
	35-815055-14	.	BRACKET,LINK ATTACHING	.	2
- 14	AN3-10A	.	BOLT,OUTBD DOOR HINGE	.	2
- 15	105739ZM0500	.	BUSHING,OUTBD DOOR HINGE	.	2
- 16	35-815056	.	LINK,OUTBD DOOR ATTACHING	.	2
- 17	HM-4	.	END,ATTACHING LINK ROD	.	4
- 18	35-815056-2	.	TUBE,ATTACHING LINK	.	2
- 19	AN316-4R	.	NUT,ROD END LOCK	.	4
- 20	AN4-7A	.	BOLT,LINK ATTACHING	.	4
- 21	35-815007-4	.	LINK ASSY,OUTBD	.	1
- 22	35-815007-2	.	TUBE,OUTBD LINK	.	1
- 23	HM-4	.	END,OUTBD LINK ROD	.	2
- 24	AN316-4R	.	NUT,ROD END LOCK	.	2
- 25	AN4-12A	.	BOLT,LINK ASSY ATTACHING	.	1
	AN4-54A	.	BOLT	.	1
- 26	35-815116	.	IDLER,LANDING GEAR DOOR ACTUATOR	.	1 A1
	35-815118	.	IDLER,LANDING GEAR DOOR ACTUATOR	.	A2BCDEFG
- 27	AN4-55	.	BOLT	.	2
- 28	45-815003-3	.	ROD ASSY,INBD RETRACT	.	1
	45-815003-1	.	ROD ASSY,INBD RETRACT	.	1
- 29	102933D5ZR0375	.	SPACER,INBD RETRACT ROD	.	1
- 30	35-815101-2	.	BUSHING,INBD RETRACT ROD	.	1

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS	USABLE
										PER ASSY	ON CODE
46 - 31	35-815117	SPACER	•	•	•	•	•	•	•	•	2
	100801S5-4781	BUSHING	•	•	•	•	•	•	•	•	2
- 32	35-815183	SCREW	•	•	•	•	•	•	•	•	1
	105739D0190-	BUSHING	•	•	•	•	•	•	•	•	1
	0375-0250										
	105739S0190-	BUSHING	•	•	•	•	•	•	•	•	1
	0341-0137										

MODEL 35 THRU G35 PARTS CATALOG

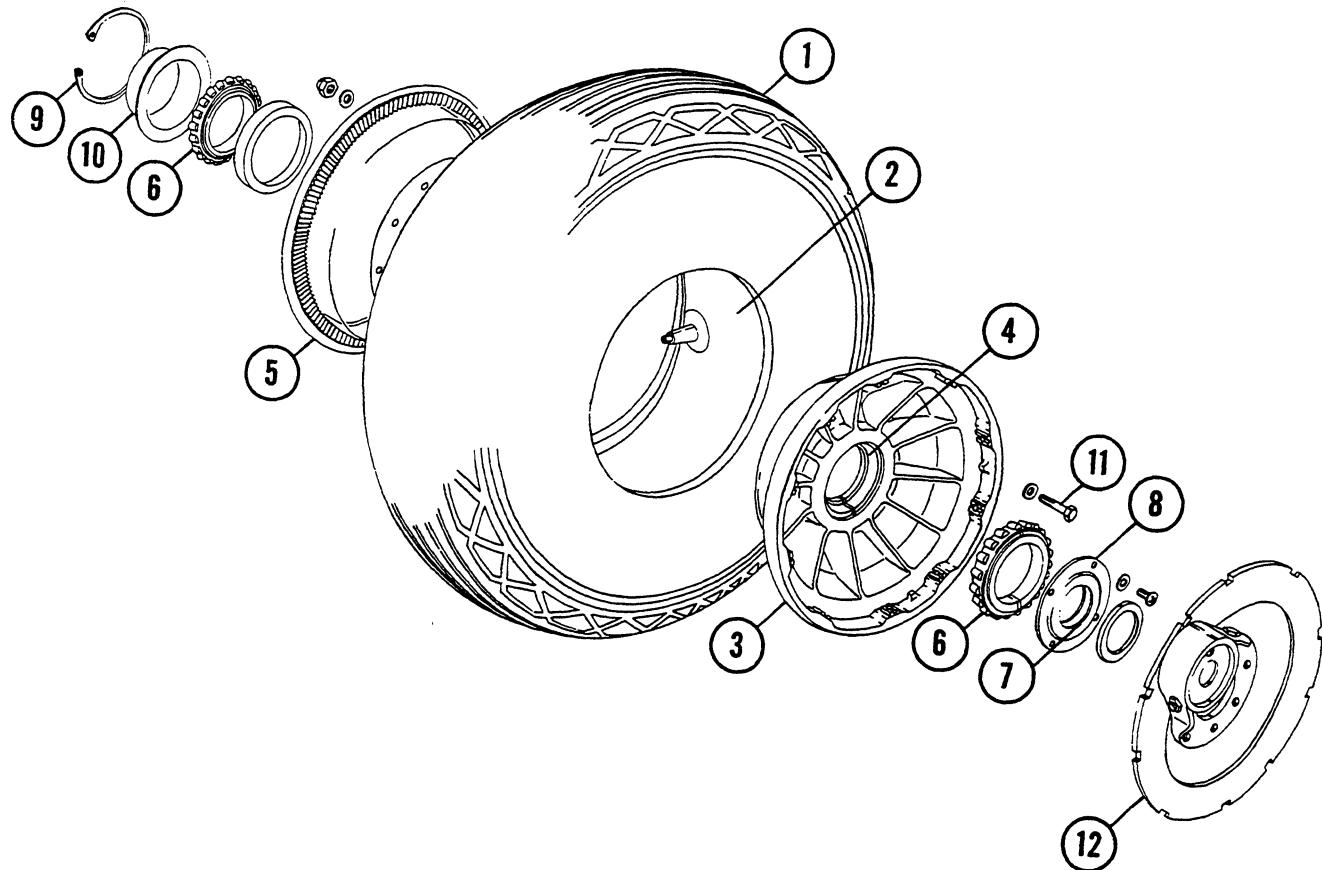


Figure 47. Main Wheel, Tire, Tube And Brake Assembly

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
				1	2	
47	35-815001-700	WHEEL ASSY,LH COMPLETE.		1		
	35-815001-701	WHEEL ASSY,RH COMPLETE.		1		
- 1	650X8	• TIRE,MAIN GEAR 4 PLY.		1		
- 2	650X8	• TUBE,MAIN GEAR.		1		
	95-30949	• WHEEL ASSY,COMPLETE /LESS BRAKE,TIRE & TUBE/.		1		
- 3	95-3293	• • WHEEL,HALF /BRAKE SIDE/		1		
	9520113	• • • KEY,DISC DRIVE.		10		
	9520656	• • • SCREW,SPECIAL		10		
- 4	95-0477	• • • CUP,INBD BEARING.		1		
- 5	95-3292	• • WHEEL,HALF /OPPOSITE BRAKE/		1		
	95-0477	• • • CUP,OUTBD BEARING		1		
- 6	95-0476	• • CONE,WHEEL BEARING.		2		
- 7	95-3298	• • SEAL,INBD BEARING FELT.		1		
- 8	95-3305	• • RETAINER,INBD BEARING		1		
- 9	95-3294	• • RING,HUB CAP RETAINER		1		
- 10	95-3295	• • CAP,MAIN WHEEL HUB.		1		
- 11	9520205	• • BOLT,WHEEL ASSY		8		
- 12	95-2968	• • BRAKE ASSY,GOODYEAR		1		

MODEL 35 THRU G35 PARTS CATALOG

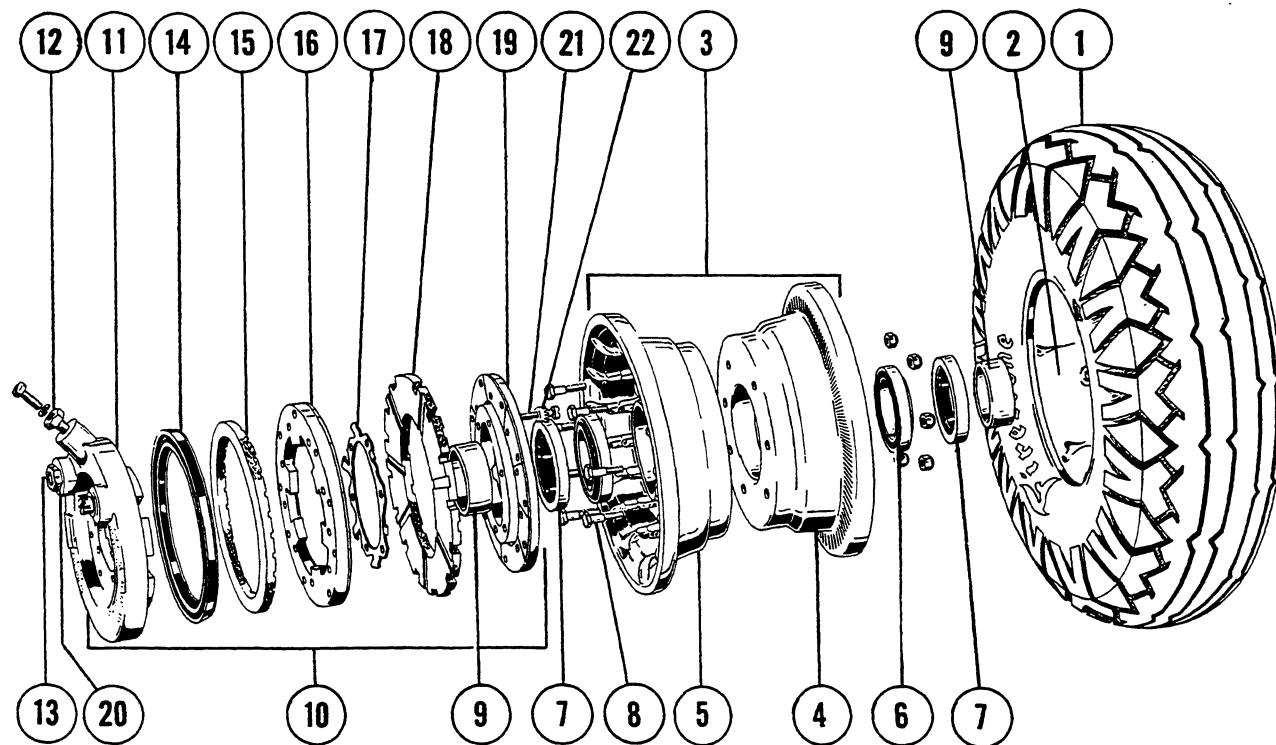


Figure 48. Main Wheel, Tire, Tube And Brake Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
48 - 1	650X8	TIRE, 4 PLY MAIN GEAR.	1	
- 2	650X8	TUBE,MAIN GEAR.	1	
- 3	DFA233	WHEEL ASSY.	1	
- 4	DFA273	• WHEEL,INBD HALF	1	
	19268	• CUP,BEARING /TIMKEN/	1	
- 5	DFA272	• WHEEL,OUTBD HALF.	1	
	19268	• CUP,BEARING /TIMKEN/	1	
- 6	19150	• CONE,BEARING /TIMKEN/	2	
- 7	988	• SEAL,GREASE	2	
- 8	AFA434	• BOLT,WHEEL ASSY	7	
- 9	AFA424	• SPACER.	2	
- 10	CFA299	• BRAKE ASSY.	1	
- 11	CFA298	• • GLAND ASSY,MOUNTING RING.	1	
- 12	BFA530	• • VALVE,BLEEDER	1	
- 13	AFA542	• • PLUG.	1	
- 14	BFA520	• • SEAL ASSY,HYDRAULIC	1	
	AN6230-36	• • SEAL.	1	
	AN6230-38	• • SEAL.	1	
- 15	BFA233	• • RING,PUSHER	1	
- 16	BFA281	• • DISC ASSY,FLOATING.	1	
- 17	AFA358	• • SPRING,RETraction	1	
- 18	BFA236	• • DISC,BRAKE LINING	1	
- 19	CFA514	• • DISC ASSY,STATIONARY.	1	
- 20	AN901-4A	• • GASKET.	1	
- 21	AN503-416-18	• • SCREW	6	
- 22	AFA564	• • WASHER,LOCK	6	

MODEL 35 THRU G35 PARTS CATALOG

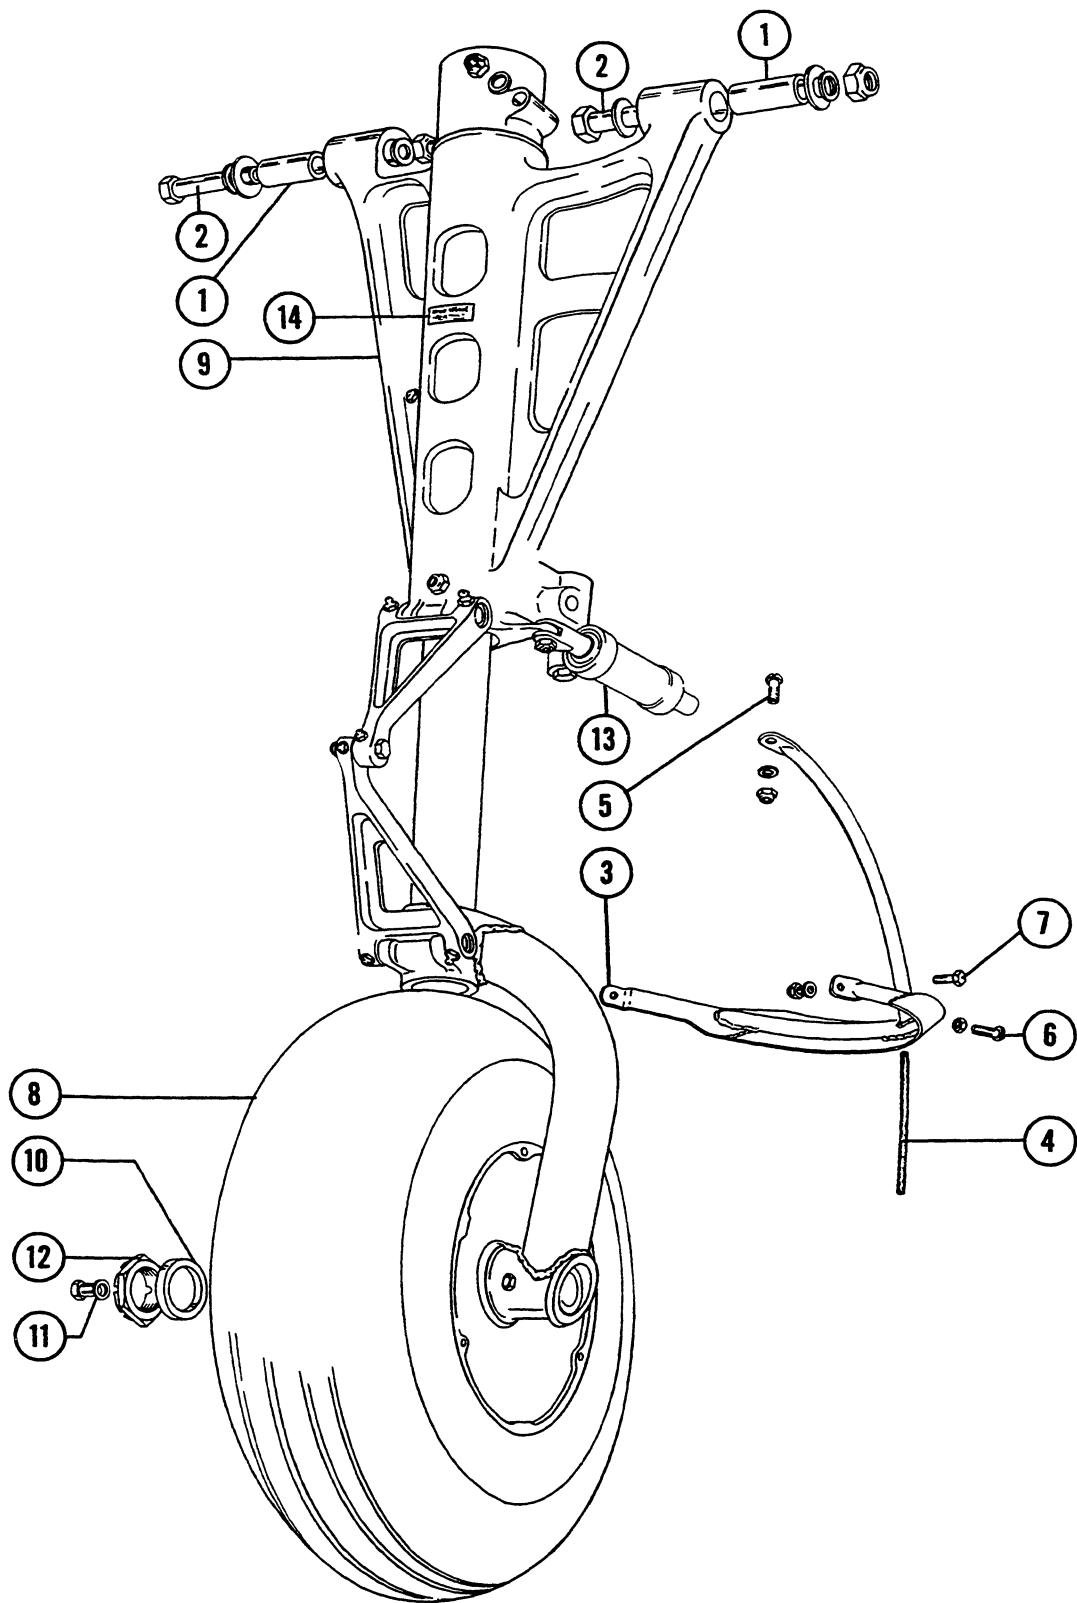


Figure 49. Nose Gear Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
49	35-825001-2		GEAR ASSY, NOSE	1	ABCDEFG1
	~5-825001-8		GEAR ASSY, NOSE W/WHEEL	1	G2
- 1	55-825029	.	BUSHING, NOSE GEAR ATTACHING	2	
- 2	AN6-23	.	BOLT, NOSE GEAR ATTACHING	2	
	AN960-616	.	WASHER, NOSE GEAR ATTACHING	4	
	100951-032-012-	.	WASHER, NOSE GEAR ATTACHING	2	
	100				
	AN365-624	.	NUT, NOSE GEAR ATTACHING	2	
- 3	35-825175	.	SCRAPER, NOSE WHEEL	1	
- 4	35-825023	.	GROUND ASSY, STATIC	1	ABCD5
- 5	AN525-10-6	.	SCREW, SCRAPER ATTACHING	1	
	AN960-10	.	WASHER, SCRAPER ATTACHING	1	
	AN364-1032	.	NUT, SCRAPER ATTACHING	1	
- 6	AN520-10-10	.	SCREW, STATIC HOUSING LOCKING	1	ABCD5
	AN356-1032	.	NUT, STATIC HOUSING LOCKING	1	ABCD5
- 7	AN4-4A	.	BOLT, SCRAPER ATTACHING	1	
	AN960-416	.	WASHER, SCRAPER ATTACHING	1	
	AN365-428	.	NUT, SCRAPER ATTACHING	1	
- 8	500X5	.	WHEEL ASSY, COMPLETE /SEE FIG. 52/	1	
- 9	35-825100	.	STRUT ASSY, /SEE FIG. 50/	1	
- 10	35-825129	.	WASHER, WHEEL	1	
- 11	AN7502-20	.	NUT, WHEEL	1	
- 12	AN74-3	.	BOLT, NOSE SCRAPER ATTACHING	1	
	AN960-416	.	WASHER, NOSE SCRAPER ATTACHING	1	
- 13	35-825145	.	DAMPER, NOSE WHEEL SHIMMY /SEE FIG. 54/	1	
- 14	35-825064	.	PLACARD	1	

MODEL 35 THRU G35 PARTS CATALOG

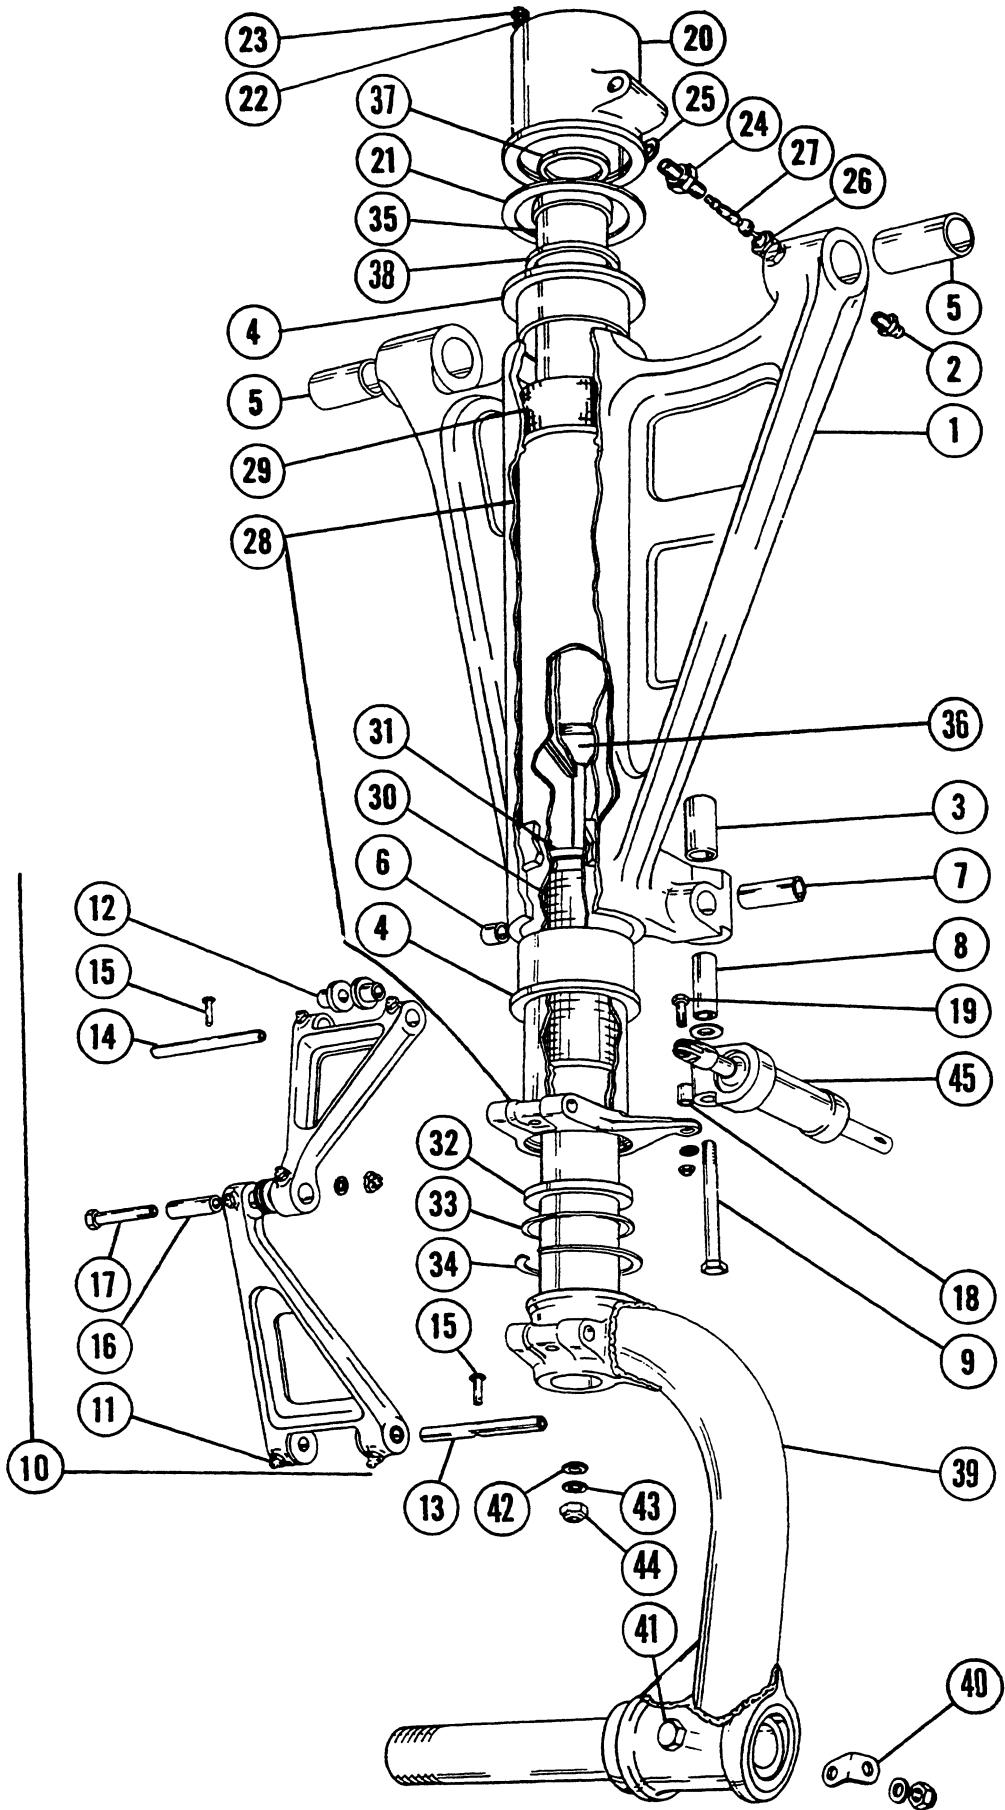


Figure 50. Nose Wheel Strut Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
50	35-825100	STRUT ASSY,NOSE WHEEL	• • • • • • •	1	ABCDEF	G1
	35-825100-6	STRUT ASSY,NOSE WHEEL	• • • • • • •	1		G2
- 1	35-825110	• BRACE ASSY,NOSE WHEEL	• • • • • • •	1		
- 2	1645	• • FITTING,ALEMITE	• • • • • • •	4		
- 3	105740X-YN1458	• • BUSHING	• • • • • • •	1		
- 4	35-820111	• • BEARING	• • • • • • •	2		
- 5	35-825112	• • BEARING	• • • • • • •	2		
- 6	35-820113	• • BEARING	• • • • • • •	1		
- 7	105740X-ZU1365	• • BUSHING	• • • • • • •	1		
- 8	105739S-YP1483	• • BUSHING,DAMPER ATTACHING	• • • • • • •	1		
- 9	AN6-31	• • BOLT,DAMPER ATTACHING	• • • • • • •	1		
	100951X063YN	• • WASHER,DAMPER ATTACHING	• • • • • • •	1		
	100951X031YM	• • WASHER,DAMPER ATTACHING	• • • • • • •	1		
	AN365-624	• • NUT,DAMPER ATTACHING	• • • • • • •	1		
- 10	35-825060	• KNEE ASSY,STRUT	• • • • • • •	2		
- 11	1645	• • FITTING,ALEMITE	• • • • • • •	6		
- 12	35-820062	• • BUSHING,STRUT KNEE	• • • • • • •	4		
- 13	35-825106	• • PIN,LOWER KNEE HINGE	• • • • • • •	1		
- 14	35-820027	• • PIN,UPPER KNEE HINGE	• • • • • • •	1		
- 15	AN392-17	• • PIN,LOCKING	• • • • • • •	2		
- 16	35-820028	• • BUSHING,KNEE HINGE	• • • • • • •	1		
- 17	AN4-12	• • BOLT,KNEE HINGE	• • • • • • •	1		
	100951S063ZZ	• • WASHER,KNEE HINGE	• • • • • • •	1		
	100951S063YH	• • WASHER,KNEE HINGE	• • • • • • •	1		
	AN310-4	• • NUT,KNEE HINGE	• • • • • • •	1		
- 18	105739S-ZK0190	• • BUSHING,DAMPER ROD END ATTACHING	• • • • • • •	1		
- 19	AN3-6A	• • BOLT,DAMPER ROD END ATTACHING	• • • • • • •	1		
	AN960-10	• • WASHER,DAMPER ROD END ATTACHING	• • • • • • •	2		
- 20	35-825092	• • CAP,NOSE WHEEL STRUT	• • • • • • •	1		
- 21	35-825101	• • SHIM,STRUT CAP	• • • • • • •	1		
- 22	AN960-10	• • WASHER,STRUT CAP	• • • • • • •	6		
- 23	AN365-1032	• • NUT,STRUT CAP	• • • • • • •	6		
- 24	110238	• • BODY,BLEEDER VALVE	• • • • • • •	1		
- 25	110237-4A	• • GASKET,BLEEDER VALVE	• • • • • • •	1		
- 26	AN813-1A	• • CAP,BLEEDER VALVE	• • • • • • •	1		
- 27	302D	• • CORE,BLEEDER VALVE	• • • • • • •	1		
- 28	35-825090	• • BARREL ASSY,STRUT	• • • • • • •	1		
- 29	35-825100-4	• • PAD,OIL	• • • • • • •	2		
- 30	35-825100-2	• • PAD,OIL	• • • • • • •	1		
- 31	AN6227-27	• • PACKING	• • • • • • •	1		
- 32	35-825153	• • RING	• • • • • • •	1		
- 33	111190-2	• • RING	• • • • • • •	1		
- 34	111200-2	• • RING	• • • • • • •	1		
- 35	35-825102	• • CONTROL ASSY,STRUT	• • • • • • •	1		
- 36	35-825032	• • CONTROL,PIN ASSY REBOUND	• • • • • • •	1		
- 37	AN6227-24	• • PACKING	• • • • • • •	1		
- 38	AN6227-20	• • PACKING	• • • • • • •	1		
- 39	35-825125-602	• • AXLE & PISTON ASSY	• • • • • • •	1		
- 40	35-825115	• • CLIP,SCRAPER GUARD ATTACHING	• • • • • • •	1		
- 41	AN4-21A	• • BOLT,SCRAPER GUARD ATTACHING	• • • • • • •	1		
- 42	AN6227-5	• • PACKING,PIN	• • • • • • •	1		
- 43	AN960-416	• • WASHER,PIN	• • • • • • •	1		
- 44	AN363-428	• • NUT,PIN RETAINING	• • • • • • •	1		
- 45	35-825145	• • DAMPER,NOSE WHEEL SHIMMY /SEE FIG. 54/	• • • • • • •	1		

MODEL 35 THRU G35 PARTS CATALOG

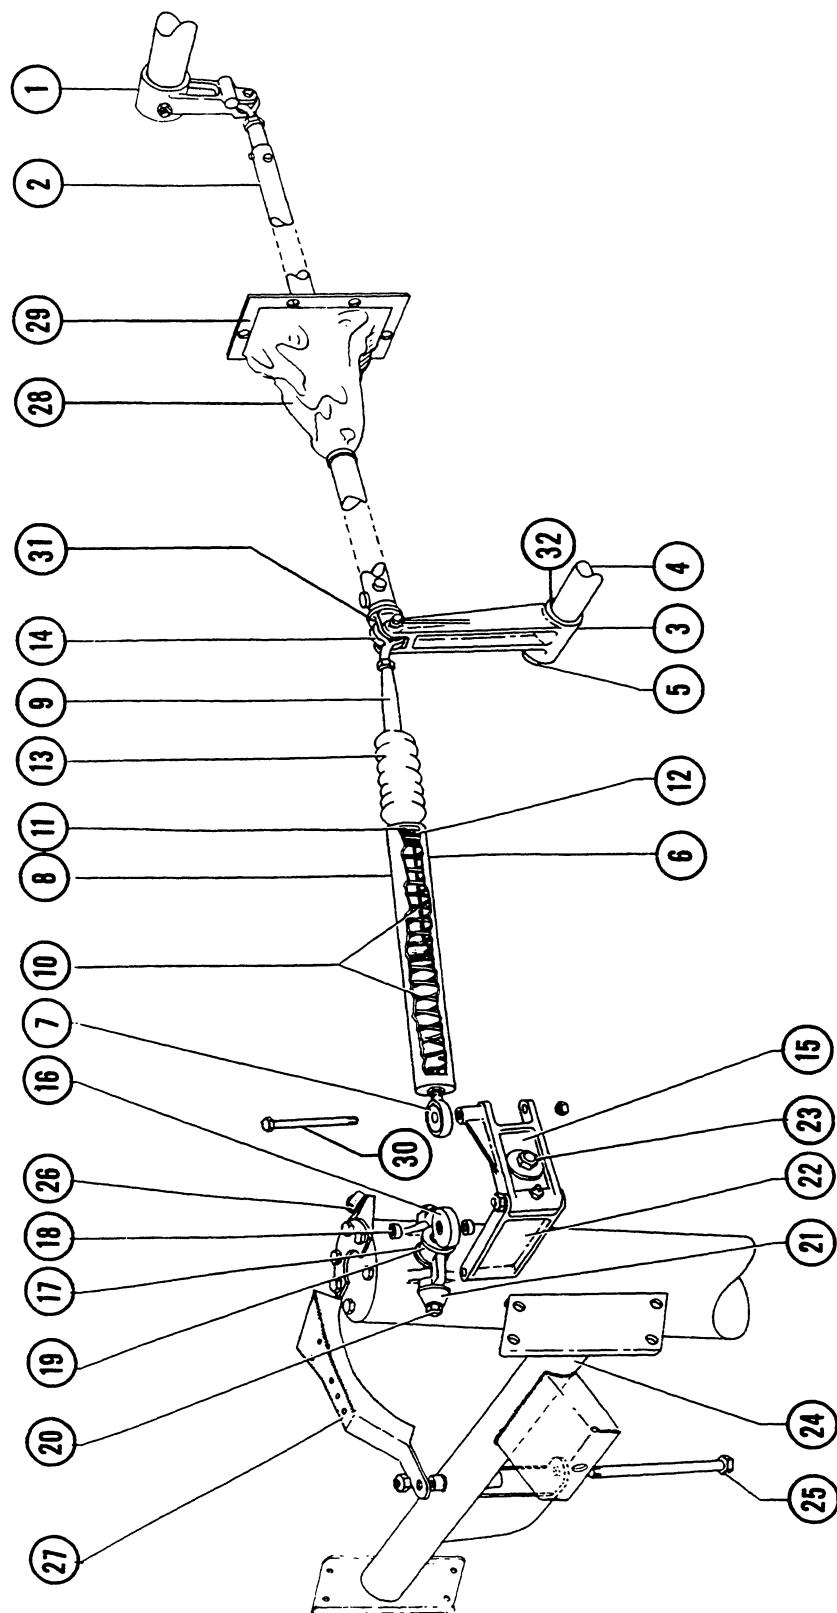


Figure 51. Nose Wheel Steering and Nose Wheel Straightening Mechanism

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
51	35-825160		MECHANISM INSTL,STEERING.	.	
- 1	35-825054	.	ARM,STEERING.	.	1 A2BCDEFG
- 2	35-825044-4	.	ROD ASSY.	.	1 A2BCDEFG
	MD46-15	.	END,ROD	.	1 A2BCDEFG
	35-820045	.	END,ROD	.	1 A2BCDEFG
	AN960-616L	.	WASHER.	.	1 A2BCDEFG
	AN316-6R	.	NUT	.	1 A2BCDEFG
	AN4-13A	.	BOLT.	.	1 A2BCDEFG
	AN960-416	.	WASHER.	.	1 A2BCDEFG
	AN365-428	.	NUT	.	1 A2BCDEFG
- 3	35-825052	.	ARM, IDLER	.	1 A2BCDEFG
	A-779	.	BUSHING,OILITE.	.	1 A2BCDEFG
- 4	35-825049	.	SHAFT, IDLER ARM	.	1 A2BCDEFG
- 5	35-825051	.	COLLAR.	.	1 A2BCDEFG
- 6	AN392-25	.	PIN	.	1 A2BCDEFG
- 7	35-825161	.	LINK ASSY,FLEXIBLE STEERING	.	1 A2BCDEFG
	HM-4	.	ROD,HEIM END.	.	1 A2BCDEFG
	AN316-4R	.	NUT	.	2
- 8	35-825165	.	BARREL ASSY	.	1
- 9	35-825163	.	SHAFT ASSY	.	1
- 10	100943-130-016-	.	SPRING.	.	2
	302-4-3/4				
- 11	35-825164	.	BEARING	.	1
- 12	AN6227-13	.	RING,O.	.	1
	NAS50-87	.	RING,RETAINER	.	1
- 13	G-840-15	.	BOOT	.	1
- 14	35-825162	.	END,ROD	.	1
	AN24-25	.	BOLT	.	1
	AN960-416L	.	WASHER	.	1
	AN320-4	.	NUT	.	1
- 15	35-825037	.	LINK ASSY,SIDE	.	1
	35-825173	.	LINK ASSY,SIDE	.	1
- 16	35-825012	.	STRAIGHTENER,EYE NOSE GEAR	.	1
	35-825012-4	.	FITTING,ALEMITE	.	1
	35-825006	.	STEERING,EYE NOSE GEAR	.	1
	NAS54-21A	.	BOLT	.	1
	AN960-416L	.	WASHER	.	1
	AN365-428	.	NUT	.	1
- 17	35-825011	.	CHANNEL,NOSE GEAR STRAIGHTENING	.	1
- 18	35-825053	.	SPACER	.	2
- 19	35-825007	.	YOKE ASSY	.	1
	NAS76A7-020	.	BUSHING,OILITE	.	1
- 20	35-825005	.	BOLT	.	1
- 21	35-825045	.	STOP	.	1
- 22	35-825035	.	LINK ASSY	.	1
	1646	.	FITTING,ALEMITE	.	1
- 23	35-825046	.	BOLT	.	1
- 24	35-825008	.	CHANNEL ASSY,SUPPORT	.	1
	35-825166	.	CHANNEL ASSY,SUPPORT	.	1
- 25	NAS54-34	.	BOLT	.	1
	AN960-416	.	WASHER	.	1
	AN310-4	.	NUT	.	1
- 26	35-825024	.	ROLLER ASSY,NOSE WHEEL STRAIGHTENER	.	1
	35-825054-2	.	BRACKET	.	1
	AT-4	.	ROLLER	.	1
- 27	35-410338	.	TRACK,NOSE WHEEL STRAIGHTENER	.	1
- 28	35-825171	.	BOOT	.	1
- 29	35-825170	.	RING	.	1
- 30	NAS54A24	.	BOLT	.	1
- 31	105740X-ZL0L04	.	BUSHING	.	2
- 32	100951S032-020-	.	WASHER	.	2
	100				

MODEL 35 THRU G35 PARTS CATALOG

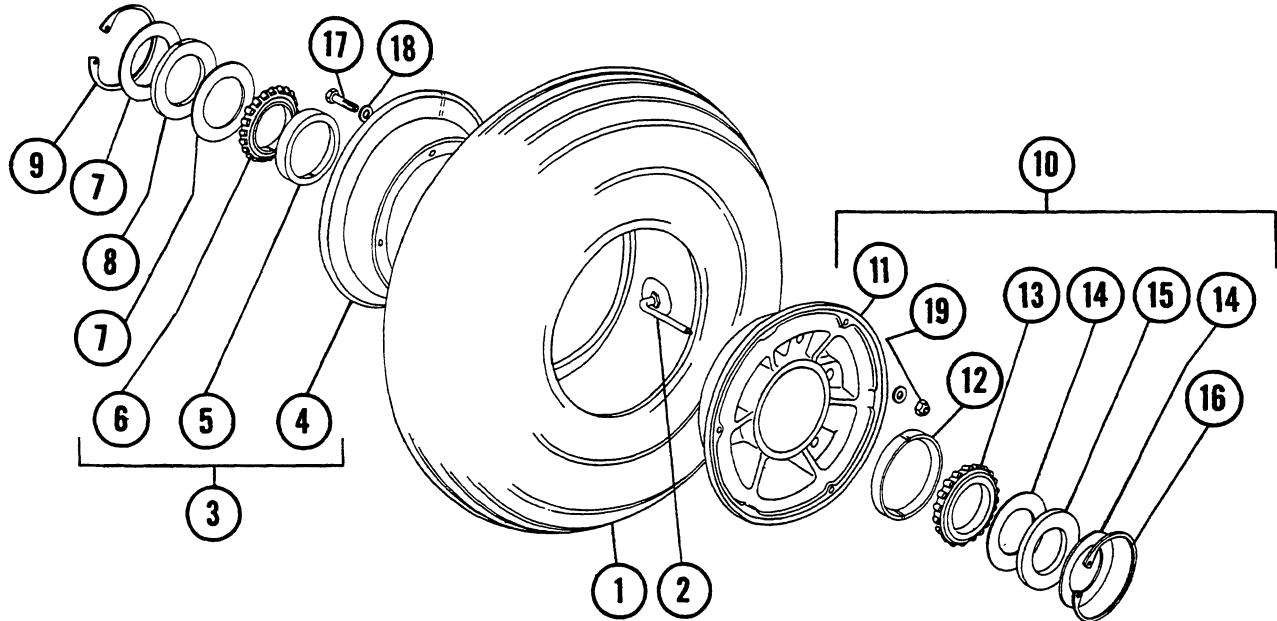


Figure 52. Nose Wheel And Tire Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
52	35-825001-800	WHEEL & TIRE ASSY,/WITH TIRE & TUBE/							1	
-	1	TIRE,NOSE WHEEL /GY/.							1	
-	2	TUBE,NOSE WHEEL /GY/.							1	
-	9520653	WHEEL ASSY,NOSE /GY/ /LESS TIRE & TUBE/							1	
-	3	WHEEL ASSY,LEFT HALF /GY/							1	
-	4	WHEEL,LEFT HALF /GY/.							1	
-	5	CUP,WHEEL BEARING /GY/.							1	
-	6	CONE,WHEEL BEARING /GY/.							1	
-	7	RING,WHEEL CLOSURE /GY/.							2	
-	8	FELT,WHEEL CLOSURE /GY/.							1	
-	9	RING,WHEEL LOCK /GY/.							1	
-	10	WHEEL ASSY,RIGHT HALF /GY/.							1	
-	11	WHEEL,RIGHT HALF /GY/.							1	
-	12	CUP,WHEEL BEARING /GY/.							1	
-	13	CONE,WHEEL BEARING /GY/.							1	
-	14	RING,WHEEL CLOSURE /GY/.							2	
-	15	FELT,WHEEL CLOSURE /GY/.							1	
-	16	RING,WHEEL LOCK /GY/.							1	
-	17	BOLT,WHEEL ASSY /GY/.							3	
-	18	WASHER,WHEEL ASSY /GY/.							6	
-	19	NUT,WHEEL ASSY /GY/.							3	

MODEL 35 THRU G35 PARTS CATALOG

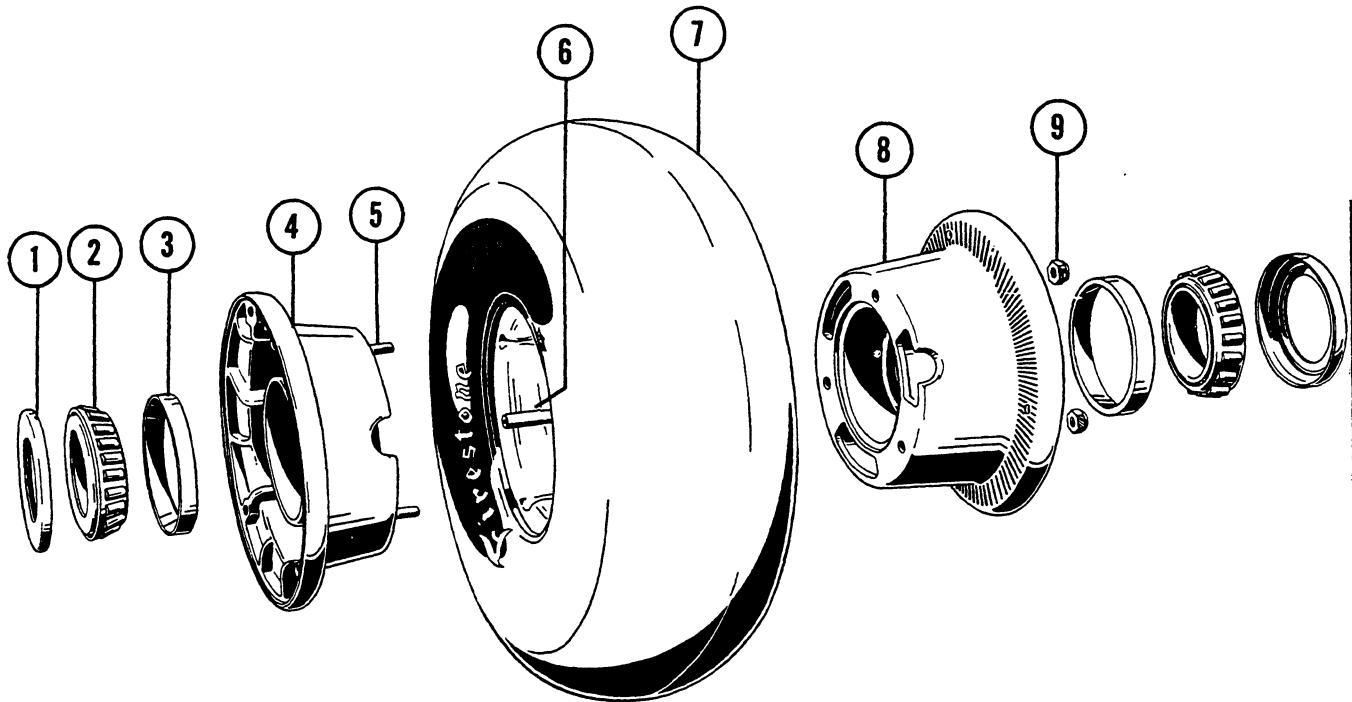


Figure 53. Nose Wheel And Tire Assembly

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
53 - 1	AFA396		RETAINER ASSY		2
- 2	08125		CONE,BEARING.		2
- 3	08231		CUP,BEARING		2
- 4	CFA544		WHEEL,HALF.		1
- 5	H0211		BOLT.		3
- 6	500X5		TUBE.		1
- 7	500X5		TIRE,4 PLY.		1
- 8	CFA543		WHEEL,HALF.		1
- 9	AN365-428		NUT		3

MODEL 35 THRU G35 PARTS CATALOG

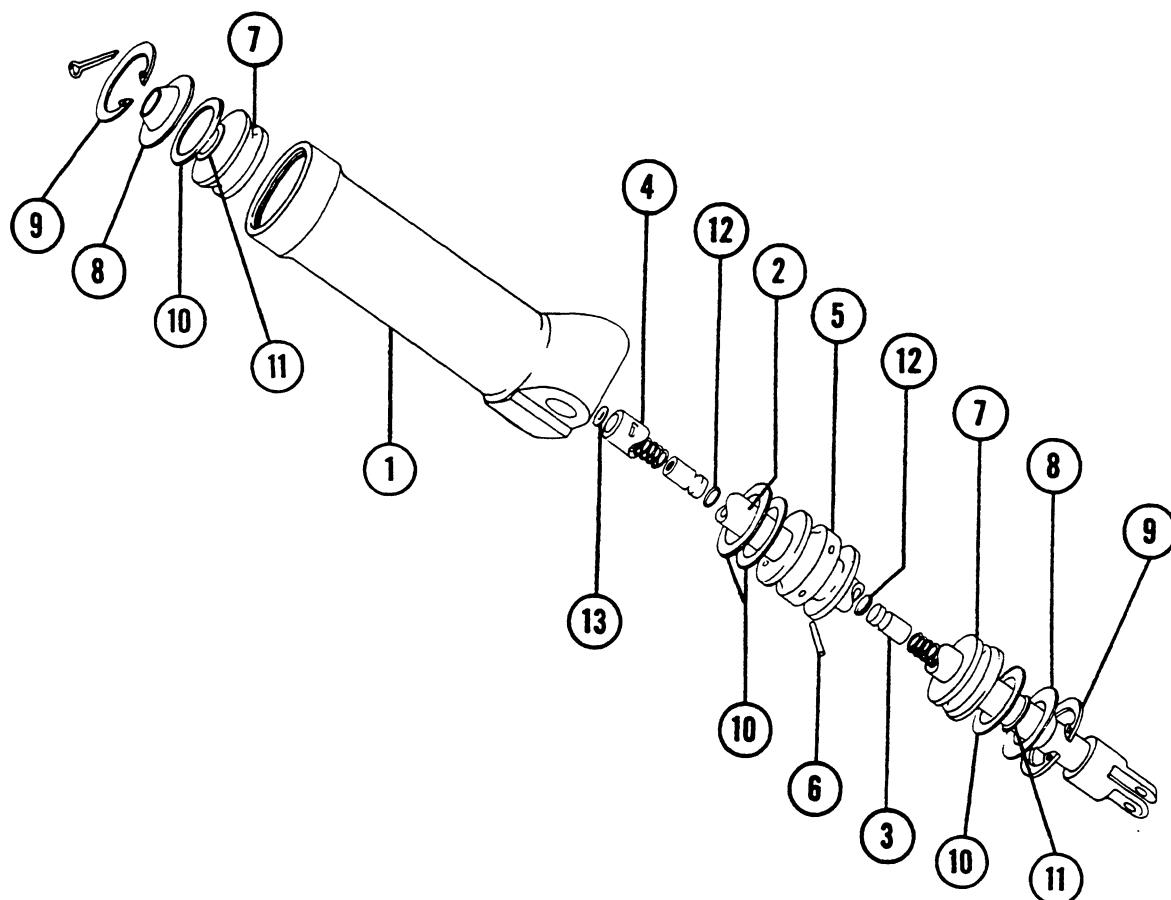


Figure 54. Shimmy Dampener

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
				1	2	
54	35-825145	DAMPENER,SHIMMY /SEE FIG. 50 FOR NHA/		1		
- 1	35-825146	• BARREL.		1		
- 2	35-825148	• ROD,PISTON.		1		
- 3	35-825152	• PISTON,FLOATING		2		
- 4	100943ZE316G	• SPRING,FLOATING PISTON.		2		
- 5	35-825147	• PISTON.		1		
- 6	102809-093-026	• PIN,PISTON RETAINING.		1		
- 7	35-825151	• END,BARREL.		2		
- 8	111190-14	• RING,BARREL END		2		
- 9	NAS50-93	• RING,BARREL END RETAINING		2		
- 10	AN6227-13	• PACKING,BARREL.		4		
- 11	AN6227-7	• PACKING,BARREL.		2		
- 12	AN6227-1	• PACKING,FLOATING PISTON		2		
- 13	AN960-3	• WASHER,ROD END.		1		

MODEL 35 THRU G35 PARTS CATALOG

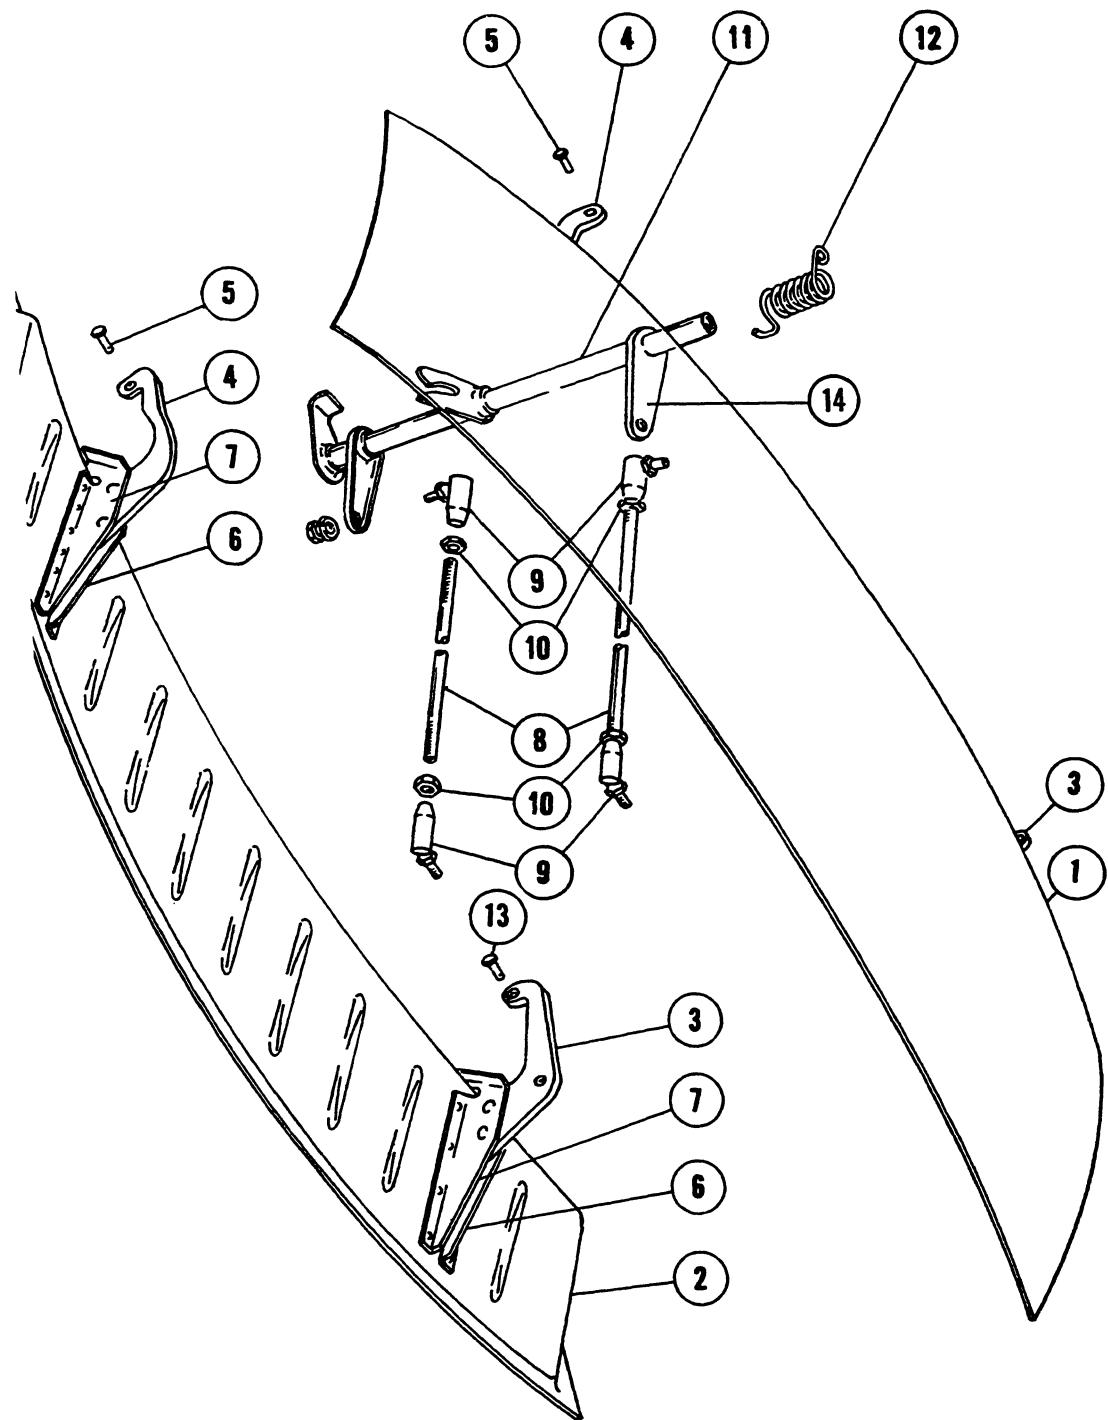


Figure 55. Nose Wheel Doors and Retract Mechanism

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
55 - 1	35-410077-2	DOOR ASSY,LH NOSE WHEEL /WITH HINGES/	1	
- 2	35-410077-3	DOOR ASSY,RH NOSE WHEEL /WITH HINGES/	1	
- 3	35-410077-12	• HINGE,DOOR REAR	1	
- 4	35-410392	• HINGE,DOOR FWD.	1	
- 5	AN3-6A 105739S0188- 0248-0250	BOLT,HINGE.	1	
- 6	35-410077-8	BUSHING,DOOR HINGE.	1	
- 7	35-410077-9	BRACKET,HINGE ATTACHING	1	
- 8	35-825121-4	BRACKET,HINGE ATTACHING	1	
- 9	316	ROD ASSY,DOOR ACTUATOR.	1	
- 10	AN315-3R	• JOINT,ACTUATOR ROD BALL	2	
- 11	35-825117-4	• NUT,ROD ADJUSTING	2	
	AN364-1032	SHAFT ASSY,ACTUATOR	1	
	AN960-10	NUT,ROD ATTACHING	2	
- 12	35-825074-1	WASHER,ROD MOUNTING	2	
- 13	AN3-6A 105735S0188- 0248-0250	SPRING,DOOR ACTUATOR.	1	
	AN960-10	BOLT,HINGE.	1	
	AN365-1032	BUSHING,DOOR HINGE.	1	
- 14	35-825119	WASHER.	1	
		NUT	1	
		ARM	2	

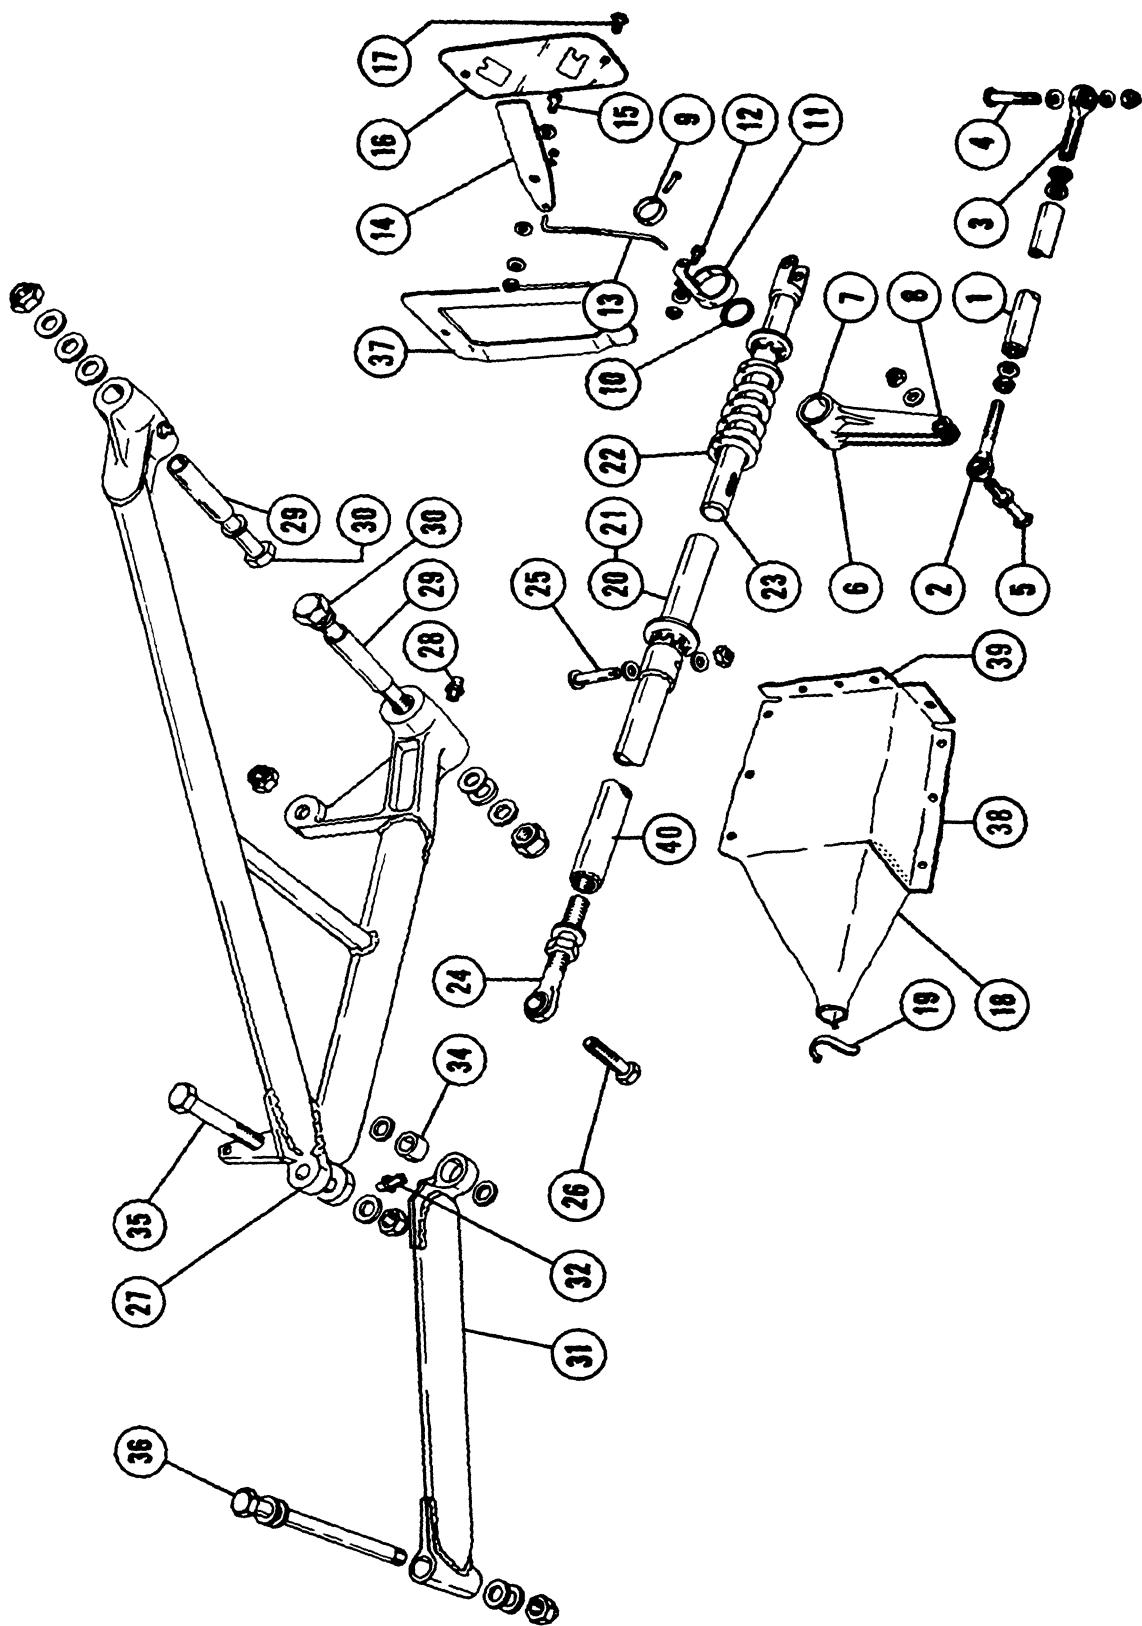


Figure 56. Nose Gear Retract Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
56	35-825096		LINK ASSY, GEAR RETRACT.	1	A1A2BC1
	35-825185		LINK ASSY, GEAR RETRACT.	1	C2DEFG
- 1	35-825096-4		• ROD, GEAR RETRACT LINK	1	A1A2BC1
	35-825185-4		• ROD, GEAR RETRACT LINK	1	C2DEFG
- 2	HM-5S		• END, HEIM ROD.	1	
	AN316-5R		• NUT, ROD END LOCK.	1	
	AN960-516L		• WASHER, ROD END.	1	
- 3	HML-6		• END, HEIM ROD.	1	
	AN316-6L		• NUT, ROD END LOCK.	1	
	AN960-616L		• WASHER, ROD END.	1	
- 4	AN26-28		BOLT, AFT ATTACHING.	1	
	AN320-6		NUT, ATTACHING.	1	
	AN960-616L		WASHER, ATTACHING.	1	
	AN960-616		WASHER, ATTACHING.	1	
- 5	AN25-22		BOLT, LINK TO IDLER ARM ATTACHING.	1	
	AN310-5		NUT, LINK TO IDLER ARM RETAINER.	1	
	AN960-516L		WASHER, LINK MOUNTING.	2	
- 6	35-820094		ARM ASSY, GEAR RETRACT IDLER	1	
- 7	35-820094-4		• BUSHING, IDLER ARM	1	
- 8	105740X-ZU0164		• BUSHING, IDLER ARM	2	
- 9	35-820095		COLLAR, IDLER ARM.	1	
	AN392-37		PIN, COLLAR RETAINING.	1	
- 10	100951S031XW		WASHER, IDLER ARM.	2	
- 11	35-825111		CLAMP ASSY, POSITION INDICATOR	1	
- 12	AN520-10-8		• SCREW, POSITION INDICATOR CLAMP.	1	
- 13	35-815133		LINK, POSITION INDICATOR	1	
	A6595-1		FASTENER, INDICATOR LINK	2	
- 14	35-815144		INDICATOR, GEAR POSITION	1	A14
	35-815144-2		BULB, RED.	1	
- 15	AN515-8-10		SCREW, GEAR POSITION INDICATOR	1	
	100951X064ZL		WASHER, GEAR POSITION INDICATOR	2	
- 16	35-815148		PLACARD, GEAR POSITION INDICATOR	1	
	35-815148-5		PLACARD, GEAR POSITION INDICATOR	1	
- 17	PK56Z-8-8		SCREW, GEAR POSITION INDICATOR	8	DEFG
	49338		STUD.	6	
- 18	35-825076		BOOT, RETRACT ROD.	1	
	35-825077		STRIP, BOOT REINFORCING.	1	
	35-825078		STRIP, BOOT REINFORCING.	1	
	35-825081		STRIP, BOOT REINFORCING.	2	
- 19	NO NUMBER		LOCK, BOOT WRAP.	1	
- 20	35-825087-8		ROD ASSY, RETRACT.	1	
- 21	35-825087-6		• ROD, RETRACT	1	
- 22	35-825188		• SPRING, RETRACT ROD.	1	
- 23	35-825094		• PLUNGER ASSY, RETRACT ROD /LESS SPRING/	1	
- 24	HM-5S		• END, HEIM ROD.	1	
	35-825089		• FLANGE.	1	
- 25	AN393-25		• PIN.	1	
- 26	35-825108		BOLT, FWD ATTACHING.	1	
	35-825107		BRACE ASSY, NOSE GEAR.	1	
- 27	35-825072		• V-BRACE ASSY, NOSE GEAR.	1	NP
- 28	35-825072-10		• FITTING, ALEMITE	1	
- 29	35-825123		• BUSHING.	2	
- 30	AN6-30A		• BOLT.	2	
- 31	35-825080		• LEG ASSY, NOSE GEAR DRAG	1	NP
- 32	1645		• FITTING, ALEMITE	1	
- 33			• DELETED		
- 34	35-810122		• BUSHING, UPPER DRAG LEG.	1	
- 35	AN5-14A		• BOLT.	1	
- 36	35-825084		BOLT ASSY, LOWER DRAG LEG.	1	
	1736		• FITTING, ALEMITE	1	
	35-825075		BLOCK ASSY, NOSE GEAR BUMPER	1	
	35-825075-2		• BUMPER, SYNTHETIC RUBBER	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
56 - 37	35-815147		PLATE, INDICATOR BACKING	.	1
- 38	35-825081		STRIP	.	2
- 39	35-825078		STRIP, FRONT	.	1
	49338		FASTENER	.	1
- 40	35-825087 SA2 100951DD064- 020-102		ROD	.	1
			SHIM	.	1

MODEL 35 THRU G35 PARTS CATALOG

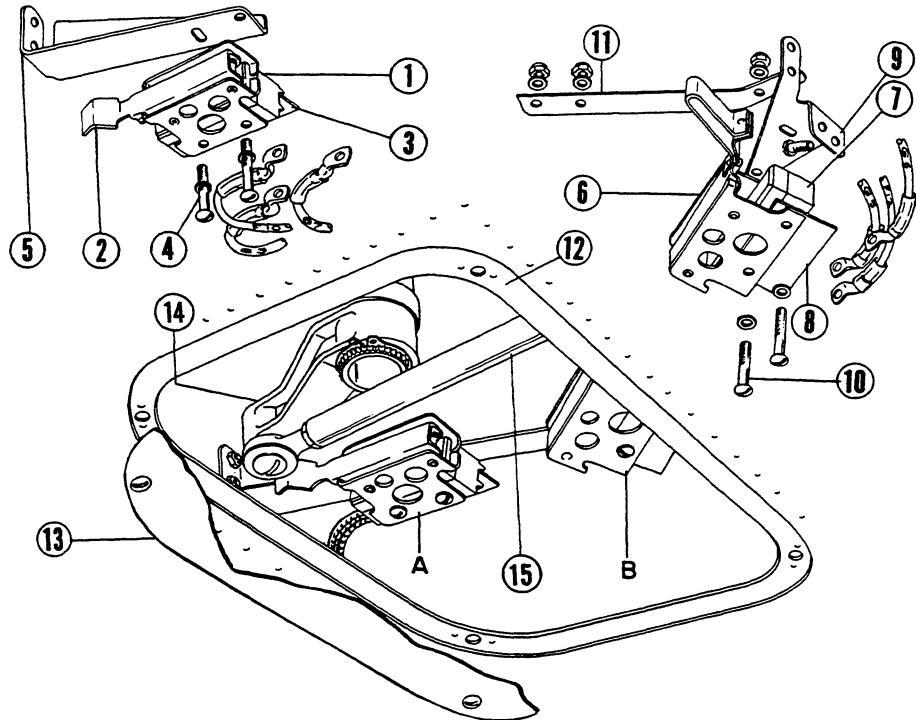


Figure 57. Landing Gear Switch Assembly (D1 thru D1500)

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
57 - A	35-364231		SWITCH ASSY, UP LIMIT.	1	A37A1
- 1	BZ-R31		• SWITCH, MICRO.	1	A1
- 2	35-364240		• ACTUATOR ASSY	1	A1
- 3	35-364238		• INSULATOR	1	A1
- 4	AN515-6-18		• SCREW	2	A1
- 5	35-364233		• BRACKET	1	A1
- A	35-364242		SWITCH ASSY, UP LIMIT.	1	A38A1
- 1	BZ-3YT		• SWITCH, MICRO.	1	A1
- 2	9-10831		• ACTUATOR ASSY	1	A1
- 3	35-364238		• INSULATOR	1	A1
- 4	AN515-6-18		• SCREW	2	A1
- 5	35-364233		• BRACKET	1	A1
- B	35-364232		SWITCH ASSY, DOWN LIMIT.	1	A37A1
- 6	35-364236		• ACTUATOR ASSY	1	A1
- 7	BZ-R31		• SWITCH, MICRO.	1	A1
- 8	35-364238		• INSULATOR	1	A1
- 9	35-364234		• BRACKET	1	A1
- 10	AN515-6-18		• SCREW	2	A1
- B	35-364243		SWITCH ASSY, DOWN LIMIT.	1	A38A1
- 6	35-364241		• ACTUATOR ASSY	1	A1
- 7	BZ-3YT		• SWITCH, MICRO.	1	A1
- 8	35-364238		• INSULATOR	2	A1
- 9	35-364234		• BRACKET	1	A1
- 10	AN515-6-18		• SCREW	2	A1

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
57 - 11	35-364239		REINFORCEMENT, LIMIT SWITCH.	1	A1
- 12	35-410259-18		DOUBLER	1	A2BCDEFGA1
- 13	35-410259-16		DOOR.	1	A2BCDEFGA1
	35-410063-18		DOUBLER	1	A1
	35-410063-16		DOOR.	1	A1
	35-410259-32		GROMMET, DRAIN	2	A1
- 14	35-825172-2		ARM	1	A1
- 15	35-825096		ROD	1	A1
	35-825082		WASHER	1	
	35-364230-602		SWITCH ASSY, LANDING GEAR LIMIT.	1	A37
	35-364230-604		SWITCH ASSY, LANDING GEAR LIMIT.	1	A39
	35-364230-606		SWITCH ASSY, LANDING GEAR LIMIT.	1	A40

MODEL 35 THRU G35 PARTS CATALOG

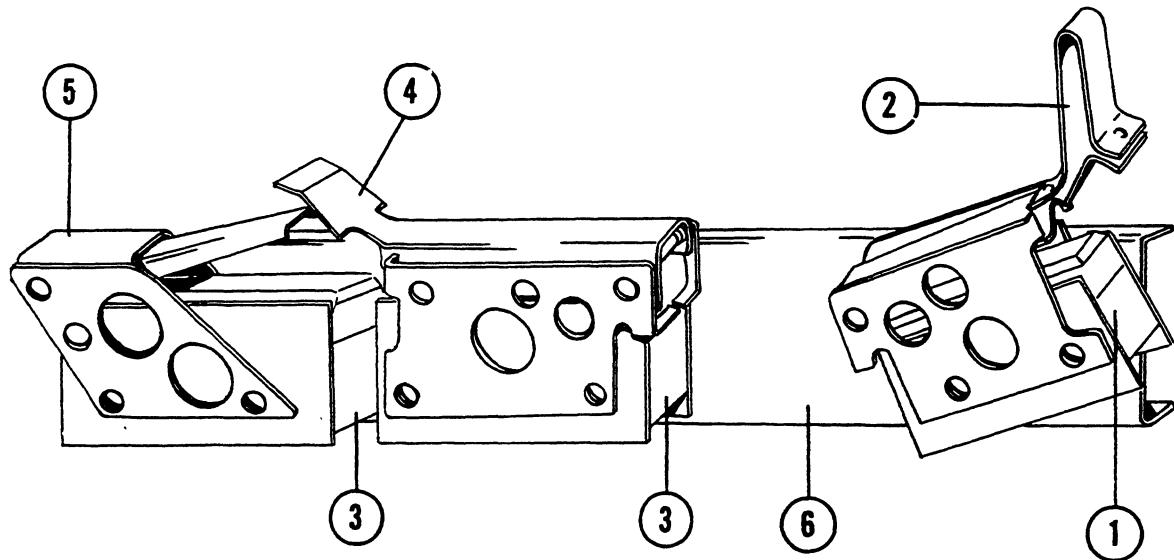


Figure 58. Landing Gear Switch Assembly

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
58 - 1	BZ-3YT		SWITCH,MICRO.	1	A2BCDEFG
- 2	35-364241		ACTUATOR.	1	
	35-364238		INSULATOR	1	
- 3	AN3210-1		SWITCH,MICRO.	2	
- 4	9-10831		ACTUATOR,MICRO SWITCH	1	
- 5	35-364247		ACTUATOR.	1	
- 6	35-364109		BRACKET,LIMIT SWITCH.	1	
	35-364101-606		SWITCH ASSY,LANDING GEAR LIMIT.	1	A2BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

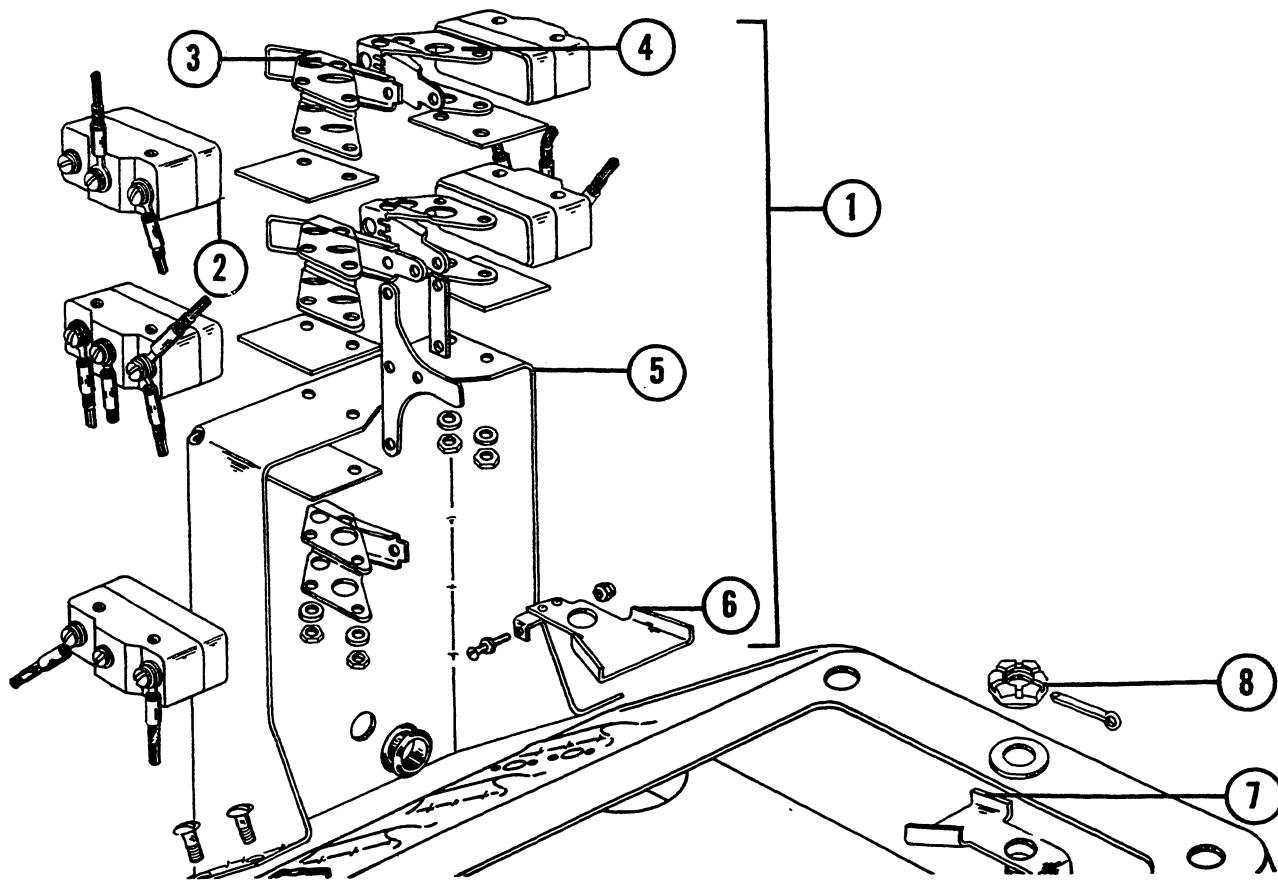


Figure 59. Landing Gear Limit Switch Assembly

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
59 -	1 35-364129		SWITCH ASSY	1	C9DEFG
-	2 AN3210-1		• SWITCH.	4	C9DEFG
-	3 35-364133		• ACTUATOR.	2	C9DEFG
-	4 AD5721		• ACTUATOR.	3	C9DEFG
-	5 35-364126		• BRACKET,SWITCH.	1	C9DEFG
-	6 35-364130		ACTUATOR ASSY	1	C9DEFG
-	7 35-364127		ACTUATOR.	1	C9DEFG
-	8 AN26-23		BOLT.	2	C9DEFG
	AN320-6		NUT	2	C9DEFG
	AN380-3-2		PIN,COTTER.	2	C9DEFG
	AN960-616		WASHER.	4	C9DEFG

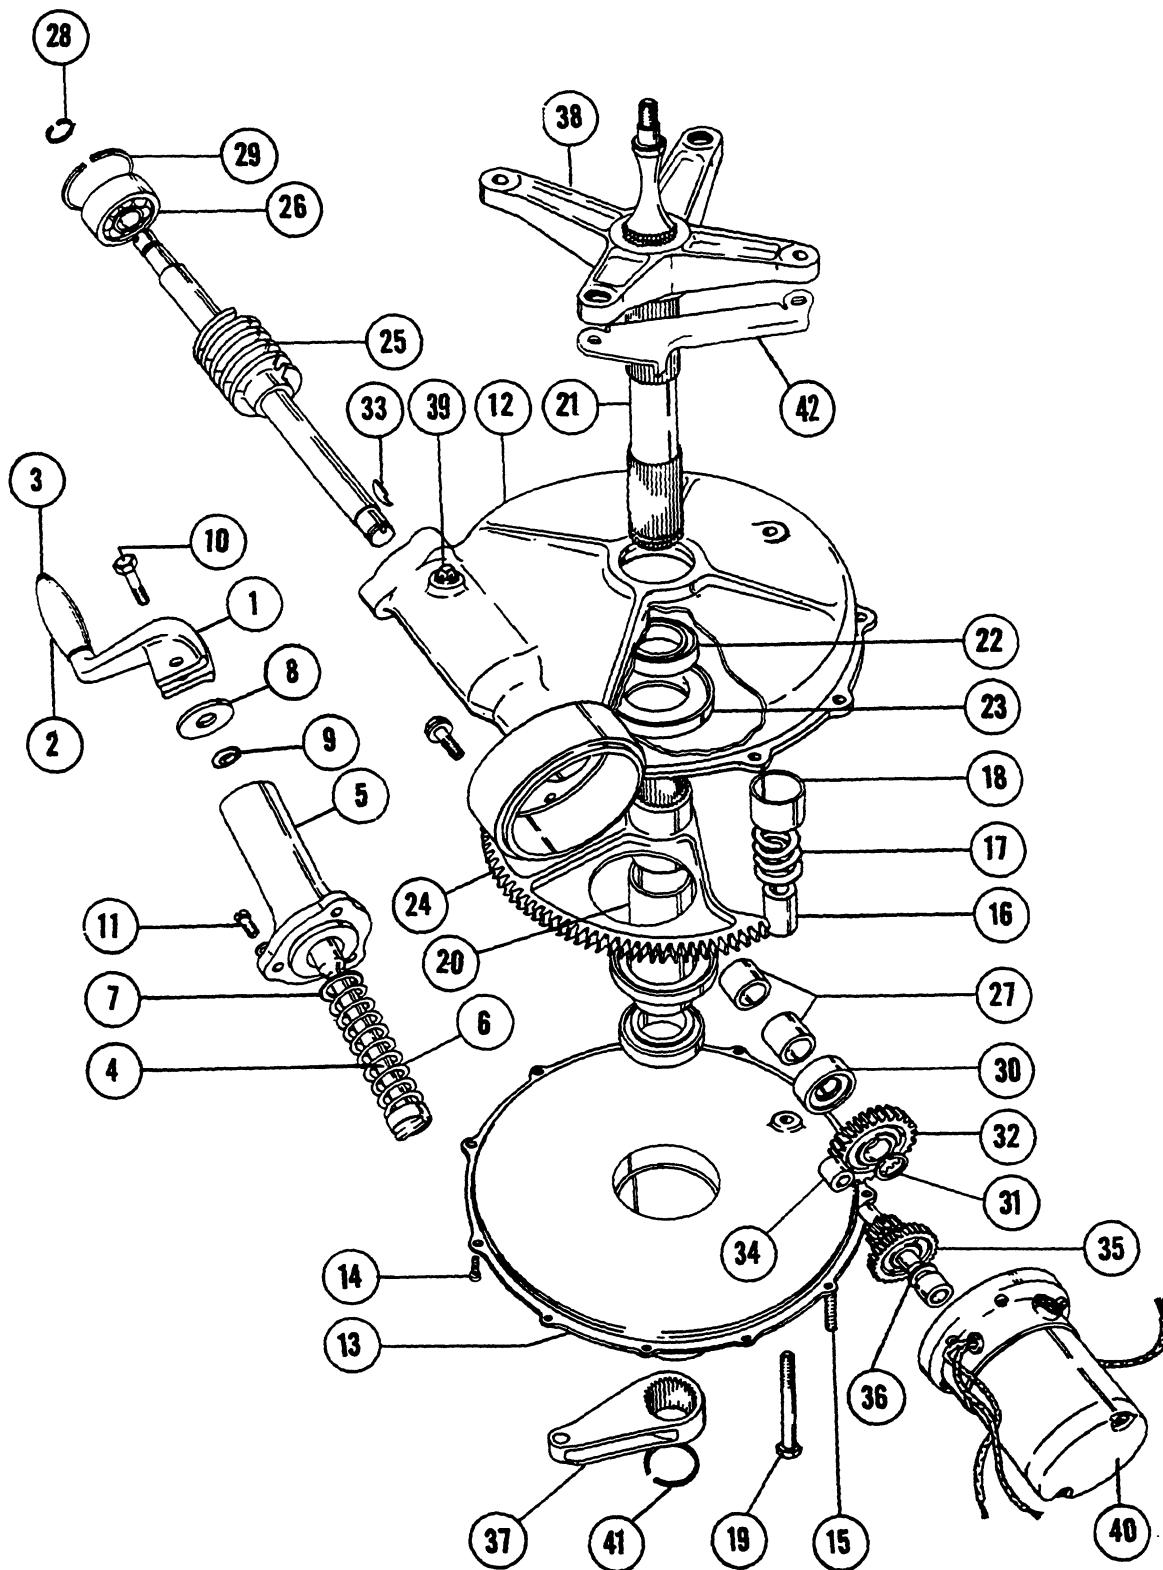


Figure 60. Landing Gear Retract Actuator Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE							
					1	2	3	4	5	6	7
60	35-810080-602	ACTUATOR ASSY,RETRACT	1								
	35-810094	• HANDCRANK ASSY,ACTUATOR	1								
- 1	35-810094-2	• • CRANK, /LESS HANDLE/	1								
- 2	35-810094-6	• • HANDLE,ACTUATOR CRANK	1								
- 3	35-810094-8	• • PIN,HANDLE RETAINER	1								
	AN960-10L	• • WASHER,HANDLE MOUNTING	1								
- 4	35-810095	• SHAFT,HANDCRANK ENGAGING	1								
- 5	35-810096	• HOUSING,RETRACT ACTUATOR	1								
	35-810142	• HOUSING	1								
- 6	100943YC112D	• SPRING,HANDCRANK SHAFT	1								
- 7	100951X063YW	• WASHER,SHAFT SPRING	1								
- 8	100951CR016YX	• WASHER,HANDLE HOUSING	1								
- 9	AN6227-9	• PACKING,HANDCRANK SHAFT	1								
- 10	AN23-17A	• BOLT,HANDCRANK SHAFT	1								
	AN960-10	• WASHER,HANDCRANK SHAFT	1								
	AN365-1032	• NUT,HANDCRANK SHAFT	1								
- 11	AN500A10-10	• SCREW,HANDLE TO HOUSING MOUNTING	3								
	AN960-10	• WASHER,HANDLE TO HOUSING MOUNTING	3								
- 12	35-810084	• HOUSING,LANDING GEAR ACTUATOR	1								
	35-810141	• HOUSING	1								
- 13	35-815020	• HOUSING,LANDING GEAR ACTUATOR	1								
- 14	AN500A10-10	• SCREW,ACTUATOR HOUSING	11								
- 15	35-810097	• STUD,ACTUATOR MOUNTING	4								
- 16	35-810087	• STOP,WORM SECTOR GEAR	1								
- 17	35-810119	• SPRING	1								
- 18	100696X-YD024	• SPACER,GEAR STOP	1								
- 19	AN5-17	• BOLT,WORM STOP	1								
	AN960-516	• WASHER,WORM GEAR STOP	1								
	AN310-5	• NUT,WORM GEAR STOP	1								
- 20	35-810088	• SPACER,LANDING GEAR ACTUATOR	1								
- 21	35-810083	• SHAFT,ACTUATOR DRIVE	1								
- 22	K21B	• BEARING,DRIVE SHAFT	2								
- 23	276118	• SEAL,DRIVE SHAFT	2								
- 24	35-810117	• SECTOR,ACTUATOR WORM	1								
- 25	35-810093	• GEAR,ACTUATOR WORM	1								
	35-810145	• GEAR,WORM	1								
	35-810075	• GEAR,WORM	1								
- 26	5201	• BEARING,WORM GEAR	1								
- 27	B88X	• BEARING,WORM GEAR	2								
- 28	35-810116	• RING,BEARING SEAL	1								
- 29	NAS50-125	• RING,BEARING SEAL	1								
- 30	10016	• RING,BEARING SEAL	1								
- 31	NAS51-43	• RING,WORM GEAR SEAL	1								
- 32	35-810130	• GEAR,WORM DRIVE	1								
	35-810136	• GEAR,WORM DRIVE	1								
	35-810140	• GEAR,WORM DRIVE	1								
		/USE WITH 35-810139 ON CODE ABC10/									
- 33	35-810091	• KEY,WORM DRIVE GEAR	1								
- 34	M471X	• BEARING,WORM GEAR END	1								
- 35	35-810131	• GEAR,SPUR & PINION	1								
	35-810135	• GEAR,SPUR & PINION	1								
	35-810139	• GEAR,SPUR & PINION	1								
		/USE WITH 35-810140 ON CODE ACB10/									
- 36	105090CR032-4J	• WASHER,SPUR & PINION GEAR	1								
- 37	35-825172-2	• ARM,RETRACT ACTUATOR	1								
- 38	45-810090	• ARM,RETRACT ACTUATOR /TO REPLACE 444276-2	1								
		ORDER 45-810190 I109-444276-2/									
- 39	35-810080-6	• PLUG,WORM GEAR GREASE	1								
- 40	IS139081	• MOTOR ASSY,LANDING GEAR /SEE FIG. 61/	1								
- 41	NAS51-131	• RING,RETRACT ARMS LOCK	2								
	AN73-15	• BOLT,MOTOR ATTACHING	3								
	35-815111	• BRACE ASSY,ACTUATOR	1								

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
60 - 42	35-361012		ACTUATOR,WARNING HORN	1	
	AN960-716		WASHER,BRACE MOUNTING	1	
	AN960-516		WASHER,BRACE MOUNTING	1	
	AN310-5		NUT,BRACE TO ACTUATOR	1	
	AN4-5A		BOLT,BRACE TO TRUSS	2	
	35-534052		BOOT,HANDCRANK.	1	

MODEL 35 THRU G35 PARTS CATALOG

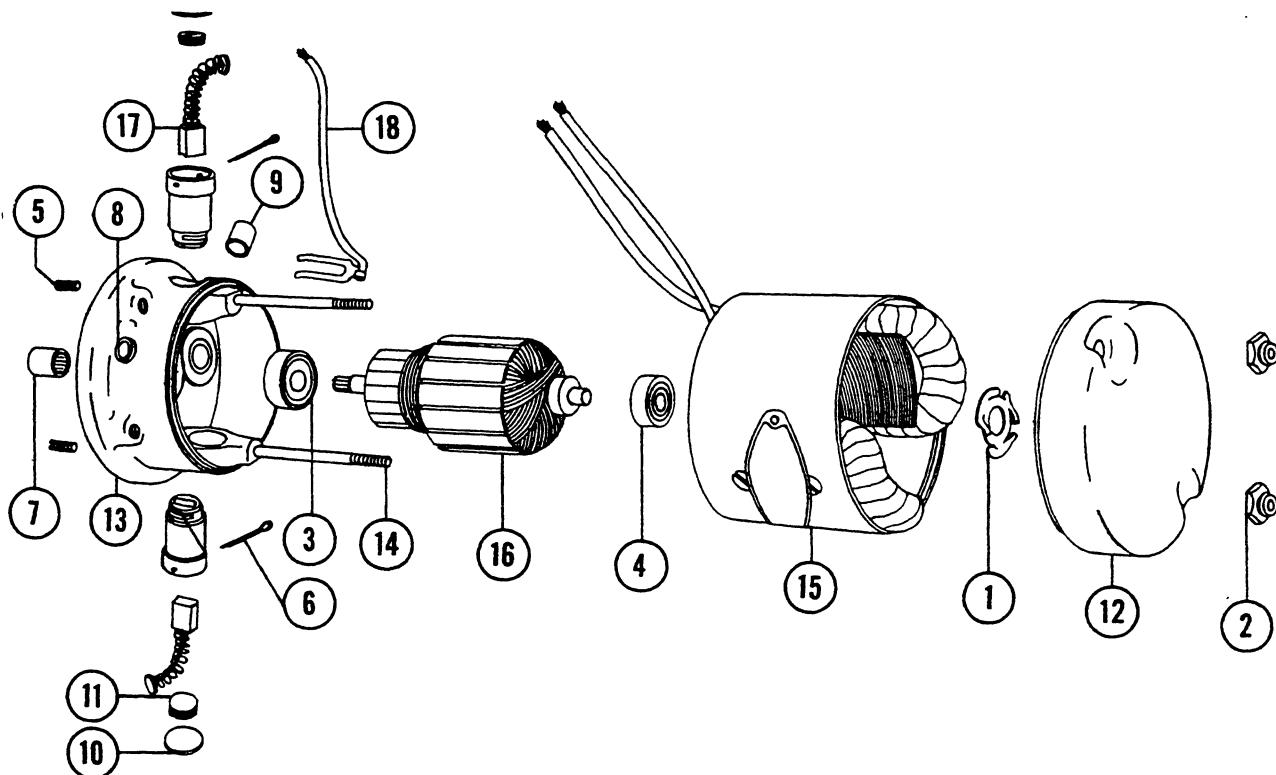


Figure 61. Landing Gear Retract Motor Assembly

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
61	IS13981		MOTOR, LANDING GEAR RETRACT /BD/ /SEE FIG. 60 FOR NHA/							1	
-	1 0-3518		• SPRING, MOTOR LOAD /BD/	1	
-	2 7458		• NUT, MOTOR STUD /BD/	2	
-	3 20-7610		• BEARING, BALL /BD/	1	
-	4 20-7639		• BEARING, BALL /BD/	1	
-	5 7978		• SCREW, BRUSH HOLDER SEAT /BD/	2	
-	6 8282		• PIN, BRUSH HOLDER COTTER /BD/	2	
-	7 20-7642		• BEARING, NEEDLE /BD/	1	
-	8 0-3883		• BUSHING, CORD /BD/	1	
-	9 0-3896		• BUSHING, CORD /BD/	1	
-	10 10-4431		• DISC, FIBRE /BD/	2	
-	11 5705		• SCREW, BRUSH HOLDER /BD/	2	
-	12 0-6864		• BRACKET, END /BD/	1	
-	13 0-6865		• BRACKET, COMMUTATOR END /BD/	1	
-	14 10-7888		• STUD, MOTOR /BD/	2	
-	15 27395-A		• FIELD ASSY, /BD/	1	
-	16 32493-A		• ARMATURE ASSY, /BD/	2	
-	17 35107-A		• SPRING ASSY, BRUSH /BD/	2	
-	18 39109-A		• LEAD & CLIP ASSY, /BD/	1	

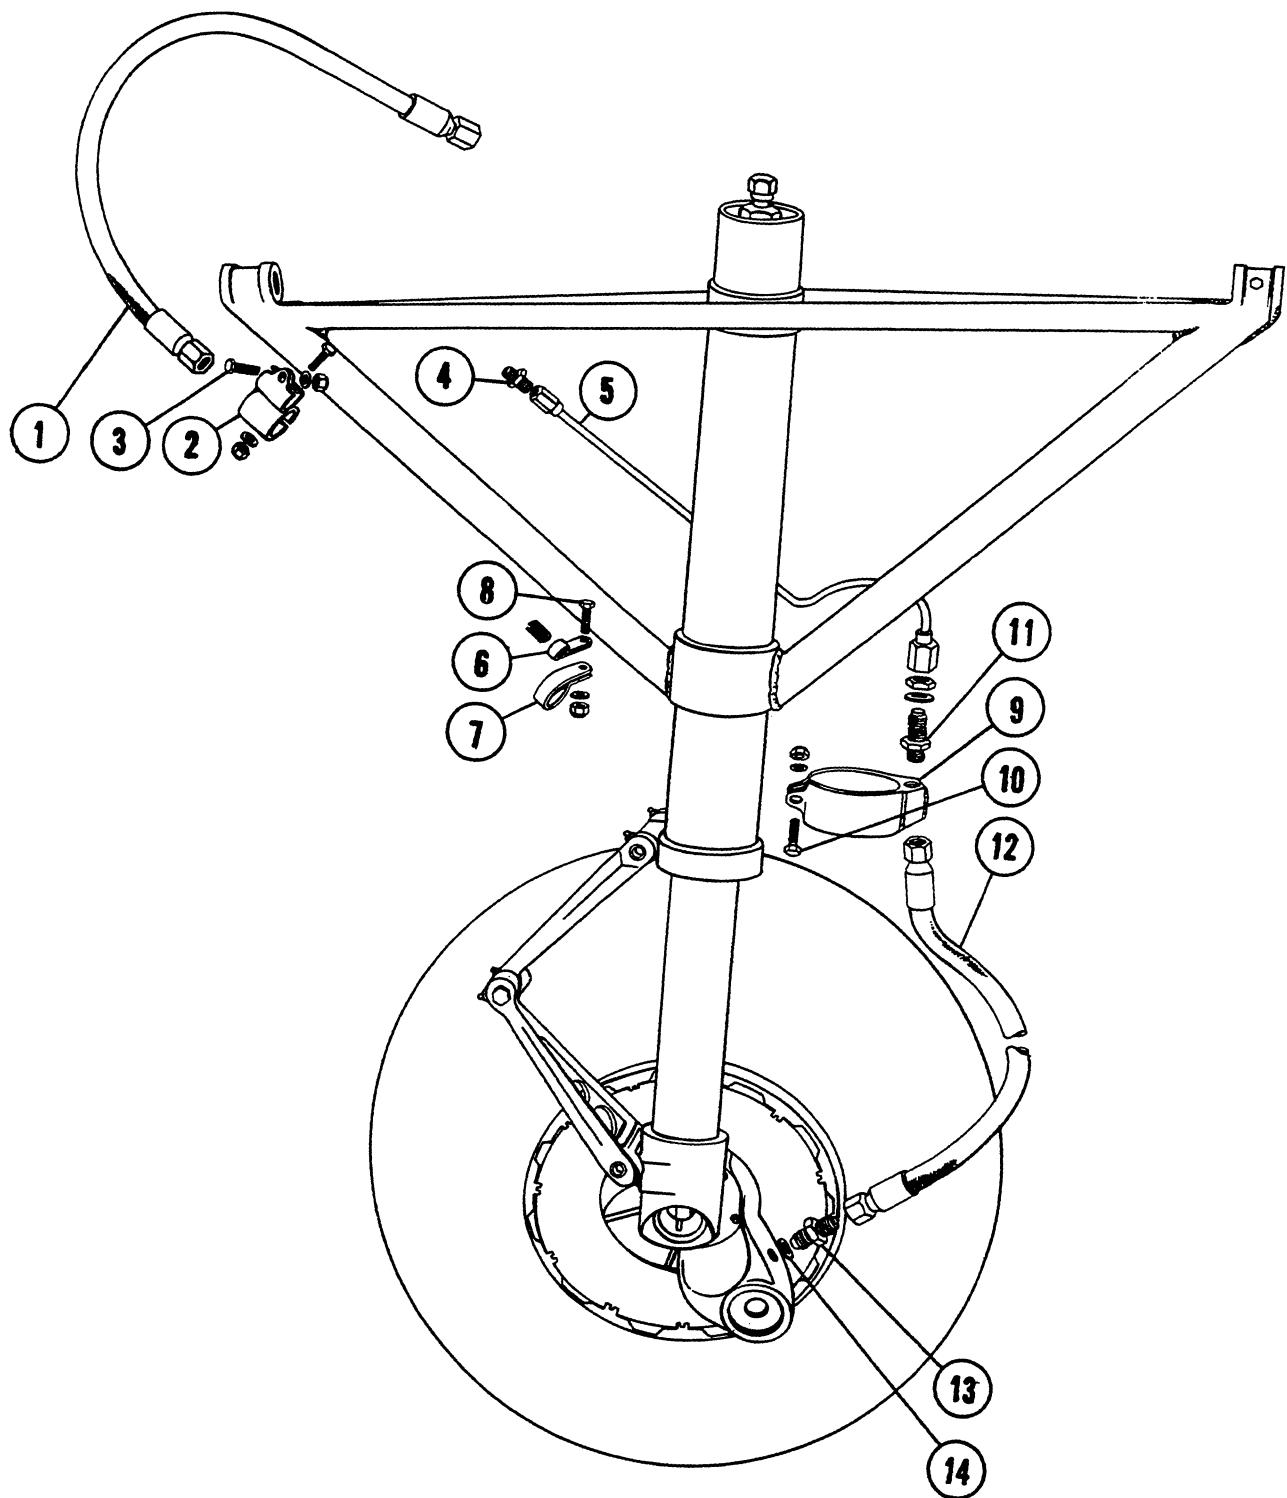


Figure 62. Strut Brake Piping

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
62 - 1	AN6271-4-15-3/4		HOSE ASSY,STRUT BRAKE	1	
- 2	35-815038		CLAMP,BRAKE HOSE	1	
- 3	AN4-7A		BOLT,CLAMP ATTACHING.	2	
	AN960-416		WASHER,CLAMP MOUNTING	2	
	AN365-428		NUT,CLAMP RETAINER.	2	
- 4	AN815-4D		UNION,BRACE TUBE.	1	
- 5	35-815043		TUBE ASSY,LH.	1	
	35-815044		TUBE ASSY,RH.	1	
- 6	AN742-6C		CLAMP,STRUT BRAKE LINE.	1	
- 7	AN742-16		CLAMP,STRUT BRAKE LINE.	1	
- 8	AN3-4A		BOLT,CLAMP ATTACHING.	1	
	AN960-10		WASHER,ATTACHING BOLT	1	
	AN365-1032		NUT,ATTACHING BOLT.	1	
- 9	35-815004		CLAMP ASSY,LH STRUT BRAKE	1	
	35-815004-1		CLAMP ASSY,RH STRUT BRAKE	1	
- 10	AN4-7A		BOLT,ATTACHING.	1	
	AN960-416		WASHER,ATTACHING.	1	
	AN365-428		NUT,ATTACHING	1	
- 11	AN832-4D		UNION,BRAKE TUBE.	1	
	AN960-716		WASHER,RETAINING.	1	
	AN924-4		NUT,RETAINING	1	
- 12	AN6271-4-15-3/4		HOSE ASSY,STRUT BRAKE LINE.	1	
- 13	AN815-4D		UNION,STRUT BRAKE LINE HOSE	1	
- 14	AN902-4		GASKET,STRUT BRAKE LINE HOSE.	1	

MODEL 35 THRU G35 PARTS CATALOG

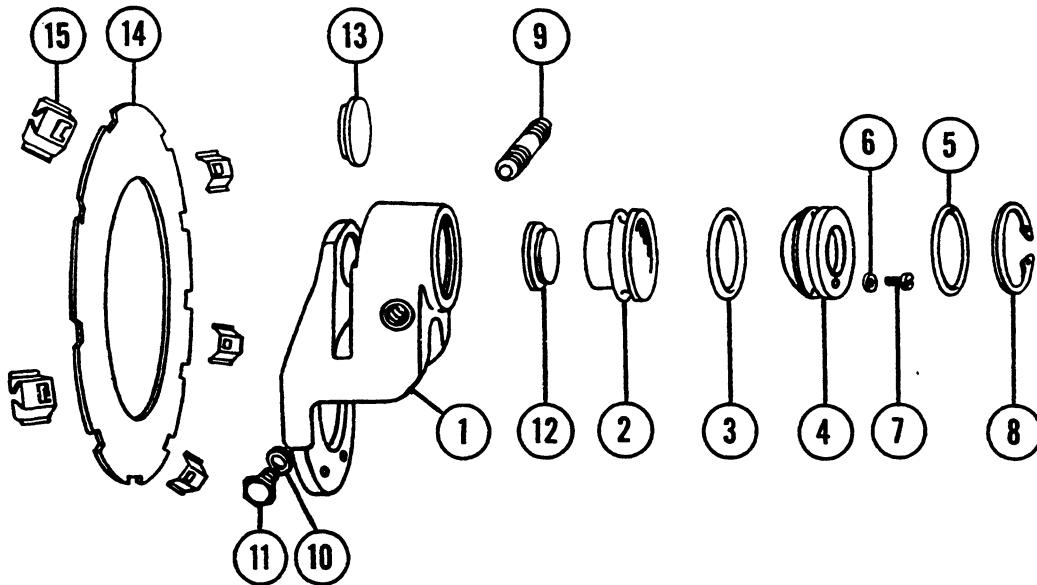


Figure 63. Brake Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
63	95-2968	BRAKE ASSY,COMPLETE	1
-	1 95-2969	CYLINDER,BRAKE	1
-	2 95-3262	PISTON	1
-	3 AN6227-29	SEAL,PISTON	1
-	4 95-3263	CYLINDER,HEAD	1
-	5 AN6230-2	SEAL,CYLINDER HEAD	1
-	6 95-4486	WASHER,ALUMINUM	1
-	7 95-4659	SCREW,BLEEDER	1
-	8 NAS50-200	RING,LOCK	1
-	9 AN815-4D	PLUG,INLET	1
-	10 95-3218	ADAPTER	1
	AN902-4	GASKET	1
-	11 AN6204-2	FITTING,BLEEDER	1
	AN502-10-4	SCREW	1
-	12 95-10713	LINING,BRAKE PISTON SIDE	1
-	13 95-10714	LINING,STATIONARY BRAKE	1
-	14 95-30411	DISC	1
-	15 95-20404	CLIP,DISC	5

MODEL 35 THRU G35 PARTS CATALOG

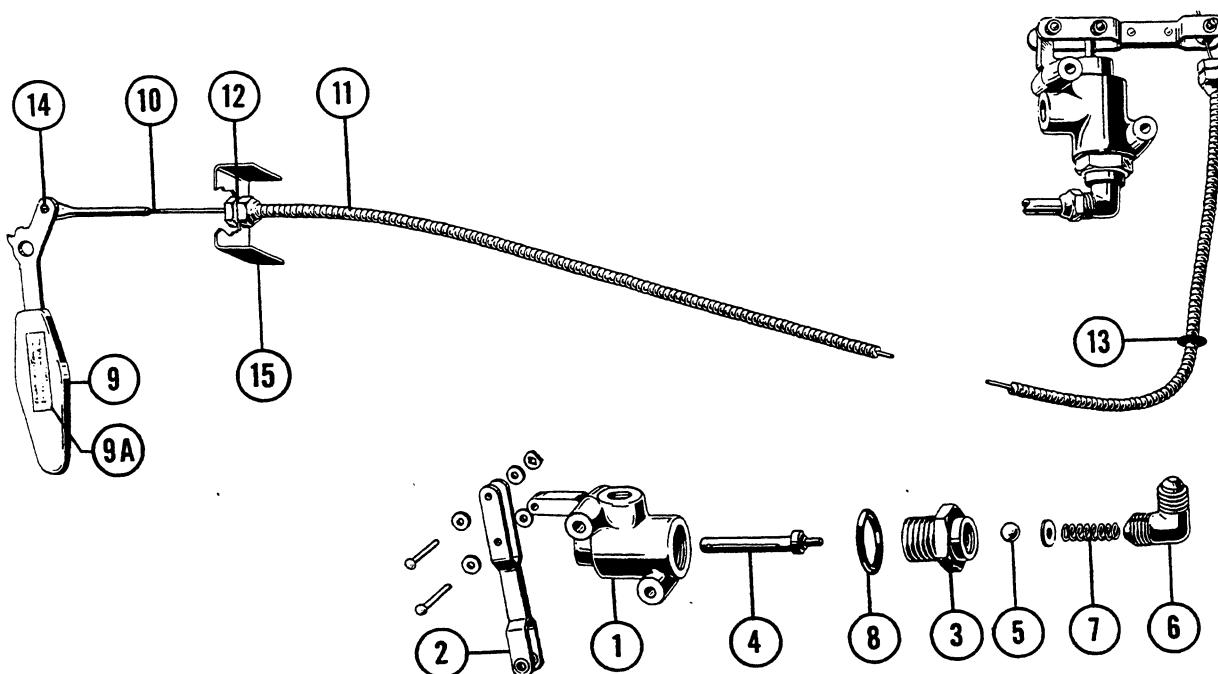


Figure 64. Parking Brake Valve And Control

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
64	35-815018	VALVE ASSY, PARKING BRAKE /SEE FIG. 65 OR 66 FOR NHA/	1								
	A53	VALVE	1								
- 1	35-815018-2	• HOUSING, PARKING BRAKE VALVE	1								
- 2	4208	• ARM ASSY.	1								
- 3	35-815018-4	• . SEAT, PARKING BRAKE VALVE.	1								
- 4	35-815018-6	• . PLUNGER, PARKING BRAKE VALVE	1								
- 5	35-815018-8	• . . BALL, PARKING BRAKE VALVE.	1								
	4200-A1-1	• . . SPACER, PARKING BRAKE VALVE.	1								
	AN960-4L	• . . WASHER.	1								
- 6	AN822-4D	• . . ELBOW, PARKING BRAKE VALVE	1								
- 7	111504-012-016-0020-10	• . . SPRING, PARKING BRAKE VALVE.	1								
- 8	4207	. WASHER, PARKING BRAKE VALVE.	1								
- 9	35-324037	HANDLE ASSY, PARKING BRAKE	1								
- 9A	35-324356	PLACARD, PARKING BRAKE	1								
- 10	35-815034	WIRE ASSY, PARKING BRAKE	1								
- 11	S-167-21	HOUSING, PARKING BRAKE WIRE.	1								
- 12	S-123	BUSHING, PARKING BRAKE HOUSING	1								
- 13	AN931-4-7	GROMMET, PARKING BRAKE HOUSING	1								
- 14	AN23-10A	BOLT, PARKING BRAKE WIRE ATTACHING	1								
	AN960-10	WASHER, PARKING BRAKE WIRE ATTACHING	1								
	AN365-1032	NUT, PARKING BRAKE WIRE ATTACHING.	1								
- 15	35-324072	BRACKET	1								

F3G

MODEL 35 THRU G35 PARTS CATALOG

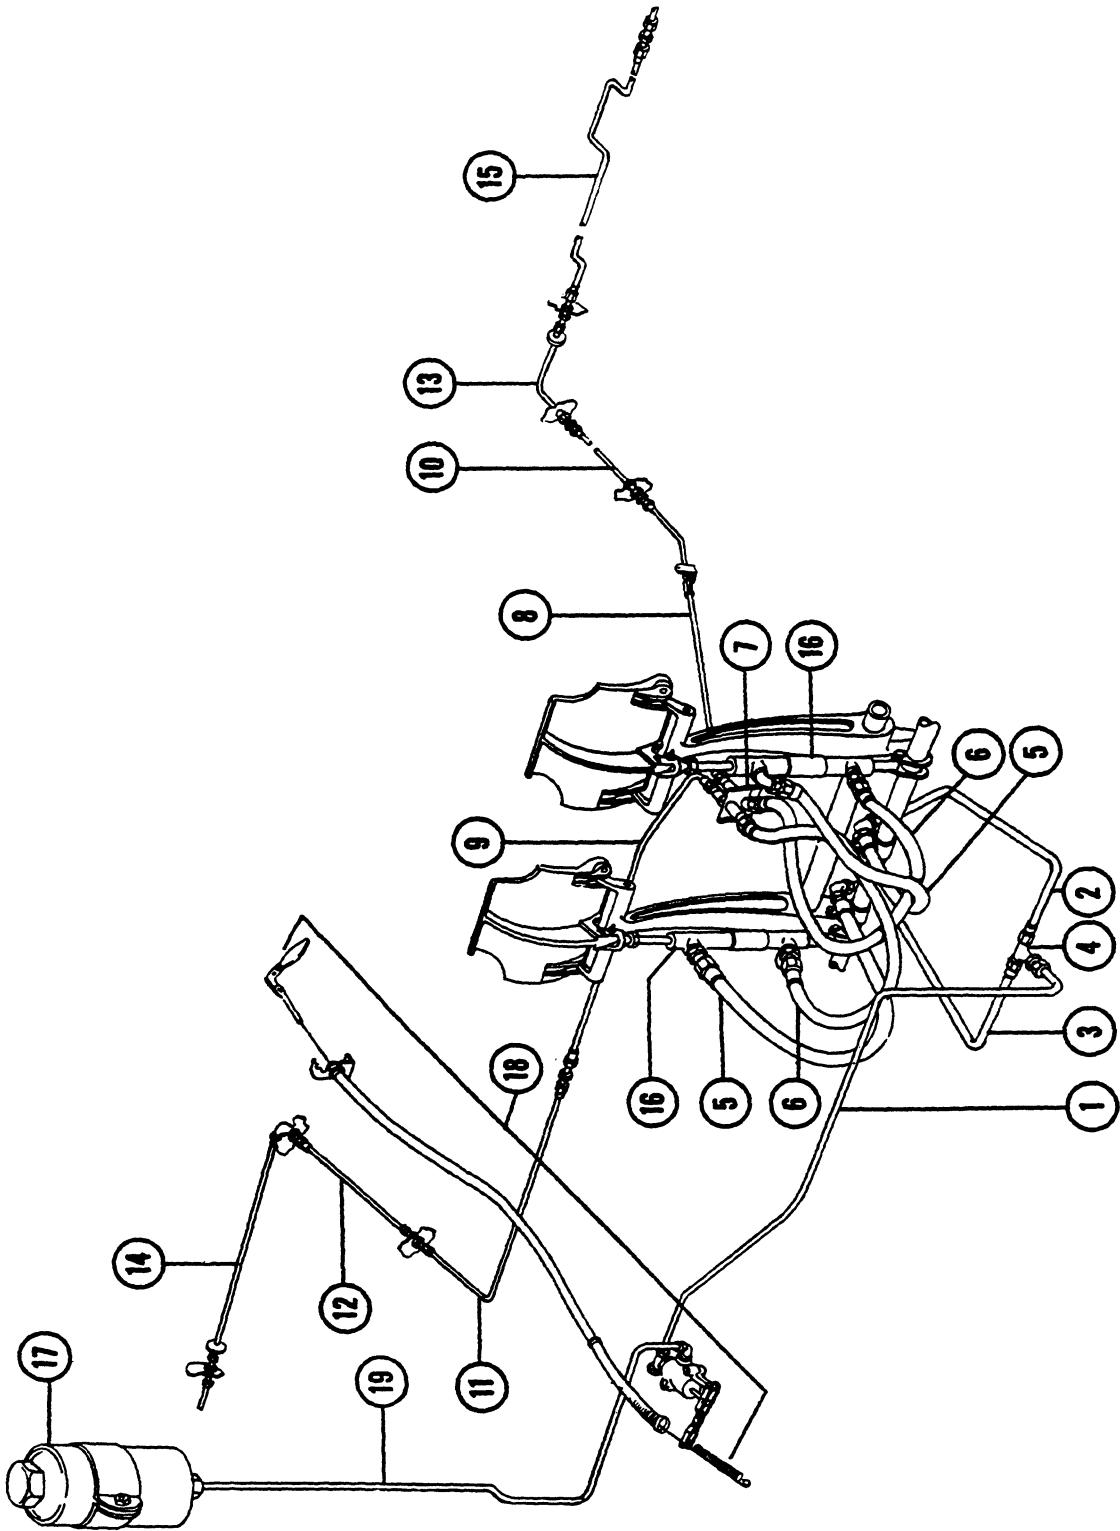


Figure 65. Hydraulic Brake System (Single)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
65 - 1	35-815045		TUBE ASSY,LH BRAKE.	.	1
	35-815189		TUBE ASSY,LH BRAKE.	.	1
- 2	35-815053		TUBE ASSY,LH BRAKE.	.	1
- 3	35-815054		TUBE ASSY,RH BRAKE.	.	1
- 4	AN834-4D		TEE,BRAKE TUBE.	.	1
	AN960-716		WASHER,TEE RETAINING.	.	1
	AN924-4D		NUT,TEE RETAINING	.	1
	35-815049		CLAMP,BRAKE TUBE.	.	1
	AN4-6		BOLT,ATTACHING.	.	2
	AN365-428		NUT,ATTACHING	.	2
	35-815006-4		SHIM,BRAKE TUBE CLAMP	.	1
	35-815006-6		SHIM,BRAKE TUBE CLAMP	.	1
	AN821-4D		ELBOW,INLET TUBE.	.	1
	AN816-4D		UNION,RH INLET HOSE	.	1
	AN823-4D		UNION,LH INLET HOSE	.	3
- 5	AN6271-4-0100		HOSE,MASTER CYLINDER INLET.	.	1
- 6	AN6271-4-0107		HOSE,MASTER CYLINDER OUTLET	.	1
	AN837-4D		ELBOW,OUTLET TUBE	.	1
	AN960-716		WASHER,ELBOW RETAINING.	.	1
- 7	35-815037		BRACKET,BRAKE TUBE.	.	1
- 8	35-815069		TUBE ASSY,LH BRAKE.	.	1
	AN515-8-7		SCREW,LH ATTACHING.	.	1
	AN365-832		NUT,LH ATTACHING	.	1
	AN743-6		BRACKET,BRAKE TUBE.	.	1
	AN742-6C		CLAMP,BRAKE TUBE.	.	1
	AN520-10-8		SCREW,ATTACHING	.	1
	AN365-1032		NUT,RETAINING	.	1
- 9	35-815048		TUBE ASSY,BRAKE	.	1
	739-4		CLIP,BRAKE TUBE	.	2
	AN515-8-8		SCREW,ATTACHING	.	4
	AN815-4D		UNION,TUBE.	.	1
- 10	35-815068-601		TUBE ASSY,BRAKE	.	1
	35-815095		TUBE ASSY,BRAKE	.	1
	35-815006-8		TUBE ASSY,BRAKE	.	1
	AN815-4D		UNION,BRAKE TUBE	.	2
	AN821-4D		ELBOW	.	1
	AN833-4D		ELBOW	.	1
- 11	35-815071		TUBE ASSY,BRAKE	.	1
	AN832-4D		UNION,BRAKE TUBE	.	1
- 12	35-815072		TUBE ASSY,BRAKE	.	1
	35-815092		TUBE ASSY,BRAKE	.	1
	35-815006-10		TUBE ASSY,BRAKE	.	1
- 13	35-815026		TUBE ASSY,BRAKE	.	1
	AN832-4D		UNION	.	1
	AN515-8-7		SCREW,ATTACHING	.	1
	AN742-6C		CLAMP,BRAKE TUBE	.	1
	AN743-6		BRACKET,BRAKE TUBE	.	1
	AN520-10-8		SCREW,ATTACHING	.	1
- 14	35-815029		TUBE ASSY,BRAKE	.	1
	35-815094		TUBE ASSY,BRAKE	.	1
	AN833-4D		ELBOW,BRAKE TUBE	.	1
	AN815-4D		UNION	.	1
	AN837-4D		ELBOW	.	1
- 15	35-815025		TUBE ASSY,FRONT SPAR BRAKE	.	1
	35-815096		TUBE ASSY,FRONT SPAR BRAKE	.	1
	35-815006-12		TUBE ASSY,FRONT SPAR BRAKE	.	1
	35-815006-13		TUBE ASSY,FRONT SPAR BRAKE	.	1
	AN837-4D		ELBOW,FRONT SPAR BRAKE TUBE	.	1
- 16	V1-15-625		CYLINDER,BRAKE MASTER /SEE FIG. 67 OR 68/	.	2
- 17	35-815180		RESERVOIR,BRAKE	.	1
- 18	35-815018		VALVE & CONTROL,PARKING BRAKE /SEE FIG. /	.	1
- 19	35-815172		TUBE ASSY,BRAKE FLUID RESERVOIR	.	1
	35-815185		TUBE ASSY,BRAKE FLUID RESERVOIR	.	1
	35-815190		TUBE ASSY,BRAKE FLUID RESERVOIR	.	1
	AN822-4D		ELBOW,BRAKE FLUID RESERVOIR TUBE	.	1
	AN816-4D		NIPPLE,BRAKE FLUID RESERVOIR	.	1
	AN823-4D		ELBOW,PARKING BRAKE VALVE	.	1
	3A1398		CONTROL ASSY,PARKING BRAKE	.	1
			/SHAKESPEARE PRODUCTS CO./		F7G

MODEL 35 THRU G35 PARTS CATALOG

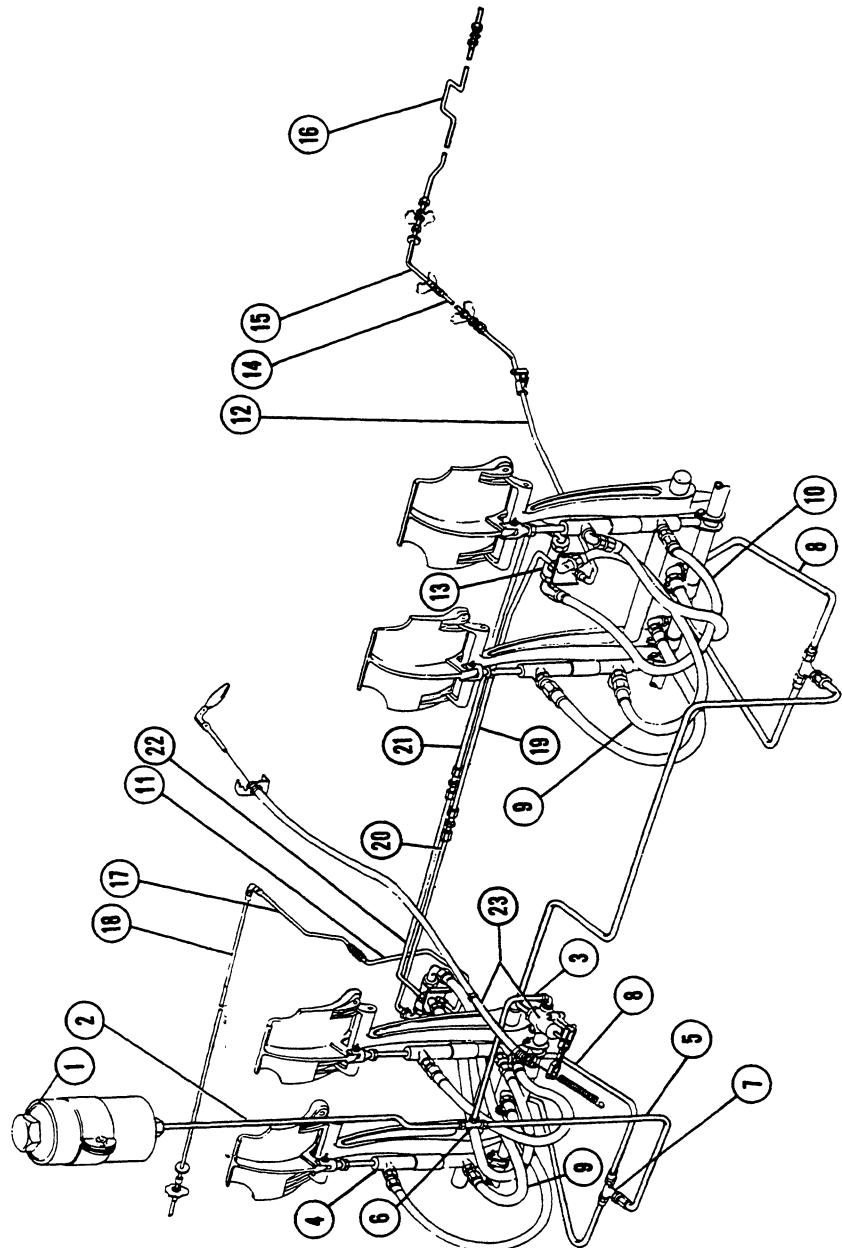


Figure 66. Dual Hydraulic Brake System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
66 - 1	35-815180		RESERVOIR ASSY,BRAKE FLUID.	1	
- 2	35-815073		TUBE ASSY,RESERVOIR OUTLET.	1	AB5
	35-815176		TUBE ASSY,RESERVOIR OUTLET.	1	B6CDEFG
	AN822-4D		ELBOW,PARKING VALVE INLET.	1	
- 3	35-815074		TUBE ASSY,PARKING VALVE INLET.	1	A3A12
	35-815159		TUBE ASSY,PARKING VALVE INLET.	1	A13B5
	35-815177		TUBE ASSY,PARKING VALVE INLET.	1	B6C14
	35-815186		TUBE ASSY,PARKING VALVE INLET.	1	C15DEFG
- 4	V1-15-625		CYLINDER ASSY,BRAKE MASTER /SEE FIG. 67 OR 68/.	1	
		/USE ON GOODYEAR BRAKES/			
- 5	35-815046		TUBE ASSY,MASTER CYLINDER INLET.	1	A3A12
	35-815160		TUBE ASSY,MASTER CYLINDER INLET.	1	A13B5
	35-815178		TUBE ASSY,MASTER CYLINDER INLET.	1	B6DEFG
- 6	AN824-4D		TEE,RESERVOIR OUTLET.	1	
- 7	AN834-4D		TEE,MASTER CYLINDER INLET.	1	
	35-815058		TUBE ASSY,MASTER CYLINDER INLET.	1	
	35-815054		TUBE ASSY,MASTER CYLINDER INLET.	1	
	AN6271-4-10		HOSE ASSY,MASTER CYLINDER OUTLET.	2	
	106242-10-00800		TUBE,INLET HOSE INSULATING.	2	
	AN823-4D		ELBOW,MASTER CYLINDER INLET.	3	
- 8	35-815057		TUBE ASSY,MASTER CYLINDER INLET.	1	
	35-815053		TUBE ASSY,MASTER CYLINDER INLET.	1	
	AN816-4D		UNION,INLET HOSE.	1	
- 9	AN6271-4-10-7/8		HOSE ASSY,MASTER CYLINDER OUTLET.	1	
	106242-10-00800		TUBE,OUTLET HOSE INSULATING.	2	
	AN837-4D		ELBOW,OUTLET HOSE.	1	
- 10	AN6271-4-12		HOSE ASSY,MASTER CYLINDER OUTLET.	1	
- 11	35-815028		TUBE ASSY,RIGHT BRAKE OUTLET.	1	
- 12	35-815027		TUBE ASSY,LEFT BRAKE OUTLET.	1	
- 13	A22		VALVE ASSY,SHUTTLE /HOOF PRODUCTS COMPANY/.	1	
	AN743-6		BRACKET,OUTLET TUBE ATTACHING.	1	
	AN742-6C		CLAMP,OUTLET TUBE ATTACHING.	1	
	AN815-4D		UNION,LEFT BRAKE OUTLET TUBE.	1	
- 14	35-815068-601		TUBE ASSY,LEFT BRAKE OUTLET.	1	A1
	35-815095		TUBE ASSY,LEFT BRAKE OUTLET.	1	A2BCDEFG
	AN815-4D		UNION,LEFT BRAKE OUTLET TUBE.	1	A1
	AN821-4D		UNION,LEFT BRAKE OUTLET TUBE.	1	A2BCDE
	35-815024-8		UNION,LEFT BRAKE OUTLET TUBE.	1	FG
- 15	35-815026		TUBE ASSY,LEFT BRAKE OUTLET.	1	A1
	AN743-6		BRACKET,OUTLET TUBE ATTACHING.	1	
	AN742-6C		CLAMP,OUTLET TUBE ATTACHING.	1	
	AN931-11-16		GROMMET,OUTLET TUBE.	1	
	AN832-4D		UNION,OUTBD OUTLET TUBE.	1	
- 16	35-815025		TUBE ASSY,OUTBD OUTLET.	1	A1
	35-815096		TUBE ASSY,OUTBD OUTLET.	1	A2BCDE
	35-815024-12		TUBE ASSY,OUTBD OUTLET.	1	FG
	AN743-6		BRACKET,OUTLET TUBE ATTACHING.	1	
	AN742-6C		CLAMP,OUTLET TUBE ATTACHING.	1	
	AN837-4D		ELBOW,OUTLET TUBE.	1	
	AN832-4D		UNION,RIGHT BRAKE OUTLET TUBE.	1	
- 17	35-815072		TUBE ASSY,RIGHT BRAKE OUTLET.	1	A1
	35-815092		TUBE ASSY,RIGHT BRAKE OUTLET.	1	A2BCDEFG
	AN833-4D		ELBOW,RIGHT BRAKE OUTLET TUBE.	1	A1
	AN815-4D		UNION,RIGHT BRAKE OUTLET TUBE.	1	A2BCDEFG
- 18	35-815029		TUBE ASSY,RIGHT BRAKE OUTLET.	1	A1
	35-815094		TUBE ASSY,RIGHT BRAKE OUTLET.	1	A2BCDE
	35-815024-10		TUBE ASSY,RIGHT BRAKE OUTLET.	1	FG
	35-815024-13		TUBE ASSY,RIGHT BRAKE OUTLET.	1	FG
	AN815-4D		UNION,RIGHT BRAKE OUTLET TUBE.	1	A2BCDEFG
- 19	35-815048		TUBE ASSY,SHUTTLE VALVE INLET.	1	
	AN815-4D		UNION,SHUTTLE VALVE INLET TUBE.	2	
- 20	35-815067		TUBE ASSY,SHUTTLE VALVE INLET.	1	
- 21	35-815059		TUBE ASSY,SHUTTLE VALVE INLET.	1	
- 22	35-815047		TUBE ASSY,SHUTTLE VALVE INLET.	1	
- 23	35-815018		VALVE & CONTROL ASSY,PARKING BRAKE VALVE.	1	
	35-500		/SEE FIG. 64/ KIT,DUAL BRAKE /MAKE FR SINGLE BRAKE/	1	

MODEL 35 THRU G35 PARTS CATALOG

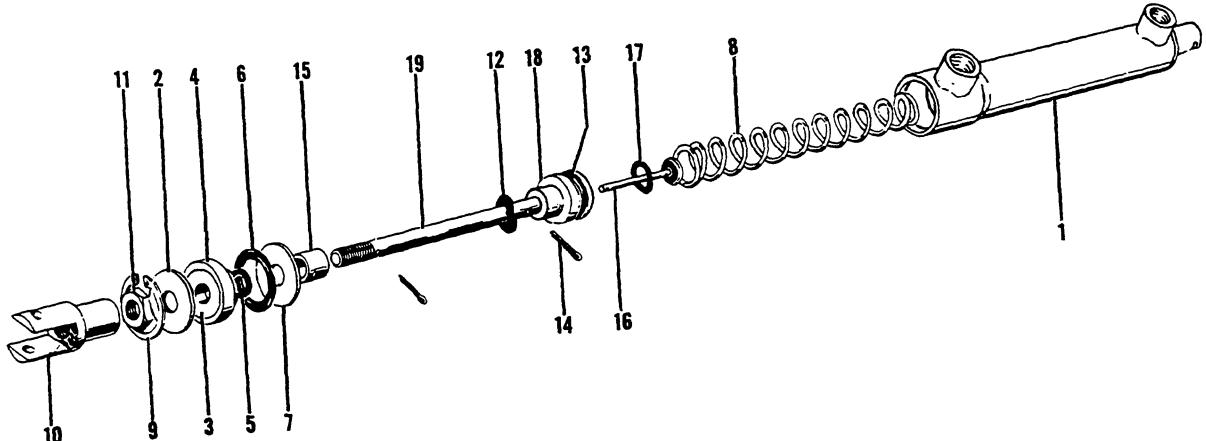


Figure 67. Brake Master Cylinder Assembly (Goodyear Brakes)

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
67	V1-15-.625		CYLINDER ASSY,BRAKE MASTER /HMX/ /SEE FIG. 65 . OR 66 FOR NHA/ /USE WITH GOODYEAR BRAKES/							1	
- 1	47G-041		• BRAZE ASSY,CYLINDER /HMX/							1	
- 2	57G-107		• WASHER,RETAINING /HMX/							1	
- 3	109010		• WIPER,EQUI-FLEX ROD							1	
- 4	47G-050		• BUSHING,PISTON GUIDE /HMX/							1	
- 5	AN6227-5		• RING,O.							1	
- 6	AN6227-10		• RING,O.							1	
- 7	47G-049		• WASHER,/HMX/.							1	
- 8	47G-051		• SPRING,RETURN /HMX/							1	
- 9	5000-68		• RING,SNAP /WKI/.							1	
- 10	47G-031		• CLEVIS,/HMX/.							1	
- 11	AN316-4		• NUT,TRIM CHECK							1	
	AN380C2-2		• PIN,COTTER.							1	
	57G-103		• VALVE ASSY,MASTER CYLINDER /HMX/							1	
- 12	3559-14-03		• • SPRING,VALVE /SH/.							1	
- 13	AN6227-9		• • RING,O.							1	
- 14	AN380C2-2		• • PIN,COTTER.							1	
- 15	47G-033		• • COLLAR,VALVE /HMX/.							1	
- 16	47G-045		• • VALVE,/HMX/.							1	
- 17	AN6227-3		• • RING,O.							1	
- 18	57G-116		• • HEAD,PISTON /HMX/.							1	
- 19	47G-044-1		• • ROD,PISTON /HMX/.							1	

MODEL 35 THRU G35 PARTS CATALOG

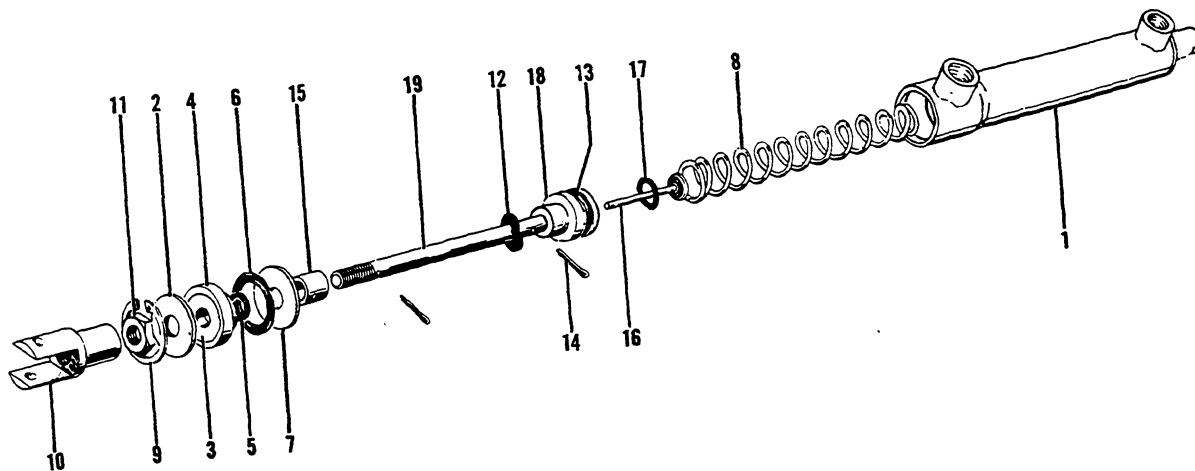


Figure 68. Brake Master Cylinder Assembly (Firestone Brakes)

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
				1	1	
68	V1-15-.875	CYLINDER ASSY,BRAKE MASTER /HMX/ /USED WITH . . . /FIRESTONE BRAKES//SEE FIG. 65 OR 66 FOR NHA/		1		
-	1 47G-026	• BRAZE ASSY,CYLINDER /HMX/		1		
-	2 57G-107	• WASHER,RETAINING /HMX/		1		
-	3 109010	• WIPER,EQUI-FLEX ROD		1		
-	4 47G-029	• BUSHING,PISTON GUIDE /HMX/		1		
-	5 AN6227-6	• RING,O.		1		
-	6 AN6227-13	• RING,O.		1		
-	7 47G-028	• WASHER,/HMX/.		1		
-	8 47G-030	• SPRING,RETURN /HMX/		1		
-	9 5000-90	• RING,SNAP /WKI/		1		
-	10 50H-04	• CLEVIS,/HMX/.		1		
-	11 AN316-5	• NUT,TRIM CHECK		1		
	AN380C2-2	• PIN,COTTER		1		
	57G-103	• VALVE ASSY,MASTER CYLINDER /HMX/		1		
-	12 3536-18	• • SPRING,VALVE /SH/		1		
-	13 AN6227-9	• • RING,O.		1		
-	14 AN380C2-2	• • PIN,COTTER		1		
-	15 50H-011	• • COLLAR,VALVE /HMX/		1		
-	16 47G-032	• • VALVE,/HMX/		1		
-	17 AN6227-6	• • RING,O.		1		
-	18 57G-116	• • HEAD,PISTON /HMX/		1		
-	19 47G-032	• • ROD,PISTON /HMX/		1		

MODEL 35 THRU G35 PARTS CATALOG

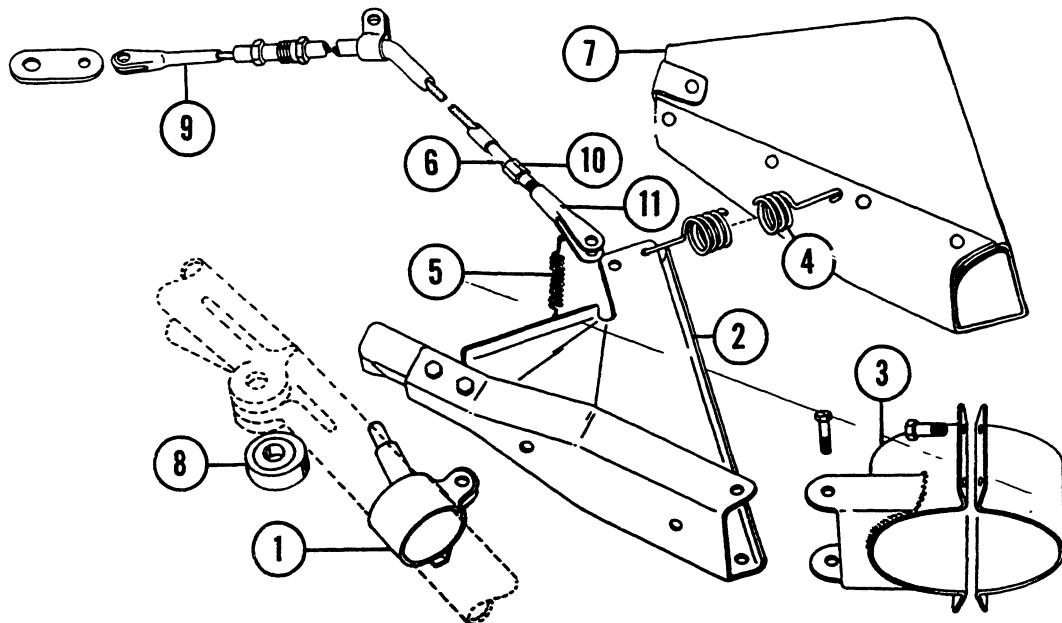


Figure 69. Main Landing Gear Up Lock

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION		UNITS PER ASSY	USABLE ON CODE
69 - 1	35-815079								STOP ASSY, GEAR UP LOCK.	.	1	
- 2	35-815077								LOCK ASSY, LH MAIN GEAR UP	.	1	
	35-815077-1								LOCK ASSY, RH MAIN GEAR UP	.	1	
	35-815077-2								• BRACKET, LH MAIN GEAR UP LOCK.	.	1	
	35-815077-3								• BRACKET, RH MAIN GEAR UP LOCK.	.	1	
	35-815077-4								• BLOCK, ADJUSTING	.	1	
- 3	35-815086								BRACKET, LH UP LOCK ATTACHING.	.	1	A41
	35-815086-1								BRACKET, RH UP LOCK ATTACHING.	.	1	A41
	AN24-32								BOLT, UP LOCK HINGE.	.	1	
	AN960-416L								WASHER, UP LOCK HINGE.	.	2	
	AN310-4								NUT, UP LOCK HINGE	.	1	
- 4	35-815115								SPRING, UP LOCK TENSION.	.	1	
- 5	100942-020-008-								SPRING, UP LOCK TENSION.	.	1	
	020-31											
- 6	35-815109								CABLE ASSY, UP LOCK.	.	1	
	S-123								• BUSHING, UP LOCK CABLE	.	1	
	791-2-4								CLIP, CABLE ATTACHING.	.	1	
	742-4								CLAMP, RH CABLE ATTACHING.	.	3	
	35-815078								LINK, CABLE INBD ATTACHING	.	2	
- 7	35-815156								BOOT ASSY, LH.	.	1	
	35-815156-1								BOOT ASSY, RH.	.	1	
- 8	AT-5								ROLLER, UP LOCK.	.	1	
- 9	AN667-2								TERMINAL.	.	1	
- 10	AN666-2								TERMINAL, RH	.	1	
- 11	AN665-10R								TERMINAL.	.	1	

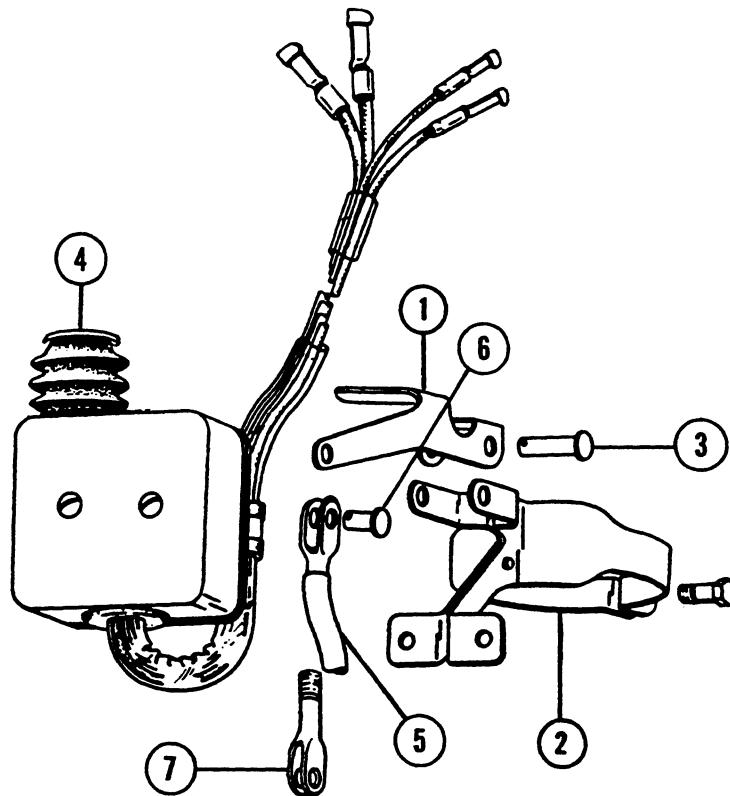


Figure 70. Landing Gear Safety Switch

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
70	35-361131		SWITCH, LANDING GEAR SAFETY.	.	A37
	35-361147		SWITCH, LANDING GEAR SAFETY.	.	1 A38A2BCDEFG
- 1	35-361132	.	ARM, SAFETY SWITCH	.	1
- 2	35-361133	.	BRACKET, SWITCH ATTACHING	.	1
	35-361134	.	COVER, SAFETY SWITCH	.	1
	35-361135	.	BOX, SAFETY SWITCH	.	1
	35-361136	.	GASKET, SWITCH COVER	.	1
	35-361163	.	WASHER, SAFETY SWITCH	.	1
	35-364238	.	INSULATOR, SWITCH	.	1
	MC2711	.	ACTUATOR, SWITCH	.	1
	BZ3YT	.	SWITCH, MICRO	.	1
	AN742-8C	.	CLAMP, CABLE ATTACHING	.	1
	AN526-632-22	.	SCREWS, CABLE ATTACHING	.	2
	AN365-632	.	NUT, CLAMP ATTACHING	.	2
	AN960D6	.	WASHER, CLAMP ATTACHING	.	4
- 3	AN393-29	.	PIN, ACTUATING ARM HINGE	.	1
	AN931-6-10	.	GROMMET, SWITCH BOX	.	1
- 4	35-361148	.	BOOT ASSY, SWITCH / INCLUDED IN KIT NO. 35-543/	.	1
	35-361150	.	SPRING, / INCLUDED IN KIT NO. 35-543/	.	1
	NAS51-31	.	RETAINER, / INCLUDED IN KIT NO. 35-543/	.	1
	106242-7-03600	.	INSULATION, WIRE	.	1
	G10	.	CABLE, SAFETY SWITCH	.	1
- 5	35-361145	.	LINK ASSY, SAFETY SWITCH / ATTACHING PARTS/	.	1
- 6	AN392-13	.	PIN	.	2
	AN960D10	.	WASHER	.	2
	AN380-2-1	.	PIN, COTTER	.	2
- 7	AN161-16RS	.	FORK, LINK ATTACHING / ATTACHING PARTS/	.	1
	AN42-4	.	EYE BOLT	.	1
	AN310-3	.	NUT	.	1
	AN380-2-2	.	PIN, COTTER	.	1
	108492A10-014	.	WASHER, LINK ATTACHING	.	2

MODEL 35 THRU G35 PARTS CATALOG

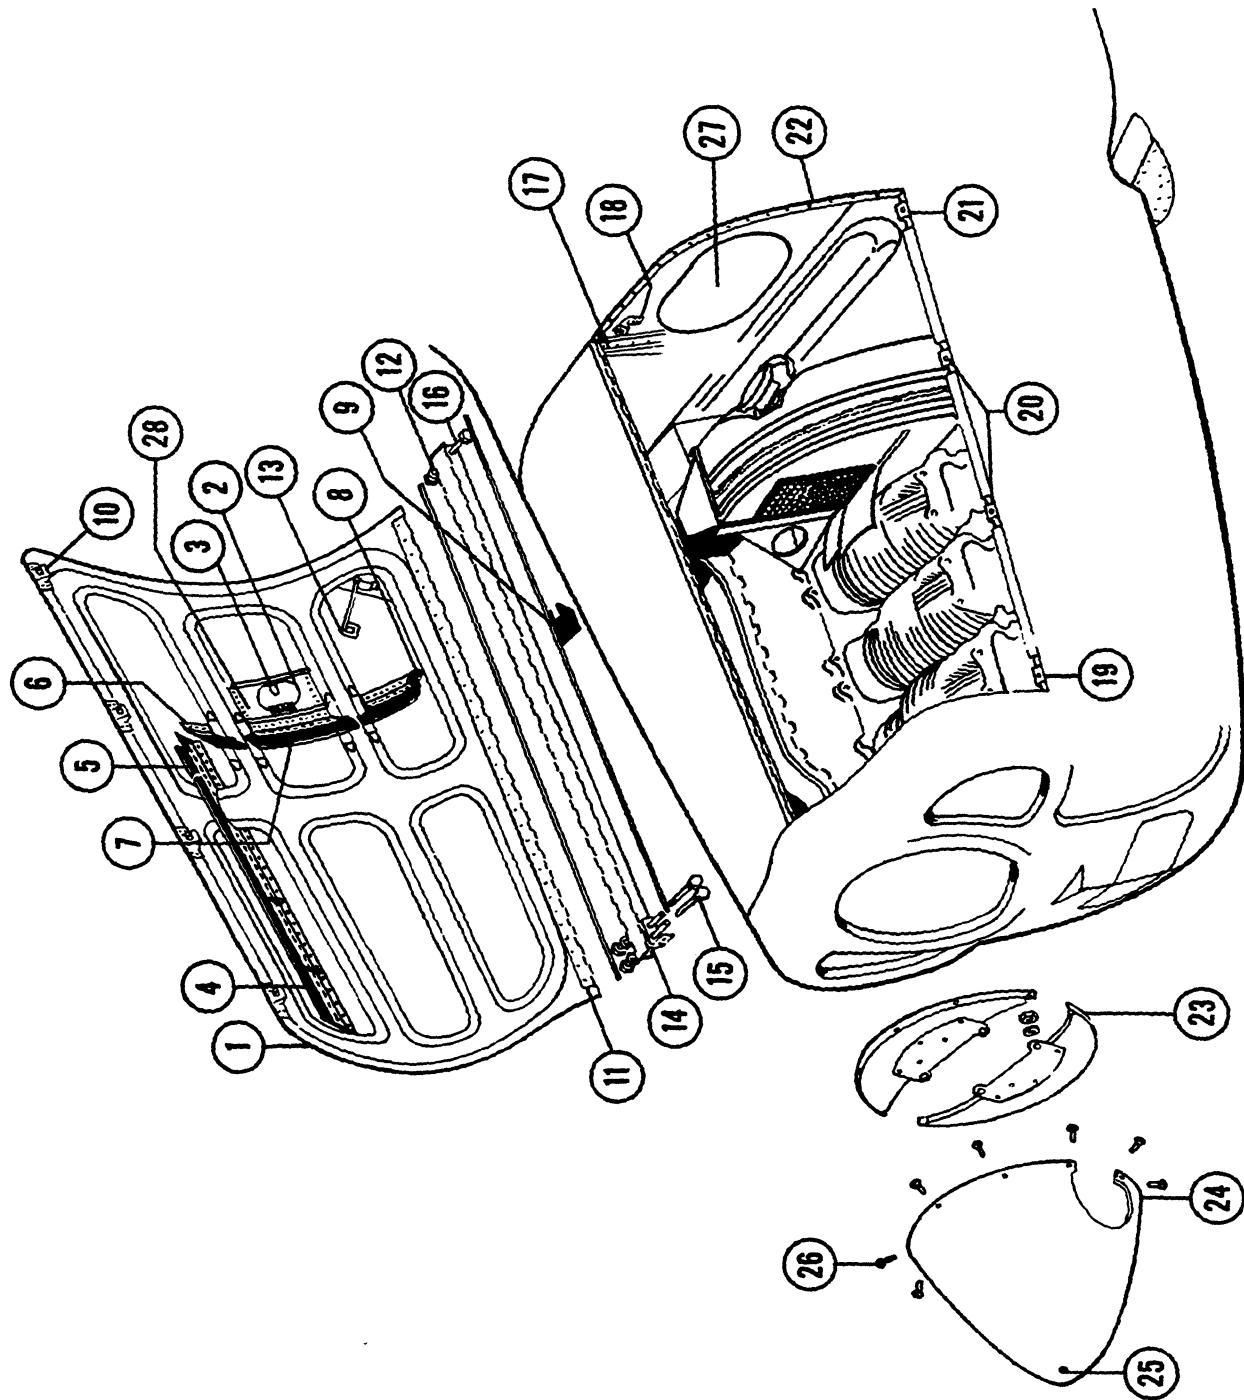


Figure 71. Engine Cowl and Spinner

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
71	35-910100	COWLING ASSY,ENGINE	• • • • • • •	1	A3
	35-910150	COWLING ASSY,ENGINE	• • • • • • •	1	A4
	35-910160	COWLING ASSY,ENGINE	• • • • • • •	1	BCDEFG
- 1	35-910100-602	• COWLING ASSY,LEFT HALF	• • • • • • •	1	A3
	35-910150-602	• COWLING ASSY,LEFT HALF	• • • • • • •	1	A4
	35-910160-602	• COWLING ASSY,LEFT HALF	• • • • • • •	1	BCDEFG
- 2	35-910160-16	• DOOR,OIL FILLER ACCESS	• • • • • • •	1	BCDEFG
- 3	H4600-032-040	• LATCH ASSY,OIL FILLER DOOR	• • • • • • •	1	BCDEFG
	105774C-ZE0212	• PIN,OIL FILLER DOOR HINGE	• • • • • • •	1	BCDEFG
	35-910160-8	• HINGE	• • • • • • •	1	BCDEFG
	35-910100-603	• COWLING ASSY,RIGHT HALF	• • • • • • •	1	A3
	35-910150-603	• COWLING ASSY,RIGHT HALF	• • • • • • •	1	A4
	35-910160-603	• COWLING ASSY,RIGHT HALF	• • • • • • •	1	BCDEFG
- 4	35-910150-26	• SEAL,BAFFLE	• • • • • • •	1	A4BCDEFG
	35-910150-24	• SEAL,BAFFLE	• • • • • • •	1	A4BCDEFG
- 5	35-910150-28	• SEAL,BAFFLE	• • • • • • •	1	A4BCDEFG
- 6	35-910150-16	• SEAL,BAFFLE LH	• • • • • • •	1	A4BCDEFG
	35-910150-6	• FLANGE	• • • • • • •	1	A4BCDEFG
	35-910150-17	• SEAL,BAFFLE RH	• • • • • • •	1	A4BCDEFG
	35-910150-7	• FLANGE	• • • • • • •	1	A4BCDEFG
- 7	35-910150-18	• SEAL,BAFFLE LH	• • • • • • •	1	A4BCDEFG
	35-910150-8	• FLANGE	• • • • • • •	1	A4BCDEFG
	35-910150-19	• SEAL,BAFFLE	• • • • • • •	1	A4BCDEFG
	35-910150-9	• FLANGE	• • • • • • •	1	A4BCDEFG
- 8	35-910150-20	• SEAL,BAFFLE	• • • • • • •	1	A4BCDEFG
	35-910150-10	• FLANGE	• • • • • • •	1	A4BCDEFG
	35-910150-14	• FLANGE	• • • • • • •	1	A4BCDEFG
	35-910150-21	• SEAL,BAFFLE	• • • • • • •	1	A4BCDEFG
	35-910150-11	• FLANGE	• • • • • • •	1	A4BCDEFG
	35-910150-14	• FLANGE	• • • • • • •	1	A4BCDEFG
- 9	35-910150-22	• SEAL,CENTER BAFFLE	• • • • • • •	1	A4BCDEFG
- 10	35-910107	• BRACKET ASSY,COWL FASTENER	• • • • • • •	4	A1A2
	H4600-032-040	• LATCH ASSY,COWL FASTENER	• • • • • • •	4	BCDEFG
	35-910104	• HINGE ASSY,COWLING	• • • • • • •	1	
- 11	35-910103	• HINGE,LEFT HALF COWLING	• • • • • • •	1	
- 12	35-910102	• HINGE,CENTER COWLING	• • • • • • •	1	
	35-910103-1	• HINGE,RIGHT HALF COWLING	• • • • • • •	1	
	105774C-ZB0370	• PIN,COWLING ATTACHING HINGE	• • • • • • •	1	
- 13	35-910108	• ROD,COWLING SUPPORT	• • • • • • •	1	
	35-910109	• BRACKET,COWLING SUPPORT ROD	• • • • • • •	1	
	185678	• CLIP,COWLING SUPPORT ROD	• • • • • • •	1	
- 14	35-910224	BRACKET,COWLING FWD ATTACHING	• • • • • • •	1	
- 15	AN3-22A	BOLT,COWLING FWD BRACKET	• • • • • • •	2	
	AN960-10	WASHER	• • • • • • •	2	
	102933D5ZJ1375	SPACER,COWLING FWD BRACKET	• • • • • • •	2	
	AN365-1032	NUT	• • • • • • •	2	
- 16	AN3-17A	BOLT,REAR COWLING ATTACHING	• • • • • • •	1	
	AN960-10	WASHER	• • • • • • •	1	
	AN365-1032	NUT	• • • • • • •	1	
- 17	35-415330-46	CHANNEL	• • • • • • •	1	A3
	35-415330-136	CHANNEL	• • • • • • •	1	A4BCDEFG
- 18	35-415369	BRACKET,COWLING SUPPORT	• • • • • • •	1	
	35-415369-1	BRACKET,COWLING SUPPORT	• • • • • • •	1	
- 19	35-910244	BRACKET ASSY,FWD COWLING FASTENER	• • • • • • •	1	
- 20	35-910238-6	BRACKET ASSY,CENTER COWLING FASTENER	• • • • • • •	2	
- 21	35-910238-8	BRACKET ASSY,AFT COWLING FASTENER	• • • • • • •	2	
	35-910238-9	BRACKET ASSY,AFT COWLING FASTENER	• • • • • • •	1	
- 22	NO NUMBER	SEAL,KOROSEAL COWLING	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
71 - 23	35-960010-12		• BULKHEAD,SPINNER ATTACHING.	•	•	•	•	•	•	2	
	35-960026-12		• BULKHEAD,SPINNER ATTACHING.	•	•	•	•	•	•	2	
- 24	35-960026-14		• SPINNER,PROPELLER	•	•	•	•	•	•	1	
	35-960010-14		• SPINNER,PROPELLER/ALTERNATE FOR 35-960026-14/							1	
- 25	48179		• PLUG,SPINNER.	•	•	•	•	•	•	1	A42
- 26	AN526-832R8		• SCREW,PROPELLER SPINNER ATTACHING	•	•	•	•	•	•	10	
	AN502-416-8		• SCREW,SPINNER BULKHEAD ATTACHING.	•	•	•	•	•	•	4	
	AN960-416		• WASHER,SPINNER BULKHEAD ATTACHING	•	•	•	•	•	•	4	
			/USED WITH B200 PROPELLER/								
- 27	35-415330 SA24	DOOR,ACCESS	•	•	•	•	•	•	•	1	
- 28	35-910160-14	DOUBLER	•	•	•	•	•	•	•	1	
	35-415330-10	ANGLE	•	•	•	•	•	•	•	1	
	35-415330-11	ANGLE	•	•	•	•	•	•	•	1	

MODEL 35 THRU G35 PARTS CATALOG

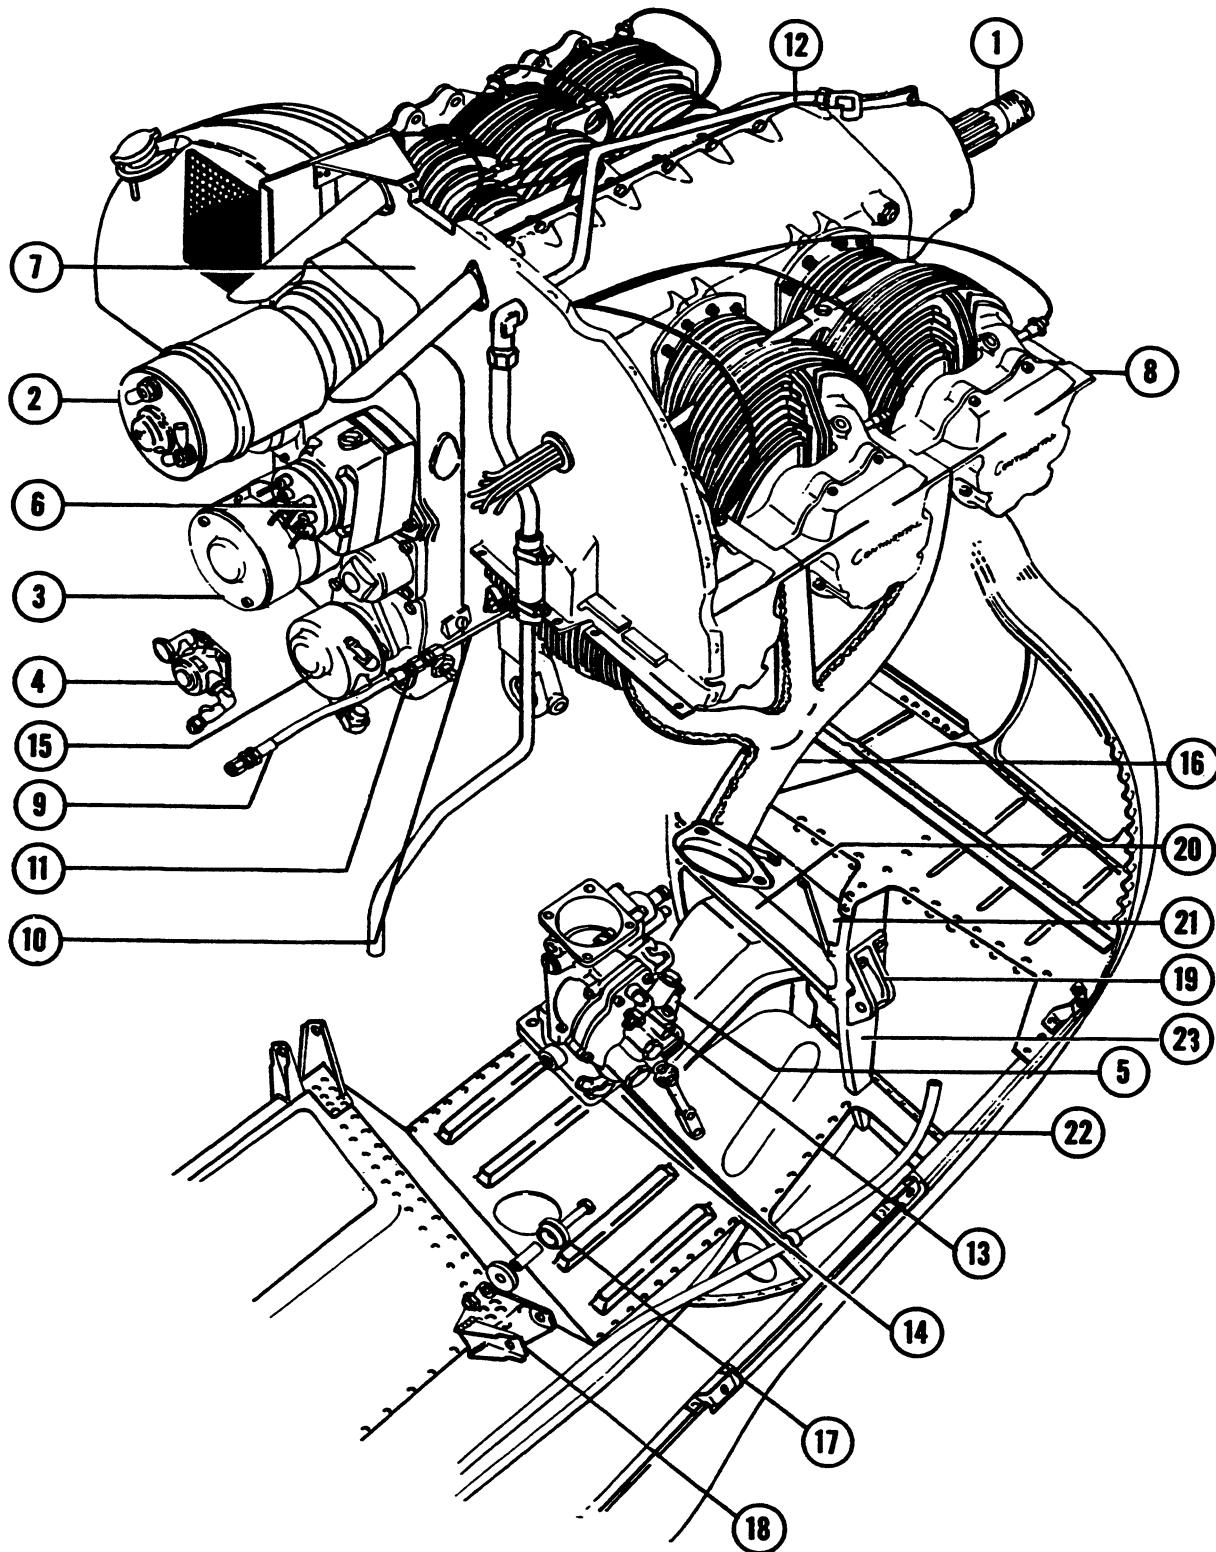


Figure 72. Power Plant Installation

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
72 - 1	E185-1		ENGINE ASSY, CONTINENTAL	1	A3A12
	E185-8		ENGINE ASSY, CONTINENTAL	1	A13B
	E185-11		ENGINE ASSY, CONTINENTAL	1	CDEF
	E225-8		ENGINE ASSY, CONTINENTAL /OPTIONAL EQUIPMENT ON CODE E & F/	1	G
	35-910002		• SYSTEM ASSY, ENGINE PRIMING. /REQUIRED WITH E225-8 ENGINE/	1	
- 2	1109660		• STARTER ASSY, DELCO REMY /SEE FIG. 91/	1	A3A12
	35-369005		• STARTER ASSY, E80 /SEE FIG. 92/	1	A13BCDEFG
- 3	36E14-1-C		• STARTER ASSY, ECLIPSE.	1	
	1101879		• GENERATOR, DELCO REMY /25 AMP/ /SEE FIG. 93/	1	A1A2B
	1101887		• GENERATOR, DELCO REMY /35 AMP/ /SEE FIG. 93/	1	CDEFG
	539538-A1		• GENERATOR, DELCO REMY /50 AMP/ /SEE FIG. 93/	1	
			/OPTIONAL WITH E225-8 ENGINE/		
- 4	RD7790		• PUMP, ROMEC FUEL	1	
	TF-1900		• PUMP, THOMPSON FUEL.	1	
	RD7420C		• PUMP, ROMEC FUEL /USED WITH 35-929020 BOOSTER PUMP/	1	E9FG
- 5	380208-3		• CARBURETOR, BENDIX PS5C.	1	A1A2B
	380208-5		• CARBURETOR, BENDIX PS5C.	1	C16
	391330-3		• CARBURETOR, BENDIX PS5C.	1	C17DEF
	391583-1		• CARBURETOR, BENDIX PS5C.	1	G
- 6	LA-6		• MAGNETO, EISEMANN.	2	
	S6LN-21		• MAGNETO, BENDIX.	2	
- 7	35-910232		BAFFLE ASSY, REAR COWLING.	1	A14
	35-910246		BAFFLE ASSY, REAR COWLING.	1	A15
	35-910262		BAFFLE ASSY, REAR COWLING /SEE FIG. 74/.	1	A23BCDEFG
- 8	35-910201-604		BAFFLE ASSY, ENGINE.	1	A3
	35-910261-604		BAFFLE ASSY, ENGINE.	1	A23BCDEFG
- 9	AN6270-4-28		HOSE ASSY, MANIFOLD PRESSURE	1	A3
	35-910263		TUBE ASSY, MANIFOLD PRESSURE	1	A23BCDEFG
- 10	AN6270-4-9		HOSE ASSY, MANIFOLD PRESSURE	1	A3
	35-910265		TUBE ASSY, MANIFOLD PRESSURE	1	A23BCDEFG
- 11	AN832-40-4D		UNION, HOSE CONNECTING	1	A3
	AN832-20-2D		UNION, TUBE CONNECTING	1	A23BCDEFG
	35-910240		TUBE ASSY, MANIFOLD PRESSURE	1	A43
	35-910259		TUBE ASSY, MANIFOLD PRESSURE	1	A44
	35-910264		TUBE ASSY, MANIFOLD PRESSURE	1	A23BCDEFG
	35-910287		BRACKET, MANIFOLD PRESSURE CLAMP	1	
	AN742-6C		CLAMP, TUBE ATTACHING.	1	A3
	AN742-4C		CLAMP, TUBE ATTACHING.	1	A23BCDEFG
	35-910239		FITTING, MANIFOLD PRESSURE	1	A3
	AN822-2B		ELBOW, MANIFOLD PRESSURE FITTING	1	A23BCDEFG
	AN5540-3		THERMOCOUPLE, 14 MM. CYLINDER HEAD	1	A45
	AN5540-2		THERMOCOUPLE, 18 MM. CYLINDER HEAD	1	A46BCDEFG
- 12	35-939048		TUBE, UPPER CRANKCASE BREATHER /SEE FIG. 86/	1	
	35-939166		TUBE, UPPER CRANKCASE BREATHER /SEE FIG. 88/	1	
- 13	AN914-1		ELBOW, CARBURETOR TO FUEL LINE	1	
	AN816-4D		NIPPLE, CARBURETOR TO FUEL LINE	1	
- 14	AN822-6B		ELBOW, CARBURETOR TO FUEL PUMP	1	
	35-944013		ARM ASSY, ENGINE CONTROL	1	
- 15	A-513-DA		PUMP ASSY, VACUUM.	1	
	AN842-8		ELBOW, VACUUM PUMP OUTLET.	1	
	AN842-4		ELBOW, VACUUM LINE TO ENGINE	1	
	AN912-3		REDUCER, VACUUM LINE TO ENGINE	1	
	35-950118		STACK ASSY, EXHAUST /SEE FIG. 77/	1	A14
- 16	35-950116		STACK ASSY, EXHAUST /SEE FIG. 77/	1	A17BCDEFG
- 17	J2245-1		BUSHING, ENGINE MOUNT.	8	A1A2B
	J3049-17		BUSHING, ENGINE MOUNT.	8	CDEFG
	AN7-40A		BOLT, FRONT ENGINE MOUNT	2	A1A2B
	AN7-42A		BOLT, FRONT ENGINE MOUNT	2	CDEFG
	AN7-26A		BOLT, REAR ENGINE MOUNT.	1	A3A33
	AN7-27A		BOLT, REAR ENGINE MOUNT.	1	A3A33
	AN7-30A		BOLT, REAR ENGINE MOUNT.	1	A34BCDEFG
	AN7-31A		BOLT, REAR ENGINE MOUNT.	1	A34BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
72	105739X0453-		SPACER, ENGINE MOUNT	4	A1A2B
	0562-1625				
	105739X0446-		SPACER, ENGINE MOUNT	4	CDEFG
	0563-1869				
	10293358-1250-		SPACER, ENGINE MOUNT /REAR MOUNT ONLY/	2	A1A2
	0349				
	100951X0109-		SPACER, ENGINE MOUNT /FRONT MOUNT ONLY/	2	CDEFG
	015-220				
	105090CR106-7-		WASHER,/REAR MOUNT ONLY/.	2	CDEFG
	220				
	AN960-716		WASHER, ENGINE MOUNT	4	
	AN365-720		NUT, ENGINE MOUNT RETAINER	4	
- 18	35-415377		BRACKET, REAR ENGINE MOUNT	2	A34BCDEFG
	105739-0453-		SPACER,/USE WITH 35-415377/.	2	A19A30A33
	0562-1625				
	102933-58-1250-		SPACER,/USE WITH 35-415377/.	2	A19A30A33
	0349				
	35-415364		BRACKET, FRONT ENGINE MOUNT.	1	
- 19	35-415364-1		BRACKET, FRONT ENGINE MOUNT.	1	
- 20	35-415346-6		CHANNEL, UPPER & LOWER HORIZONTAL.	2	A19A30A33
	35-410385-6		CHANNEL, HORIZONTAL.	1	A34BCDEFG
	35-410385-10		GUSSET, HORIZONTAL	1	A34BCDEFG
- 21	35-410385-11		GUSSET, HORIZONTAL	1	A34BCDEFG
	35-415346-2		WEB, NOSE COWLING LOWER.	1	A19A30A33
- 22	35-410382-10		WEB, NOSE COWLING LOWER.	1	A34BCDEFG
	859563		ADAPTER, OIL TEMPERATURE	1	
	1512926		BULB, OIL TEMPERATURE ELECTRIC	1	G
	35-415346-12		SUPPORT, LH. .	1	A19A30A33
	45-410385-8		SUPPORT, LH. .	1	A34BCDEFG
- 23	35-415346-13		SUPPORT, RH. .	1	A19A30A33
	45-410385-9		SUPPORT, RH. .	1	A34BCDEFG
	HW4V		STRAP, GROUND. .	1	

MODEL 35 THRU G35 PARTS CATALOG

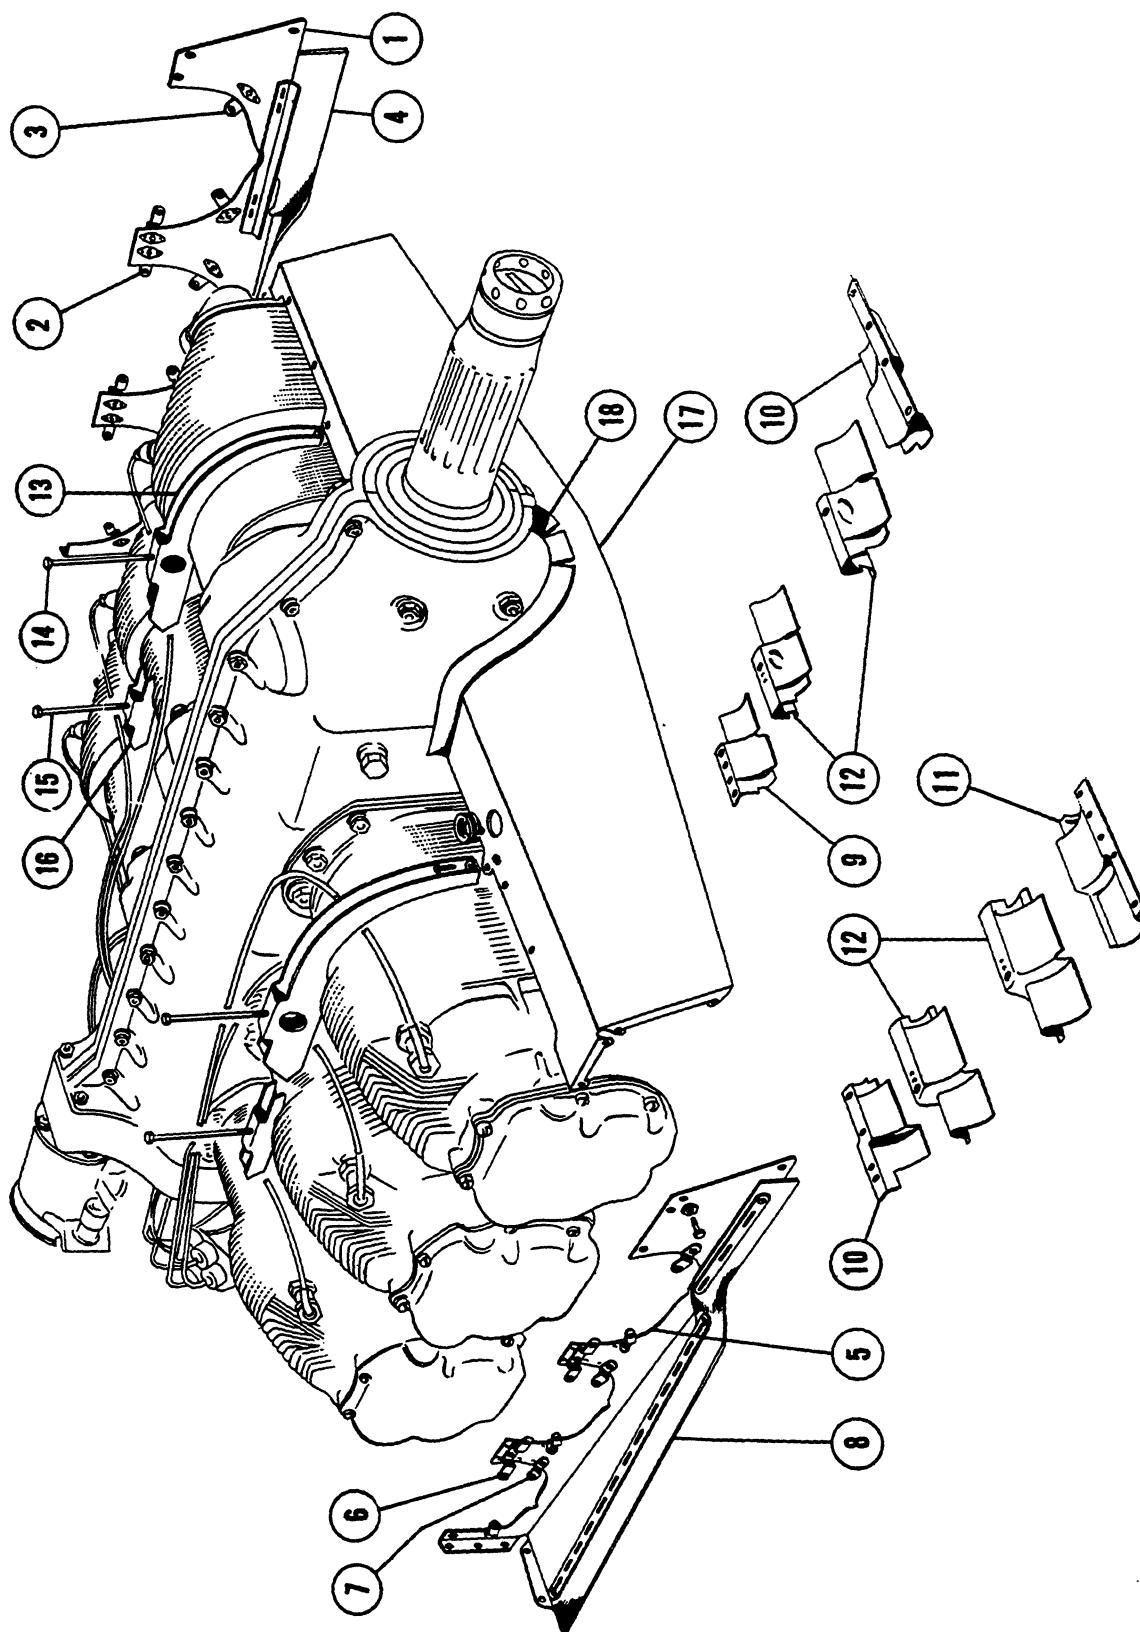


Figure 73. Engine Baffles (D1 thru D1116)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
73	35-910201-604		BAFFLES ASSY, ENGINE	1	A3
- 1	35-910230		• BAFFLE ASSY, CYLINDER HEAD	1	A3
- 2	35-910217		• • CLIP, BAFFLE ATTACHING	2	A3
- 3	35-910218		• • CLIP, BAFFLE ATTACHING	6	A3
	W1S632		• • PLATE, CLIP RETAINING NUT	10	A3
	AN515-6-5		• • SCREW, CLIP ATTACHING	10	A3
- 4	35-910230-4		• • SEAL, CYLINDER BAFFLE RUBBER	1	A3
	35-910230-6		• • STRIP, RUBBER SEAL BACKING	1	A3
- 5	35-910231		• BAFFLE ASSY, CYLINDER HEAD	1	A3
- 6	35-910217		• • CLIP, BAFFLE ATTACHING	2	A3
- 7	35-910218		• • CLIP, BAFFLE ATTACHING	6	A3
	W1S632		• • PLATE, CLIP RETAINING NUT	10	A3
	AN515-6-5		• • SCREW, CLIP ATTACHING	10	A3
- 8	35-910231-4		• • SEAL, CYLINDER BAFFLE RUBBER	1	A3
	35-910231-6		• • STRIP, RUBBER SEAL BACKING	1	A3
- 9	35-910234-12		• BAFFLE, REAR CYLINDER HALF	1	A3
- 10	35-910234-10		• BAFFLE, CYLINDER HALF	1	A3
- 11	35-910234-4		• BAFFLE, FRONT CYLINDER HALF	1	A3
- 12	35-910234-6		• BAFFLE, INNER CYLINDER	2	A3
	W12S1032		• NUT, BAFFLE ATTACHING	2	A3
- 13	35-910215		• SUPPORT, INNER CYLINDER BAFFLE	1	A3
- 14	AN3-46A		• BOLT, SUPPORT & BAFFLE RETAINING	1	A3
- 15	35-910216		• SUPPORT, INNER CYLINDER BAFFLE	1	A3
- 16	AN3-36A		• BOLT, SUPPORT & BAFFLE RETAINING	1	A3
- 17	35-910233		• BAFFLE ASSY, NOSE SECTION	1	A3
- 18	35-910233-4		• • SEAL, RUBBER	1	A3
	AN515-6-5		• SCREW, BAFFLE ATTACHING	1	A3
	AN365-632		• NUT, BAFFLE RETAINING	1	A3
	AN515-6-4		• SCREW, BAFFLE ATTACHING	6	A3
	AN515-6-4		• SCREW, BAFFLE ATTACHING	7	A3
	AN365-632		• NUT, BAFFLE RETAINING	13	A3
	AN931-10-14		• GROMMET, BREATHER LINE	1	A3

MODEL 35 THRU G35 PARTS CATALOG

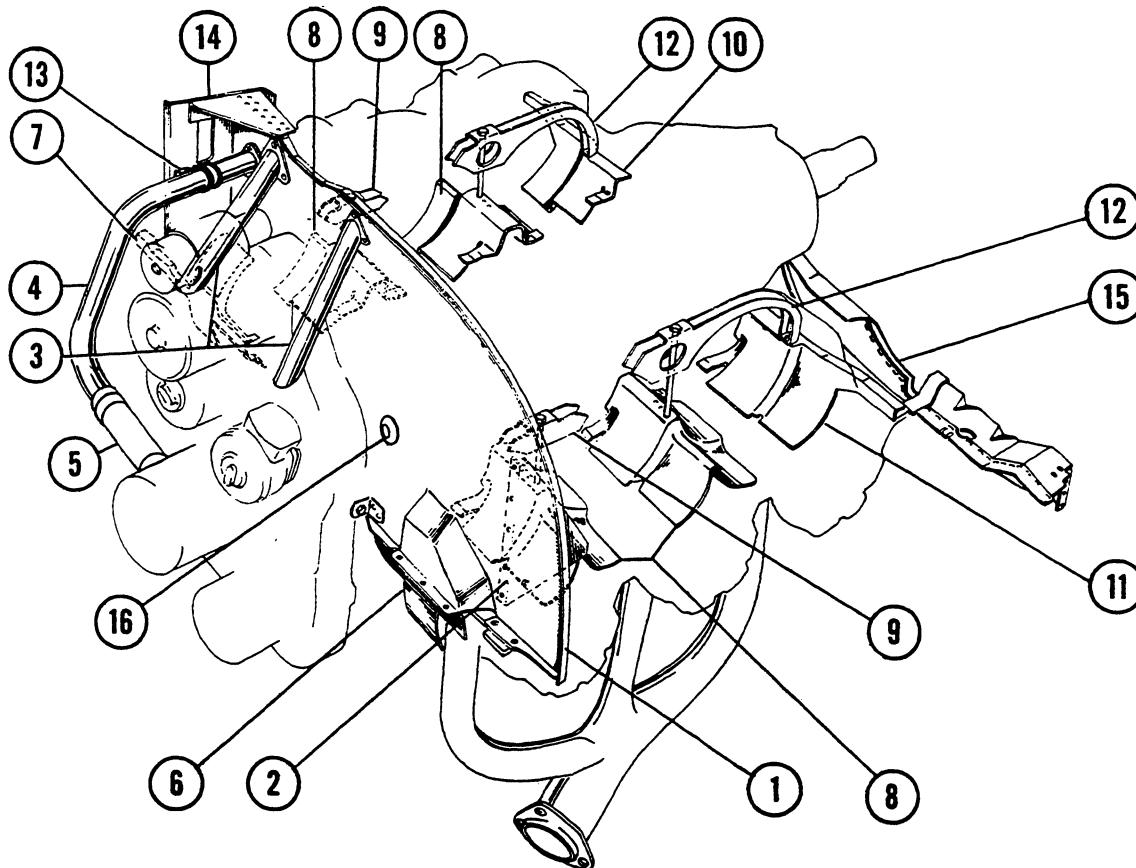


Figure 74. Engine Baffles

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
74 - 1	35-910262	BAFFLE ASSY,REAR /SEE FIG. 72 FOR NHA/.	1	A4BCDEFG
- 2	35-910258	• BRACKET,RH REAR SUPPORT	1	A4BCDEFG
- 3	35-910257	• TUBE,MAGENTO BLAST.	2	A4BCDEFG
	35-910256	• TUBE,GENERATOR BLAST.	1	A12
- 4	35-910280	• TUBE,GENERATOR BLAST.	1	A13BCDEFG
	106242-12-00600	TUBING,BLAST TUBE	1	A12
- 5	106242-12-00400	TUBING,BLAST TUBE	1	A13BCDEFG
	AN748-34	CLAMP,TUBING.	2	A4BCDEFG
- 6	35-910234-10	BAFFLE,RH REAR CYLINDER	1	A4BCDEFG
- 7	35-910268	BAFFLE,LH REAR CYLINDER	1	A4BCDEFG
- 8	35-910234-6	BAFFLE,CENTER CYLINDER.	4	A4BCDEFG
- 9	35-910216	SUPPORT,BAFFLE.	2	A4BCDEFG
	AN3-36A	BOLT,SUPPORT ATTACHING.	2	A4BCDEFG
- 10	35-910266-6	BAFFLE ASSY,LH FRONT CYLINDER	1	A4BCDEFG
- 11	35-910267-6	BAFFLE ASSY,RH FRONT CYLINDER	1	A4BCDEFG
- 12	35-910215	SUPPORT,BAFFLE.	2	A4BCDEFG
	AN3-47A	BOLT,SUPPORT ATTACHING.	2	A4BCDEFG
- 13	35-939145-30	BRACKET,BLAST TUBE SUPPORT	1	A13BCDEFG
	AN742-16C	CLAMP,TUBE SUPPORT.	1	A13BCDEFG
- 14	35-939145	SUPPORT,REAR BAFFLE	1	A4BCDEFG
- 15	35-910233	BAFFLE ASSY,FRONT	1	A3
	35-910274	BAFFLE ASSY,FRONT	1	A4BCDEFG
- 16	AN931-14S20	GROMMET	2	A4BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

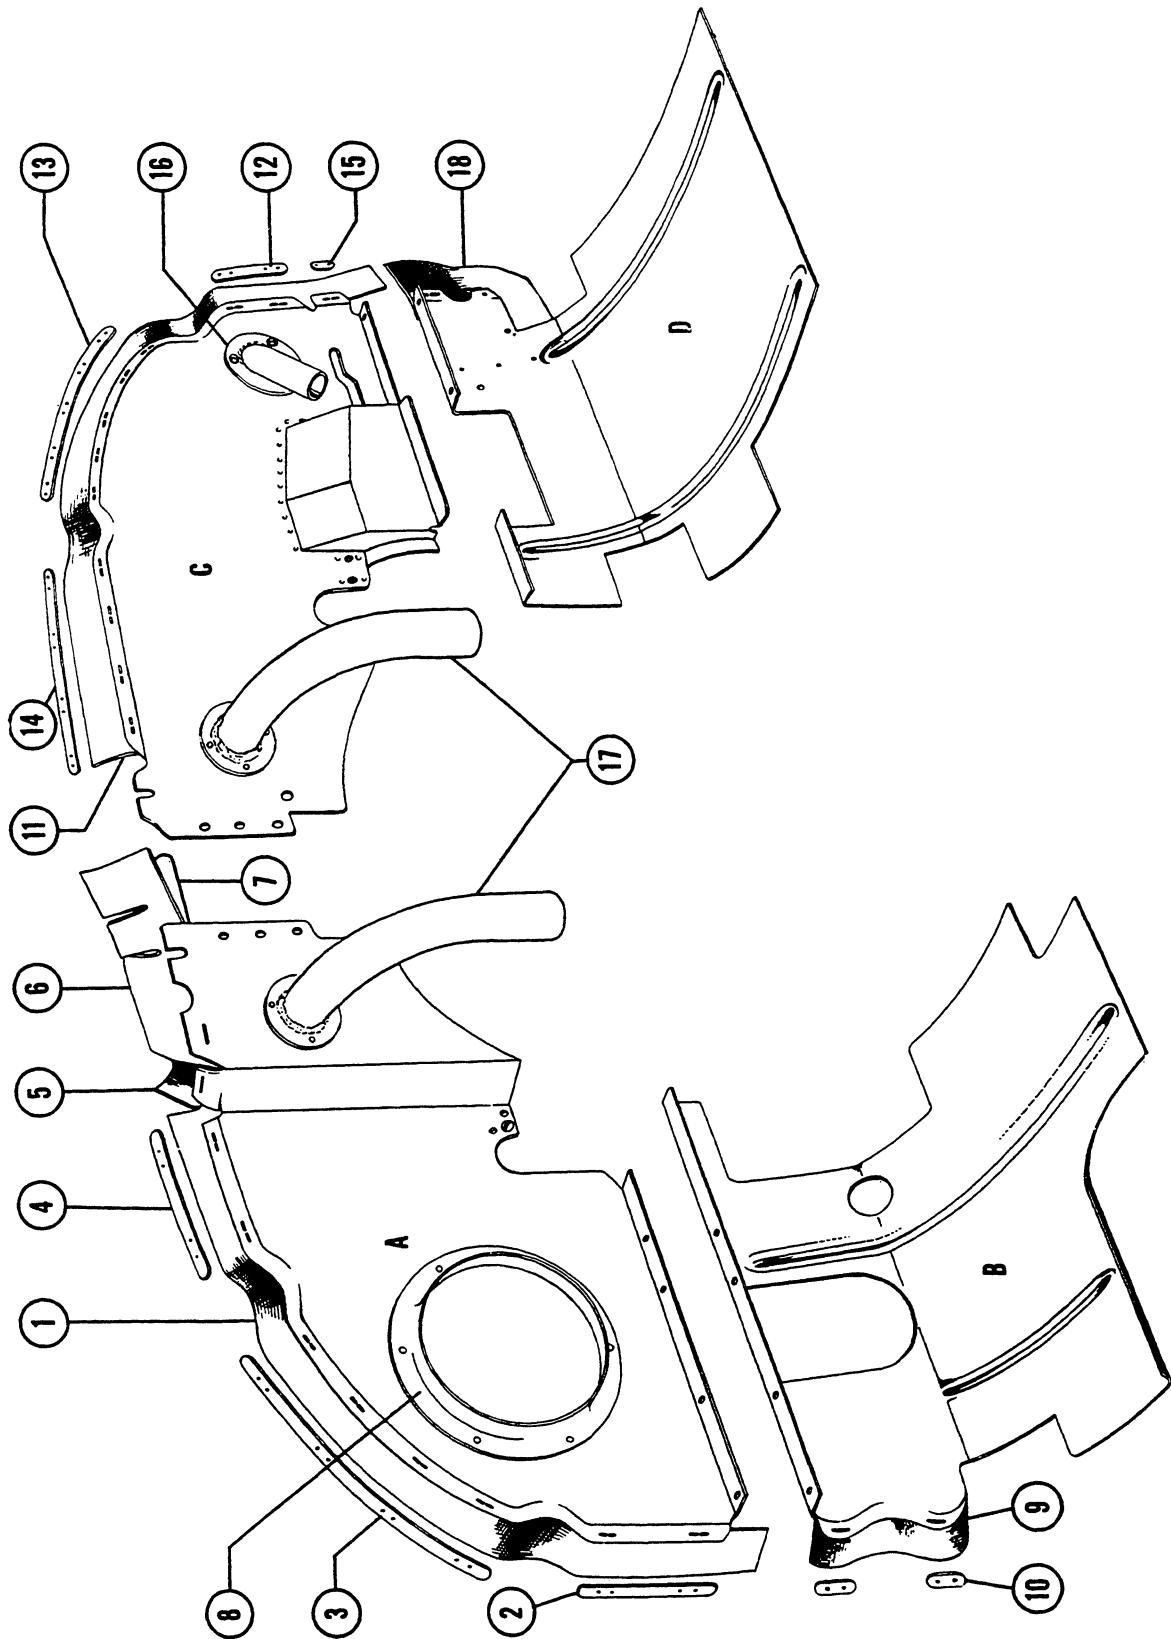


Figure 76. Rear Cowl Baffles (D1 thru D1116)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
75	35-910232		BAFFLE ASSY,REAR COWL /USE UNTIL KIT 35-540 HAS BEEN INSTALLED/	1	A14
	35-910246		BAFFLE ASSY,REAR COWL /USE AFTER KIT 35-540 HAS BEEN INSTALLED/	1	A3
- A	35-910232-4	.	• SECTION,UPPER LH BAFFLE	1	A14
	35-910246-4	.	• SECTION,UPPER LH BAFFLE	1	A15
- 1	35-910232-14	.	• • SEAL,RUBBER	1	A3
- 2	35-910232-18	.	• • STRIP,BACKING	1	A3
- 3	35-910232-20	.	• • STRIP,BACKING	1	A3
- 4	35-910232-22	.	• • STRIP,BACKING	1	A3
- 5	35-910232-24	.	• • SEAL,RUBBER	1	A3
	35-910232-26	.	• • STRIP,BACKING	1	A3
- 6	35-910232-16	.	• • SEAL,RUBBER	1	A3
- 7	50-910232-28	.	• • STRIP,BACKING	1	A3
- 8	50-910253	.	• • COLLAR,AIR DUCT	1	A15
	AN931-12-20	.	• • GROMMET,BAFFLE SECTION	2	A3
- B	35-910232-8	.	• • SKIRT ASSY,LOWER LH	1	A14
- 9	35-910232-40	.	• • SEAL,RUBBER	1	A3
- 10	35-910232-44	.	• • STRIP,BACKING	2	A3
- C	35-910232-6	.	• SECTION,UPPER RH BAFFLE	1	A14
	35-910246-6	.	• SECTION,UPPER RH BAFFLE	1	A15
- 11	35-910232-34	.	• • SEAL,RUBBER	1	A3
- 12	35-910232-42	.	• • STRIP,BACKING	1	A3
- 13	35-910232-21	.	• • STRIP,BACKING	1	A3
- 14	35-910232-30	.	• • STRIP,BACKING	1	A3
- 15	35-910232-44	.	• • STRIP,BACKING	1	A3
- 16	35-910252	.	• ADAPTER,BATTERY BLAST AIR	1	A3
	35-910248	.	• TUBE,MAGNETO BLAST	2	A14
- 17	35-910242	.	• TUBE,LH MAGNETO BLAST	1	A15
	35-910243	.	• TUBE,RH MAGNETO BLAST	1	A15
	AN526-832-6	.	• SCREW,BLAST TUBE ATTACHING	8	A3
	AN960-8	.	• WASHER	8	A3
	AN365-832	.	• NUT	8	A3
- D	35-910232-10	.	• SKIRT ASSY,LOWER RH	1	A14
- 18	35-910232-48	.	• • SEAL,RUBBER	1	A3
	35-910232-44	.	• • STRIP,BACKING	2	A3

MODEL 35 THRU G35 PARTS CATALOG

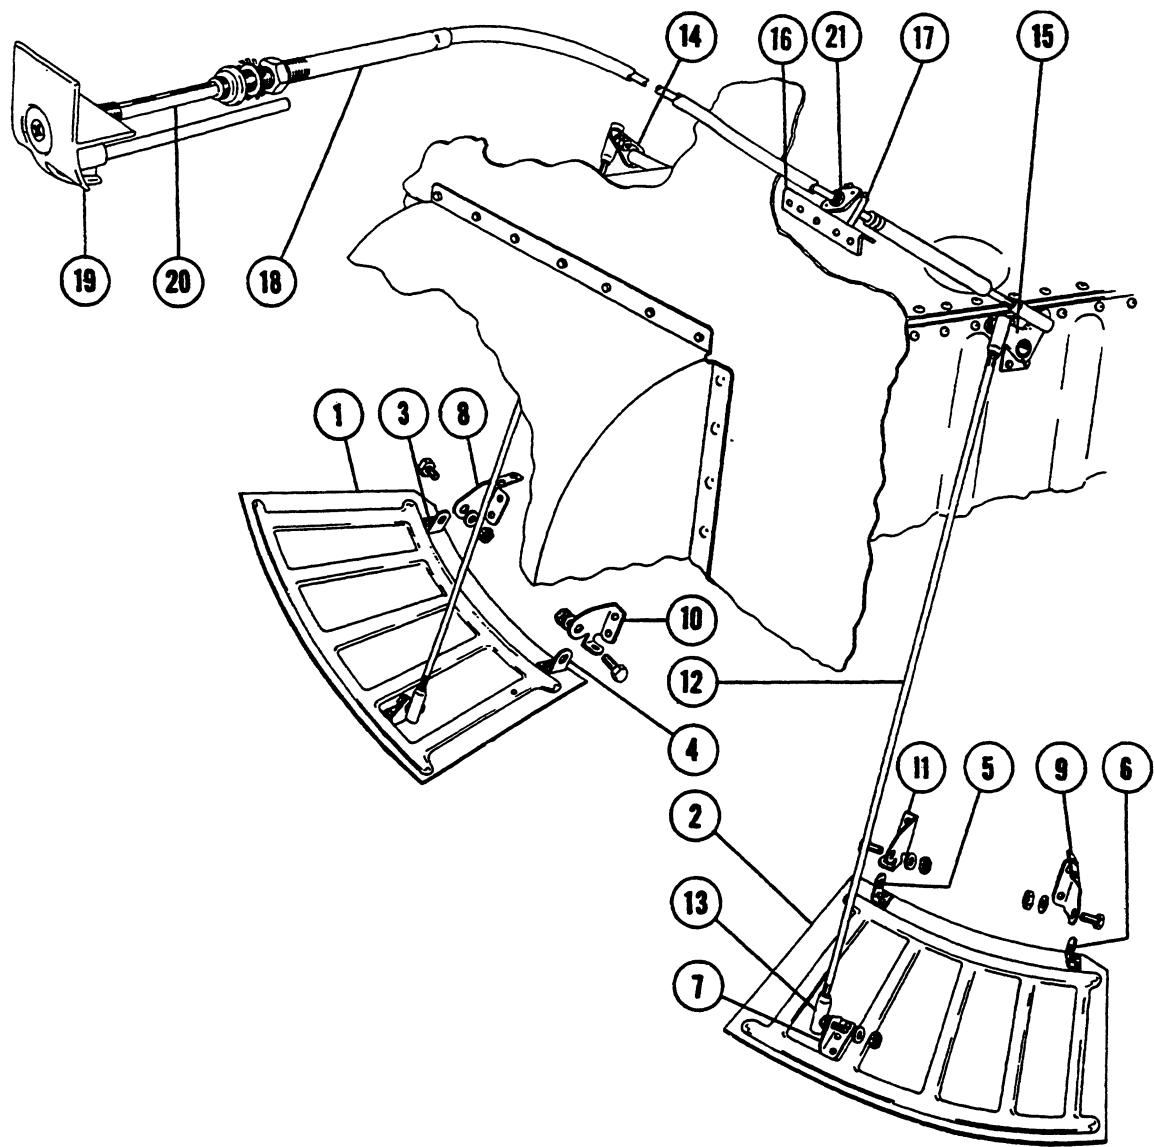


Figure 76. Cowl Flap and Control Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
76 - 1	35-910053		FLAP ASSY,LH COWL	.	
- 2	35-910053-1		FLAP ASSY,RH COWL	.	1
	AN3-4		BOLT,FLAP ATTACHING	.	2
	AN960-10		WASHER.	.	2
	AN310-3		NUT	.	2
- 3	35-910056	.	• HINGE,LH OUTBD FLAP	.	1
- 4	35-910056-1	.	• HINGE,LH INBD FLAP	.	1
- 5	35-910057	.	• HINGE,RH INBD FLAP	.	1
- 6	35-910053	.	• HINGE,RH OUTBD FLAP	.	1
- 7	35-910058	.	• BRACKET,FLAP CONTROL	.	1
- 8	35-415342-6	.	HINGE,LH OUTBD FLAP	.	1
- 9	35-415342-7	.	HINGE,RH OUTBD FLAP	.	1
- 10	35-415342-4	.	HINGE,LH INBD FLAP	.	1
- 11	35-415342-5	.	HINGE,RH INBD FLAP	.	1
- 12	35-944012	.	LINK,FLAP CONTROL	.	1
- 13	316	.	JOINT,LINK ATTACHING BALL	.	2
	AN960-10		WASHER.	.	2
	AN365-1032		NUT,LOCK.	.	2
	AN345-10		NUT	.	2
- 14	35-944011	.	SHAFT,FLAP CONTROL ARM	.	1
- 15	35-944025	.	ARM,FLAP CONTROL	.	1
	AN3-7A		BOLT,ARM ATTACHING	.	1
	AN960-10		WASHER.	.	1
	AN365-1032		NUT	.	1
	316		JOINT,CONTROL ATTACHING BALL	.	1
	AN743-6		BRACKET,CONTROL ASSY	.	1
	AN515-8-5		SCREW,BRACKET ATTACHING	.	1
	AN960-8		WASHER.	.	1
	AN365-832		NUT	.	1
- 16	35-415330-122	.	BRACKET,CONTROL ASSY	.	1
- 17	35-944037	.	BLOCK,CLAMP	.	1
	AN515-832-20		SCREW,BLOCK ATTACHING	.	1
	AN960-8		WASHER.	.	1
	AN365-832		NUT	.	1
- 18	35-944017	.	CONTROL ASSY,COWL FLAP	.	1
- 19	35-944009	.	• HANDLE ASSY,CONTROL	.	1
- 20	35-944018	.	• CONTROL SUB ASSY	.	1
	NAS51-87		RETAINER	.	1
- 21	112436-6		RETAINER	.	1
	49338		FASTENER,/UC/	.	2
	112412		GROMMET	.	2
	112413-4		BALL	.	2

A9

A1 BCDEFG

A16
A17BCDEFG

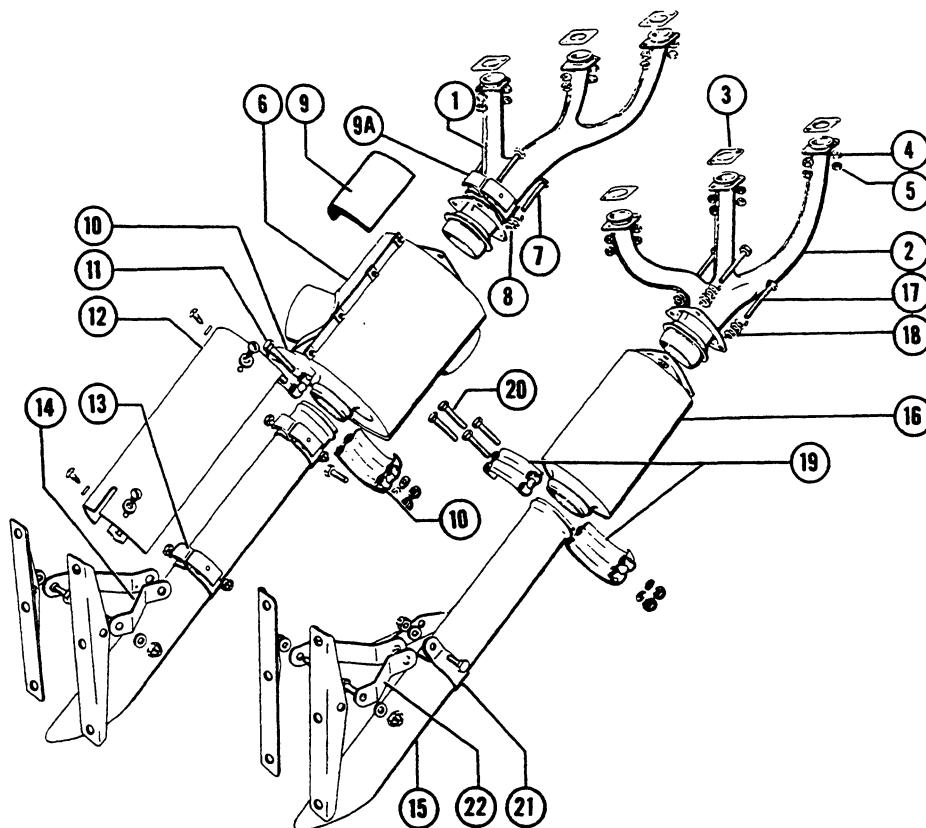


Figure 77. Exhaust System

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
77	35-950115-650	EXHAUST INSTL							1	
- 1	35-950118	• STACK ASSY,LH EXHAUST /SEE FIG. 72 FOR NHA/ .							1	
		• /INCLUDES FLANGE,PLATE & COLLAR/								
- 2	35-950116	• STACK ASSY,RH EXHAUST /SEE FIG. 72 FOR NHA/ .							1	
		• /INCLUDES FLANGE,PLATE & COLLAR/								
- 3	21493	• GASKET,EXHAUST FLANGE							3	
- 4	AN360-5	• NUT,STACK ATTACHING							6	
- 5	AN365-524	• NUT,LOCK							6	
- 6	186C	• HEATER,EXHAUST /LH SIDE/ /HLW/							1	
- 7	AN3-12	• BOLT,HEATER ATTACHING							3	
	AN960-10	• WASHER							3	
	AN310-3	• NUT							3	
	AN380-2-2	• PIN,COTTER							3	
- 8	100943CR-ZX020F	• SPRING							3	
	35-950129	• SHROUD							1	
- 9	35-950129-1	• SHROUD							1	ABCDEFG6
	AN526-632-6	• SCREW							2	G7
	AN960-6	• WASHER							2	
	AN372-632	• NUT							2	
- 9A	35-950127	• SUPPORT /ATTACHING PARTS/							1	G7
	AN3-3A	• BOLT							1	
	AN960-10	• WASHER							1	
	AN372-1032	• NUT							1	
	-----*									
- 10	186-8A	• CLAMP ASSY,/HLW/ /WHEN 186-10A IS REPLACED BY 186-8A,ADD TWO 35-950132 LINKS/							1	
- 11	AN3-4	• BOLT							4	
	AN310-3	• NUT							4	
	AN960-10	• WASHER							4	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
77	AN380-2-2		• PIN,COTTER.	•	•	•	•	•	•	•	4
- 12	35-850128		• SHROUD.	•	•	•	•	•	•	•	1
	A1785-6Z-1		• NUT,/TIN/	•	•	•	•	•	•	•	4
	AN530-6-6		• SCREW	•	•	•	•	•	•	•	4
	AN960-6		• WASHER	•	•	•	•	•	•	•	4
- 13	35-950127		• CLAMP	•	•	•	•	•	•	•	2
- 14	35-950132		• LINK	•	•	•	•	•	•	•	2
	AN3-3		• BOLT	•	•	•	•	•	•	•	2
	AN310-3		• NUT	•	•	•	•	•	•	•	4
	AN960-10		• WASHER	•	•	•	•	•	•	•	2
	AN380-2-2		• PIN,COTTER	•	•	•	•	•	•	•	4
	AN3-5		• BOLT	•	•	•	•	•	•	•	2
	AN931-3-5		• GROMMET	•	•	•	•	•	•	•	2
	AN960-10L		• WASHER	•	•	•	•	•	•	•	6
- 14A	35-415330-72		• ANGLE	•	•	•	•	•	•	•	2
- 14B	35-415330-73		• ANGLE	•	•	•	•	•	•	•	2
- 15	35-950123		• PIPE, TAIL	•	•	•	•	•	•	•	1
- 16	189		• MUFFLER, /HLW/	•	•	•	•	•	•	•	1
- 17	AN3-12		• BOLT	•	•	•	•	•	•	•	3
	AN960-10		• WASHER	•	•	•	•	•	•	•	3
	AN310-3		• NUT	•	•	•	•	•	•	•	3
	AN380-2-2		• PIN,COTTER	•	•	•	•	•	•	•	3
- 18	1000943CR-ZX020F		• SPRING	•	•	•	•	•	•	•	3
- 19	186-8A		• CLAMP ASSY, /SUPERSEDES 186-10A/	•	•	•	•	•	•	•	1
- 20	AN3-4		• BOLT	•	•	•	•	•	•	•	4
	AN310-3		• NUT	•	•	•	•	•	•	•	4
	AN960-10		• WASHER	•	•	•	•	•	•	•	4
	AN380-2-2		• PIN,COTTER	•	•	•	•	•	•	•	4
- 21	35-950126		• CLAMP	•	•	•	•	•	•	•	1
- 22	35-950132		• LINK	•	•	•	•	•	•	•	2
	AN3-3		• BOLT	•	•	•	•	•	•	•	1
	AN310-3		• NUT	•	•	•	•	•	•	•	3
	AN960-10		• WASHER	•	•	•	•	•	•	•	1
	AN380-2-2		• PIN,COTTER	•	•	•	•	•	•	•	3
	AN3-5		• BOLT	•	•	•	•	•	•	•	2
	AN931-3-5		• GROMMET	•	•	•	•	•	•	•	2
	AN960-10L		• WASHER	•	•	•	•	•	•	•	6

E6FG

MODEL 35 THRU G35 PARTS CATALOG

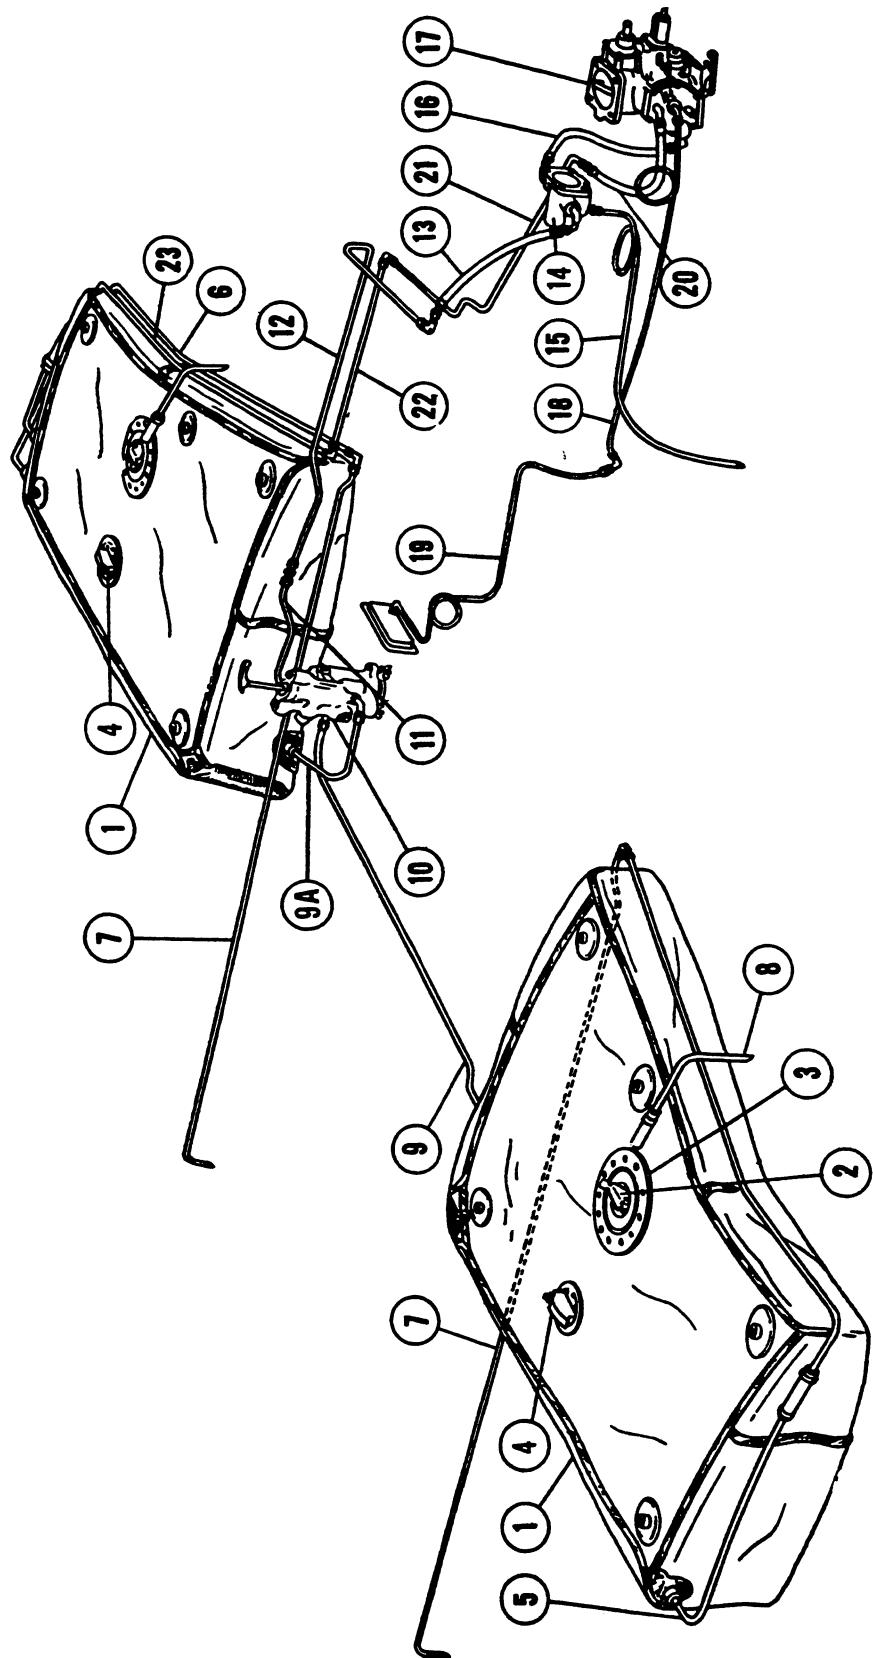


Figure 78. Fuel System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
78	35-921540	CELL ASSY,WING FUEL	• • • • • • •	1	ABCD1
	35-921540-1	CELL ASSY,WING FUEL	• • • • • • •	1	ABCD1
- 1	FCD-15375	CELL ASSY,FUEL /USR/ /LESS FITTINGS/	• • • • • • •	1	ABCD1
	FCD-15376	CELL ASSY,FUEL /USR/ /LESS FITTINGS/	• • • • • • •	1	ABCD1
	35-921218-1	CELL ASSY,WING FUEL	• • • • • • •	1	D2EFG
	35-921218-2	CELL ASSY,WING FUEL	• • • • • • •	1	D2EFG
- 2	35-921526-2	PLUG,FUEL CELL FILLER NECK	• • • • • • •	2	ABCDEF1
- 3	35-921522	NECK,FILLER	• • • • • • •	1	ABCDEF1
	35-921502	GASKET,FILLER NECK	• • • • • • •	1	
- 4	1517127	TRANSMITTER,FUEL CELL /ACS/	• • • • • • •	1	
	35-921503	GASKET,TRANSMITTER	• • • • • • •	1	
- 5	35-924060	TUBE,TANK OVERFLOW UPPER	• • • • • • •	1	A8BCDEFG
	C081318-6	TUBE,TANK OVERFLOW UPPER	• • • • • • •	1	A7
	35-924059	TUBE,TANK OVERFLOW UPPER	• • • • • • •	1	A8BCDEFG
	C081318-4	TUBE,TANK OVERFLOW UPPER	• • • • • • •	1	A7
- 6	35-921517-1	TUBE,TANK OVERFLOW LOWER	• • • • • • •	1	
	35-924056	TUBE,TANK OVERFLOW LOWER	• • • • • • •	1	A18BCDEFG
- 7	35-924054	TUBE,TANK OVERFLOW WING INBD	• • • • • • •	1	A18BCDEFG
	35-924509	TUBE,TANK OVERFLOW WING INBD	• • • • • • •	1	A19
- 8	35-921105	TUBE,TANK OVERFLOW WING INBD	• • • • • • •	1	
- 9	35-924118	TUBE,TANK OVERFLOW PAN	• • • • • • •	2	
	MS28741-6-062	TUBE,TANK TO FUEL UNIT	• • • • • • •	1	ABC1
- 9A	35-924120	TUBE,TANK TO FUEL UNIT	• • • • • • •	1	C2DEFG
	35-924142	TUBE,TANK TO FUEL UNIT	• • • • • • •	1	ABC1
- 10	35-921171	UNIT ASSY,FUEL /SEE FIG. 80/	• • • • • • •	NP	C2DEFG
	35-924065	UNIT ASSY,FUEL /SEE FIG. 80/ /SUPERSEDES 35-	• • • • • • •	1	A20
		921171 WITH ADDITION OF 35-924133 PLACARD/			A21BC3
	35-924230	UNIT ASSY,FUEL /SEE FIG. 81/	• • • • • • •	1	C2DEF2
	35-924230-1	UNIT ASSY,FUEL /SEE FIG. 81/	• • • • • • •	1	F3G
- 11	35-924052	TUBE,FUEL UNIT TO PUMP	• • • • • • •	1	A18BCDEFG
	35-924100-1	TUBE,FUEL UNIT TO PUMP	• • • • • • •	1	F3G
- 12	35-924053	TUBE,FWD FUEL UNIT TO PUMP	• • • • • • •	1	A18BCDEFG
	35-924157	TUBE,FWD FUEL UNIT TO PUMP	• • • • • • •	1	C4DEFG
- 13	AN6270-6-8	HOSE,FUEL UNIT TO PUMP	• • • • • • •	1	ABCD3
	MS28741-6-076	HOSE,FUEL UNIT TO PUMP	• • • • • • •	1	D4EFG
- 14	RD7750-1	PUMP,FUEL /ROMEC/	• • • • • • •	1	D4EFG
	TF-100-1	PUMP,FUEL /THOMPSON/	• • • • • • •	1	A22BCDEFG
- 15	35-924129	LINE,FUEL PUMP DRAIN	• • • • • • •	1	
- 16	35-924058	TUBE,FUEL PUMP TO CARBURETOR	• • • • • • •	1	
- 17	PS5C	CARBURETOR ASSY,/BENDIX/	• • • • • • •	1	
- 18	35-924126	TUBE,FUEL PRESSURE INDICATOR FWD	• • • • • • •	1	
- 19	35-924127	TUBE,FUEL PRESSURE INDICATOR AFT	• • • • • • •	1	
- 20	AN6270-4-11	HOSE,CARBURETOR VENT RETURN FWD	• • • • • • •	1	ABCD3
	MS28741-4-110	HOSE,CARBURETOR VENT RETURN FWD	• • • • • • •	1	D4EFG
- 21	35-924147	TUBE,CARBURETOR VENT RETURN FWD	• • • • • • •	1	
- 22	35-924055	TUBE,CARBURETOR VENT RETURN AFT	• • • • • • •	1	A18BCDEFG
- 23	35-924051	TUBE,CARBURETOR VENT RETURN WING	• • • • • • •	1	A18BCDEFG
	35-924121	TUBE,FUEL UNIT TO PUMP	• • • • • • •	1	A19
	35-924116	TUBE,FWD FUEL UNIT TO PUMP	• • • • • • •	1	A19
	35-924146	TUBE,CARBURETOR VENT RETURN	• • • • • • •	1	A19
	CCA-3400	VALVE,FUEL DRAIN /CTAD/	• • • • • • •	1	
	AAF-934-1	RING,O.	• • • • • • •	1	
	35-115028-20	DOOR ASSY,FUEL CELL	• • • • • • •	1	
	35-115028-14	CAP,FUEL CELL DOOR	• • • • • • •	1	
	35-115028-21	DOOR ASSY,FUEL CELL	• • • • • • •	1	
	35-115028-15	CAP,FUEL CELL DOOR	• • • • • • •	1	
	AN507-8R9	SCREW	• • • • • • •	12	
	35-921221	CELL INSTL,AUXILIARY FUEL /OPTIONAL/	• • • • • • •	1	FG
	35-921226	/SEE FIG. 79/			
		DECAL,ACCESS DOOR	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

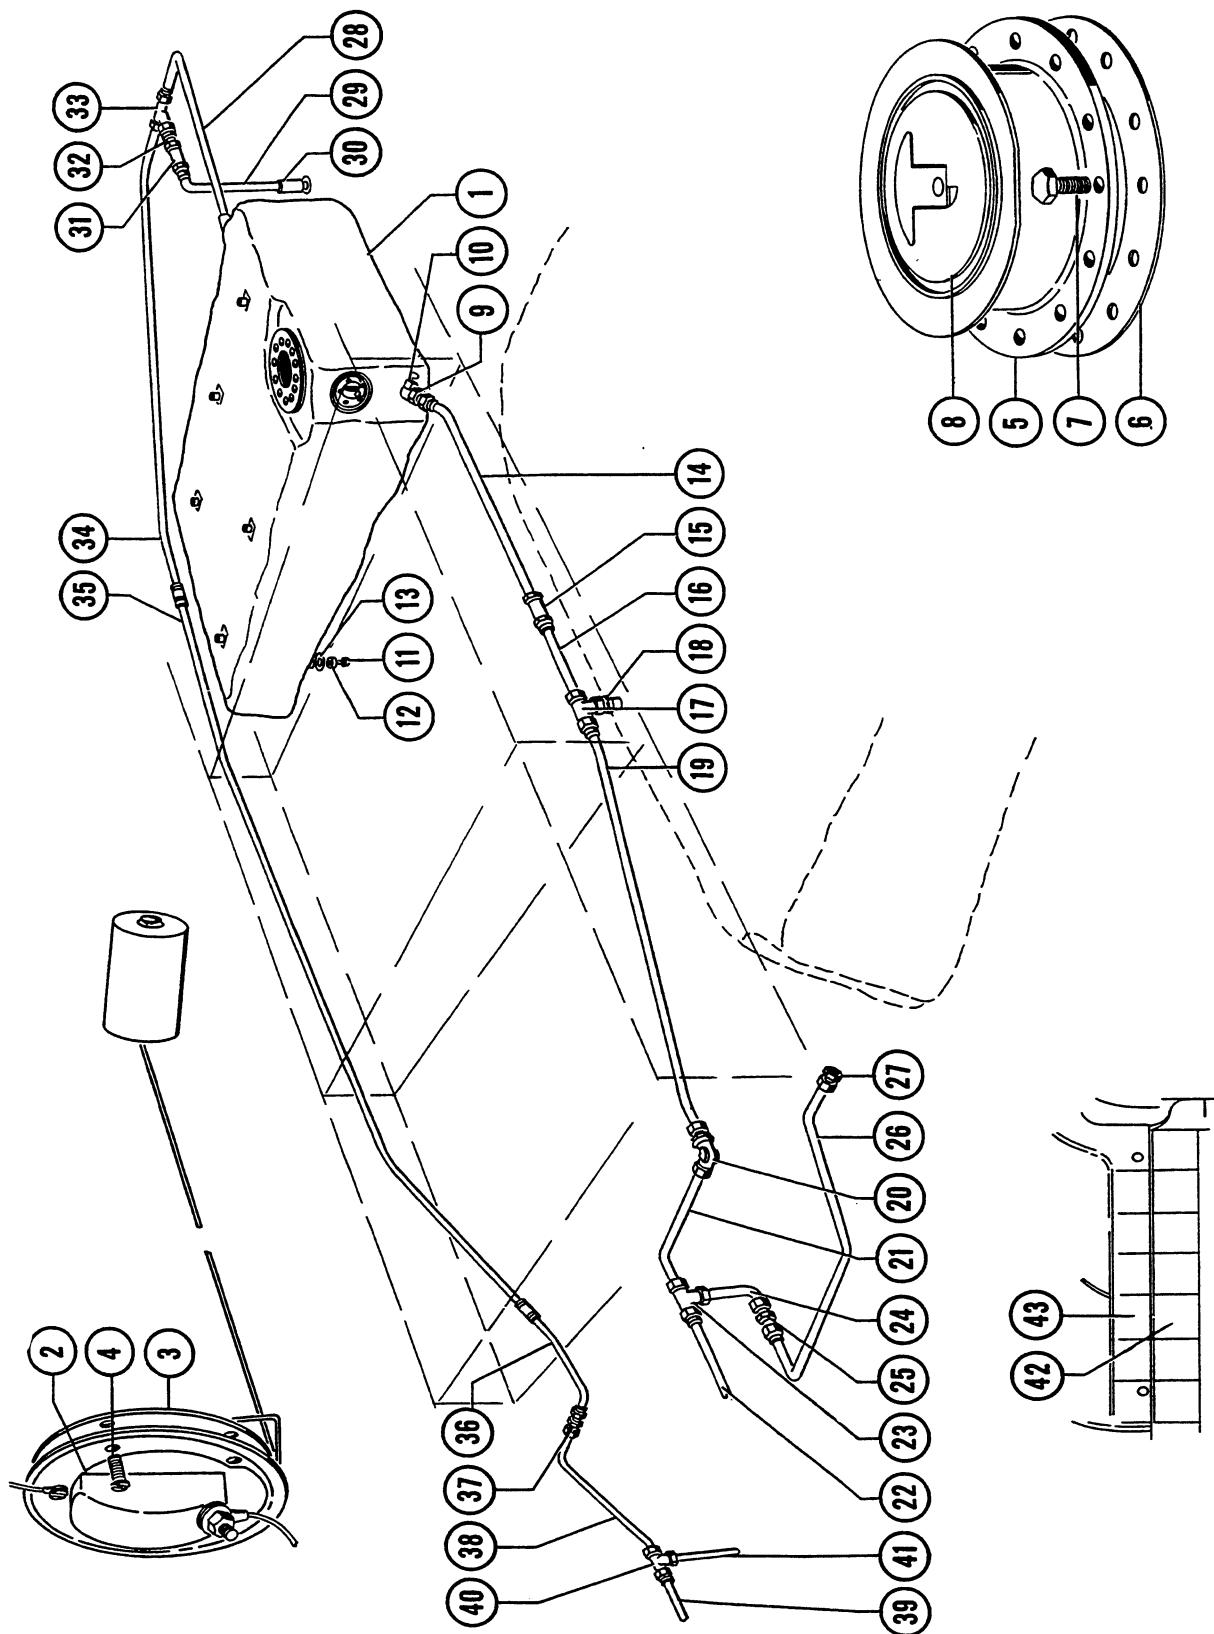


Figure 79. Wing Auxiliary Fuel Cells

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
79	35-921221		CELL INSTL,WING AUXILIARY FUEL /OPTIONAL/	1	FG
- 1	35-921222-1		• CELL ASSY,WING AUXILIARY FUEL	1	FG
	35-921222-2		• CELL ASSY,WING AUXILIARY FUEL	1	FG
- 2	35-921221-51		• TRANSMITTER,AUXILIARY FUEL CELL	1	FG
	35-921221-52		• TRANSMITTER,AUXILIARY FUEL CELL	1	FG
- 3	35-921503		• GASKET,TRANSMITTER	1	FG
- 4	AN506-10-6		• SCREW,TRANSMITTER ATTACHING	4	FG
	AN506-10-8		• SCREW,TRANSMITTER ATTACHING	1	FG
- 5	35-921221-3		• ADAPTER ASSY,FUEL CELL FILLER	1	FG
- 6	35-921502		• GASKET,FUEL CELL FILLER ADAPTER	1	
- 7	AN74-3		• BOLT,ADAPTER ATTACHING	12	FG
- 8	416-25-10		• CAP,AUXILIARY FUEL CELL	1	FG
	416-85		• CAP,AUXILIARY FUEL CELL BLANK	1	FG
			/ALTERNATE FOR 416-25-10/		
	35-921226		• PLACARD,FUEL CELL	1	FG
- 9	35-921221-63		• STRAINER ASSY,FUEL	1	FG
	35-921221-64		• STRAINER ASSY,FUEL	1	FG
- 10	AN737-30		• CLAMP	1	FG
- 11	CCA-3400		• VALVE+DRAIN /CTAD/	1	
- 12	35-921532		• WASHER	1	FG
- 13	35-921533		• CLAMP	1	FG
- 14	35-921221-65		• TUBE ASSY,FUEL LINE	1	FG
	35-921221-66		• TUBE ASSY,FUEL LINE	1	FG
- 15	111-517702		• VALVE,FUEL LINE CHECK	1	FG
- 16	35-921221-67		• TUBE ASSY,FUEL LINE	1	FG
	35-921221-68		• TUBE ASSY,FUEL LINE	1	FG
- 17	AN970-2D		• TEE	1	FG
	AN912-1D		• REDUCER	1	FG
	AN816-6D		• NIPPLE	1	FG
- 18	CCA-4850		• VALVE,/CTAD/	1	FG
- 19	35-921221-69		• TUBE ASSY,FUEL LINE	1	FG
	35-921221-70		• TUBE ASSY,FUEL LINE	1	FG
- 20	AN833-6D		• ELBOW	1	FG
- 21	35-921221-37		• TUBE ASSY,FUEL LINE	1	FG
- 22	35-921221-39		• TUBE ASSY,FUEL LINE	1	FG
- 23	AN824-6D		• TEE	1	FG
- 24	35-921221-49		• TUBE ASSY,SELECTOR VALVE	1	FG
- 25	AN815-6D		• UNION	1	FG
- 26	35-924222		• TUBE ASSY,SELECTOR VALVE	1	FG
- 27	AN815-6		• UNION	1	FG
	AN902-6		• GASKET	1	FG
- 28	35-921221-59		• TUBE ASSY,VENT LINE	1	FG
	35-921221-60		• TUBE ASSY,VENT LINE	1	FG
- 29	35-921221-21		• TUBE ASSY,VENT LINE	1	FG
- 30	106200-4-9		• HOSE,CONNECTING	3	FG
- 31	111-517700		• VALVE,CHECK	1	FG
- 32	35-921221-19		• TUBE ASSY,VENT LINE	1	FG
- 33	AN824-4D		• TEE	1	FG
- 34	35-921221-23		• TUBE ASSY,VENT LINE	1	FG
	35-921221-24		• TUBE ASSY,VENT LINE	1	FG
- 35	35-921221-25		• TUBE ASSY,VENT LINE	1	FG
	35-921221-26		• TUBE ASSY,VENT LINE	1	FG
- 36	35-921221-27		• TUBE ASSY,VENT LINE	1	FG
	35-921221-28		• TUBE ASSY,VENT LINE	1	FG
- 37	AN815-4D		• UNION	1	FG
- 38	35-921221-43		• TUBE ASSY,VENT LINE	1	FG
- 39	35-921221-45		• TUBE ASSY,VENT LINE	1	FG
- 40	AN824-4D		• TEE	1	FG
- 41	35-921221-47		• TUBE ASSY,VENT LINE	1	FG
- 42	AN3023-3		• SWITCH,AUXILIARY FUEL GAGE SELECTOR	1	FG
- 43	35-324341		• PLACARD,SELECTOR SWITCH	1	F4
	35-324341-1		• PLACARD,SELECTOR SWITCH	1	F5G

MODEL 35 THRU G35 PARTS CATALOG

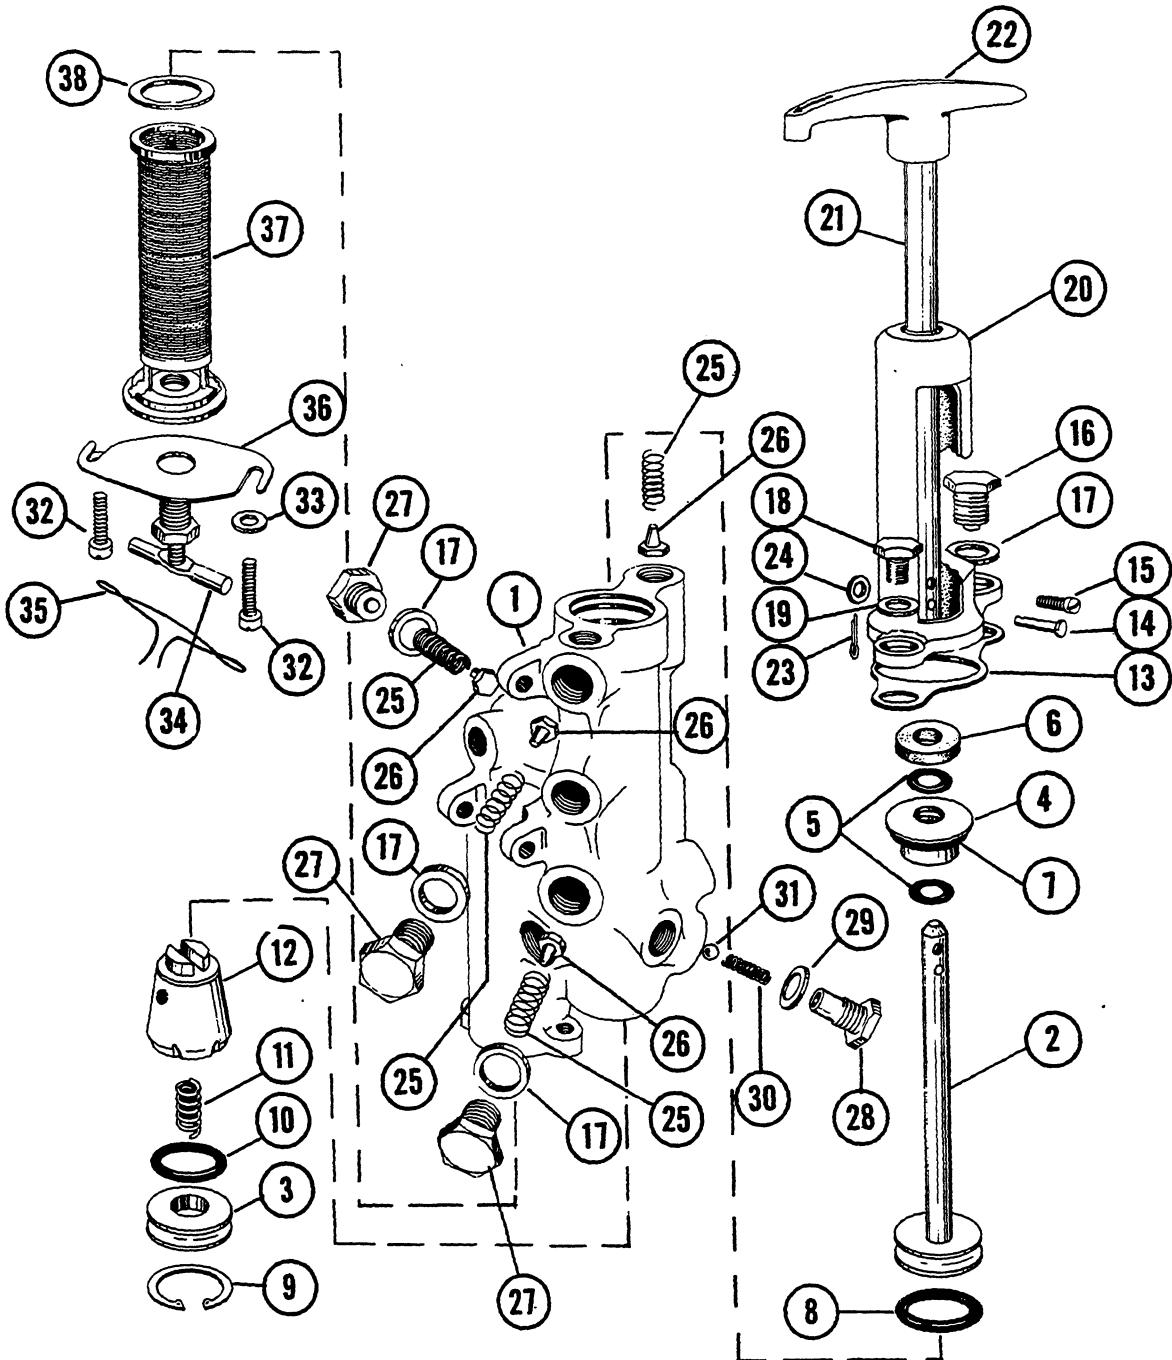


Figure 80. Fuel Unit Assembly (D1 thru D2900)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
80	35-921171		UNIT ASSY,FUEL /SEE FIG. 78 FOR NHA/.	NP	A20
	35-924065		/ORDER 35-924065 & ADD 35-924133 PLACARD/		
- 1	35-924069		UNIT ASSY,FUEL /SEE FIG. 78 FOR NHA/.	1	A21BC3
	35-921198		. HOUSING	1	A21BC3
- 2	35-924067		. HOUSING	1	A20
	35-921174		. PISTON ASSY	1	A21BC3
- 3	35-921172		. PISTON ASSY	1	A20
- 4	35-924070-600		. PLATE /INCLUDES 2 EACH 2-2045-2-8 PACKINGS/ .	1	
- 5	2-2045-2-8		. PACKING,/PA/.	2	
- 6	102808-10-026-	012	. WASHER.	1	
- 7	2-2045-2-19		. PACKING,/PA/.	1	
- 8	2-2045-2-15		. PACKING,/PA/.	1	A21BC3
	35-921184		. RING.	1	A20
- 9	NAS50-112		. RING.	1	
- 10	2-2045-2-17		. PACKING,/PA/.	1	
- 11	35-921168		. SPRING.	1	
- 12	35-924068		. VALVE	1	A21BC3
	35-921175		. VALVE	1	A20
- 13	35-921166		. GASKET.	1	A21BC3
- 14	AN392-15		. PIN	1	A21BC3
- 15	AN500A6-4		. SCREW	1	A21BC3
	AN515-6-4		. SCREW	2	A20
	AN936A6		. WASHER.	2	A20
- 16	35-921167		. PLUG.	1	A21BC3
- 17	AN902-6		. GASKET.	6	A21BC3
- 18	35-921163		. PLUG.	1	A21BC3
- 19	AN902-4		. GASKET.	1	A21BC3
- 20	35-921159		. SUPPORT,FUEL UNIT HANDLE.	1	A21BC3
	35-921192		. HANDLE ASSY	1	
- 21	35-921193		. . HANDLE.	1	
- 22	35-921201		. . KNOB ASSY	1	
	102809H003-027		. . PIN	1	
- 23	AN380-2-1		. . KEY	1	A21BC3
- 24	AN960-4		. . WASHER.	1	A21BC3
- 25	111504-010-016-	0018-11	. . SPRING.	4	
- 26	35-921177		. . VALVE	5	
- 27	35-921176		. . PLUG.	4	A21BC3
- 28	35-921185		. . PLUG.	1	A21BC3
	35-921176		. . PLUG.	5	A20
- 29	105090L067-6-	020	. . WASHER.	1	A21BC3
- 30	111504-035-007-	0018-15	. . SPRING.	1	
- 31	NO NUMBER		. BEARING,BALL 3/16 O.D. /GRADE I/.	1	
- 32	AN500A10-12		. SCREW	2	
- 33	AN960-10L		. WASHER.	2	
- 34	AN771-1		. COCK,DRAIN.	1	
- 35	AAF995-32-4		. WIRE,SAFETY	1	
- 36	35-921197		. PLATE	1	
- 37	35-921178		. STRAINER ASSY,FUEL.	1	
- 38	35-921181		. GASKET.	1	
	35-924100-602		. COVER	1	

MODEL 35 THRU G35 PARTS CATALOG

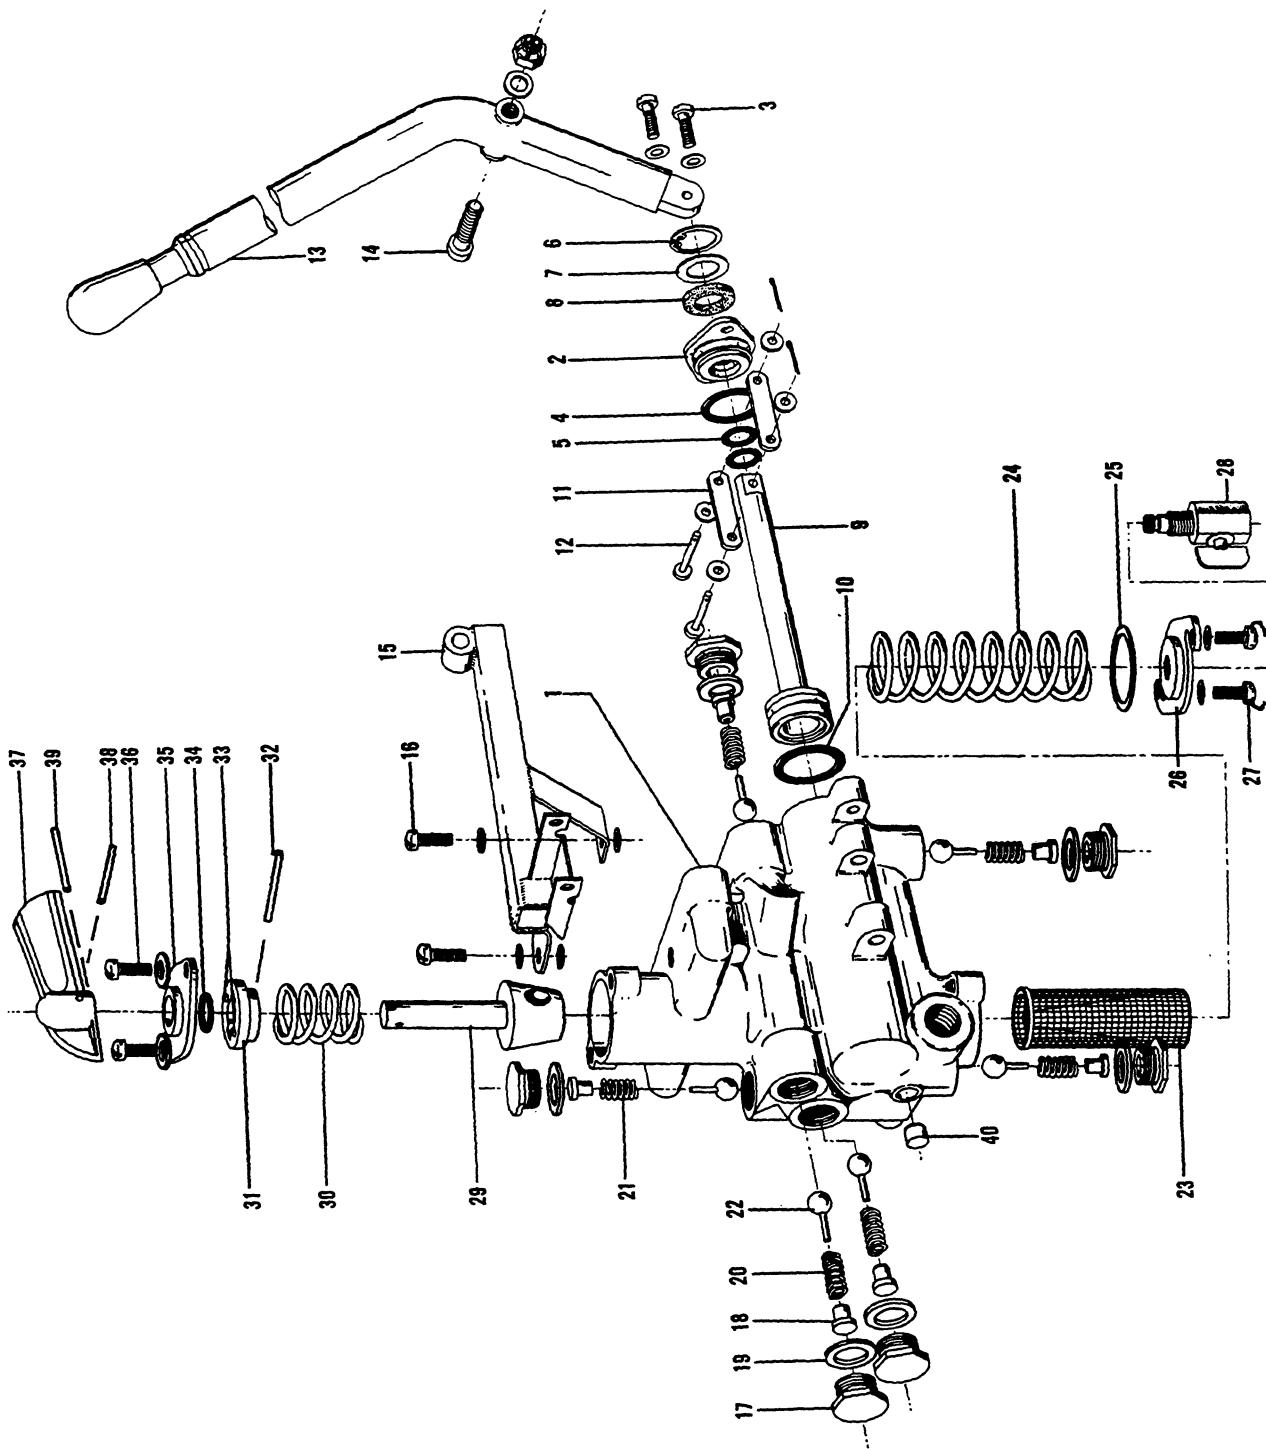


Figure 81. Fuel Unit Assembly (D2901 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
81	35-924230	UNIT ASSY,FUEL /SEE FIG. 78 FOR NHA/	1	C2DEF2
	35-924230-1	UNIT ASSY,FUEL /SEE FIG. 78 FOR NHA/	1	F3G
- 1	35-924074	• HOUSING,FUEL UNIT	1	C2DEF2
	35-924249	• HOUSING,FUEL UNIT	1	F3G
- 2	35-924232-1	• HEAD,FUEL PUMP CYLINDER	1	C2DEF2
- 3	AN500-10-10	• SCREW	2	C2DEF2
	AN936A10	• WASHER	2	C2DEF2
- 4	2-2045-2-15	• PACKING,/PA/	1	C2DEF2
- 5	2-2045-2-8	• PACKING,/PA/	2	C2DEF2
- 6	NAS50-77	• RING,SNAP	1	C2DEF2
- 7	AN960-716L	• WASHER	1	C2DEF2
- 8	102808-4-024-012	• WASHER	1	C2DEF2
- 9	35-924236	• PISTON,EMERGENCY HAND PUMP	1	C2DEF2
- 10	2-2045-2-15	• PACKING,/PA/	1	C2DEF2
- 11	35-924234	• LINK,PISTON ROD	2	C2DEF2
- 12	AN392-11	• PIN	2	C2DEF2
	AN960-6L	• WASHER	4	C2DEF2
	AN380-2-1	• PIN,COTTER	2	C2DEF2
- 13	35-924245	• HANDLE ASSY,EMERGENCY HAND PUMP	1	C2DEF2
- 14	AN4-20	• BOLT	1	C2DEF2
	AN960-416	• WASHER	1	C2DEF2
	AN310-4	• NUT	1	C2DEF2
	AN380-2-2	• PIN,COTTER	1	C2DEF2
- 15	35-924239	• SUPPORT ASSY,FUEL UNIT HANDLE	1	C2DEF2
- 16	AN500-10-10	• SCREW	2	C2DEF2
	AN936A10	• WASHER	2	C2DEF2
	AN960-10	• WASHER	2	C2DEF2
- 17	35-924096	• PLUG,CHECK VALVE RETAINER	6	C2DEF2
- 18	35-924097	• GUIDE,CHECK VALVE	6	C2DEF2
- 19	AN6290-6	• GASKET	6	C2DEF2
- 20	111504-010-016-0020-22	• SPRING	5	C2DEF2
- 21	111504-024-014-0020-14	• SPRING	1	C2DEF2
- 22	35-924237	• VALVE ASSY,FUEL UNIT	6	C2DEF2
- 23	45-924091	• STRAINER ASSY,FUEL	1	C2DEF2
- 24	111504-063-058-0324-3	• SPRING	1	C2DEF2
- 25	35-921181	• GASKET,FUEL STRAINER PLATE	1	C2DEF2
- 26	50-920057	• PLATE,FUEL STRAINER LOCK & SEAL	1	C2DEF2
- 27	AN500A10-10	• SCREW	2	C2DEF2
	AN960-10L	• WASHER	2	C2DEF2
- 28	180B	• VALVE,/AADC/	1	C2DEF2
	K9000S-1A	• VALVE,/KOE/ /ALTERNATE FOR /AADC/ 180B/	1	C2DEF2
	35-924235-3	• VALVE ASSY,FUEL SELECTOR /SPARE ASSY/	1	C2DEF2
- 29	35-924235	• VALVE ASSY,FUEL SELECTOR	1	C2DEF2
- 30	111504-070-052-0100-3-1/2	• SPRING	1	C2DEF2
- 31	35-924229	• RETAINER,DETENT BALL	1	C2DEF2
- 32	52-022-094-0625	• PIN,ROLL /EN/	1	C2DEF2
- 33	NO NUMBER	• BEARING,BALL 3/16 O.D. GRADE 1/	2	C2DEF2
- 34	2-2045-2-7	• PACKING,/PA/	1	C2DEF2
- 35	35-924231	• CAP,FUEL SELECTOR	1	C2DEF2
- 36	AN500-10-10	• SCREW	2	C2DEF2
	AN936A10	• WASHER	2	C2DEF2
	35-924251-1	• HANDLE,FUEL UNIT /SPARE ASSY/	1	C2DEF2
- 37	35-924251	• HANDLE,FUEL UNIT	1	C2DEF2
	MS20392-1-23	• PIN,SPARE ASSY/	1	C2DEF2
	AN381-2-1	• PIN,COTTER /SPARE ASSY/	1	C2DEF2
- 38	52-022-094-0625	• PIN,ROLL /EN/	1	C2DEF2
- 39	52-022-094-0437	• PIN,ROLL /EN/	1	C2DEF2
- 40	AN932-2	• PLUG	1	C2DEF2

MODEL 35 THRU G35 PARTS CATALOG

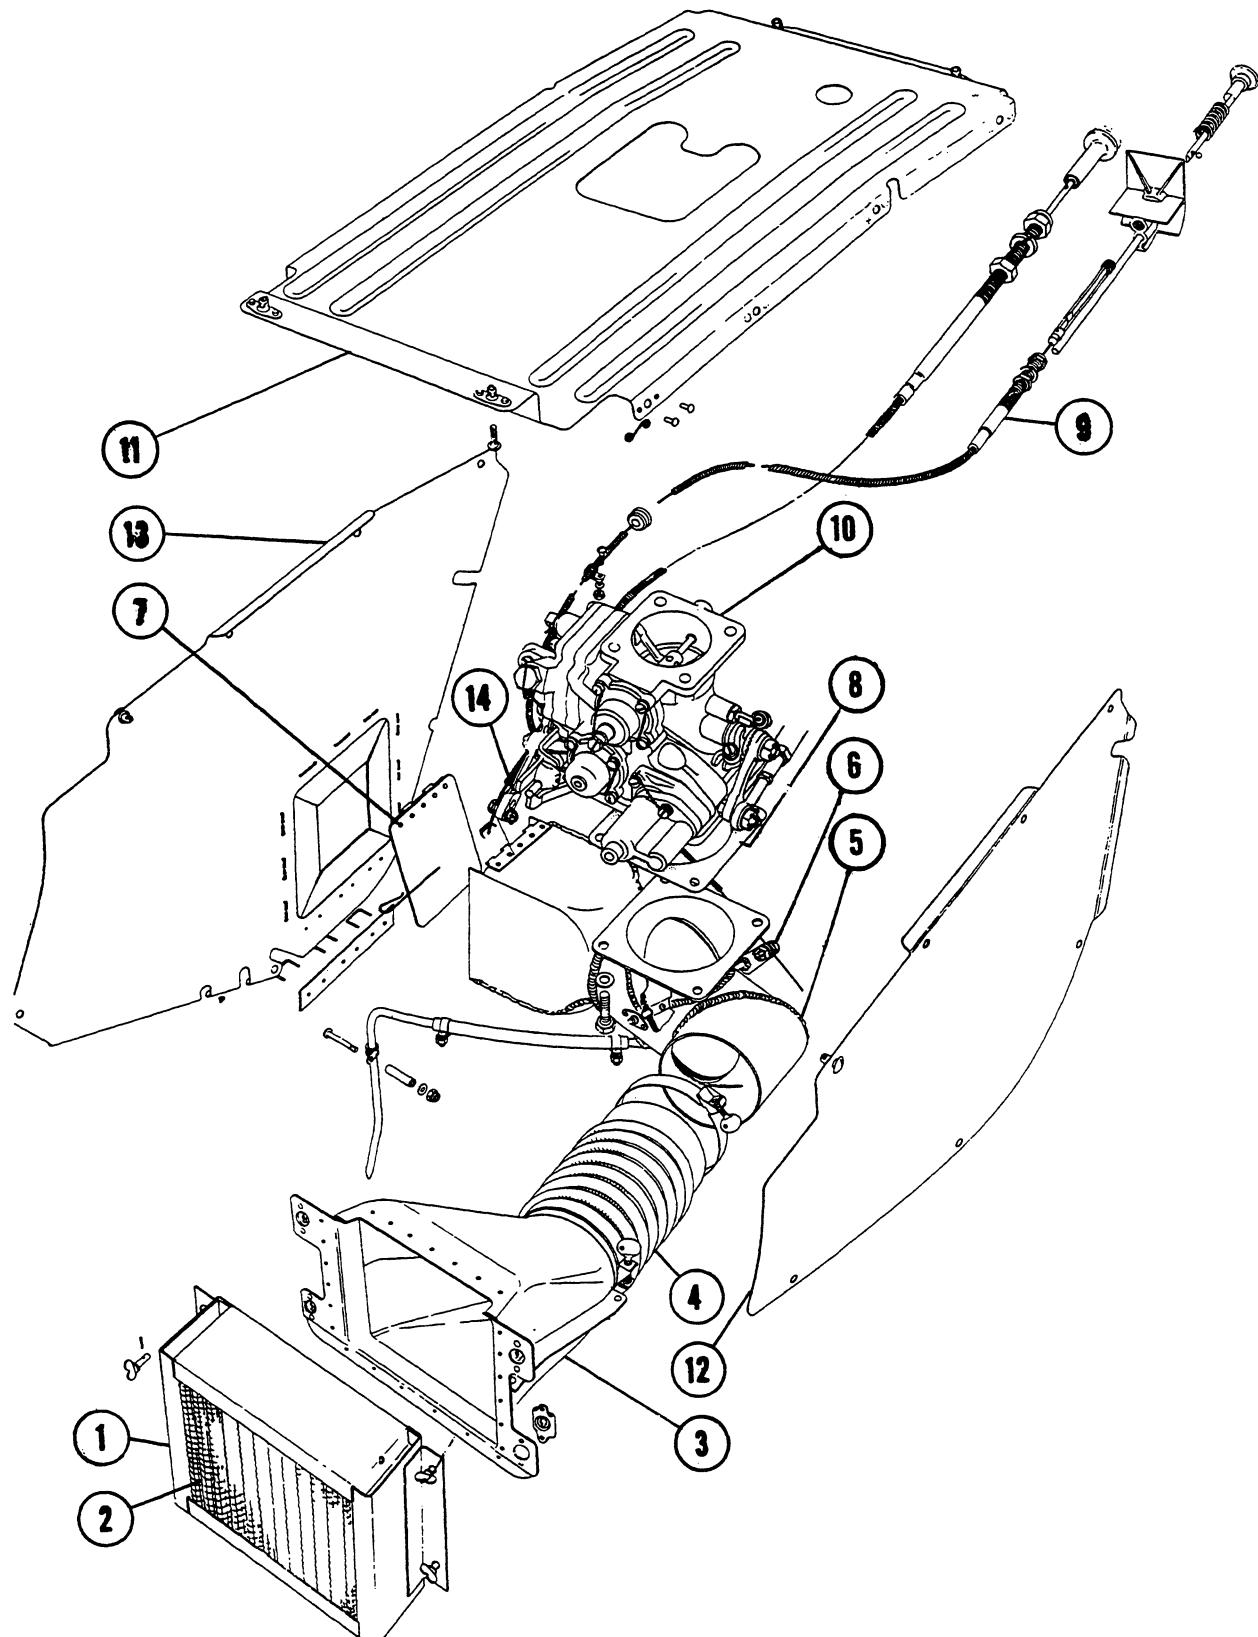


Figure 82. Carburetor Induction System (D1 thru D1116)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
82 - 1	35-921210		FILTER ASSY,CARBURETOR AIR.	1	
- 2	56-1377		• FILTER ASSY,AIR	1	
- 2A	W99899-2-130		• STUD,FILTER ATTACHING /UC/	4	
	35-919024		GASKET	1	
- 2B	99871-C.098		FASTENER,/UC/	4	
	99785-2		PIN,/UC/	4	
- 3	35-919106		DUCT ASSY,FWD	1	
- 4	111716XX6-4		DUCT,FLEXIBLE	1	
	105798-11		CLAMP	2	
- 5	35-919123		VALVE ASSY,MAIN & ALTERNATE AIR	1	
	35-919107		• VALVE ASSY,CARBURETOR AIR	1	
- 6	35-919109		• • VALVE ASSY,CARBURETOR AIR	1	
	35-919108		• • VALVE,CARBURETOR AIR	1	
	35-919124		• • VALVE ASSY,ALTERNATE AIR	1	
- 7	35-919124-12		• • DOOR,CARBURETOR HEAT INTAKE	1	
	35-919125		• • SPRING,ALTERNATE AIR VALVE	1	
	35-919124-8		• • HINGE	1	
	35-919124-10		• • HINGE	1	
	106043-08-06-		HOSE,CARBURETOR AIR VALVE DRAIN	1	
	050				
	35-919126		TUBE,CARBURETOR AIR VALVE DRAIN	1	
- 8	35-919118		GASKET,VALVE TO CARBURETOR	1	
	AN74A4		BOLT,VALVE TO CARBURETOR ATTACHING	4	
- 9	35-944007-4		CONTROL ASSY,CARBURETOR HEAT	1	
	35-944020-4		• CONTROL ASSY,/LESS HANDLE/	1	
	35-944009		• HANDLE ASSY,CARBURETOR HEAT	1	
	35-944009-2		• • HANDLE,CARBURETOR HEAT	1	
	35-944004		• • GUIDE,HANDLE	1	
	112149-2		GROMMET	1	
	112136-2		RETAINER	1	
	49338		FASTENER,/UC/	2	
- 10	380208-3		CARBURETOR,/BX/	1	AB
	35-910227-12		BAFFLE ASSY,CARBURETOR	1	
- 11	35-910227-2		• BAFFLE,CARBURETOR TOP	1	
- 12	35-910227-4		• BAFFLE,CARBURETOR	1	
	AW-20		FASTENER,DZUS	3	
- 13	35-910227-7-650		• BAFFLE,CARBURETOR	1	
	35-910227-10		• • SEAL,HOT AIR DOOR RUBBER	1	
	35-910227-8		• • DOUBLER,RUBBER SEAL	1	
	AW-25		• FASTENER,DZUS	2	
	GA-3175		• GROMMET,/DZ/	5	
- 14	35-944022		CONTROL,MIXTURE	1	
	112149-2		GROMMET	4	
	112436-2		RETAINER	2	
	49338		FASTENER,/UC/	4	
	383952		LEVER ASSY,MIXTURE CONTROL	1	A4BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

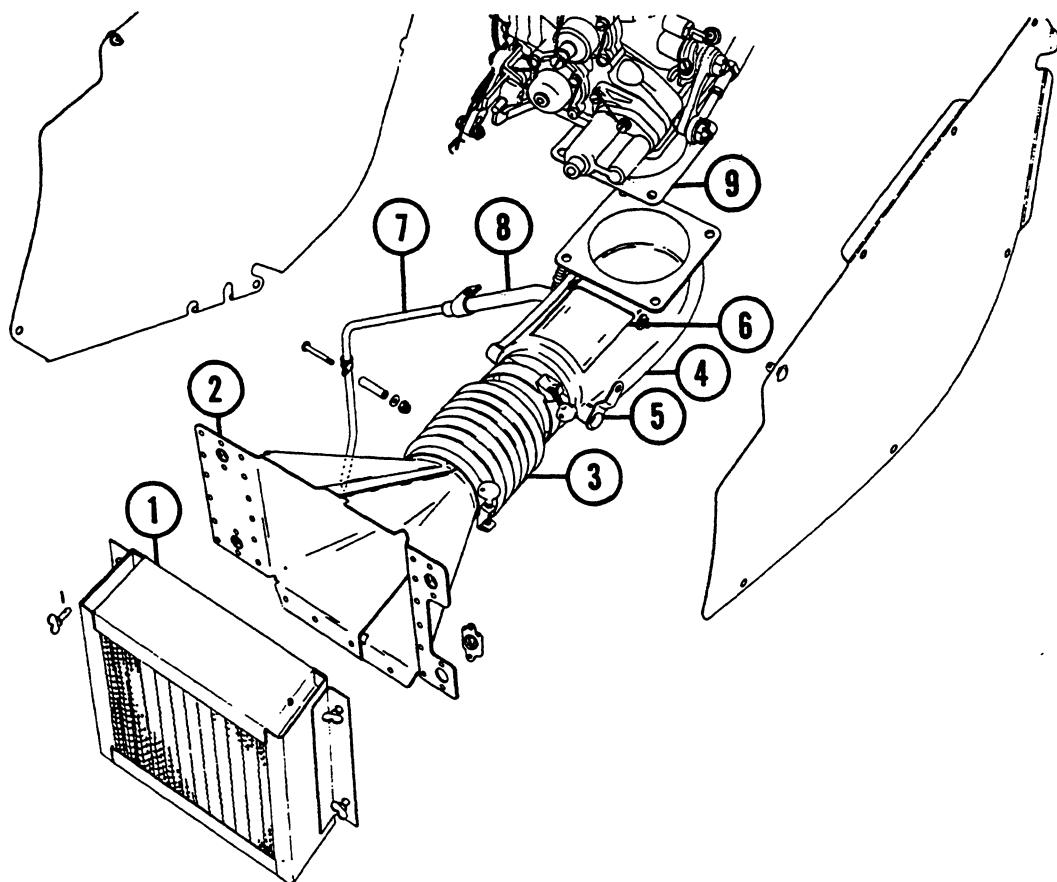


Figure 83. Carburetor Induction System

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
83 - 1	35-921210 56-1377 W99899-2-130 99785-2 35-919024		FILTER ASSY, CARBURETOR AIR	1	A23BCDEFG
			• FILTER	1	A23BCDEFG
			• STUD, FILTER ATTACHING /UC/	4	A23BCDEFG
			• PIN, /UC/	4	A23BCDEFG
			GASKET	1	A23BCDEFG
- 2	35-919135		DUCT ASSY	1	A23BCDEFG
- 2A	99871-C-098		FASTENER	4	A23BCDEFG
- 3	111716XX6-4 105798-11 35-919118		DUCT, FLEXIBLE	1	A23BCDEFG
			CLAMP	2	A23BCDEFG
			GASKET	1	A23BCDEFG
- 4	35-919141 35-919133 35-919136		VALVE ASSY, CARBURETOR AIR	1	A23BCDEFG
			• SPRING, CARBURETOR VALVE	1	A23BCDEFG
			• PIN	1	A23BCDEFG
- 5	35-919137		• ARM ASSY, CARBURETOR VALVE	1	A23BCDEFG
- 6	35-919138-1 35-919139		• DOOR ASSY, CARBURETOR VALVE ALTERNATE AIR	1	A23BCDEFG
			• VALVE, CARBURETOR AIR	1	A23BCDEFG
- 7	35-919143		TUBE, CARBURETOR AIR VALVE DRAIN	1	A23BCDEFG
- 8	106043ZB026 AN735D6 AN515-8-6 AN365-832 AN960-8L		HOSE, CARBURETOR AIR VALVE DRAIN	1	A23BCDEFG
			CLAMP	2	A23BCDEFG
			SCREW	2	A23BCDEFG
			NUT	2	A23BCDEFG
			WASHER	2	A23BCDEFG
- 9	391330-2 35-919140-4		CARBURETOR	1	A23BCDEFG
			BUSHING	2	A23BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

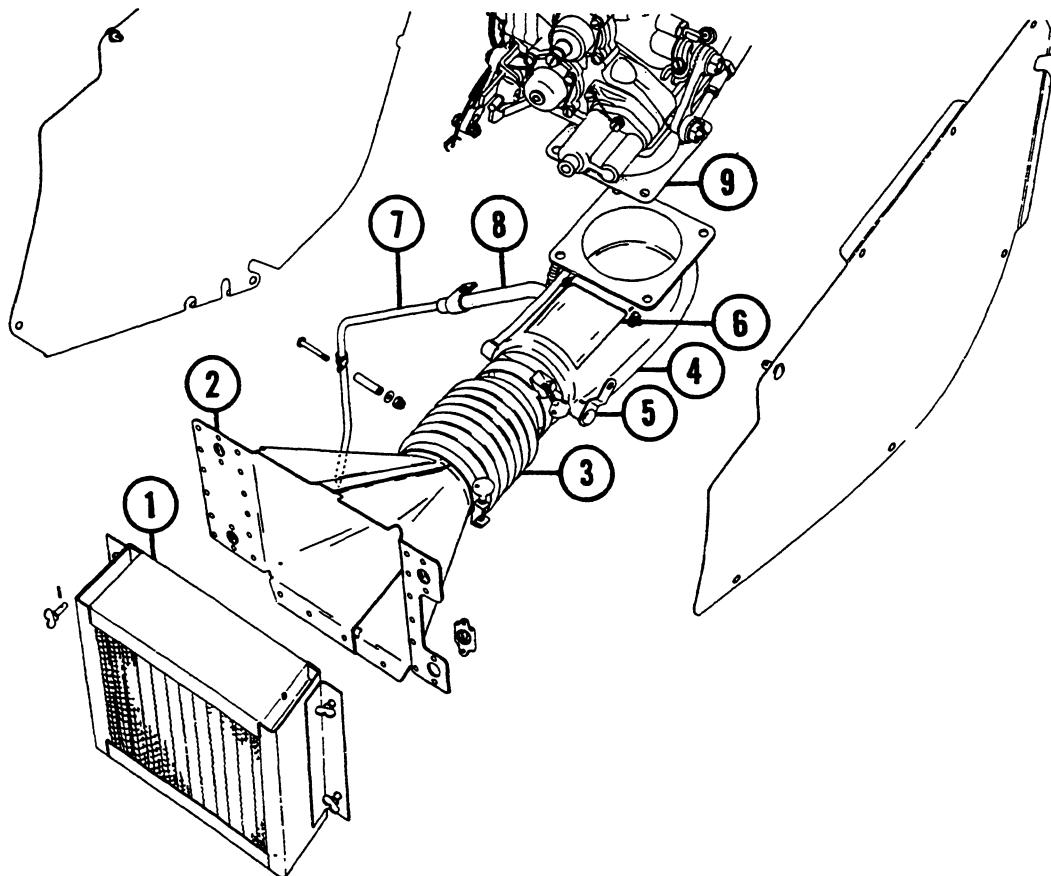


Figure 84. Carburetor Induction System

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
84 - 1	13917	FILTER ASSY, CARBURETOR AIR.							1	B1CDEFG
	R81A	• FILTER.							1	B1CDEFG
	W98293-2-170	• STUD, FILTER ATTACHING							4	B1CDEFG
	99785-2	• PIN							4	B1CDEFG
	45-919024	GASKET.							1	B1CDEFG
- 2	45-919010	DUCT ASSY							1	B1CDEFG
- 2A	99871-C-098	FASTENER.							4	B1CDEFG
- 3	111716XX6-4	DUCT, FLEXIBLE							1	B1CDEFG
	105798-11	CLAMP							2	B1CDEFG
- 4	35-919149-2	VALVE ASSY, CARBURETOR AIR							1	B1CDEFG
	35-919133	• SPRING, CARBURETOR VALVE							1	B1CDEFG
	35-919136	• PIN							1	B1CDEFG
- 5	35-919146	• ARM ASSY, CARBURETOR VALVE							1	B1CDEFG
- 6	35-919138-1	• DOOR ASSY, CARBURETOR VALVE ALTERNATE AIR							1	B1CDEFG
	35-919139	• VALVE, CARBURETOR AIR.							1	B1CDEFG
	35-919118	GASKET.							1	B1CDEFG
- 7	35-919143	TUBE, CARBURETOR AIR VALVE DRAIN							1	B1CDEFG
	AN526-832-12	SCREW							1	B1CDEFG
	AN960-8	WASHER.							1	B1CDEFG
	AN365-832	NUT							1	B1CDEFG
	AN742-6C	CLAMP							1	B1CDEFG
	100696P-ZF022	SPACER.							1	B1CDEFG
- 8	106043ZB026	HOSE.							1	B1CDEFG
	AN735D6	CLAMP							2	B1CDEFG
	AN515-8-6	SCREW							2	B1CDEFG
	AN960-8	WASHER.							2	B1CDEFG
	AN365-832	NUT							2	B1CDEFG
- 9	391330-2	CARBURETOR.							1	B1CDEFG

MODEL 35 THRU G35 PARTS CATALOG

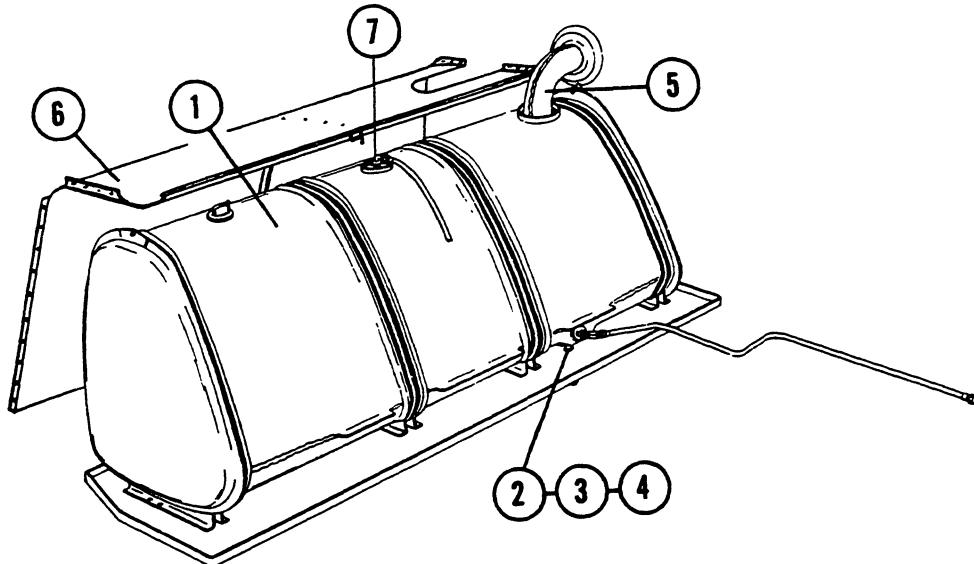


Figure 85. Auxiliary Fuel Tank

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
85	35-511	KIT,AUXILIARY GAS TANK.	A1
	35-511A	KIT,AUXILIARY GAS TANK.	A2BCD
	35-924224	KIT,AUXILIARY GAS TANK.	EFG
- 1	35-924161 SA4	TANK ASSY,AUXILIARY GAS	EFG
	35-921526-2	CAP ASSY.
- 2	35-924171	STRAINER ASSY	A1
	35-924172	STRAINER ASSY	A2BCDEFG
- 3	AN901-6A	GASKET,STRAINER	2
	35-924173	NIPPLE,DRAIN.	1
- 4	CPP100-2	VALVE,DRAIN	1
	35-924175	GASKET,TANK PAN	1
- 5	35-924161-14	NECK.	1
- 6	35-924184	COVER ASSY.	ABCD
	35-924223	COVER ASSY.	EFG
	35-924183	COVER,BRACE ASSY.	1
	35-924162	SUPPORT,AUXILIARY FUEL TANK	1
- 7	35-924182	TRANSMITTER	1

MODEL 35 THRU G35 PARTS CATALOG

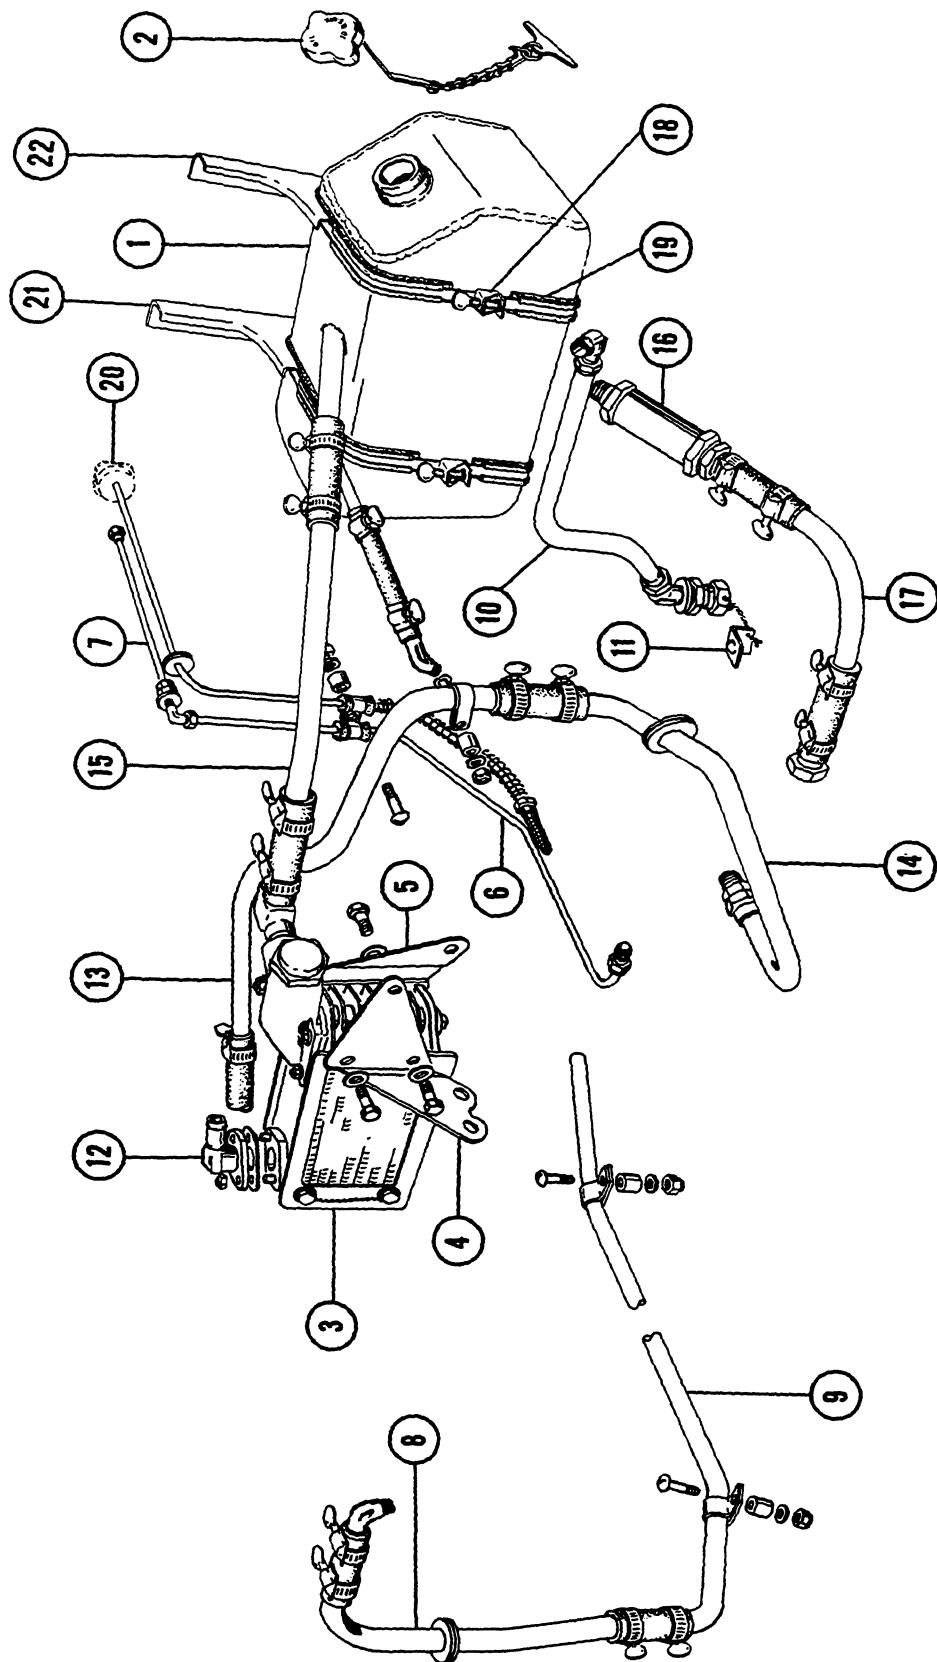


Figure 86. Oil System (D1 thru D150)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
86 - 1	35-939110	TANK,OIL.		1	A14
- 2	35-939111	CAP,OIL TANK.		1	A14
	35-939111-6	• CAP & STICK		1	A14
	109615-4-060	• CHAIN,CAP		1	A14
	39A4240	• HOOK,CHAIN.		1	A14
	S-177	• BAR,CAP RETAINING		1	A14
- 3	8513295	RADIATOR,COOLING.		1	A14
	AN75-4	BOLT,RADIATOR ATTACHING		2	A14
	AN960-516L	WASHER,RADIATOR ATTACHING		2	A14
- 4	35-939042	BRACKET,RADIATOR SUPPORT.		1	A14
	AN75-4	BOLT,SUPPORT BRACKET ATTACHING.		2	A14
	AN960-516L	WASHER,SUPPORT BRACKET ATTACHING.		2	A14
- 5	35-939043	BRACKET,AFT RADIATOR SUPPORT.		1	A14
	AN75-4	BOLT,SUPPORT BRACKET ATTACHING.		2	A14
- 6	35-939047	TUBE ASSY,PRESSURE.		1	A14
	AN742-3	CLAMP,TEMPERATURE TUBE.		1	A14
	AN742-2	CLAMP,PRESSURE TUBE		1	A14
	AN526-832-16	SCREW,ATTACHING		1	A14
	100696D12-06-	SPACER,CLAMP.		1	A14
	016				
	AN931-4-12	GROMMET,TEMPERATURE TUBE.		1	A14
	AN833-2D	ELBOW,PRESSURE TUBE		1	A14
	AN960-616	WASHER,PRESSURE TUBE.		1	A14
- 7	35-939052	TUBE,CABIN SECTION PRESSURE		1	A14
- 8	35-939048	TUBE,UPPER CRANKCASE BREATHER		1	A14
		/SEE FIG. 72 FOR NHA/			
	AN931-10-14	GROMMET,BREATHER TUBE		1	A14
	AN842-10	ELBOW,BREATHER TUBE		1	A14
	106200H10-15	HOSE,BREATHER TUBE.		2	A14
	AN748-34	CLAMP,BREATHER TUBE HOSE.		4	A14
- 9	35-939049	TUBE,LOWER CRANKCASE BREATHER		1	A14
	AN742-10	CLAMP,LOWER CRANKCASE		2	A14
	100696-012-06-	SPACER,LOWER CRANKCASE CLAMP.		2	A14
	016				
	AN526-832-16	SCREW,LOWER CRANKCASE CLAMP		2	A14
	AN816-2B	NIPPLE,LOWER OIL PRESSURE TUBE.		1	A14
	106200H6-24	HOSE,CRANKCASE VENT		1	A14
- 10	35-939076	TUBE,DRAIN.		1	A14
- 11	35-939075	CAP,DRAIN TUBE.		1	A14
	AN822-8	ELBOW,DRAIN		1	A14
	AN837-8D	ELBOW,DRAIN		1	A14
	AN743-6	BRACKET,DRAIN		1	A14
- 12	35-959050	ADAPTER ASSY,RADIATOR		1	A14
	35-939059	GASKET,RADIATOR ADAPTER		1	A14
- 13	35-939054	TUBE,UPPER SCAVENGER OIL.		1	A14
	106200H12-15	HOSE,SCAVENGER TUBE		2	A14
	AN748-38	CLAMP,SCAVENGER TUBE HOSE		4	A14
	AN742-12	CLAMP,SCAVENGER TUBE.		1	A14
	100696-012-06-	SPACER,SCAVENGER TUBE CLAMP		1	A14
	028				
	AN526-832-22	SCREW,SCAVENGER TUBE CLAMP.		1	A14
- 14	35-939053	TUBE,LOWER SCAVENGER.		1	A14
	AN816-12B	NIPPLE,LOWER SCAVENGER TUBE		1	A14
	AN931-12-20	GROMMET,LOWER SCAVENGER TUBE.		1	A14
- 15	35-939055	TUBE,RETURN		1	A14
	AN842-12	ELBOW,RETURN TUBE		1	A14
	106200H12-15	HOSE,RETURN TUBE.		2	A14
	AN748-38	CLAMP,RETURN TUBE		4	A14
- 16	35-939082	VALVE,CHECK		1	AB2
	AN840-10D	ADAPTER,CHECK VALVE		1	A14
- 17	35-939056	TUBE.		1	A14
	106200H10-15	HOSE.		2	A14
	AN748-34	CLAMP,HOSE.		4	A14
- 18	105798-31	CLAMP		2	A14
- 19	35-939036	CUSHION,TANK STRAP.		2	A14
- 20	1512139	INDICATOR,TEMPERATURE		1	A14
- 21	35-415330-74	SUPPORT		1	A14
- 22	35-415330-76	SUPPORT		1	A14

MODEL 35 THRU G35 PARTS CATALOG

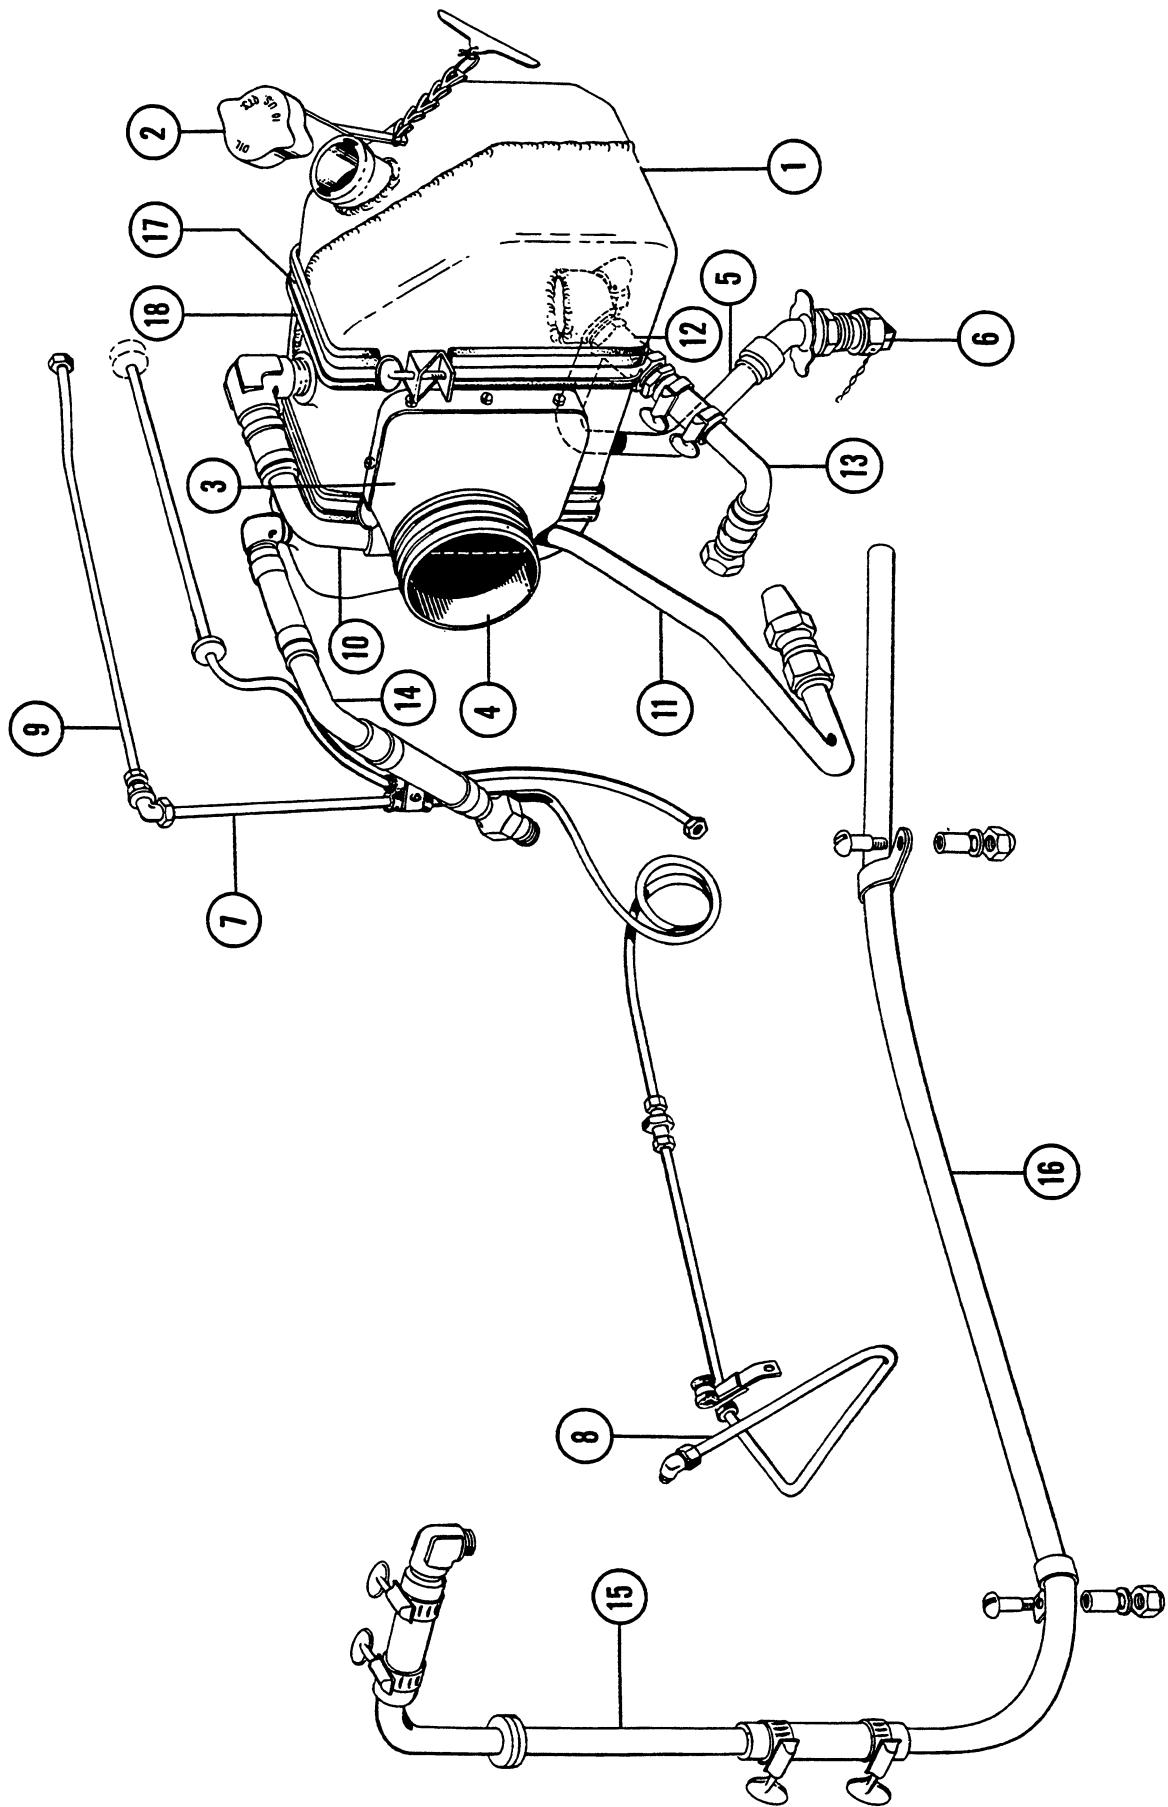


Figure 87. Oil System (D151 thru D1116)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
87 - 1	35-939013		TANK ASSY,OIL	1	A15
- 2	35-939077		CAP ASSY,OIL TANK	1	A15
	35-939077-4		• STICK,CAP MEASURING	1	A15
	109615-4-030		• CHAIN,CAP	1	A15
	39A4240		• HOOK,CAP CHAIN.	1	A15
	S177		• BAR,CAP CHAIN RETAINING	1	A15
- 3	35-939060		DUCT,AFT OIL COOLER	1	A15
	AN515-8-8		SCREW,DUCT ATTACHING.	10	A15
- 4	35-939079		DUCT,FWD OIL COOLER	1	A15
- 5	35-939073		TUBE,TANK DRAIN	1	A15
	AN822-8		ELBOW,TANK DRAIN.	1	A15
	AN837-8D		ELBOW,DRAIN TUBE.	1	A15
- 6	AN929-8		CAP,DRAIN LINE.	1	A15
- 7	35-939047		TUBE,FWD OIL PRESSURE	1	A15
- 8	35-939080		TUBE,AFT OIL PRESSURE	1	A15
	AN816-2B		NIPPLE,PRESSURE TUBE.	1	A15
	AN815-2D		UNION,PRESSURE TUBE	1	A15
- 9	35-939052		TUBE,PRESSURE	1	A15
	AN833-2D		ELBOW,PRESSURE TUBE	1	A15
- 10	35-939072		TUBE,SCAVENGER UPPER.	1	A15
	AN842-10		ELBOW,SCAVENGER TUBE.	1	A15
	106200H10-15		HOSE,SCAVENGER LINE	1	A15
- 11	35-939071		TUBE,LOWER OIL SCAVENGER.	1	A15
	AN816-10-12B		NIPPLE,SCAVENGER TUBE	1	A15
- 12	35-939082		VALVE,TANK CHECK.	1	A15
	AN840-10D		ADAPTER,CHECK VALVE	1	A15
- 13	35-939074		TUBE,INLET.	1	A15
	106200H10-15		HOSE,INLET.	2	A15
- 14	35-939081		TUBE,TANK VENT.	1	A15
	106200H6-15		TUBE,TANK VENT.	1	A15
	AN842-6		ELBOW	1	A15
	AN840-6		ADAPTER	1	A15
- 15	35-939048		TUBE,CRANKCASE BREATHER UPPER	1	A15
	AN842-10		ELBOW,CRANKCASE BREATHER TUBE	1	A15
	106200H10-15		HOSE,CRANKCASE BREATHER	2	A15
- 16	35-939049		TUBE,LOWER CRANKCASE BREATHER	1	A15
- 17	105798-31		STRAP,TANK.	2	A15
- 18	35-939036		CUSHION,TANK STRAP.	2	A15

MODEL 35 THRU G35 PARTS CATALOG

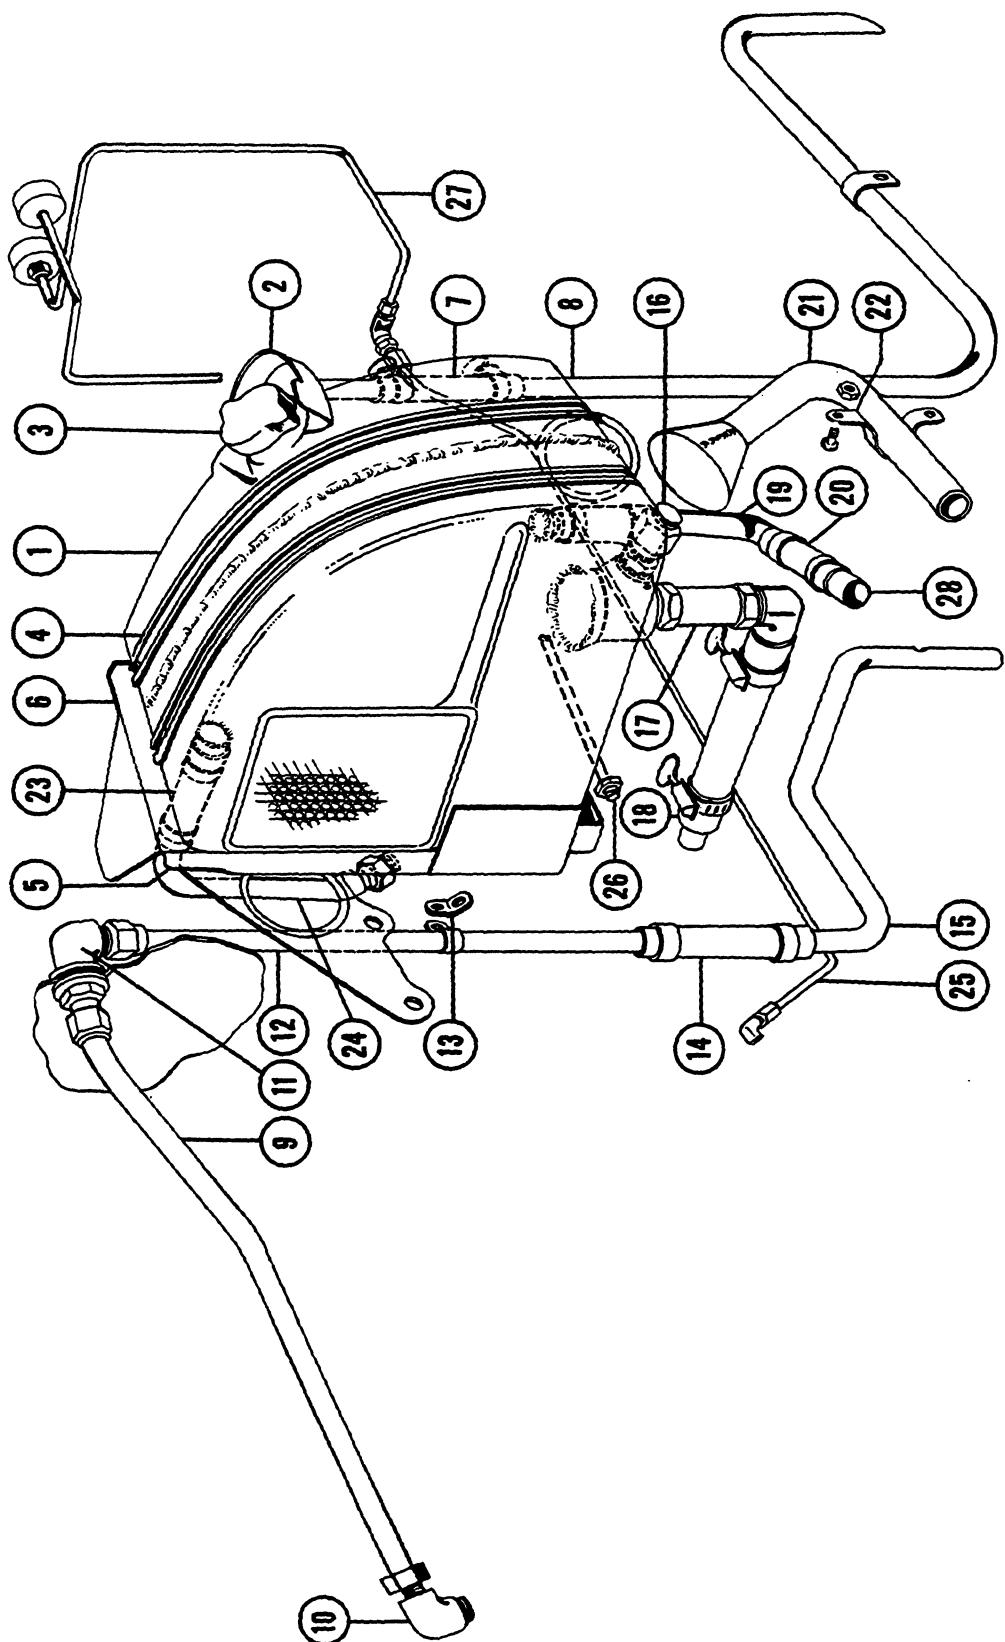


Figure 88. Oil System (D1117 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
88	35-939172	TANK ASSY,OIL COOLER.	1	BCDEFG
- 1	35-939164	• TANK ASSY	1	A23
- 2	35-939173	• SCUPPER ASSY.	1	A23BCDEFG
- 3	35-939146	CAP ASSY.	1	A23BCDEFG
	35-939116	CAP ASSY.	1	B3CDEFG
- 4	35-939113	STRAP ASSY.	2	A23BCDEFG
- 5	35-939171	SUPPORT ASSY.	1	A23BCDEFG
- 6	35-939145	SUPPORT ASSY.	1	A23BCDEFG
- 7	106043-12-06-10	TUBE.	1	BCDEFG
	AN737-22	CLAMP	2	A23BCDEFG
- 8	35-939174	TUBE,OIL TANK SCUPPER DRAIN	1	BCDEFG
	AN526-832-8	SCREW	3	A23BCDEFG
	AN960-8	WASHER.	3	A23BCDEFG
	AN742D8C	CLAMP	3	A23BCDEFG
- 9	35-939166	TUBE ASSY,CRANKCASE BREATHER.	1	A17BCDEFG
		/SEE FIG. 72 FOR NHA/	
- 10	AN822-10B	ELBOW	1	A23BCDEFG
- 11	AN833-10D	ELBOW	1	A23BCDEFG
	AN960D1416	WASHER.	2	A23BCDEFG
	AN924-10D	NUT	1	A23BCDEFG
- 12	35-939168	TUBE ASSY,CRANKCASE BREATHER.	1	A17BCDEFG
	AN742-12C	CLAMP	1	A23BCDEFG
	AN515-8-8	SCREW	1	A23BCDEFG
	AN960-8	WASHER.	1	A23BCDEFG
	AN365-832	NUT	1	A23BCDEFG
- 13	35-910245	BRACKET,/USED WITH E-185 ENGINE/	1	A23BCDEFG
	35-910287	BRACKET,/USED WITH E-225-8 ENGINE/	1	A23BCDEFG
- 14	106200FR10-24	HOSE.	1	A23BCDEFG
	AN737-34	CLAMP	2	A23BCDEFG
- 15	35-939165	TUBE ASSY,CRANKCASE BREATHER.	1	A17BCDEFG
	AN742-12C	CLAMP	1	A23BCDEFG
	100696D12-06-	SPACER.	1	A23BCDEFG
	016		
	AN526-832-16	SCREW	1	A23BCDEFG
	AN960-8	WASHER.	1	A23BCDEFG
	AN365-832	NUT	1	A23BCDEFG
	35-939048	TUBE,UPPER CRANKCASE BREATHER	1	A24
	35-939049	TUBE,LOWER CRANKCASE BREATHER	1	A24
- 16	35-939169	FITTING ASSY.	1	A23BCDEFG
	AN929-8	CAP	1	A23BCDEFG
- 17	35-939082	VALVE ASSY.	1	AB2
- 18	106200FR10-30	HOSE.	2	A23BCDEFG
	AN737-38	CLAMP	2	A23BCDEFG
	AN842-10D	ELBOW	1	A23BCDEFG
- 19	35-939151	TUBE,OIL SCAVENGER.	1	A23BCDEFG
- 20	106200FR10-15	HOSE.	2	A23BCDEFG
	AN737-34	CLAMP	4	A23BCDEFG
	AN816-10-12B	NIPPLE.	1	A23BCDEFG
- 21	35-939157	TUBE ASSY,OIL DRAIN	1	A23BCDEFG
- 22	35-939161	CLAMP	1	A23BCDEFG
	AN3-3A	BOLT.	2	A23BCDEFG
	AN960-10	WASHER.	2	A23BCDEFG
	AN365-1032	NUT	2	A23BCDEFG
- 23	106200FR8-12	HOSE.	1	A23BCDEFG
	AN737-30	CLAMP	2	A23BCDEFG
	AN822-8	ELBOW,/USED WITH ENGINES HAVING 3/8 PIPE THREAD BOSS ON ACCESSORY CASE/	1	A23BCDEFG
	35-939159	TUBE ASSY,OIL TANK VENT /USED WITH ENGINES. . . . HAVING 3/8 PIPE THREAD BOSS ON ACCESSORY CASE/	1	A23BCDEFG
- 24	35-939162	TUBE ASSY,OIL TANK VENT /USED WITH 35-939164 ON ENGINES HAVING 1/4 PIPE THREAD BOSS ON ACCESSORY CASE/	1	A23BCDEFG
	AN822-6	ELBOW,/USED WITH 35-939164 ON ENGINES HAVING. . 1/4 PIPE THREAD BOSS ON ACCESSORY CASE/	1	A23BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
88 - 25	35-939148 AN822-2B								TUBE ASSY, ENGINE SECTION OIL PRESSURE	1	A23BCDEFG
- 26	859563 AN900-10								ELBOW	1	A23BCDEFG
- 27	35-939150 35-590077-1 35-590074-1								ADAPTER, OIL TEMPERATURE BULB	1	A23BCDEFG
- 28	35-939142								GASKET	1	A23BCDEFG
									TUBE ASSY, CABIN SECTION OIL PRESSURE	1	A23BCDEFG
									BAFFLE, WINTER	1	A23BCDEFG
									TRough ASSY	1	A23BCDEFG
									TUBE, SCAVENGER	1	A23BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

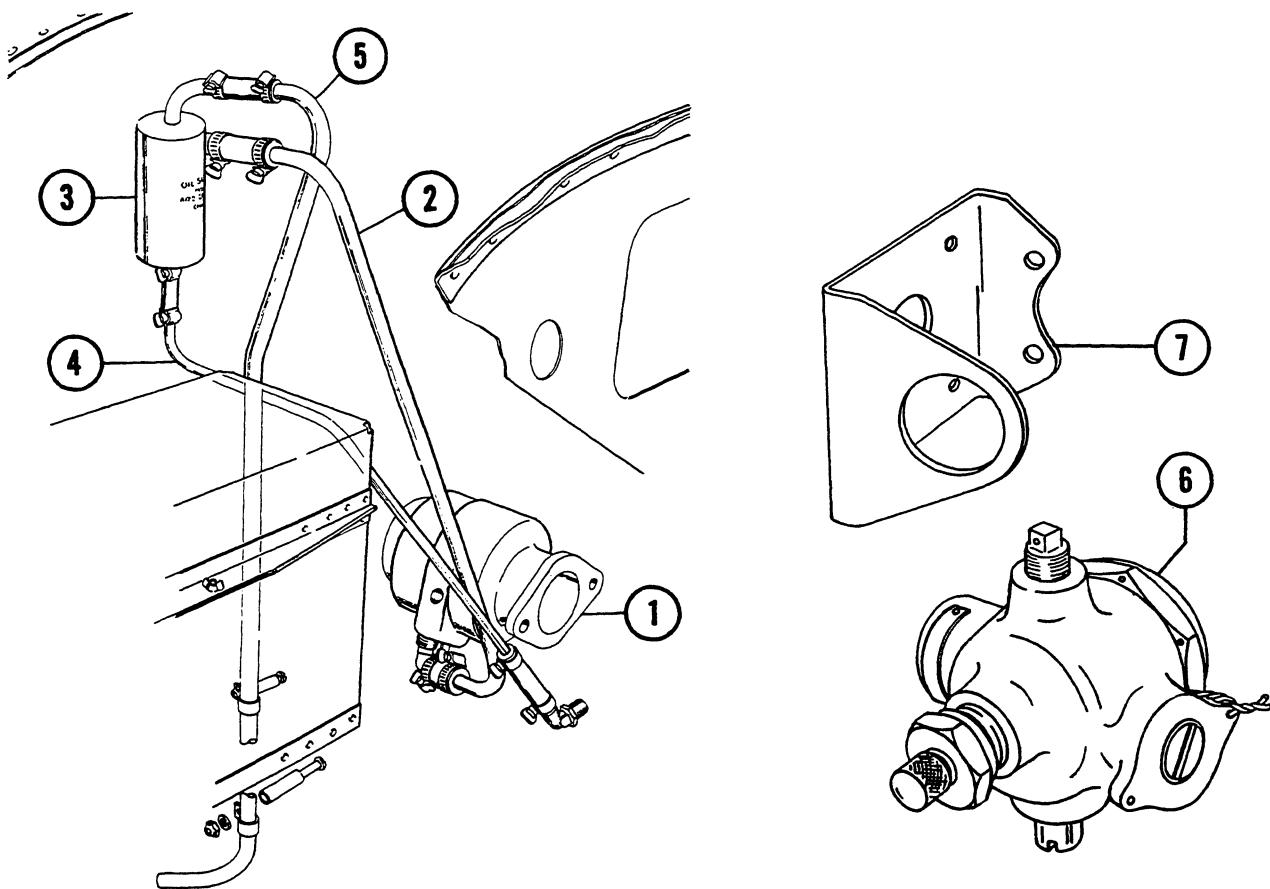


Figure 89. Vacuum System

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
89 - 1	3P-194F A513-DB AN842-8 106200H8-15 AN748-30	PUMP, VACUUM /OPTIONAL/ PUMP, VACUUM /OPTIONAL/ ELBOW,SEPARATOR TUBE. HOSE,SEPARATOR TUBE LOWER CLAMP,LOWER HOSE.							1	A3
- 2	35-910121 106200H8-14 AN748-30	TUBE,SEPARATOR. HOSE,UPPER. CLAMP,UPPER HOSE.							1	A3
- 3	35-939179 AN526-1032-8 AN365-1032	SEPARATOR,OIL SCREW,OIL SEPARATOR ATTACHING NUT,OIL SEPARATOR ATTACHING							1	A3
- 4	35-910122 106200H4-10 AN748-22 106200H4-15 AN748-22 AN912-3 AN842-4	TUBE,ENGINE HOSE,UPPER ENGINE TUBE. CLAMP,ENGINE TUBE HOSE. CLAMP,LOWER ENGINE TUBE CLAMP,ENGINE TUBE HOSE. REDUCER,ENGINE TUBE ELBOW,ENGINE TUBE							1	A3
- 5	35-910123 106200H8-10 AN748-30 AN742-10C 100696E10-06- 100	TUBE,SEPARATOR VENT HOSE,SEPARATOR VENT TUBE. CLAMP,VENT TUBE HOSE. CLAMP,VENT TUBE ATTACHING SPACER,VENT TUBE CLAMP.							1	A3
- 6	A692A B9520 200A	VALVE,SUCTION RELIEF /OPTIONAL/ VALVE,SUCTION RELIEF /OPTIONAL/ VALVE,SUCTION RELIEF. /ALTERNATE FOR A692A & B9520/							1	A3
- 7	35-324114 35-324197	SUPPORT ASSY. SUPPORT ASSY,/USE WITH 200A/							1	A3

MODEL 35 THRU G35 PARTS CATALOG

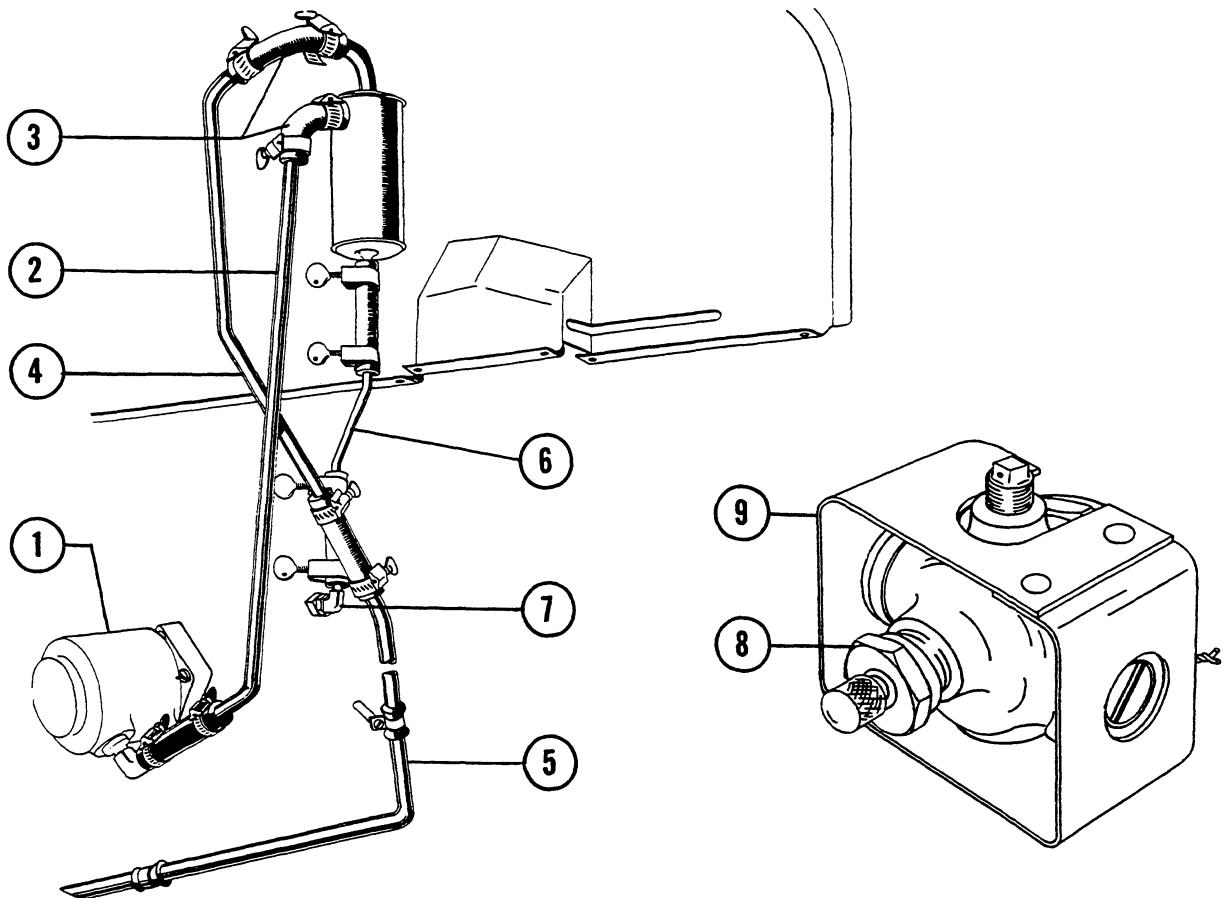


Figure 90. Vacuum System

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
90 - 1	3P-194F G450 AN842-8 106200H8-15		PUMP,VACUUM							1	A23BCDEFG
- 2	35-910132 35-910136		PUMP,VACUUM /ALTERANTE FOR 3P-194F/							1	
- 3	35-910124 106200H8-15		ELBOW,SEPARATOR LINE.							1	
- 4	35-910133 35-910135		HOSE.							2	
- 5	35-910134		TUBE,OIL SEPARATOR.							1	A25
- 6	35-910131 106200H4-10 106200H4-15 35-324159-4 35-324159-6		ELBOW							1	A2BCDEFG
- 7	AN842-4 AN912-3 9390 B-9195 AN40451 213		TUBE,OIL SEPARATOR DISCHARGE.							1	A25
- 8	200A A692A B9520 3V-195		HOSE.							1	A2BCDEFG
- 9	35-324197 35-324114 35-415395		TUBE,UPPER SEPARATOR DISCHARGE.							1	A2BCDEFG
			HOSE.							1	A2BCDEFG
			TUBE,LOWER SEPARATOR DISCHARGE.							1	A2BCDEFG
			TUBE,SEPARATOR DRAIN.							1	A2BCDEFG
			HOSE.							1	A23BC5
			HOSE.							1	A23BC5
			HOSE.							1	C6DEFG
			HOSE.							1	C6DEFG
			ELBOW							1	
			REDUCER							1	
			SEPARATOR,OIL							1	A1
			SEPARATOR,OIL							1	A2BCDEFG
			PUMP,GASKET VACUUM.							1	
			VALVE,SUCTION RELIEF.							1	
			/ALTERNATE FOR A692A & B9520/								
			VALVE,SUCTION RELIEF /OPTIONAL/							1	A27
			VALVE,SUCTION RELIEF /OPTIONAL/							1	A27
			VALVE,SUCTION RELIEF.							1	C6DEFG
			SUPPORT ASSY,/USE WITH 200A/.							1	A26BC5
			SUPPORT ASSY.							1	A27
			BRACKET ASSY.							1	C6DEFG

MODEL 35 THRU G35 PARTS CATALOG

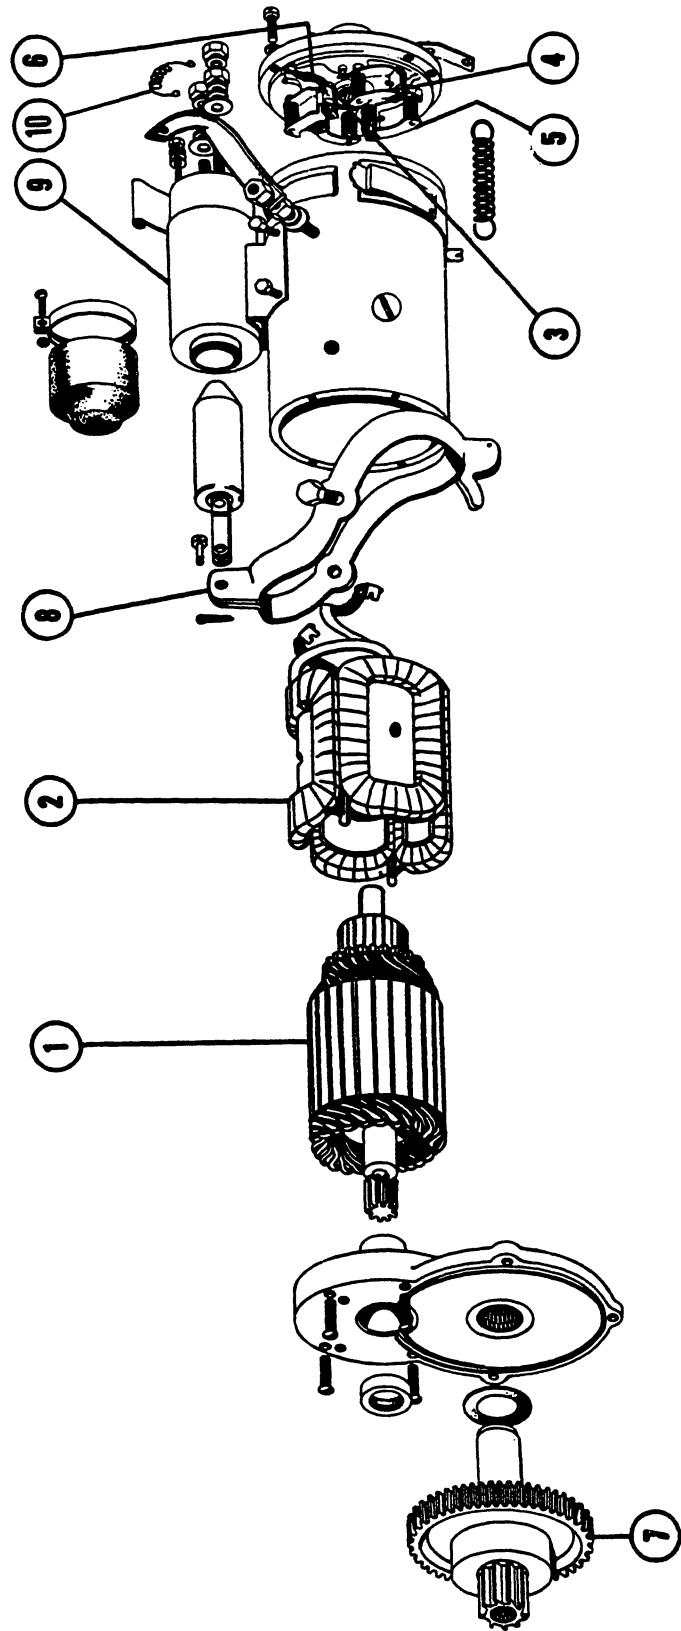


Figure 91. Starter Motor Assembly (D1 thru D1649)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
91	1109660		MOTOR ASSY,STARTER /SEE FIG. 72 FOR NHA/	1	A3A12
	1881870		• SHOE,ARMATURE POLE /UMS/	4	A3A12
- 1	1908521		• ARMATURE,MOTOR /UMS/	1	A3A12
	1885037		• SCREW,POLE SHOE /UMS/	4	A3A12
	1908647		• STUD,FIELD TERMINAL /UMS/	1	A3A12
	1881867		• WASHER,FIELD TERMINAL STUD /UMS/	1	A3A12
	1881866		• WASHER,FIELD TERMINAL STUD BUSHING /UMS/	2	A3A12
	134566		• NUT,FIELD TERMINAL STUD /UMS/	1	A3A12
	103320		• WASHER,FIELD TERMINAL STUD LOCK /UMS/	1	A3A12
	1908648		• CONTACT,STATIONARY SWITCH /UMS/	1	A3A12
- 2	1887427		• COIL ASSY,FIELD /UMS/	1	A3A12
	1887428		• COIL ASSY,FIELD /UMS/	1	A3A12
	1908649		• INSULATOR,STATIONARY CONTACT SWITCH /UMS/	1	A3A12
	1887439		• FRAME,COMMUTATOR END WITH PINS /UMS/	1	A3A12
	817313		• PIN,BRUSH HOLDER HINGE /UMS/	2	A3A12
	1881841		• PIN,BRUSH HOLDER STOP /UMS/	2	A3A12
	812016		• PIN & INSULATOR,BRUSH HOLDER HINGE /UMS/	2	A3A12
	812015		• INSULATOR,BRUSH HOLDER STOP PIN /UMS/	2	A3A12
- 3	1839345		• BUSHING,COMMUTATOR END /UMS/	1	A3A12
	1902292		• PLUG,COMMUTATOR END EXPANSION /UMS/	1	A3A12
- 4	1885-58		• BRUSH,ARMATURE	4	A3A12
- 5	810226		• HOLDER,ARMATURE BRUSH /UMS/	4	A3A12
	1881835		• SPRING,ARMATURE BRUSH	4	A3A12
	115903		• SCREW,BRUSH ATTACHING /UMS/	4	A3A12
	106495		• WASHER,BRUSH ATTACHING SCREW LOCK /UMS/	4	A3A12
- 6	1881839		• LEAD,BRUSH GROUND /UMS/	2	A3A12
	1904234		• SCREW,BRUSH GROUND LEAD	2	A3A12
	106496		• WASHER,BRUSH GROUND LFAD SCREW LOCK /UMS/	2	A3A12
	1838568		• WASHER,COMMUTATOR END SPACE /UMS/	1	A3A12
	1885038		• SCREW,C. E. FRAME ATTACHING /UMS/	2	A3A12
	120217		• WASHER,C. E. FRAME ATTACHING SCREW LOCK /UMS/	2	A3A12
	1881843		• BAND,COVER /UMS/	1	A3A12
	1908539		• FRAME,DRIVE END /UMS/	1	A3A12
	1887433		• BUSHING,D. E. FOR ARMATURE SHAFT /UMS/	1	A3A12
	1908540		• BUSHING,C. E. FOR CLUTCH ASSY /UMS/	1	A3A12
	1867150		• SEAL,DRIVE END OIL /UMS/	1	A3A12
	132128		• SCREW,D. E. FOR FRAME ATTACHING /UMS/	4	A3A12
	1885035		• WASHER-D.E. FRAME ATTACHING SCREW COPPER/UMS/	4	A3A12
- 7	1885537		• GEAR & CLUTCH ASSY	1	A3A12
	1908541		• WASHER,DRIVE END LEATHER /UMS/	1	A3A12
	1908541		• WASHER,DRIVE END LEATHER /UMS/	1	A3A12
- 8	1908524		• LEVER,SHIFT /UMS/	1	A3A12
	1908525		• STUD,SHIFT LEVER ATTACHING /UMS/	1	A3A12
	1905877		• SCREW,SHIFT LEVER BOLT /UMS/	1	A3A12
	120375		• NUT,SHIFT LEVER BOLT /UMS/	1	A3A12
- 9	1118133		• SWITCH,STARTING	1	A3A12
	134566		• NUT,SWITCH TERMINAL /UMS/	1	A3A12
	110730		• WASHER,SWITCH TERMINAL NUT LOCK /UMS/	1	A3A12
	132892		• SCREW,STARTING SWITCH ATTACHING /UMS/	2	A3A12
	106497		• WASHER,STARTING SWITCH ATTACHING SCREW LOCK /UMS/	2	
- 10	1885541		• RESISTOR	1	A3A12

MODEL 35 THRU G35 PARTS CATALOG

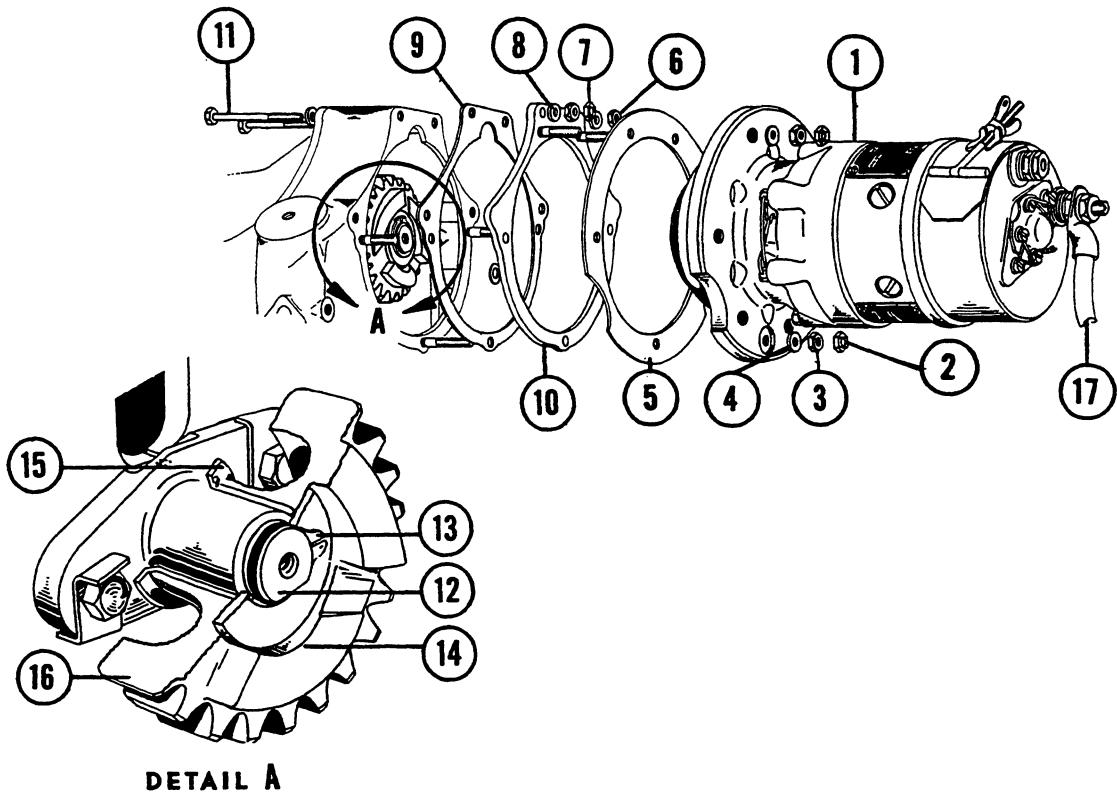


Figure 92. Starter Assembly

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
92	35-369005		STARTER ASSY,/SEE FIG. 72 FOR NHA/.	.	A13BCDEFG
-	2 2560		PALNUT,/ECP/.	.	A13BCDEFG
-	3 2439		NUT,/ECP/.	.	A13BCDEFG
-	4 2473		WASHER,/ECP/.	.	A13BCDEFG
-	5 530340		GASKET,/ECP/.	.	A13BCDEFG
-	6 2439		NUT,/ECP/.	.	A13BCDEFG
-	7 2560		PALNUT,/ECP/.	.	A13BCDEFG
-	8 2473		WASHER,/ECP/.	.	A13BCDEFG
-	9 530341		GASKET,/ECP/.	.	A13BCDEFG
-	10 531007		ADAPTER ASSY,/ECP/.	.	A13BCDEFG
-	11 530347		SCREW,/ECP/.	.	A13BCDEFG
-	12 530343		PIVOT ASSY,/ECP/.	.	A13BCDEFG
-	13 530345		RING,LOCK /ECP/	.	A13BCDEFG
-	14 530339		WASHER,/ECP/.	.	A13BCDEFG
-	15 530337		BUSHING,/ECP/.	.	A13BCDEFG
-	16 530338		GEAR ASSY,/ECP/	.	A13BCDEFG
-	17 P-71		WIRE,/ECP/.	.	A13BCDEFG
	839317		BRUSH ASSY,/ECP/.	4	A13BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

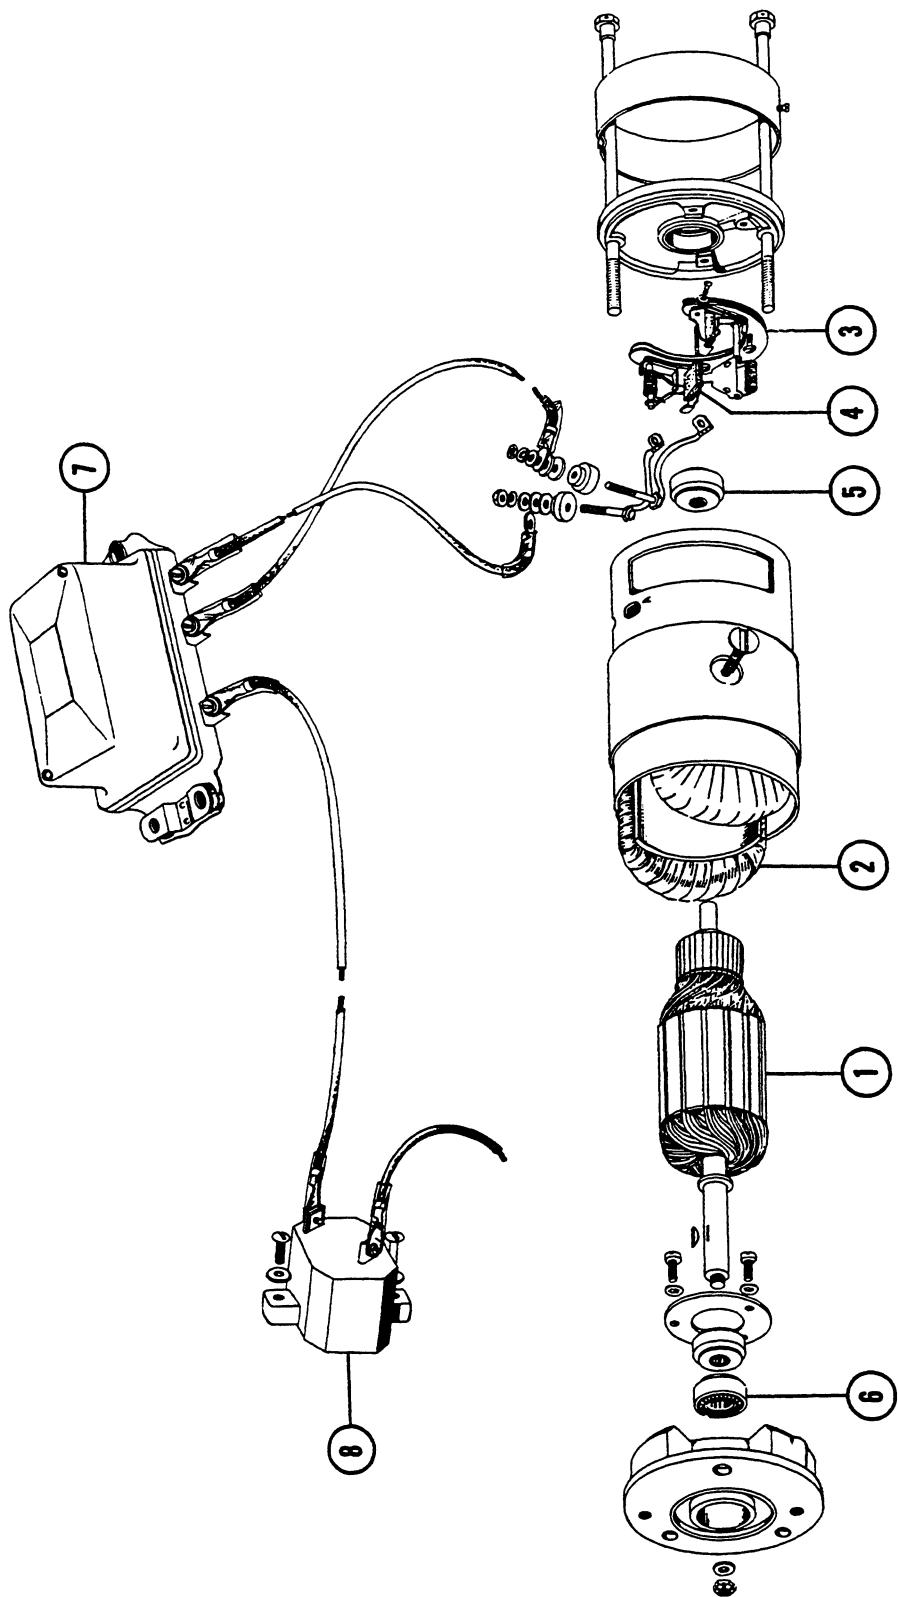


Figure 93. Generator Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
93	1101879		GENERATOR ASSY,/SEE FIG. 72 FOR NHA/	1	
- 1	1909171	.	ARMATURE,GENERATOR /UMS/	1	
	1906004	.	SHOE,ARMATURE POLE /UMS/	2	
	1843646	.	SCREW,POLE SHOE /UMS/	2	
	1858754	.	STUD & LEAD ASSY,TERMINAL /UMS/	1	
	200182	.	CLIP,TERMINAL BRUSH /UMS/	1	
	1858753	.	WASHER,TERMINAL STUD /UMS/	2	
	1881409	.	WASHER,TERMINAL STUD PLAIN /UMS/	2	
	802757	.	WASHER,TERMINAL STUD LOCK /UMS/	4	
	121743	.	NUT,TERMINAL STUD /UMS/	4	
- 2	1905077	.	COIL,FIELD /UMS/ /RH TO BRUSH/	1	
	200182	.	CLIP,TERMINAL /UMS/	1	
	1905078	.	COIL,FIELD /UMS/ /LH TO STUD/	1	
	1858749	.	STUD,FIELD COIL TERMINAL /UMS/	1	
	1886682	.	FRAME,COMMUTATOR END /UMS/	1	
	1886684	.	• PIN,COMMUTATOR END DOWEL /UMS/	1	
- 3	1908550	.	PLATE ASSY,BRUSH /UMS/	1	
	1904851	.	SCREW,BRUSH PLATE ATTACHING /UMS/	3	
	106496	.	WASHER,BRUSH PLATE ATTACHING SCREW LOCK /UMS/	3	
- 4	1866148	.	BRUSH,/UMS/	2	
	1903871	.	SPRING,BRUSH	2	
	1805759	.	ARM,BRUSH /UMS/	2	
	1857412	.	WASHER,BRUSH ARM SPACE /UMS/	2	
	1902147	.	SCREW,BRUSH LEAD ATTACHING /UMS/	2	
	802730	.	WASHER,BRUSH LEAD ATTACHING SCREW LOCK /UMS/	2	
- 5	954162	.	BEARING,COMMUTATOR END BALL /UMS/	1	
	1908554	.	BAND,GENERATOR COVER /UMS/	1	
	1905720	.	SCREW,COVER BAND /UMS/	1	
	1903473	.	• NUT,COVER BAND /UMS/	1	
	1908553	.	FRAME,DRIVE END /UMS/	1	
	1886684	.	• PIN,DRIVE END DOWEL /UMS/	1	
- 6	954143	.	BEARING,DRIVE END BALL /UMS/	1	
	1886962	.	PLATE,D. E. BALL BEARING RETAINER /UMS/	1	
	5017850	.	SCREW,ATTACHING /UMS/	3	
	802731	.	WASHER,ATTACHING LOCK /UMS/	3	
	809945	.	WASHER,DRIVE END SPACE /UMS/	1	
	124542	.	KEY,DRIVE END WOODRUFF /UMS/	1	
	1909173	.	BOLT,/UMS/	2	
	120638	.	WASHER,BOLT LOCK /UMS/	2	
- 7	6221-25	.	CONTROL,GENERATOR	1	
- 8	CA-35	.	BREAKER,GENERATOR CIRCUIT	1	
	1101887	.	GENERATOR,35 AMP /SEE FIG. 72 FOR NHA/	1	
	1101888	.	GENERATOR,50 AMP /SEE FIG. 72 FOR NHA/	1	

MODEL 35 THRU G35 PARTS CATALOG

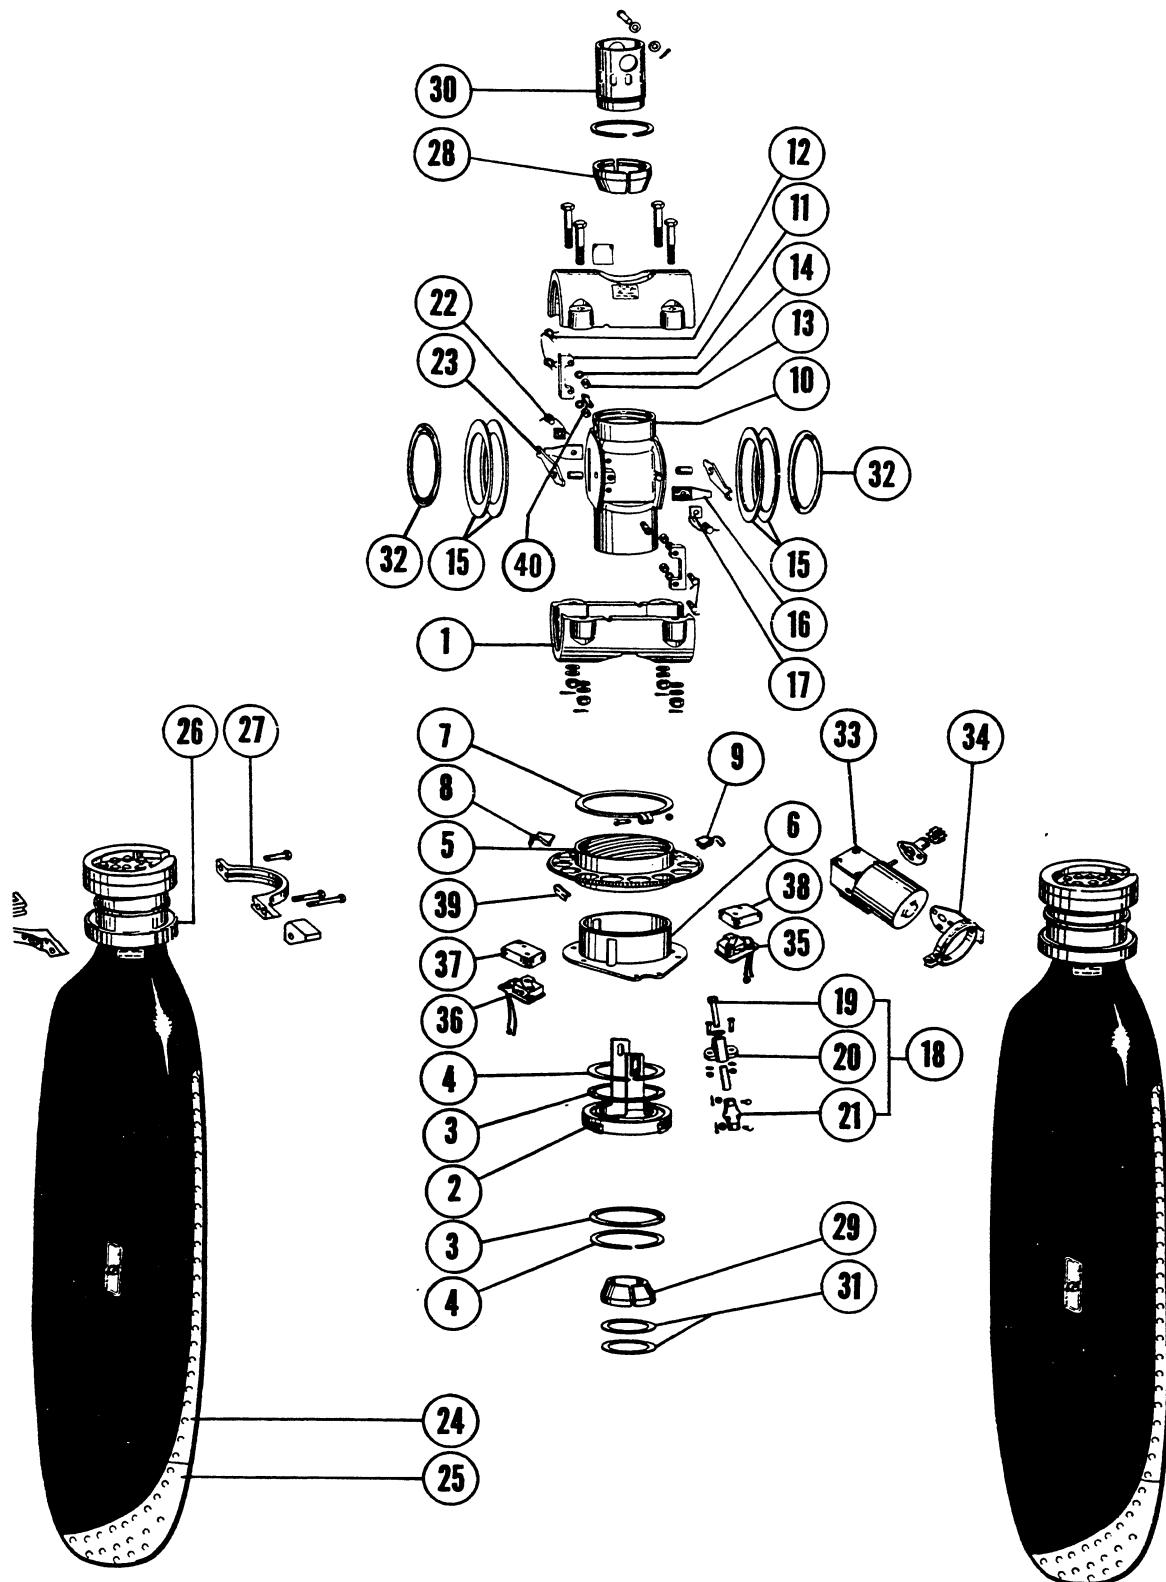


Figure 94. R200 Propeller Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
					A3
94	R203-107		PROPELLER ASSY.	1	A3
	R203-116		PROPELLER ASSY.	1	A28
	R203-119		PROPELLER ASSY, /PLASTIC COVERED/	1	A29
	R203-122		PROPELLER ASSY.	1	A63
	R203-100		• HUB ASSY, PROPELLER /USED ON R203-107/	1	A3
	R203-115		• HUB ASSY, PROPELLER /USED ON R203-116/	1	A28A29
	R203-120		• HUB ASSY, PROPELLER /USED ON R203-122/	1	A63
- 1	R203-342		• • HOUSING, PROPELLER HUB /MATCHED SET/	1	
- 2	R200-200		• • BEARING ASSY, PITCH CONTROL.	1	
- 3	R200-306		• • • SEAL, BEARING.	2	
- 4	R200-307		• • • RING, SEAL RETAINER.	2	
- 5	R202-200		• • GEAR ASSY, PITCH CONTROL /USED ON R203-107/	1	A3
	R203-213		• • GEAR ASSY, PITCH CONTROL /USED ON R203-116/	1	A28A29
	R203-356		• • GEAR, PITCH CONTROL /USED ON R203-122/	1	A63
	R200-327		• • HUB, PITCH CONTROL GEAR /USED ON R203-122/	1	A63
- 6	R202-201		• • SLEEVE ASSY, STATIONARY.	1	A3
	R203-350		• • SLEEVE ASSY, STATIONARY.	1	
- 7	R200-308		• • RING, GEAR RETAINER.	1	
	AN520-10-16		• • SCREW, GEAR RETAINER RING.	1	
- 8	B200-383		• • STOP, SPRING /USE IN MATCHED PAIRS/	2	
	B200-384		• • STOP, SPRING /USE IN MATCHED PAIRS/	2	
	B200-372		• • CLIP.	2	
- 9	B200-330		• • BRACKET, SPRING STOP	2	
	AN3-3A		• • BOLT.	2	
	AN3-4A		• • BOLT.	4	
	AN3-5A		• • BOLT.	4	
	AN365-1032		• • NUT	6	
	R203-200		• • SPIDER ASSY	1	
- 10	R203-302		• • SPIDER.	1	
- 11	R203-314		• • • GUIDE, ACTUATOR BEARING.	2	
- 12	AN4H7		• • • BOLT, GUIDE ATTACHING.	4	
- 13	101321-2-0250-0332		• • • BUSHING, SPIDER ASSY	4	
- 14	105090B005-4-016		• • • WASHER, ADJUSTING.	AR	
- 15	R200-319-4		• • SHIM, BLADE RETAINER SPACER /.010/	AR	
	R200-319-6		• • SHIM, BLADE RETAINER SPACER /.011/	AR	
	R200-319-8		• • SHIM, BLADE RETAINER SPACER /.012/	AR	
	R200-319-10		• • SHIM, BLADE RETAINER SPACER /.013/	AR	
	R200-319-12		• • SHIM, BLADE RETAINER SPACER /.014/	AR	
	R200-319-14		• • SHIM, BLADE RETAINER SPACER /.015/	AR	
	R200-319-16		• • SHIM, BLADE RETAINER SPACER /.016/	AR	
	R200-319-18		• • SHIM, BLADE RETAINER SPACER /.017/	AR	
	R200-319-20		• • SHIM, BLADE RETAINER SPACER /.018/	AR	
	R200-319-22		• • SHIM, BLADE RETAINER SPACER /.019/	AR	
	R200-319-24		• • SHIM, BLADE RETAINER SPACER /.020/	AR	
	R200-319-26		• • SHIM, BLADE RETAINER SPACER /.021/	AR	
	R200-319-28		• • SHIM, BLADE RETAINER SPACER /.022/	AR	
	R200-319-30		• • SHIM, BLADE RETAINER SPACER /.023/	AR	
	R200-319-32		• • SHIM, BLADE RETAINER SPACER /.024/	AR	
	R200-319-34		• • SHIM, BLADE RETAINER SPACER /.025/	AR	
- 16	R200-321		• • ARM, INTERMEDIATE PITCH CONTROL.	2	
- 17	R200-320		• • WASHER, CONTROL ARM ADJUSTING.	2	
- 18	R203-202		• • GEAR ASSY, PITCH CONTROL PINION.	1	A3
			• • • USED ON R203-107/		
- 19	R200-301		• • • GEAR, PINION /USED ON R203-107/	1	A3
- 20	R202-300		• • • BEARING ASSY, /USED ON R203-107/	1	A3
- 21	R200-325		• • • UNIVERSAL, PITCH CONTROL SHAFT	1	A3
			• • • /USED ON R203-107/		
- 22	R203-352		• • BOLT, PITCH ADJUSTING.	2	
	AN7-27 TO 32		• • BOLT, MAIN HUB	4	
- 23	R203-303-2		• • ARM, PITCH CONTROL	2	
	R203-363-2		• • ARM, PITCH CONTROL	2	
			• • • /USED WITH R203-218-88A BLADES/		
	R203-362		• • BUSHING, /USED WITH R203-218-88A BLADES/	2	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
94	R201-217-88		• BLADE ASSY,PROPELLER.	•	•	•	•	•	•	NP	
	R203-218-88		• BLADE ASSY,PROPELLER /PLASTIC/	•	•	•	•	•	•	2	
	R203-218-88A		/REPLACES R201-217-88/								
			• BLADE ASSY,PROPELLER /PLASTIC/	•	•	•	•	•	•	2	
			/REPLACES R201-217-88/								
- 24	R201-359		• STRIP,LEADING EDGE.	•	•	•	•	•	•	2	
- 25	R201-355		• TIPPING,PROPELLER BLADE	•	•	•	•	•	•	2	
- 26	R201-208		• RING,BALANCE.	•	•	•	•	•	•	2	
- 27	R203-332		• ARM,COUNTERWEIGHT	•	•	•	•	•	•	2	
	R203-331		• COUNTERWEIGHT	•	•	•	•	•	•	2	
	AN6-13A		• BOLT,ATTACHING.	•	•	•	•	•	•	2	
	AN6-21A		• BOLT,ATTACHING.	•	•	•	•	•	•	2	
	AN5-23A		• BOLT,ATTACHING.	•	•	•	•	•	•	2	
- 28	R203-325		• CONE,FRONT.	•	•	•	•	•	•	1	
- 29	B200-358		• CONE,REAR	•	•	•	•	•	•	1	
- 30	R203-337		• NUT,PROPELLER RETAINER.	•	•	•	•	•	•	1	
	AN5009-20		• RING,SNAP	•	•	•	•	•	•	1	
	R203-209		BRACKET,PROPELLER MOUNTING.	•	•	•	•	•	•	1	A9
	R203-353		BRACKET,PROPELLER MOUNTING.	•	•	•	•	•	•	1	A28A29A30
	R203-339		SCREW,MOUNTING BRACKET ATTACHING.	•	•	•	•	•	•	4	
	AN936A516		WASHER,MOUNTING BRACKET ATTACHING	•	•	•	•	•	•	4	
	AN24-13A		BOLT,PROPELLER ATTACHING.	•	•	•	•	•	•	6	
	B200-338		GROMMET,PROPELLER ATTACHING	•	•	•	•	•	•	6	
- 31	R203-327		SPACER,REAR CONE /1/4 INCH/	•	•	•	•	•	•	1	
	R203-312-2		SPACER,REAR CONE /1/32 INCH/	•	•	•	•	•	•	AR	
	R203-312-4		SPACER,REAR CONE /1/16 INCH/	•	•	•	•	•	•	AR	
- 32	AN6227-47		SEAL.	•	•	•	•	•	•	2	
- 33	R900-101		MOTOR,PROPELLER PITCH CHANGE.	•	•	•	•	•	•	1	A19
	R900-107		MOTOR,PROPELLER PITCH CHANGE.	•	•	•	•	•	•	1	A30
	R900-109		MOTOR,PROPELLER PITCH CHANGE.	•	•	•	•	•	•	1	A28A29
	SK162		• BRUSH,/OHIO CARBON CO./	•	•	•	•	•	•	2	
	B200-340		• PINION.	•	•	•	•	•	•	1	A28A29
	R203-212		• BEARING ASSY,PINION SHAFT	•	•	•	•	•	•	1	A28A29
- 34	R203-214		BRACKET,PROPELLER PITCH CHANGE MOTOR.	•	•	•	•	•	•	1	A28A29
- 35	R901-402 SA1		SWITCH ASSY,RH PROPELLER LIMIT.	•	•	•	•	•	•	1	A28A29
			/USED ON R203-116/								
	V3-1		• SWITCH,MICRO /USED ON R203-116/	•	•	•	•	•	•	1	A28A29
	R203-334-1		• PLATE,RH /USED ON R203-116/	•	•	•	•	•	•	1	A28A29
- 36	R901-402 SA2		SWITCH ASSY,LH PROPELLER LIMIT.	•	•	•	•	•	•	1	A28A29
			/USED ON R103-116/								
	V3-1		• SWITCH,MICRO /USED ON R203-116/	•	•	•	•	•	•	1	A28A29
	R203-334		• PLATE,LH /USED ON R203-116/	•	•	•	•	•	•	1	A28A29
- 37	R203-333		COVER,LH PROPELLER LIMIT SWITCH	•	•	•	•	•	•	1	A28A29
			/USED ON R203-116/								
- 38	R203-333-1		COVER,RH PROPELLER LIMIT SWITCH	•	•	•	•	•	•	1	A28A29
			/USED ON R203-116/								
- 39	R203-357		CAM,PROPELLER LIMIT SWITCH /USED ON R203-116/	•	•	•	•	•	•	1	A28A29
- 40	1669		FITTING,GREASE.	•	•	•	•	•	•	2	

MODEL 35 THRU G35 PARTS CATALOG

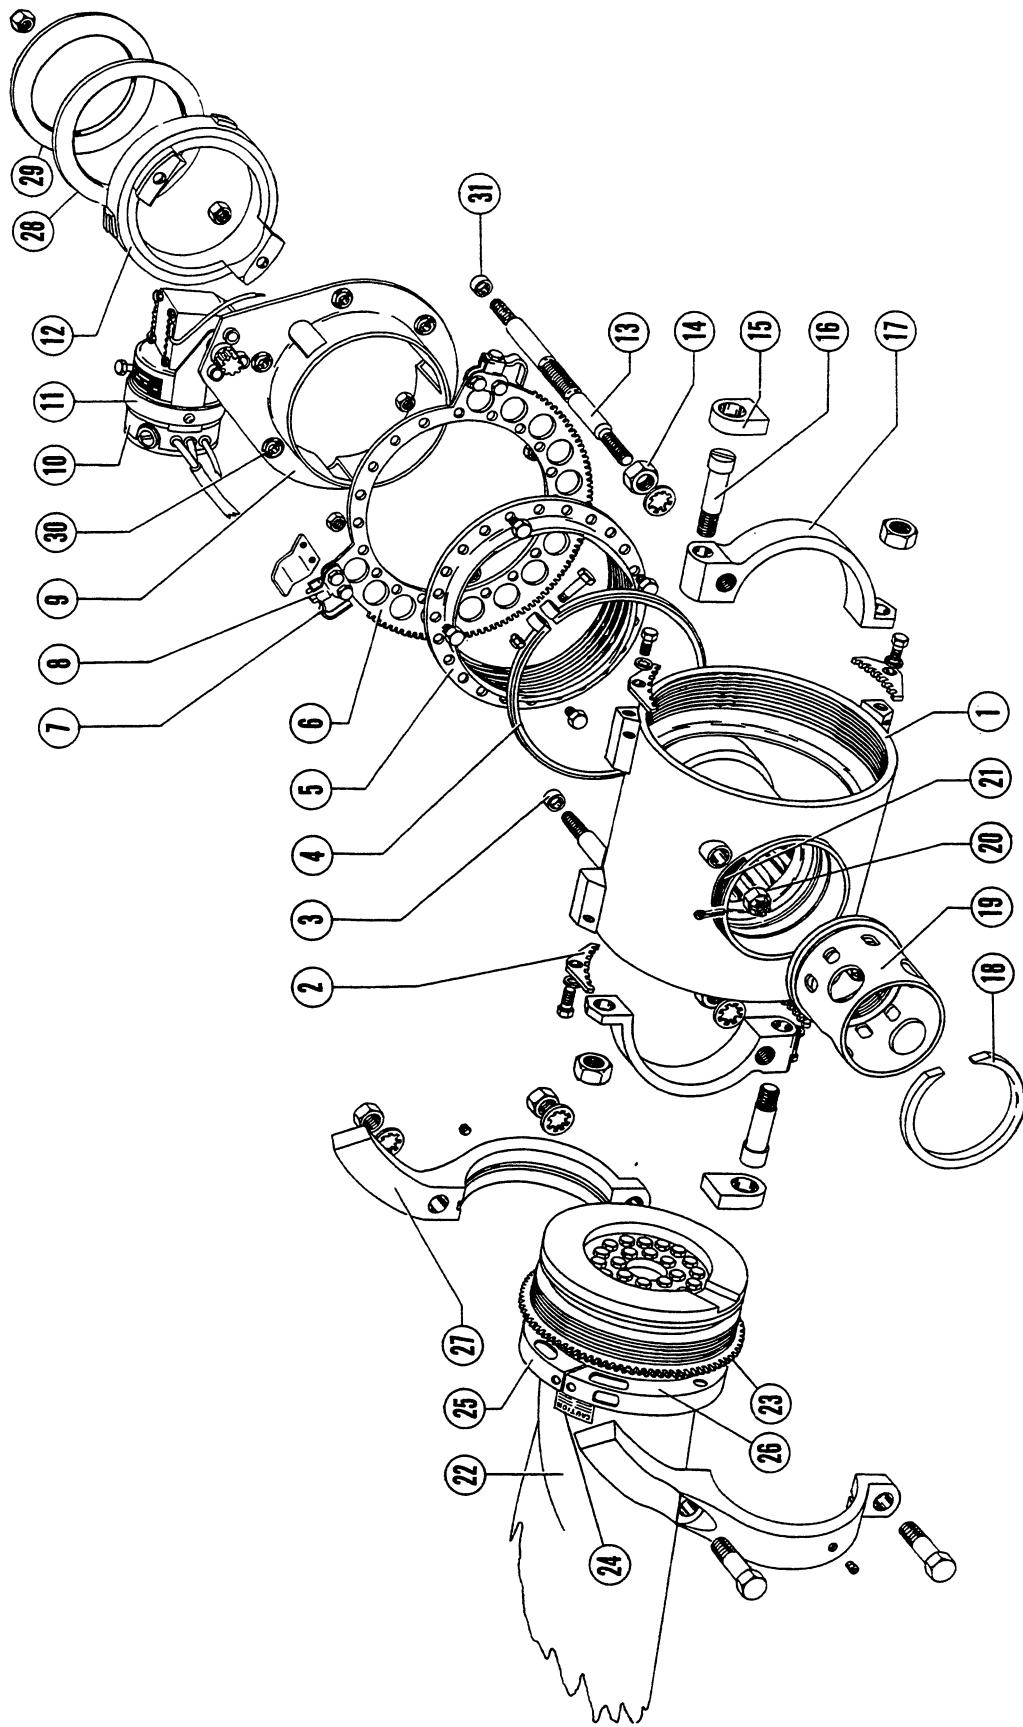


Figure 95. B200 Propeller Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
95	B200-110	PROPELLER ASSY.	1	A32
	B200-121	PROPELLER ASSY.	1	B4CDEFG
	B200-100	/USE WITH FLIGHT RESEARCH GOVERNOR/	
- 1	B200-200	HUB ASSY.	1	
- 2	B203-303	BODY,HUB	1	
	AN4-4A	LOCK	4	
	AN936A416	BOLT	4	
- 3	207-308	WASHER	4	
- 4	R200-308	SLEEVE	2	
	AN520-10-16	RING	1	
	AN365-1032	SCREW	1	
- 5	B200-327	NUT	1	
- 6	B200-334	HUB,RING GEAR	1	
	AN3-4A	GEAR,RING	1	A31BCDEFG
	AN365-1032	BOLT	4	
	B200-428	NUT	4	
	B200-428	GEAR,RING	1	B4CDEFG
	B200-383	/USE WITH FLIGHT RESEARCH GOVERNOR/		
- 7	B200-384	STOP,OUTER SPRING	2	
	B200-384	STOP,INNER SPRING	2	
- 8	B200-330	BRACKET	2	
	AN3-3A	BOLT	2	
	AN3-4A	BOLT	4	
	AN365-1032	NUT	6	
- 9	B200-401	SLEEVE	1	
- 10	215-210	MOTOR ASSY,/REPLACES B900-102 MOTOR/	1	
	SK-162	BRUSH ASSY,/OHIO CARBON CO./	2	
	NO NUMBER	SCREW	3	
	AN936A416	WASHER	3	
- 11	R203-214	BRACKET ASSY	1	
	AN520-10-6	SCREW	1	
	AN365-1032	NUT	1	
	AN960-10L	WASHER	1	
- 12	B200-202	BEARING ASSY	1	
	207-309	NUT	2	
- 13	B200-373	BOLT	2	
- 14	B200-363	NUT	2	
- 15	B200-308	BUSHING	2	
- 16	B200-306	BOLT	2	
	AN960-516	WASHER	2	
	AN365-524	NUT	2	
- 17	205-302	YOKE	2	
- 18	AN5009-10	RING,SNAP	1	
- 19	B200-354	NUT	1	
	B200-416	NUT,/USE WITH FLIGHT RESEARCH GOVERNOR/	1	B4CDEFG
- 20	AN310-5	NUT	2	
	AN380-2-2	PIN,COTTER	2	
- 21	B200-343	PLACARD	1	A31BCDEFG
	B200-429	PLACARD,/USE WITH FLIGHT RESEARCH GOVERNOR/	1	B4CDEFG
	AN535-0-2	SCREW	2	
	B200-245	BLADE & WEIGHT ASSY	2	
- 22	B200-244-88	BLADE ASSY	2	
	B200-322-6	RACE	2	
	B200-322-8	RACE	2	
- 23	B200-313	NUT	2	
- 24	B200-339	PLACARD	2	
- 25	R201-208	RING ASSY,BALANCE	2	
- 26	R203-328	WEIGHT	2	
- 27	B200-347	COUNTERWEIGHT	1	
	B200-347-1	COUNTERWEIGHT	1	
	AN6-21A	BOLT	2	
	AN6-13A	WASHER	4	
	AN960-616	NUT	4	
	AN365-624	SCREW,SET	4	
	NO NUMBER										

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
95 - 28	R203-327		• SPACER	1	
- 29	R203-312-2		• SPACER	AR	
	R203-312-4		• SPACER	AR	
- 30	B200-338		• GROMMET	6	A26
	B200-377		• GROMMET	6	BCDEFG
	B200-355		• PLATE, PROPELLER MOUNTING	1	
	AN24-15A		• BOLT	6	A26
	B200-430		• BOLT	6	BCDEFG
	AN365-428		• NUT	6	
	AN960-416		• WASHER	6	
	AN960-416L		• WASHER	6	A26
	105090CR063-4-		• WASHER	6	BCDEFG
	024										
	105090CR016-4-		• WASHER	6	A26
	020										
	105090CR031-4-		• WASHER	6	BCDEFG
	024										
	100801X6-0375		• BUSHING	6	BCDEFG
	R203-339		• SCREW, PROPELLER MOUNTING	4	
	B200-358		• CONE	1	
- 31	207-308		SLEEVE	1	

MODEL 35 THRU G35 PARTS CATALOG

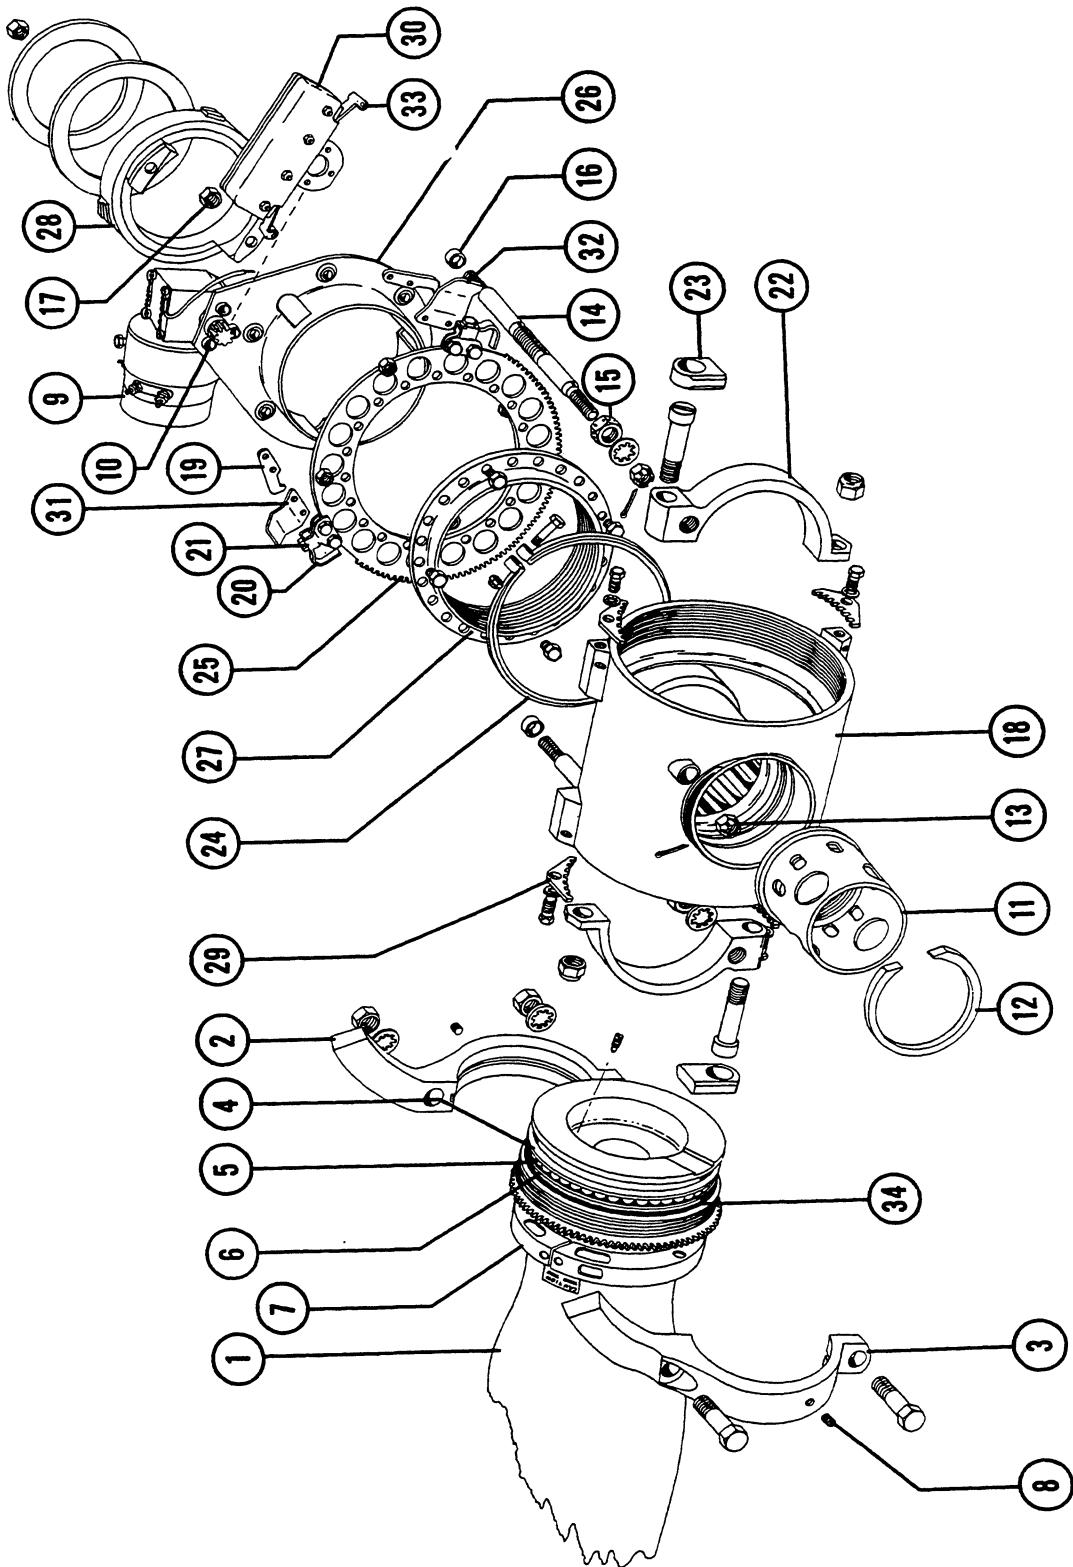


Figure 96. 215 Series Propeller Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
					F FG E7 NP 1
96	35-960023-601		PROPELLER ASSY,CONSTANT SPEED /USED WITH E225-8 ENGINE/	1	FG
	35-960023-3		PROPELLER ASSY,MANUAL ELECTRIC. /USED WITH E225-8 ENGINE/	1	FG
	35-960023-5		PROPELLER ASSY,MANUAL ELECTRIC. /USED WITH E185-11 ENGINE/	1	F
	215-108		PROPELLER ASSY,CONSTANT SPEED /USED WITH E225-8 ENGINE/	1	FG
	215-116		PROPELLER ASSY,MANUAL ELECTRIC. /USED WITH 35-910175 GOVERNOR/	1	FG
	215-117		PROPELLER ASSY,MANUAL ELECTRIC. /USED WITHOUT GOVERNOR/	1	FG
- 1	215-207-88		• BLADE ASSY.	2	
	215-207-88-14		• BLADE ASSY.	2	
	215-213-84		• BLADE ASSY.	2	FG
	B200-347-3		• • WEIGHT ASSY,COUNTER BALANCE	1	
- 2	B200-347		• • • WEIGHT,/USE IN MATCHED PAIRS/	NP	
- 3	B200-347-1		• • • WEIGHT,/USE IN MATCHED PAIRS/	NP	
- 4	215-319-2		• RACE.	1	
- 5	NO NUMBER		• BEARING,BALL /GRADE 1/ /STS/	31	
- 6	215-319-4		• RACE.	1	
	PRP6227-47		• SEAL.	1	
	B200-313		• NUT,RETAINING	1	
- 7	R201-208		• RING ASSY	1	
	R203-328		• WEIGHT.	1	
- 8	NO NUMBER		• SCREW,HEX SOCKET SET.	2	
	215-322		• WEIGHT.	8	
	215-109		• HUB ASSY,PROPELLER MANUAL ELECTRIC.	1	
- 9	215-210		• MOTOR ASSY.	1	
	31-408		• • BRUSH,COMMUTATOR.	2	
	R203-214		• BRACKET ASSY,MOTOR SUPPORT.	1	
- 10	215-363-2		• SCREW,INTERNAL HEXAGONAL HEAD	3	
- 11	B200-416		• NUT	1	
- 12	AN5009-10		• RING,SNAP	1	
- 13	AN310-5		• NUT	2	
- 14	B200-373		• BOLT.	2	
- 15	B200-363		• NUT	2	
- 16	207-308		• SLEEVE.	2	
- 17	207-309		• NUT	2	
- 18	215-208		• HUB	1	
- 19	B200-372		• CLIP.	2	
- 20	B200-383		• STOP,SPRING /USE IN MATCHED PAIRS/.	1	
	B200-384		• STOP,SPRING /USE IN MATCHED PAIRS/.	1	
- 21	B200-330		• BRACKET	2	
	AN3-3A		• BOLT.	2	
	AN3-6A		• BOLT.	4	
	AN365-1032		• NUT	6	
- 22	205-302		• YOKE.	2	
	215-318		• BOLT.	2	
	AN365-524		• NUT	2	
- 23	215-317		• BUSHING	2	
- 24	R200-308		• RING.	1	
	AN520-10-18		• SCREW	1	
	AN365-1032		• NUT	1	
- 25	B200-334		• GEAR.	1	
	AN3-4A		• BOLT.	4	
	AN365-1032		• NUT	4	
- 26	B200-401		• SLEEVE.	1	
- 27	B200-327		• GEAR,HUB.	1	
- 28	B200-202		• BEARING ASSY.	1	
- 29	B200-303		• LOCK.	2	
	AN4-4A		• BOLT.	2	
	215-324		• PLACARD,ALUMINUM BLADE.	1	
	215-361		• PLACARD,HUB IDENTIFICATION.	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
96	AN535-0-2 215-107		• • SCREW • • • • • • • • • • • • • • • • • • • HUB ASSY, PROPELLER CONSTANT SPEED • • • • • • • • /USE WITH E225-8 ENGINE/ /SAME AS 215-109 & ADD LISTED PARTS/	6 1	FG
- 30	B200-257		• • SWITCH ASSY, CONSTANT SPEED. • • • • • • • •	1	
- 31	B200-422 B200-422-1		• • CAM • CAM • • • • • • • • • • • • • • • • • •	1 1	
- 32	111514		SPRING. • • • • • • • • • • • • • • • • • •	2	
- 33	AN123902 AN6230B20		SEAL,OIL. • • • • • • • • • • • • • • • • • • RING,O /ALTERNATE FOR AN123902/ • • • • • • • •	2 2	

MODEL 35 THRU G35 PARTS CATALOG

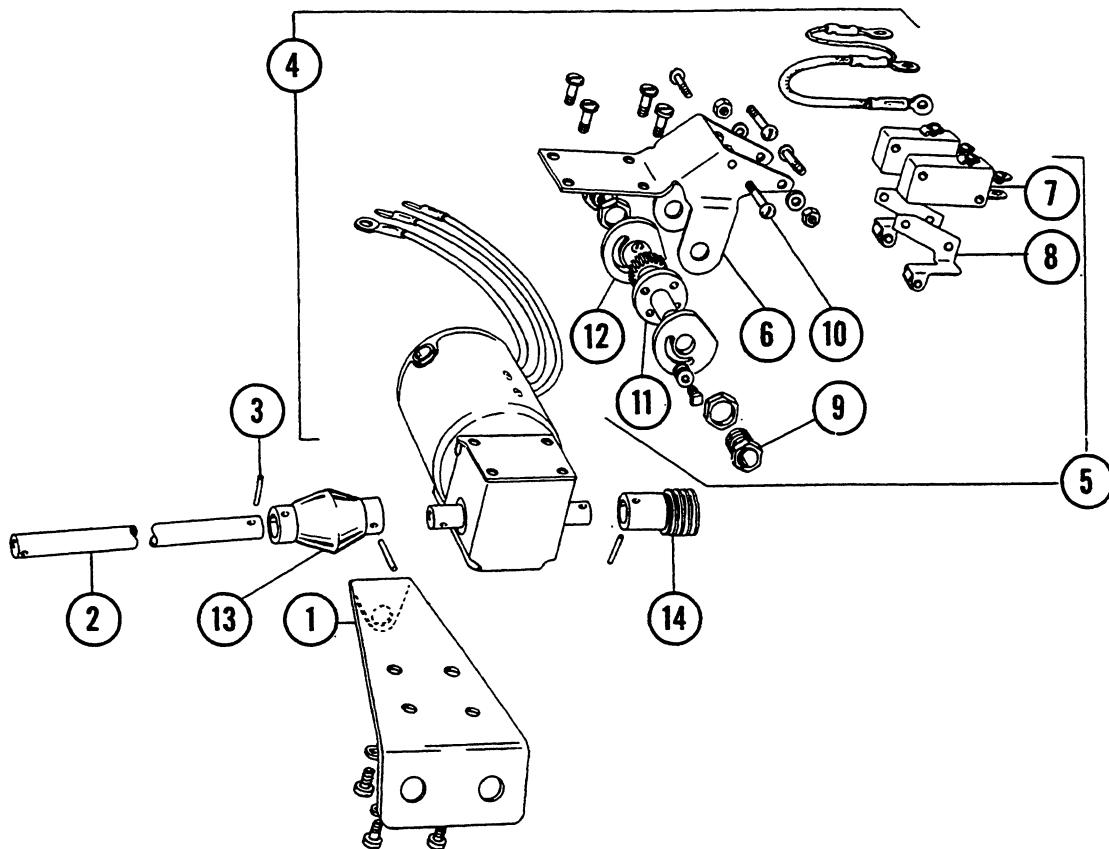


Figure 97. Propellor Pitch Control Assembly

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
97 - 1	35-960005		BRACKET,MOTOR MOUNTING	A3
- 2	35-960008		SHAFT,PITCH CONTROL	1
- 3	AN392-21		PIN,UNIVERSAL CONNECTING	2
	AN960-4		WASHER,UNIVERSAL CONNECTING	2
- 4	R900-101		MOTOR,PROPELLER PITCH CHANGE	1
	R900-107		MOTOR,PROPELLER PITCH CHANGE	A19
	R900-109		MOTOR,PROPELLER PITCH CHANGE	A30
	R900-102		MOTOR,PROPELLER PITCH CHANGE	A33
- 5	R901-205		• MECHANISM,LIMIT SWITCH	1
- 6	R900-377		• BRACKET,LIMIT SWITCH	1
- 7	V-1		• SWITCH,LIMIT	2
- 8	JV-5		• SPRING ASSY	2
- 9	UB-241		• BEARING,CAM SHAFT	2
- 10	AN515-4-10		• SCREW,SWITCH RETAINER	4	
	AN960-4		• WASHER,SWITCH MOUNTING	4
	AN340-4		• NUT,SWITCH RETAINER	4
- 11	R901-221		• SHAFT ASSY,CAM	1
	AN936A616		• WASHER,CAM SHAFT	2
- 12	R900-328		• CAM,SWITCH ACTUATING	1
	AN500-6-4		• SCREW,CAM GUIDE	1
	R900-332		• WASHER,CAM GUIDE	1
	AN936A6		• WASHER,CAM GUIDE	1
- 13	R900-329		• UNIVERSAL,PITCH CONTROL	1
- 14	R900-325		• GEAR,CAM ACTUATING	1

MODEL 35 THRU G35 PARTS CATALOG

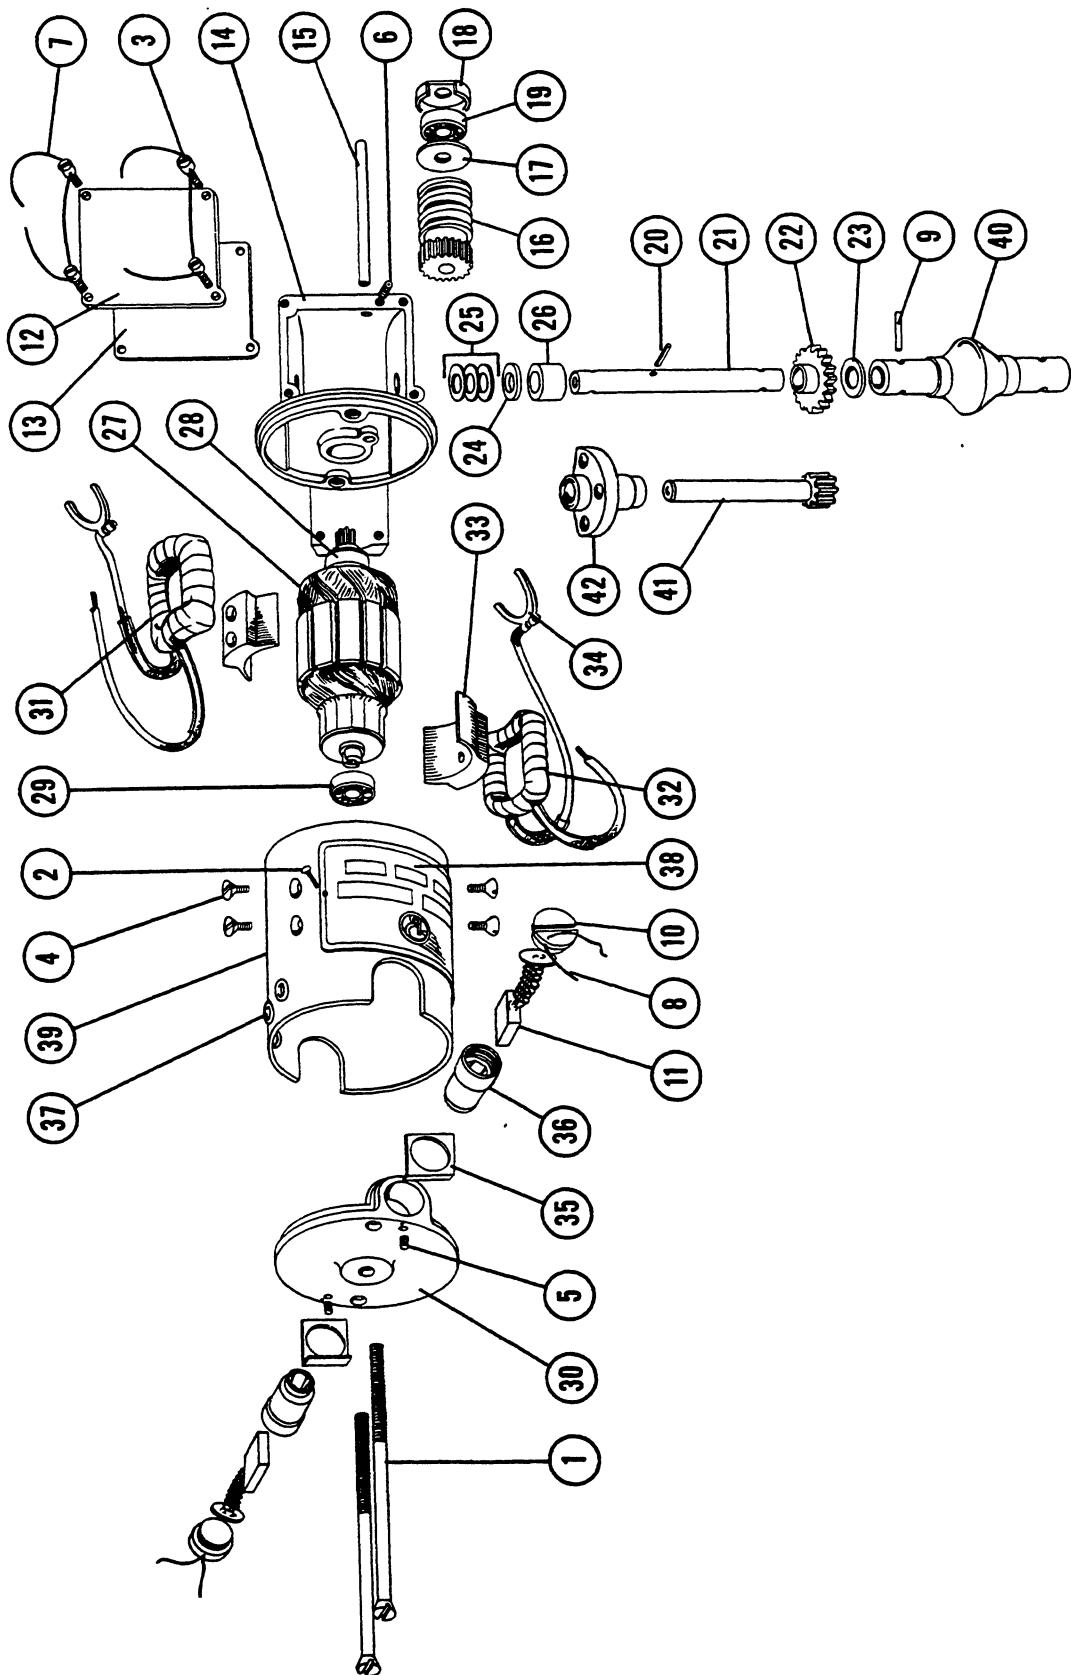


Figure 98. Propeller Pitch Motor Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
98	R900-101		MOTOR,PROPELLER PITCH CONTROL	.	1 A19
	R900-107		MOTOR,PROPELLER PITCH CONTROL	.	1 A30
	R900-109		MOTOR,PROPELLER PITCH CONTROL	.	1 A33
	R900-102		MOTOR,PROPELLER PITCH CONTROL	.	1 A34BCDEFG
- 1	R901-217-20	• SCREW	• • • • • • •	2	
- 2	AN535-2-2	• SCREW,DRIVE	• • • • • • •	2	
- 3	AN500A6-6	• SCREW	• • • • • • •	4	
- 4	AN505-6-5	• SCREW	• • • • • • •	4	
- 5	NO NUMBER	• SCREW,CAP	• • • • • • •	2	
- 6	NO NUMBER	• SCREW,CAP	• • • • • • •	1	
- 7	AAF995-32-6	• WIRE,LOCK	• • • • • • •	2	
- 8	AAF995-32-3	• WIRE,LOCK	• • • • • • •	2	
- 9	102809-125-022	• PIN	• • • • • • •	1	A3
- 10	456-0010-006	• CAP	• • • • • • •	2	
- 11	31-408	• BRUSH ASSY,/OHIO CARBON CO./	• • • • • • •	2	
- 12	R901-217-14	• COVER	• • • • • • •	1	
- 13	R901-217-16	• GASKET	• • • • • • •	1	
- 14	R901-217-12	• BOX,GEAR	• • • • • • •	1	
- 15	R901-217-26	• SHAFT	• • • • • • •	1	
- 16	R901-217-34	• GEAR,WORM	• • • • • • •	1	
	B900-300	• GEAR,WORM /USED ON B900-102 ONLY/	• • • • • • •	1	
- 17	R901-217-36	• WASHER,/NOT USED ON B900-102/	• • • • • • •	1	
- 18	R901-217-30	• HOLDER,BEARING /NOT USED ON B900-102/	• • • • • • •	1	
- 19	ND-R-4A	• BEARING	• • • • • • •	1	
	MRC4666	• BEARING,/USED ON B900-102 ONLY/	• • • • • • •	1	
- 20	AN385-30-6	• PIN,TAPER	• • • • • • •	1	
- 21	R901-217-6	• SHAFT	• • • • • • •	1	A3
- 22	R901-217-4	• GEAR	• • • • • • •	1	
	B900-301	• GEAR,/USED ON B900-102 ONLY/	• • • • • • •	1	
- 23	R901-217-42	• WASHER	• • • • • • •	1	
	AN960-616	• WASHER,/USED ON B900-102 ONLY/	• • • • • • •	1	
- 24	AN960-616L	• WASHER,/NOT USED ON B900-102/	• • • • • • •	1	
- 25	105090B005-6-020	• WASHER,/NOT USED ON B900-102/	• • • • • • •	AR	
- 26	100696S18-13-017	• SPACER	• • • • • • •	1	
	102933S7-0562-0531	• SPACER,/USED ON B900-102 ONLY/	• • • • • • •	1	
- 27	R901-217-10	• ROTOR	• • • • • • •	1	
- 28	R901-217-22	• WASHER,RUBBER	• • • • • • •	1	
- 29	ND-R4	• BEARING	• • • • • • •	2	
- 30	R901-217-8	• SHIELD,END	• • • • • • •	1	
- 31	215-325-2	• COIL	• • • • • • •	1	
- 32	215-325-4	• COIL	• • • • • • •	1	
- 33	R901-217-18	• SHOE,POLE	• • • • • • •	2	
- 34	R901-217-24	• LUG	• • • • • • •	2	
- 35	R901-217-28	• INSULATOR	• • • • • • •	2	
- 36	35-364151-15	• RIGGING,BRUSH	• • • • • • •	2	
- 37	AN240-3	• EYELET	• • • • • • •	3	
- 38	R901-311	• PLACARD	• • • • • • •	1	
- 39	R901-217-2	• HOUSING	• • • • • • •	1	
- 40	R900-329	• UNIVERSAL,/USED ON R900-101 & -107/	• • • • • • •	1	A3
- 41	B200-340	• GEAR,PINION /USED ON R900-109 & -102/	• • • • • • •	1	A23BCDEFG
- 42	R203-212	• BEARING ASSY,/USED ON R900-109 & -102/	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

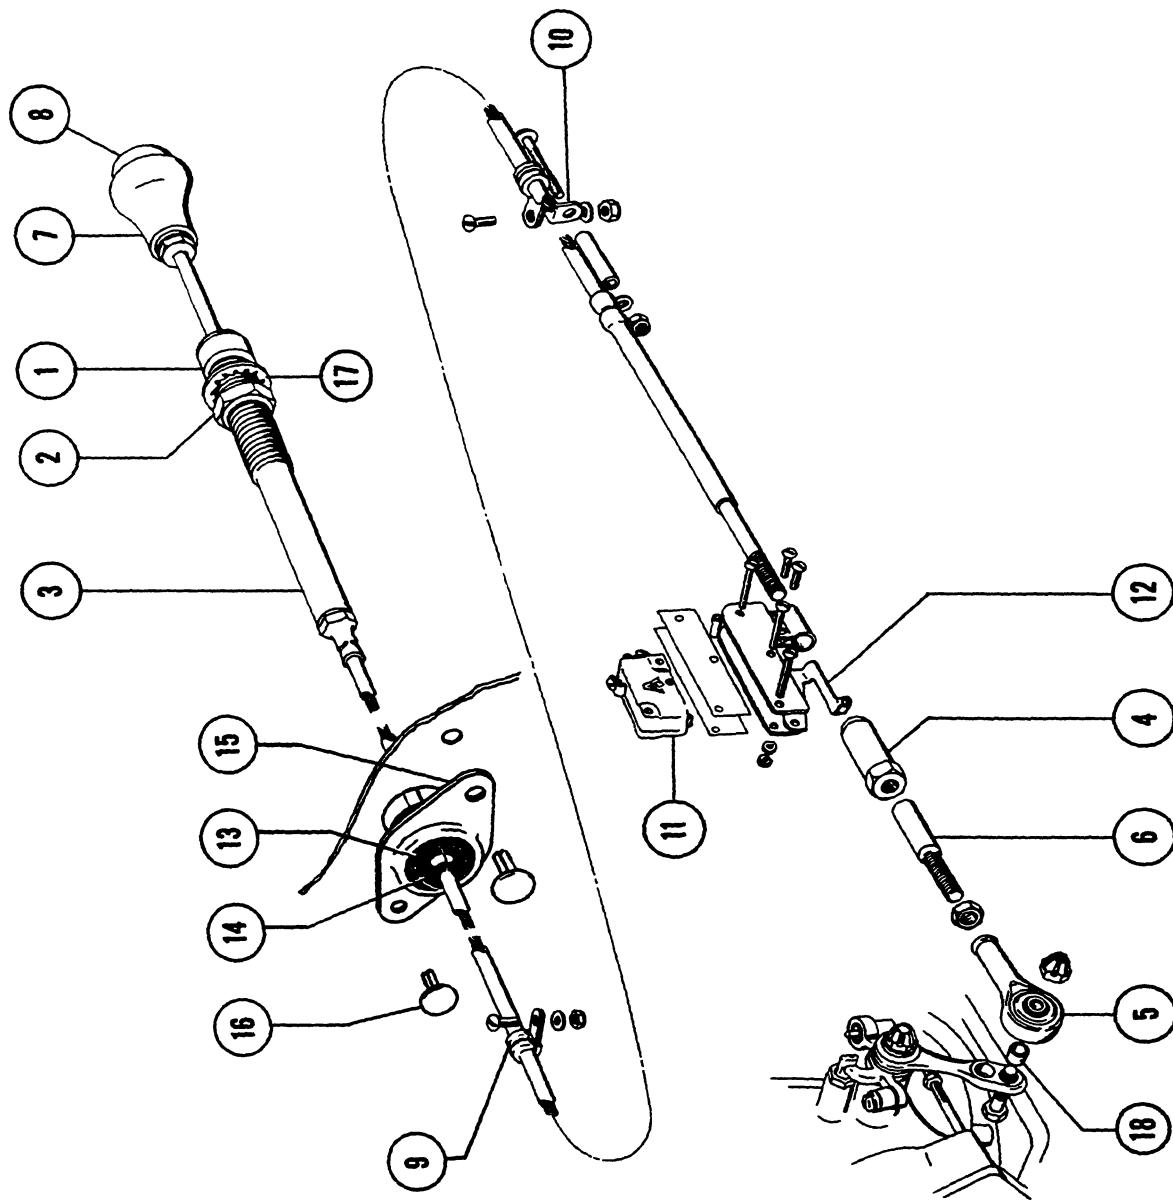


Figure 99. Throttle Control and Landing Gear Warning Switch

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
99	35-911944-600		CONTROL ASSY,THROTTLE							1	
- 1	35-944016		• NUT,THROTTLE LOCK							1	
- 2	AN924-8D		• NUT,THROTTLE CONTROL LOCK							1	
- 3	35-944046		• CONTROL ASSY,THROTTLE /INCLUDES KNOB ASSY/. .							1	
	3V-700-ACSN-		• CONTROL ASSY,THROTTLE							1	C7DEFG
	125-52-1/8										
- 4	35-369123		• ACTUATOR,THROTTLE CONTROL							1	
- 5	REB3N		• BEARING,THROTTLE CONTROL ROD END.							1	
- 6	35-944023		• EXTENSION,THROTTLE CONTROL.							1	
- 7	35-944036		• KNOB ASSY,THROTTLE CONTROL.							1	
	35-944042		• KNOB ASSY,THROTTLE CONTROL.							1	C7DEFG
	35-944043		• SPRING,THROTTLE CONTROL KNOB.							1	C7DEFG
- 8	35-944035		• BUTTON,THROTTLE CONTROL							1	
- 9	AN742D6C		CLAMP,THROTTLE CONTROL.							1	
	AN515-8-8		SCREW,CLAMP ATTACHING							1	
	AN960-8		WASHER,CLAMP ATTACHING.							1	
	AN365-832		NUT,CLAMP ATTACHING							1	
- 10	739-5		CLIP,THROTTLE CONTROL							1	
	739-7		CLIP,THROTTLE CONTROL							1	C7DEFG
	AN515-8-8		SCREW,CLIP ATTACHING.							2	
	AN960-8		WASHER,CLIP ATTACHING							2	
	AN365-832		NUT,CLIP ATTACHING.							2	
	105739S0200-		BUSHING,THROTTLE CONTROL ATTACHING.							1	
	0247-0250										
	AN3-10		BOLT,THROTTLE CONTROL ATTACHING							1	
	AN310-3		NUT,THROTTLE CONTROL ATTACHING.							1	
	35-369001-602		SWITCH ASSY							1	
- 11	V3-1		• SWITCH,LANDING GEAR WARNING							1	
- 12	JV-5		• ACTUATOR,WARNING SWITCH							1	
	AN515-4-12		SCREW,WARNING SWITCH ATTACHING.							2	
	AN365-440		NUT,WARNING SWITCH ATTACHING.							2	
	AN960-4		WASHER,WARNING SWITCH ATTACHING							4	
	35-369131		INSULATOR,WARNING SWITCH.							2	
	35-369124		BRACKET,WARNING SWITCH.							1	
	AN515-4-6		SCREW,BRACKET ATTACHING							2	
	AN365-440		NUT,BRACKET ATTACHING							2	
	102933D1-0188-		SPACER,BRACKET.							1	
	0410										
	AN515-4-12		SCREW,BRACKET SPACER ATTACHING.							1	
	AN365-440		NUT,BRACKET SPACER ATTACHING.							1	
	AN960-4		WASHER,BRACKET SPACER ATTACHING							2	
	35-415350		COVER,THROTTLE CONTROL.							1	
	100696P16-07-		SPACER,BRACKET ATTACHING.							1	
	112										
	AN515-10-24		SCREW,BRACKET ATTACHING							1	
	AN960-10		WASHER,BRACKET ATTACHING.							1	
	AN365-1032		NUT,BRACKET ATTACHING							1	
- 13	112412		GROMMET,FIREWALL.							2	
- 14	112413-8		GROMMET,HALF BALL FIREWALL.							2	
- 15	NAS51-87		RETAINER.							1	A16
	112436-6		RETAINER.							1	A17BCDEFG
- 16	49338		FASTENER.							2	
	35-944029		CLAMP ASSY.							1	E8FG
- 17	1232-00		WASHER.							1	
- 18	10573050200-		BUSHING							1	
	0247-025										

MODEL 35 THRU G35 PARTS CATALOG

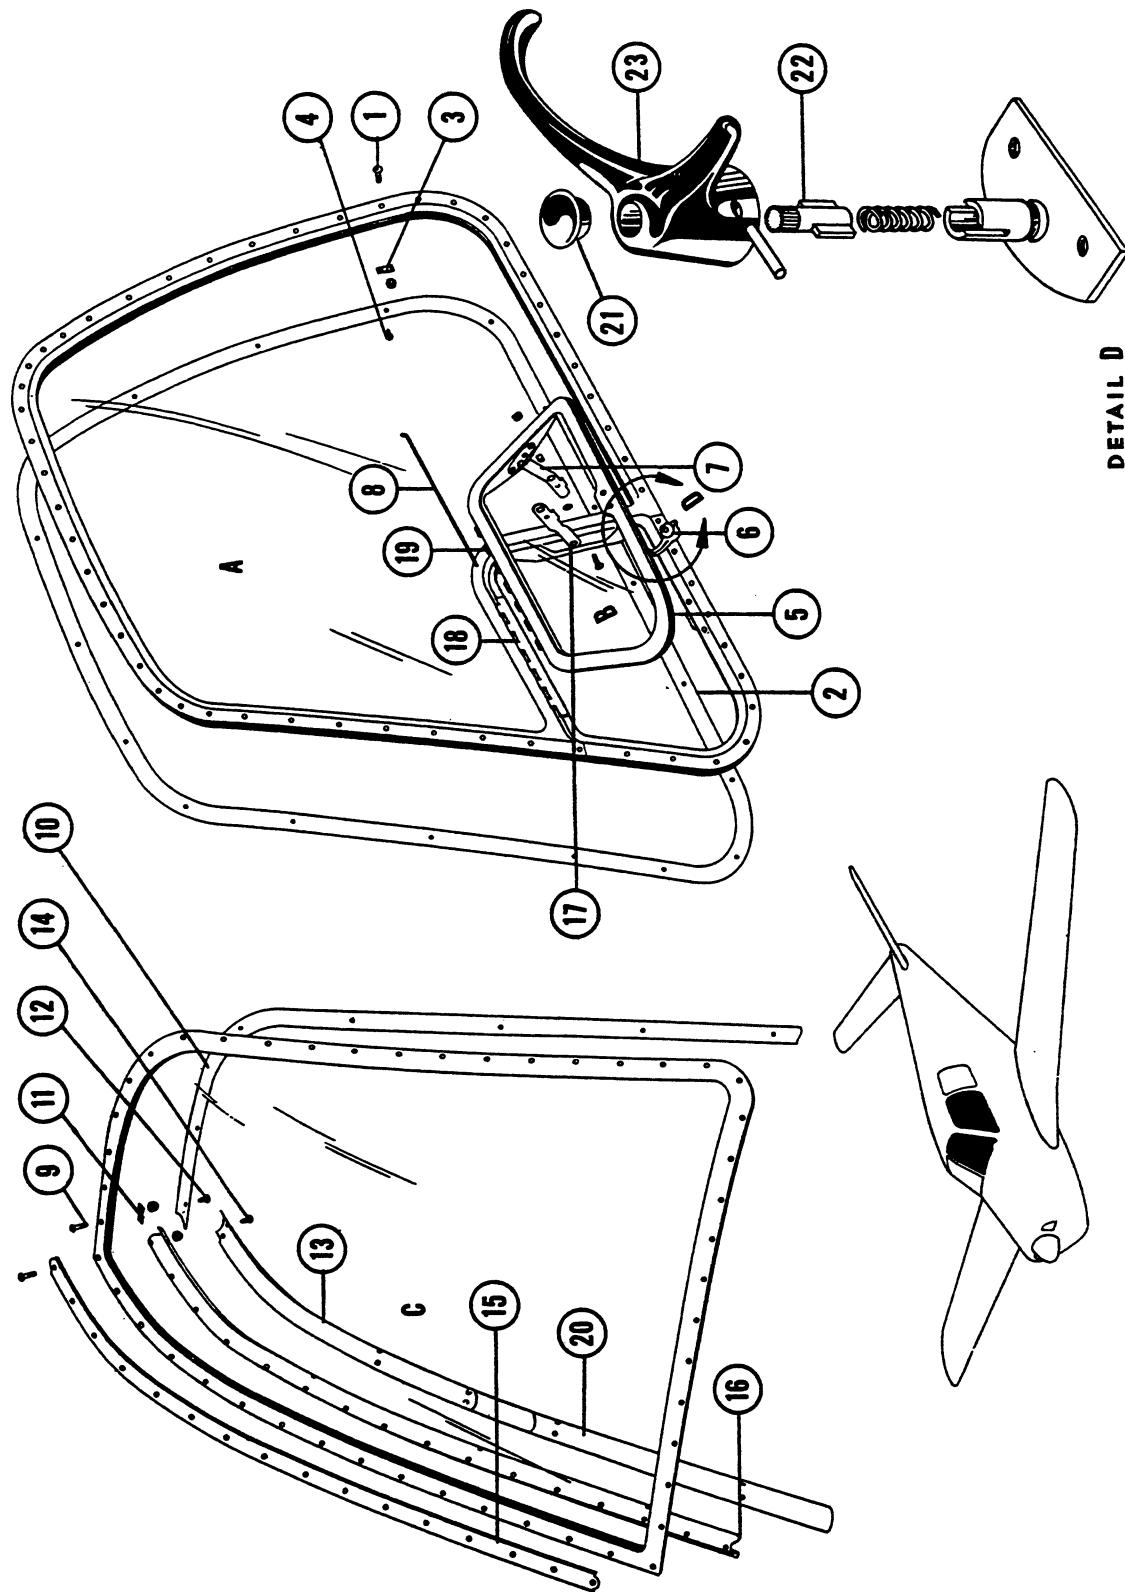


Figure 100. Windshield and Forward Window

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
100 - A	35-410291 SA14		WINDOW ASSY,FWD BODY /LESS LATCH ASSY/	1	ABCD
	35-410291-628		WINDOW ASSY,FWD BODY /TINTED/ /INCLUDES LATCH ASSY/	1	EFG
	35-410291-716		ROD ASSY,STORM WINDOW LATCH	1	EFG
- 1	AN507-632R6		SCREW,WINDOW ATTACHING	56	
	AN365-632		NUT,WINDOW ATTACHING	56	
- 2	35-410291-76		MOULDING,INNER WINDOW	1	
- 3	35-400315		CLIP,MOULDING ATTACHING	19	
- 4	PK84XA-4-4		SCREW,MOULDING ATTACHING	19	
- B	35-410291 SA20		WINDOW ASSY,STORM	1	
	35-410291-626		WINDOW ASSY,STORM /TINTED/	1	EFG
- 5	111740-04124		• SEAL,STORM WINDOW	1	
- 6	35-410321		• LATCH ASSY,STORM WINDOW	1	
- 7	35-410325		ROD,STORM WINDOW STOP	1	
	102809A093-011		PIN,STORM WINDOW STOP	1	
	100801X2-0062		BUSHING,STORM WINDOW STOP HINGE	1	
	102933S4ZP0140		SPACER,STORM WINDOW STOP	1	
	227M82		NUT,STORM WINDOW STOP	1	
	35-410291-112		SEAL,STORM WINDOW	1	
- 8	35-410291-118		PIN,STORM WINDOW HINGE	1	
- C	35-410291-8		WINDSHIELD ASSY,LH /0.156 THICK/	1	
	35-410291-11		WINDSHIELD ASSY,RH /0.156 THICK/	1	
- 9	AN507-632R6		SCREW,WINDSHIELD ATTACHING	33	
	AN365-632		NUT,WINDSHIELD ATTACHING	33	
- 10	35-410291-80		MOULDING,INNER	1	
	35-410291-81		MOULDING,INNER	1	
- 11	35-410315		CLIP,MOULDING	8	
- 12	PK78XZ-4-4		SCREW,MOULDING ATTACHING	8	
- 13	35-410291-46		MOULDING,UPPER CENTER	1	
- 14	PK84XA-4-4		SCREW,ATTACHING	8	
- 15	35-410291-48		COVER,WINDSHIELD JOINT	1	
	AN507-632R7		SCREW,WINDSHIELD COVER	16	
	AN365-632		NUT,WINDSHIELD COVER	16	
- 16	35-410291-44		SECTION,INNER HAT	1	
	102933S4ZP		SLEEVE,STORM WINDOW STOP	1	
	102933S4ZP0159		SPACER,STORM WINDOW STOP	1	
	100801X2-0125		BUSHING,STORM WINDOW STOP SLEEVE	1	
	227M82		NUT,STORM WINDOW STOP HINGE	1	
- 18	35-410291-88		HINGE	1	
- 19	35-410291-90		HINGE	1	
- 20	35-410291-108		MOULDING,LOWER CENTER	1	
- D	35-410321		• LATCH ASSY,STORM WINDOW	1	
	35-410322		• • PLATE	1	
- 21	792417		• • BUTTON	1	
- 22	792416		• • KEY	1	
	763705		• • SPRING	1	
	767693		• • SHAFT	1	
	142952		• • PIN	1	
- 23	767688		• • HANDLE	1	
	35-410291-164		WINDSHIELD,LH /0.250 THICK/	1	
	35-410291-165		WINDSHIELD,RH /0.250 THICK/	1	

MODEL 35 THRU G35 PARTS CATALOG

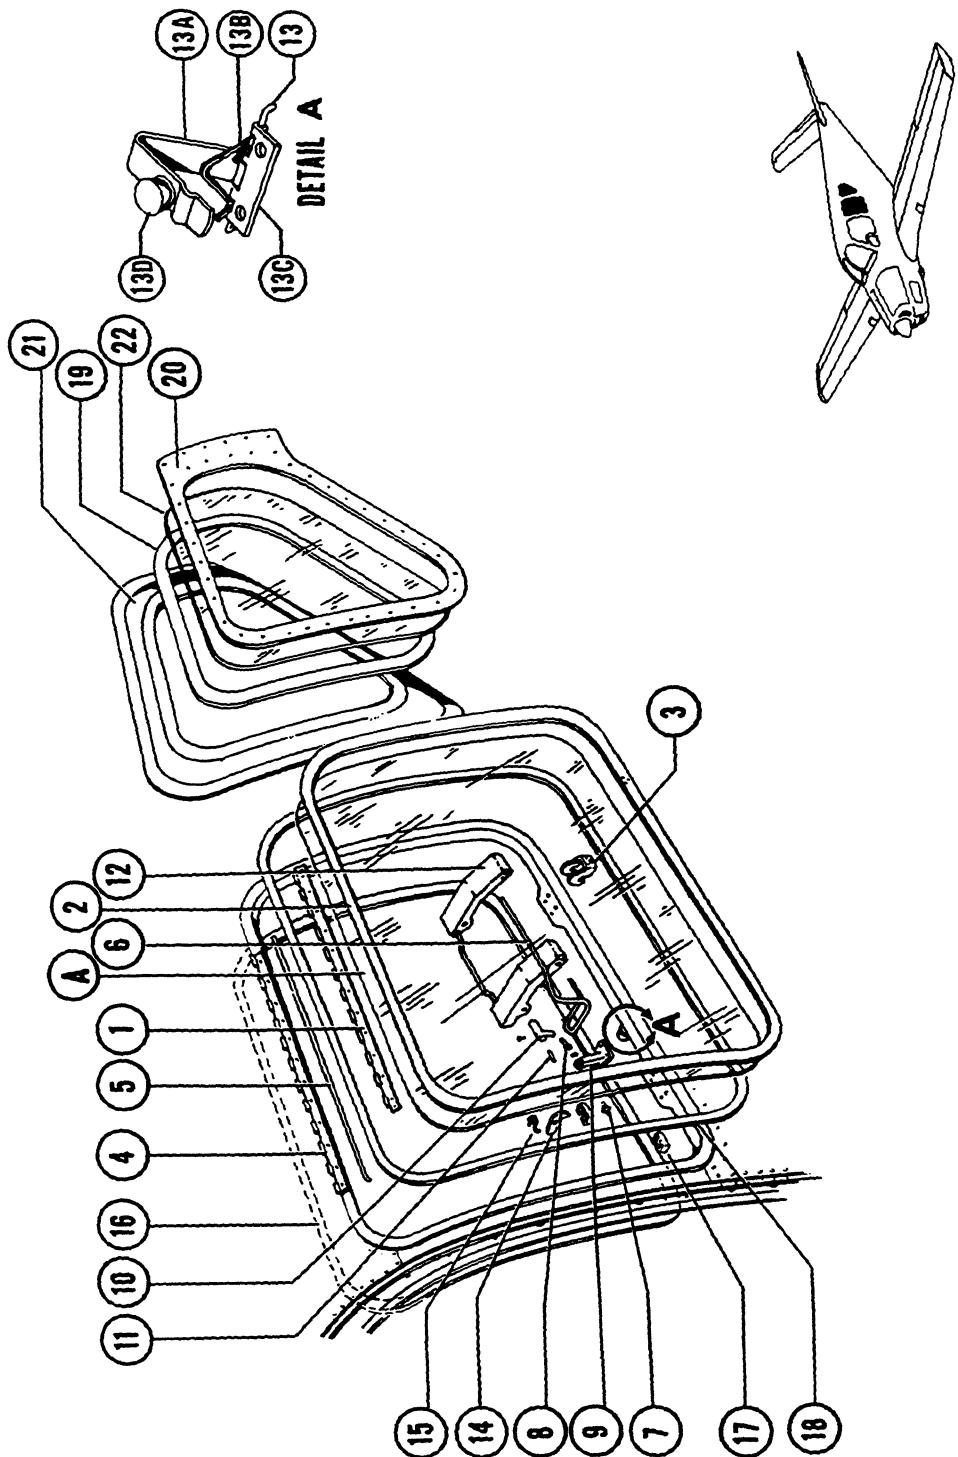


Figure 101. Center and Aft Windows

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
101	35-410291	SA100	WINDOW ASSY, REAR.	1	ABCD
	35-410291-128		WINDOW ASSY, REAR.	1	E
	35-410291-146		WINDOW ASSY, REAR.	1	FG
	35-410291	SA101	WINDOW ASSY, REAR.	1	ABCD
	35-410291-129		WINDOW ASSY, REAR.	1	E
	35-410291-147		WINDOW ASSY, REAR.	1	FG
- A	35-410291-12		• PLEXIGLAS, REAR WINDOW /CLEAR/	1	ABCD
	35-410291-130		• PLEXIGLAS, REAR WINDOW /TINTED/	1	EFG
- 1	35-410291-18		• HINGE, REAR WINDOW HALF.	1	
- 2	35-410291-144		• FRAME, REAR WINDOW	1	FG
	35-410291-145		• FRAME, REAR WINDOW	1	FG
- 3	35-400298		• SUPPORT, REAR WINDOW HANDLE	1	
- 4	35-410291-98		HINGE, REAR WINDOW HALF.	1	
- 5	35-410291-52		PIN, REAR WINDOW HINGE	1	
- 6	35-410316		PIN, REAR WINDOW EMERGENCY PULL	1	
	35-410316		PIN, REAR WINDOW EMERGENCY PULL	1	
- 7	35-410317		PIN, REAR WINDOW EMERGENCY LINK	2	
	NAS51-18N		RING.	4	
- 8	35-534064		LINK, REAR WINDOW HANDLE	2	
- 9	35-534061		SUPPORT, REAR WINDOW HANDLE	2	
- 10	35-534057		LINK ASSY, REAR WINDOW	2	
- 11	35-534063		PIN, REAR WINDOW LINK ASSY	2	
	AN380-2-2		PIN, REAR WINDOW LINK COTTER	4	
- 12	35-415312-1		HANDLE ASSY, REAR WINDOW	1	
	35-415312-2		HANDLE ASSY, REAR WINDOW	1	
	35-410386	SA12	LOCK ASSY, REAR WINDOW	1	A17BC
- 13	35-410386-2		• PIN	1	
- 13A	35-410387		• STRAP	1	
- 13B	35-410388		• SPRING	1	
- 13C	35-410389		• HINGE	1	
- 13D	L-1148		KNOB.	1	
	/ATTACHING PARTS/										
	AN526-632-5		SCREW	1	
- 14	35-415311		-----*								
- 15	35-415310-1		LATCH, REAR WINDOW HANDLE	1	DEFG
	35-415310-2		SPRING, REAR WINDOW HANDLE LATCH	1	DEFG
	35-415309-1		SPRING, REAR WINDOW HANDLE LATCH	1	DEFG
	35-415309-2		CATCH ASSY, REAR WINDOW HANDLE	1	DEFG
- 16	35-410291-72		CATCH ASSY, REAR WINDOW HANDLE	1	DEFG
	35-410291-73		MOULDING, REAR WINDOW INSIDE	1	
- 17	35-410323		MOULDING, REAR WINDOW INSIDE	1	
- 18	S152		CLIP, REAR WINDOW RETAINER	2	
- 19	35-410000-92		EXTRUSION, REAR WINDOW RUBBER	1	
	35-410000-93		FRAME, BAGGAGE WINDOW	1	FG
- 20	35-410000-94		FRAME, BAGGAGE WINDOW	1	FG
	35-410000-95		FRAME, BAGGAGE WINDOW OUTSIDE	1	FG
- 21	35-410000-96		FRAME, BAGGAGE WINDOW OUTSIDE	1	FG
	35-410000-97		MOULDING, BAGGAGE WINDOW	1	FG
	NAS384-6		MOULDING, BAGGAGE WINDOW	1	FG
- 22	35-410000-98		SCREW	9	
	35-410000-99		PANE, BAGGAGE WINDOW /TINTED/	1	
	35-410000-100		PANE, BAGGAGE WINDOW /TINTED/	1	
			CLIP, BAGGAGE WINDOW	9	

MODEL 35 THRU G35 PARTS CATALOG

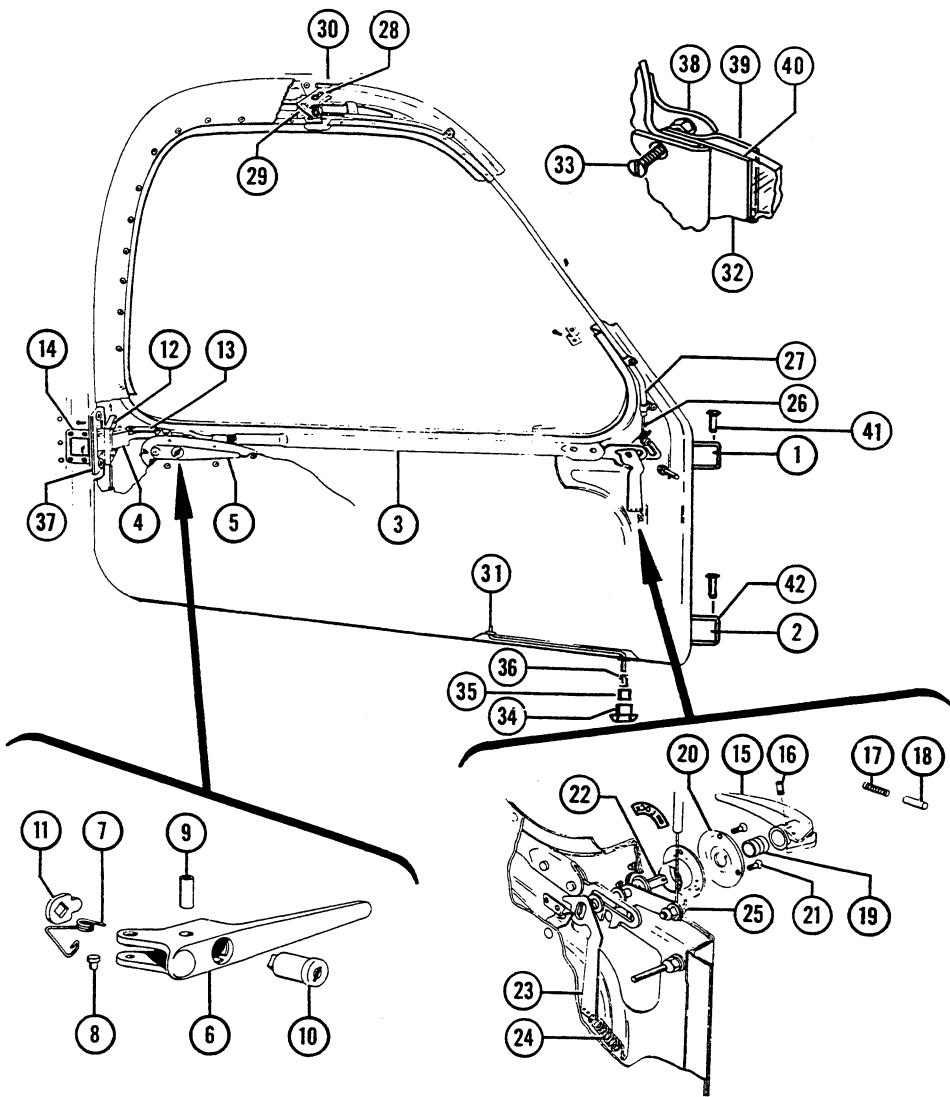


Figure 102. Cabin Door

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
102	35-400425	SA6	DOOR ASSY,CABIN /CLEAR WINDOW/	1	A14
	35-400010-606		DOOR ASSY,CABIN /CLEAR WINDOW/	1	A15A4BC13
	35-400010-614		DOOR ASSY,CABIN /CLEAR WINDOW/	1	C12D
	35-400010-616		DOOR ASSY,CABIN /TINTED WINDOW/	1	D
	35-400010-620		DOOR ASSY,CABIN /ARMREST/	1	G
	35-400425		• FRAME,CABIN DOOR	1	A14
	35-400010		• FRAME,CABIN DOOR	1	A15A4BCDEFG
- 1	35-400018		• HINGE ASSY,UPPER	1	
- 2	35-400008		• HINGE ASSY,LOWER	1	
- 3	35-400415		• LATCH,CONNECTING LINK CABIN DOOR	1	A15A4B
	35-400461		• LATCH,CONNECTING LINK CABIN DOOR	1	CDEFG
- 4	35-400417		• BOLT,CABIN DOOR LATCH	1	
- 5	35-400014		• HANDLE ASSY,OUTER	1	
- 6	35-400013		• • HANDLE,CABIN DOOR OUTER	1	
- 7	35-400031		• • SPRING,CABIN DOOR OUTER	1	
- 8	35-400033		• • STUD,CABIN DOOR HANDLE OUTER	1	
- 9	101321-00A075		• • BUSHING,SPECIAL BEARING	1	
- 10	35-590070-3		• • PLUG,LOCK	1	
- 11	35-400044		• • CAM,CABIN DOOR HANDLE	1	
	35-400032		• SUPPORT ASSY,CABIN DOOR OUTSIDE HANDLE	1	
- 12	35-400414		• GUIDE,CABIN DOOR LATCH BOLT	1	
	AN526-832-8		• SCREW,ATTACHING	2	
	AN393-69		• PIN	1	
- 13	35-400038		• LINK,CABIN DOOR OUTSIDE HANDLE	1	A15A4B
	35-400041		• LINK,CABIN DOOR OUTSIDE HANDLE	1	CDEFG
- 14	35-400322		• PLATE,STRIKER	1	
	35-400426		• HANDLE,CABIN DOOR LOCKING INSIDE	1	A15A4B
- 15	35-400436		• HANDLE ASSY,INSIDE DOOR	1	CDEFG
	35-400439		• • HANDLE,CABIN DOOR LOCKING	1	
- 16	35-400432		• • SCREW,INSIDE HANDLE ATTACHING	1	CD7
	35-400465		• • SCREW,INSIDE HANDLE ATTACHING	1	D6EFG
- 17	35-400434		• • SPRING,INSIDE DOOR HANDLE	1	
- 18	102809A125-024		• • PIN	1	
- 19	35-400431		• • BUSHING,INSIDE DOOR HANDLE	1	A15A4BCD7
	35-400467		• • BUSHING,INSIDE DOOR HANDLE	1	D6EF8
	35-400467-3		• • BUSHING,INSIDE DOOR HANDLE	1	F9G
	35-400437		• • LATCH,INSIDE DOOR HANDLE	1	
	35-400378		• PLATE,INSIDE DOOR HANDLE ESCUTCHEON	1	A15A4B
- 20	35-400435		• PLATE,INSIDE DOOR HANDLE ESCUTCHEON	1	CDEFG
- 21	AN507-632R10		• SCREW,ATTACHING	2	
	35-400420		• SHAFT ASSY,CABIN DOOR HANDLE INSIDE	1	A15A4B
- 22	35-400464		• SHAFT ASSY,CABIN DOOR HANDLE INSIDE	1	CD7
	35-400464-2		• SHAFT ASSY,CABIN DOOR HANDLE INSIDE	1	D6EF8
	35-400464-4		• SHAFT ASSY,CABIN DOOR HANDLE INSIDE	1	F9G
	35-400418		• STOP,INSIDE CABIN DOOR HANDLE	1	A15A4B
- 23	35-400462		• STOP,INSIDE CABIN DOOR HANDLE	1	CDEFG
- 24	100942L023-17		• SPRING,STOP	1	
- 25	35-550520		• PIN,CONTROL ATTACHMENT	2	
	102933S4ZJ0093		• SPACER	1	
- 26	105774M-ZB04200		• WIRE,UPPER CATCH	1	
- 27	35-400010-42		• HOUSING,UPPER CATCH WIRE	1	
- 28	35-400387		• LATCH,CABIN DOOR UPPER	1	
	35-415396		• LATCH,CABIN DOOR UPPER	1	
- 29	35-400386		• BRACKET,CABIN DOOR UPPER LATCH	1	
- 30	35-400035		• LATCH,STRIKER PLATE UPPER CABIN DOOR	1	
	35-400320-26		• STRIP,RUBBER DOOR SEAL	1	
	35-400380		• RETAINER,DOOR HINGE PIN	2	
- 31	35-400379		• ROD,CABIN DOOR RETAINING	1	A15A4BCDEFG
- 32	35-400320-10		• SASH ASSY,/CLEAR LUCITE/	1	A1A2BCDE3
	35-400320-32		• SASH ASSY,/TINTED PLEXIGLAS/ /OPTIONAL/	1	D
	35-400320-32		• SASH ASSY,/TINTED PLEXIGLAS/ /STANDARD/	1	EFG

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
102 - 33	AN507-632R6		SCREW,ATTACHING	46	
	AN365-632		NUT,ATTACHING	46	
- 34	35-410176		SOCKET ASSY,RETAINING ROD	1	
- 35	35-410177		MOUNT,RETAINING ROD RUBBER	1	
- 36	35-410287		BUSHING,RETAINING ROD	1	
	35-400029		GUIDE,RETAINING ROD	1	
- 37	35-400322-2		PLATE,STRIKE.	1	
- 38	35-400320-20		MOULDING,INSIDE	1	
- 39	35-400320-6		FRAME,INSIDE MOULDING	1	
- 40	35-400320-8		RETAINER,OUTSIDE.	1	
	35-410431		CATCH ASSY,UPPER	1	
- 41	AN393-63		PIN,HINGE	2	
	35-400380		RETAINER.	2	
- 42	35-400405		SEAL,DOOR HINGE	1	

MODEL 35 THRU G35 PARTS CATALOG

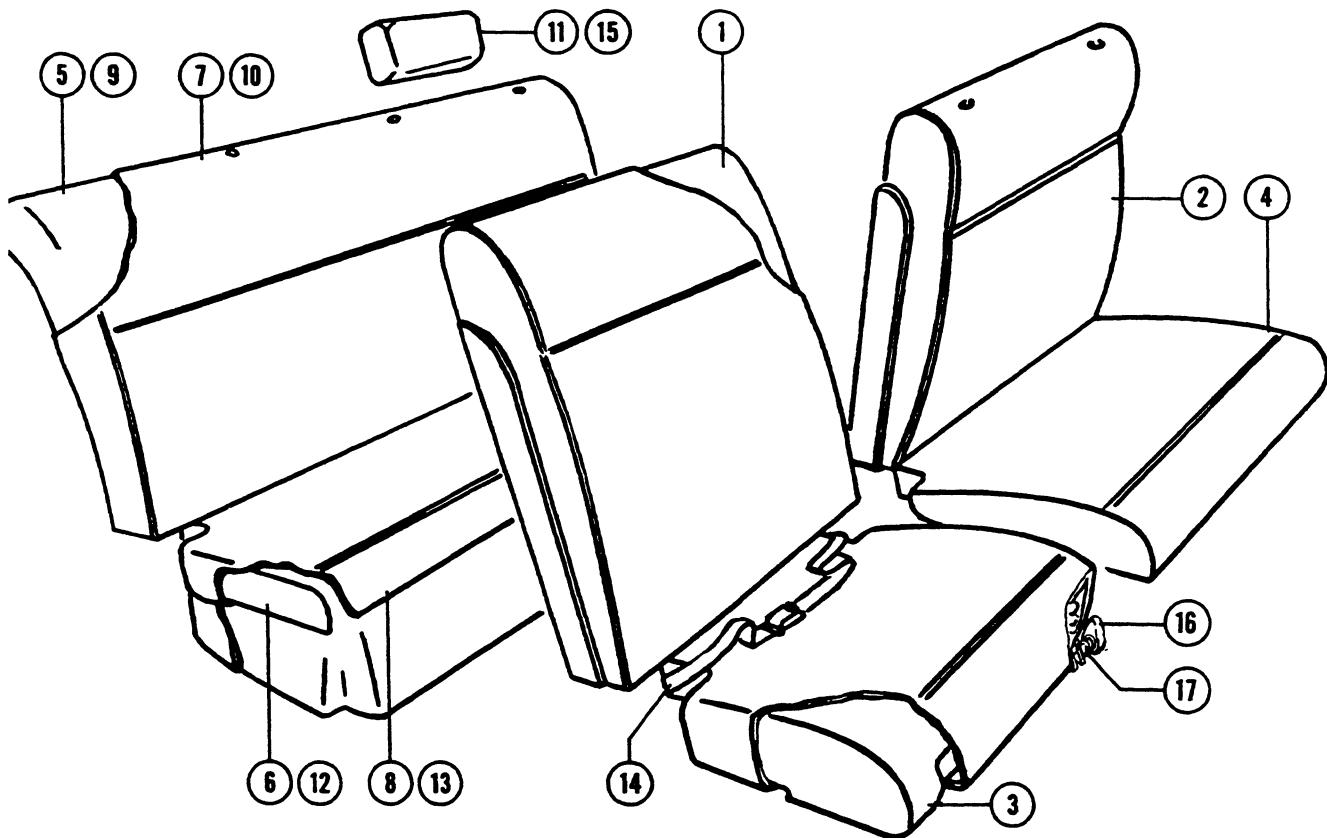


Figure 103. Seat Assemblies

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
103	35-534158	BACK ASSY, FRONT SEAT.	2	A
	35-534161	BACK ASSY, QUILTED FRONT SEAT.	2	B
	35-534262	BACK ASSY, FRONT SEAT.	2	C
	35-534321	BACK ASSY, FRONT SEAT.	2	D
	35-534321-2	BACK ASSY, FRONT SEAT.	2	EF
	35-534321	BACK ASSY, FRONT SEAT /ALTERED/	2	G
- 1	35-534204	• CUSHION, FRONT SEAT BACK	1	A
	35-NF6017	• CUSHION, FRONT SEAT BACK	1	DEFG
	35-534157	• SPRING, FRONT SEAT BACK	18	
- 2	35-534158-14	• COVER, FRONT SEAT BACK	1	A
	35-534161-2	• COVER, QUILTED FRONT SEAT BACK	1	B
	35-534262-2	• COVER, FRONT SEAT BACK	1	C
	35-534321-14	• COVER, FRONT SEAT BACK	1	DEF
	35-534166	• STRUCTURE ASSY, FRONT SEAT BACK	1	ABC
	35-534322	• STRUCTURE ASSY, FRONT SEAT BACK	1	D
	35-534361-32	• STRUCTURE ASSY, FRONT SEAT BACK	1	EFG
	35-534151	BOTTOM ASSY, FRONT SEAT.	1	A1
	35-534181	BOTTOM ASSY, FRONT SEAT.	1	A2
	35-534162	BOTTOM ASSY, QUILTED FRONT SEAT.	1	B
	35-534261	BOTTOM ASSY, FRONT SEAT.	1	C
	35-534324-2	BOTTOM ASSY, FRONT SEAT.	1	DEF
- 3	35-534324	BOTTOM ASSY, FRONT SEAT /ALTERED/	1	G
	35-534205	• CUSHION ASSY, FRONT SEAT BOTTOM.	1	ABC
	35-NF6011	• CUSHION ASSY, FRONT SEAT BOTTOM.	1	DEFG
	35-534157	• SPRING, FRONT SEAT BOTTOM.	30	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
103 - 4	35-534151-14	• COVER, FRONT SEAT BOTTOM	• • • • • • •	1	A1
	35-534181-14	• COVER, FRONT SEAT BOTTOM	• • • • • • •	1	A2
	35-534162-2	• COVER, FRONT SEAT BOTTOM	• • • • • • •	1	B
	35-534261-2	• COVER, FRONT SEAT BOTTOM	• • • • • • •	1	C
	35-534324-14	• COVER, FRONT SEAT BOTTOM	• • • • • • •	1	DEF
	35-534167	• STRUCTURE, FRONT SEAT BOTTOM	• • • • • • •	1	ABCDEF
	35-534361-2	• STRUCTURE, FRONT SEAT BOTTOM	• • • • • • •	1	G
	35-534304-603	UPHOLSTERED ASSY, FRONT SEAT / BOTTOM & BACK/	• • • • • • •	1	G
	35-534152	SEAT ASSY, REAR	• • • • • • •	1	A1
- 5	35-534155	• CUSHION ASSY, REAR SEAT BACK	• • • • • • •	1	A1
- 6	35-534156	• CUSHION ASSY, REAR SEAT BOTTOM	• • • • • • •	1	A1
	35-534157	• SPRING, REAR SEAT	• • • • • • •	60	A1
- 7	35-534152-24	• COVER ASSY, REAR SEAT BACK	• • • • • • •	1	A1
- 8	35-534152-48	• COVER ASSY, REAR SEAT BOTTOM	• • • • • • •	1	A1
	35-534168	• STRUCTURE ASSY, REAR SEAT	• • • • • • •	1	A1
	35-534186	BACK ASSY, REAR SEAT	• • • • • • •	1	A2
	35-534163	BACK ASSY, QUILTED REAR SEAT	• • • • • • •	1	B
	35-534255	BACK ASSY, REAR SEAT	• • • • • • •	1	C
	35-534325	BACK ASSY, REAR SEAT	• • • • • • •	1	D
- 9	35-534206	• CUSHION ASSY, REAR SEAT	• • • • • • •	1	A2B
	35-534257	• CUSHION ASSY, REAR SEAT	• • • • • • •	1	CD
	35-534275	• CUSHION ASSY, REAR SEAT HEADREST	• • • • • • •	1	CD
	35-534157	• SPRING, REAR SEAT	• • • • • • •	30	A2BCD
- 10	35-534186-10	• COVER ASSY, REAR SEAT BACK	• • • • • • •	1	A2
	35-534163-20	• COVER ASSY, REAR SEAT BACK	• • • • • • •	1	B
	35-534255-28	• COVER ASSY, REAR SEAT BACK	• • • • • • •	1	C
	35-534325-10	• COVER ASSY, REAR SEAT BACK	• • • • • • •	1	D
	35-534325-28	• COVER ASSY, REAR SEAT HEADREST	• • • • • • •	1	D
	35-534187	• STRUCTURE ASSY, REAR SEAT BACK	• • • • • • •	1	A2B
	35-534256	• STRUCTURE ASSY, REAR SEAT BACK	• • • • • • •	1	CD
	35-534257	CUSHION ASSY, REAR SEAT BACK	• • • • • • •	1	EF
	35-534355-636	CUSHION ASSY, REAR SEAT BACK	• • • • • • •	2	EF
	35-534304-605	CUSHION ASSY, REAR SEAT BACK	• • • • • • •	1	G
- 11	35-534304-642	CUSHION ASSY, HEADREST	• • • • • • •	1	G
	35-534304-643	CUSHION ASSY, HEADREST	• • • • • • •	1	G
	35-534256-28	STRUCTURE ASSY, REAR SEAT BACK	• • • • • • •	1	F
	35-534360-11	STRUCTURE ASSY, REAR SEAT BACK	• • • • • • •	1	G
	35-534157	SPRING, REAR SEAT BACK	• • • • • • •	28	F
	35-534194	BOTTOM ASSY, REAR SEAT	• • • • • • •	1	A2
	35-534164	BOTTOM ASSY, QUILTED REAR SEAT	• • • • • • •	1	B
	35-534208	BOTTOM ASSY, REAR SEAT	• • • • • • •	1	C
	35-534326	BOTTOM ASSY, REAR SEAT	• • • • • • •	1	D
- 12	35-534206	• CUSHION ASSY, REAR SEAT BOTTOM	• • • • • • •	1	A2B
	35-534207	• CUSHION ASSY, REAR SEAT BOTTOM	• • • • • • •	1	CD
	35-534157	• SPRING, REAR SEAT BOTTOM	• • • • • • •	32	A2BCD
- 13	35-534194-10	• COVER ASSY, REAR SEAT BOTTOM	• • • • • • •	1	A2
	35-534164-18	• COVER ASSY, REAR SEAT BOTTOM	• • • • • • •	1	B
	35-534208-2	• COVER ASSY, REAR SEAT BOTTOM	• • • • • • •	1	BC
	35-534326-10	• COVER ASSY, REAR SEAT BOTTOM	• • • • • • •	1	D
	35-534195	• STRUCTURE ASSY, REAR SEAT BOTTOM	• • • • • • •	1	A2BC
	35-534209	• STRUCTURE ASSY, REAR SEAT BOTTOM	• • • • • • •	1	D
	35-534207	CUSHION ASSY, REAR SEAT BOTTOM	• • • • • • •	1	EF
	35-534304-604	CUSHION ASSY, REAR SEAT BOTTOM	• • • • • • •	1	G
	35-534355-1	STRUCTURE ASSY, REAR SEAT BOTTOM	• • • • • • •	1	EF
	35-534360-1	STRUCTURE ASSY, REAR SEAT BOTTOM	• • • • • • •	1	G
	35-534157	SPRING, REAR SEAT BOTTOM	• • • • • • •	16	EFG
- 14	35-534267	BELT ASSY, FRONT SEAT SAFETY /HIGH STRENGTH/	• • • • • • •	2	AB
	35-534265	BELT ASSY, LEFT REAR SEAT SAFETY /HIGH STRENGTH/	• • • • • • •	1	AB
	35-534266	BELT ASSY, RIGHT REAR SEAT SAFETY/HIGH STRENGTH/	• • • • • • •	1	AB
	35-534269-13	Harness ASSY, FRONT SEAT SAFETY BELT	• • • • • • •	2	
	35-534269-15	Harness ASSY, REAR SEAT SAFETY BELT	• • • • • • •	2	
	35-534344	SUPPORT, FRONT SEAT HEADREST	• • • • • • •	1	F
- 15	35-534356	CUSHION ASSY, FRONT SEAT HEADREST	• • • • • • •	1	F
	35-534247	SLIDE ASSY, REAR SEAT BACK	• • • • • • •	1	D
	35-534247-1	SLIDE ASSY, REAR SEAT BACK	• • • • • • •	1	D
	50-534070	SLIDE ASSY, REAR SEAT BACK	• • • • • • •	2	FG
- 16	35-534327-603	LEVER ASSY, LH FRONT SEAT ADJUSTING	• • • • • • •	1	A66
	35-534327-604	LEVER ASSY, RH FRONT SEAT ADJUSTING	• • • • • • •	1	A66
- 17	35-534348-1	SPRING, LH LEVER	• • • • • • •	1	A66
	35-534348-2	SPRING, RH LEVER	• • • • • • •	1	A66
	35-534370-1	LEVER ASSY, LH FRONT SEAT ADJUSTING	• • • • • • •	1	A66
	35-534370-2	LEVER ASSY, RH FRONT SEAT ADJUSTING	• • • • • • •	1	A67BCDEFG
					A67BCDEFG

PLEASE SPECIFY SHIP SERIAL WHEN ORDERING
REPLACEMENT PARTS.

MODEL 35 THRU G35 PARTS CATALOG

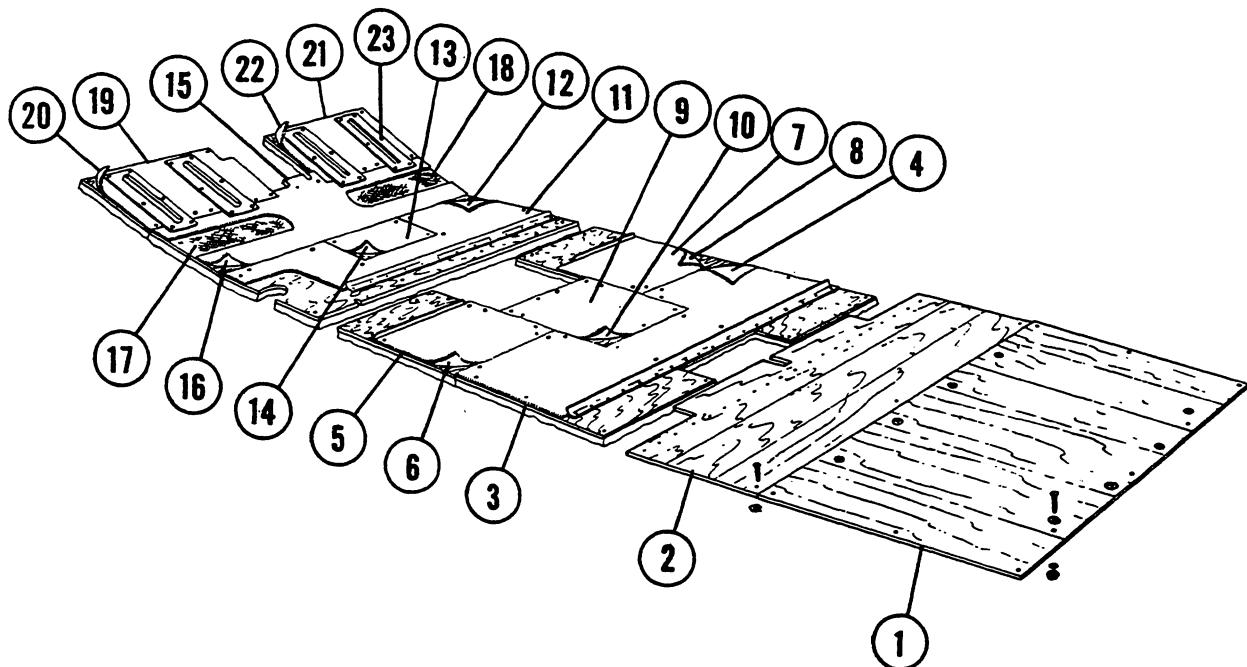


Figure 104. Cabin And Baggage Compartment Floorboards

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
104 -	1 35-410501-42	FLOORBOARD ASSY,BAGGAGE COMPARTMENT							1	A1
-	2 35-410501-40	FLOORBOARD ASSY,REAR CABIN.							1	A1
-	3 35-410501-638	FLOORBOARD ASSY,CABIN *							1	A1
-	4 35-534041-122	• SECTION,CABIN FLOOR CARPET.							1	A1
-	5 35-410501-636	FLOORBOARD ASSY,CABIN *							1	A1
-	6 35-534041-80	• SECTION,CABIN FLOOR CARPET.							1	A1
-	7 35-410501-650	FLOORBOARD ASSY,CABIN *							1	A1
-	8 35-534041-82	• SECTION,CABIN FLOOR CARPET.							1	A1
-	9 35-410501-646	FLOORBOARD ASSY,CENTER *.							1	A1
-	10 35-534041-124	• SECTION,CENTER CARPET							1	A1
-	11 35-410501-634	FLOORBOARD ASSY,CABIN *							1	A1
-	12 35-534041-92	• SECTION,CABIN FLOOR CARPET.							1	A1
-	13 35-410501-654	FLOORBOARD ASSY,CENTER *.							1	A1
-	14 35-534041-192	SECTION,CENTER FLOORBOARD CARPET.							1	A1
-	15 35-410501-632	FLOORBOARD ASSY,CABIN *							1	A1
-	16 35-534041-94	• SECTION,CABIN FLOOR CARPET.							1	A1
-	17 35-534300-154	• PAD,CABIN FLOOR HEEL LH							1	A1
-	18 35-534300-155	• PAD,CABIN FLOOR HEEL RH							1	A1
	PK78XZ-6-12	• SCREW,FLOORBOARD ATTACHING.							9	A1
	6SCK	• WASHER.							9	A1
-	19 35-410501-602	FLOORBOARD ASSY,CABIN *							1	A1
-	20 35-534041-98	• SECTION,CABIN FLOOR CARPET.							1	A1
-	21 35-410501-604	FLOORBOARD ASSY,CABIN							1	A1

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
104 - 22	35-534041-96		• SECTION,CABIN FLOOR CARPET.	•	•	•	•	•	•	1	A1
- 23	35-534053		BOOT ASSY,RUDDER PEDAL.	•	•	•	•	•	•	2	A1
	111191-06000		STRAP,BAGGAGE TIE DOWN.	•	•	•	•	•	•	2	A8BCDEFG
	111192-02400		STRAP,BAGGAGE TIE DOWN.	•	•	•	•	•	•	2	A8BCDEFG
	506-1NP		STRAP,FOOTMAN LOOP BAGGAGE.	•	•	•	•	•	•	4	A8BCDEFG

*THIS ASSEMBLY IS COMPLETE WITH CARPET,SOUND PROOFING,REINFORCEMENTS,ATTACHING SCREW & NUTS.
PLEASE SPECIFY SHIP SERIAL & COLOR OF MATERIAL WHEN ORDERING PARTS.

MODEL 35 THRU G35 PARTS CATALOG

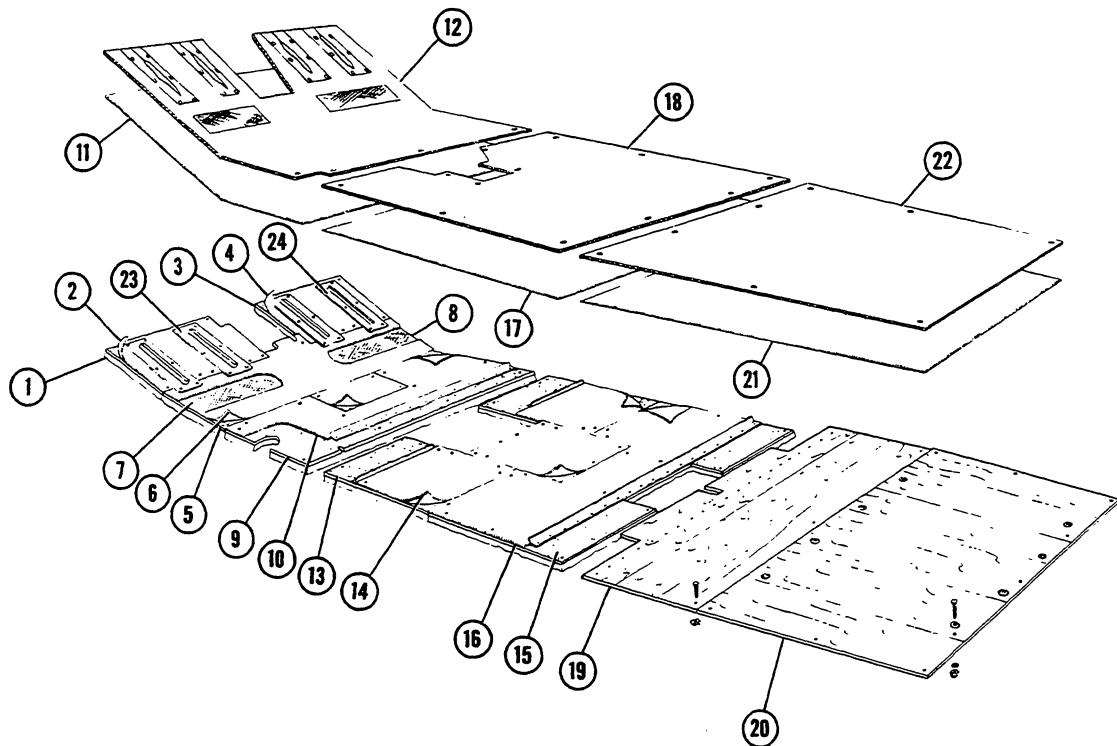


Figure 105. Cabin And Baggage Compartment Floorboards

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
105 - 1	35-415380-608	FLOORBOARD ASSY, RUDDER	1	A2BCDEF
	35-534304-633	FLOORBOARD ASSY, RUDDER / STANDARD SOUNDPROOFING/	1	G
	35-415380-645	FLOORBOARD ASSY, RUDDER / SUPER SOUNDPROOFING/	1	G
- 2	35-534041-96	• CARPET	1	A2B
	35-534300-176	• CARPET	1	CDEF
	35-534041-168	• MAT, SOUNDPROOFING	1	A2B
	35-534300-194	• MAT, SOUNDPROOFING	1	CDEF
- 3	35-415380-610	FLOORBOARD ASSY, RUDDER	1	A2BCDEF
	35-534304-634	FLOORBOARD ASSY, RUDDER / STANDARD SOUNDPROOFING/	1	G
	35-534304-646	FLOORBOARD ASSY, RUDDER / SUPER SOUNDPROOFING/	1	G
- 4	35-534041-98	• CARPET	1	A2B
	35-534300-178	• CARPET	1	CDEF
	35-534041-170	• MAT, SOUNDPROOFING	1	A2BCDEF
- 5	35-415380-602	FLOORBOARD ASSY, HEEL	1	A2BCDEF
	35-534304-635	FLOORBOARD ASSY, HEEL / STANDARD SOUNDPROOFING/	1	G
	35-534304-647	FLOORBOARD ASSY, HEEL / SUPER SOUNDPROOFING/	1	G
- 6	35-534041-94	• CARPET	1	A2B
	35-534300-180	• CARPET	1	CDEF
	35-534341-166	• MAT, SOUNDPROOFING	1	A2B
	35-534300-196	• MAT, SOUNDPROOFING	1	CDEF
- 7	35-534300-154	• PAD, HEEL LH	1	A1A2BCDEF
- 8	35-534300-155	• PAD, HEEL RH	1	A1A2BCDEF
- 9	35-415380-604	FLOORBOARD ASSY, FWD	1	A2BCDEF
	35-534304-636	FLOORBOARD ASSY, FWD / STANDARD SOUNDPROOFING/	1	G
	35-534304-648	FLOORBOARD ASSY, FWD / SUPER SOUNDPROOFING/	1	G

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
105 - 10	35-534200-42	.	CARPET.	1	A2B
	35-534300-182	.	CARPET.	1	CDEF
	35-534200-48	.	MAT,SOUNDPROOFING	1	A2B
	35-534300-198	.	MAT,SOUNDPROOFING	1	CDEF
- 11	35-534304-624	MAT ASSY,/STANDARD SOUNDPROOFING/	.	1	G
	35-534304-625	.	/SUPER SOUNDPROOFING/ /OPTIONAL/	1	G
- 12	35-534304-630	RUG ASSY,CABIN FWD.	.	1	G
- 13	35-415380-620	FLOORBOARD ASSY,CENTER.	.	1	A2BCDEF
	35-534304-637	FLOORBOARD ASSY,CENTER /STANDARD SOUNDPROOFING/	.	1	G
	35-534304-649	FLOORBOARD ASSY,CENTER /SUPER SOUNDPROOFING/	.	1	G
- 14	35-534200-40	.	CARPET.	1	A2B
	35-534300-184	.	CARPET.	1	CDEF
	35-534200-50	.	MAT,SOUNDPROOFING	1	A2B
	35-534300-204	.	MAT,SOUNDPROOFING	1	CDEF
	35-415380-22	.	PAN,EMERGENCY LANDING GEAR HANDCRANK.	1	
- 15	35-415380-616	FLOORBOARD ASSY,REAR.	.	1	A2BCDEF
	35-534304-638	FLOORBOARD ASSY,REAR /STANDARD SOUNDPROOFING/	.	1	G
	35-534304-650	FLOORBOARD ASSY,REAR /SUPER SOUNDPROOFING/	.	1	G
- 16	35-534200-36	.	CARPET.	1	A2B
	35-534300-190	.	CARPET.	1	CDEFG
	35-534200-52	.	MAT,SOUNDPROOFING	1	A2B
	35-534300-208	.	MAT,SOUNDPROOFING	1	CDEFG
- 17	35-534304-626	MAT ASSY,/STANDARD SOUNDPROOFING/	.	1	G
	35-534304-627	MAT ASSY,/SUPER SOUNDPROOFING/	.	1	G
- 18	35-534304-631	RUG ASSY,CABIN REAR	.	1	G
- 19	35-415380-20	FLOORBOARD ASSY,BAGGAGE FWD	.	1	A2BCDEF
	35-534304-639	FLOORBOARD ASSY,BAGGAGE FWD /STANDARD SOUNDPROOFING/	.	1	G
	35-534304-651	FLOORBOARD ASSY,BAGGAGE FWD /SUPER SOUNDPROOFING/	.	1	G
- 20	35-534304-628	.	MAT ASSY,/SUPER SOUNDPROOFING/	1	G
	35-415380-30	FLOORBOARD ASSY,BAGGAGE REAR	.	1	A2BCDEF
.	35-534304-640	FLOORBOARD ASSY,BAGGAGE REAR /STANDARD SOUNDPROOFING/	.	1	G
	35-534304-652	FLOORBOARD ASSY,BAGGAGE REAR /SUPER SOUNDPROOFING/	.	1	G
- 21	35-534304-629	MAT ASSY,/SUPER SOUNDPROOFING/	.	1	G
- 22	35-534304-632	RUG ASSY,BAGGAGE COMPARTMENT	.	1	G
- 23	35-534051	BOOT ASSY,RUDDER PEDAL LH	.	2	
- 24	35-534053	BOOT ASSY,RUDDER PEDAL RH	.	2	
	111191-06000	STRAP ASSY,TIE DOWN LH.	.	2	
	111192-02400	STRAP ASSY,BAGGAGE TIE DOWN RH.	.	2	
	6411B N.P.	LOOP,FOOTMAN.	.	4	

PLEASE SPECIFY SHIP SERIAL & COLOR OF MATERIAL
WHEN ORDERING PARTS.

MODEL 35 THRU G35 PARTS CATALOG

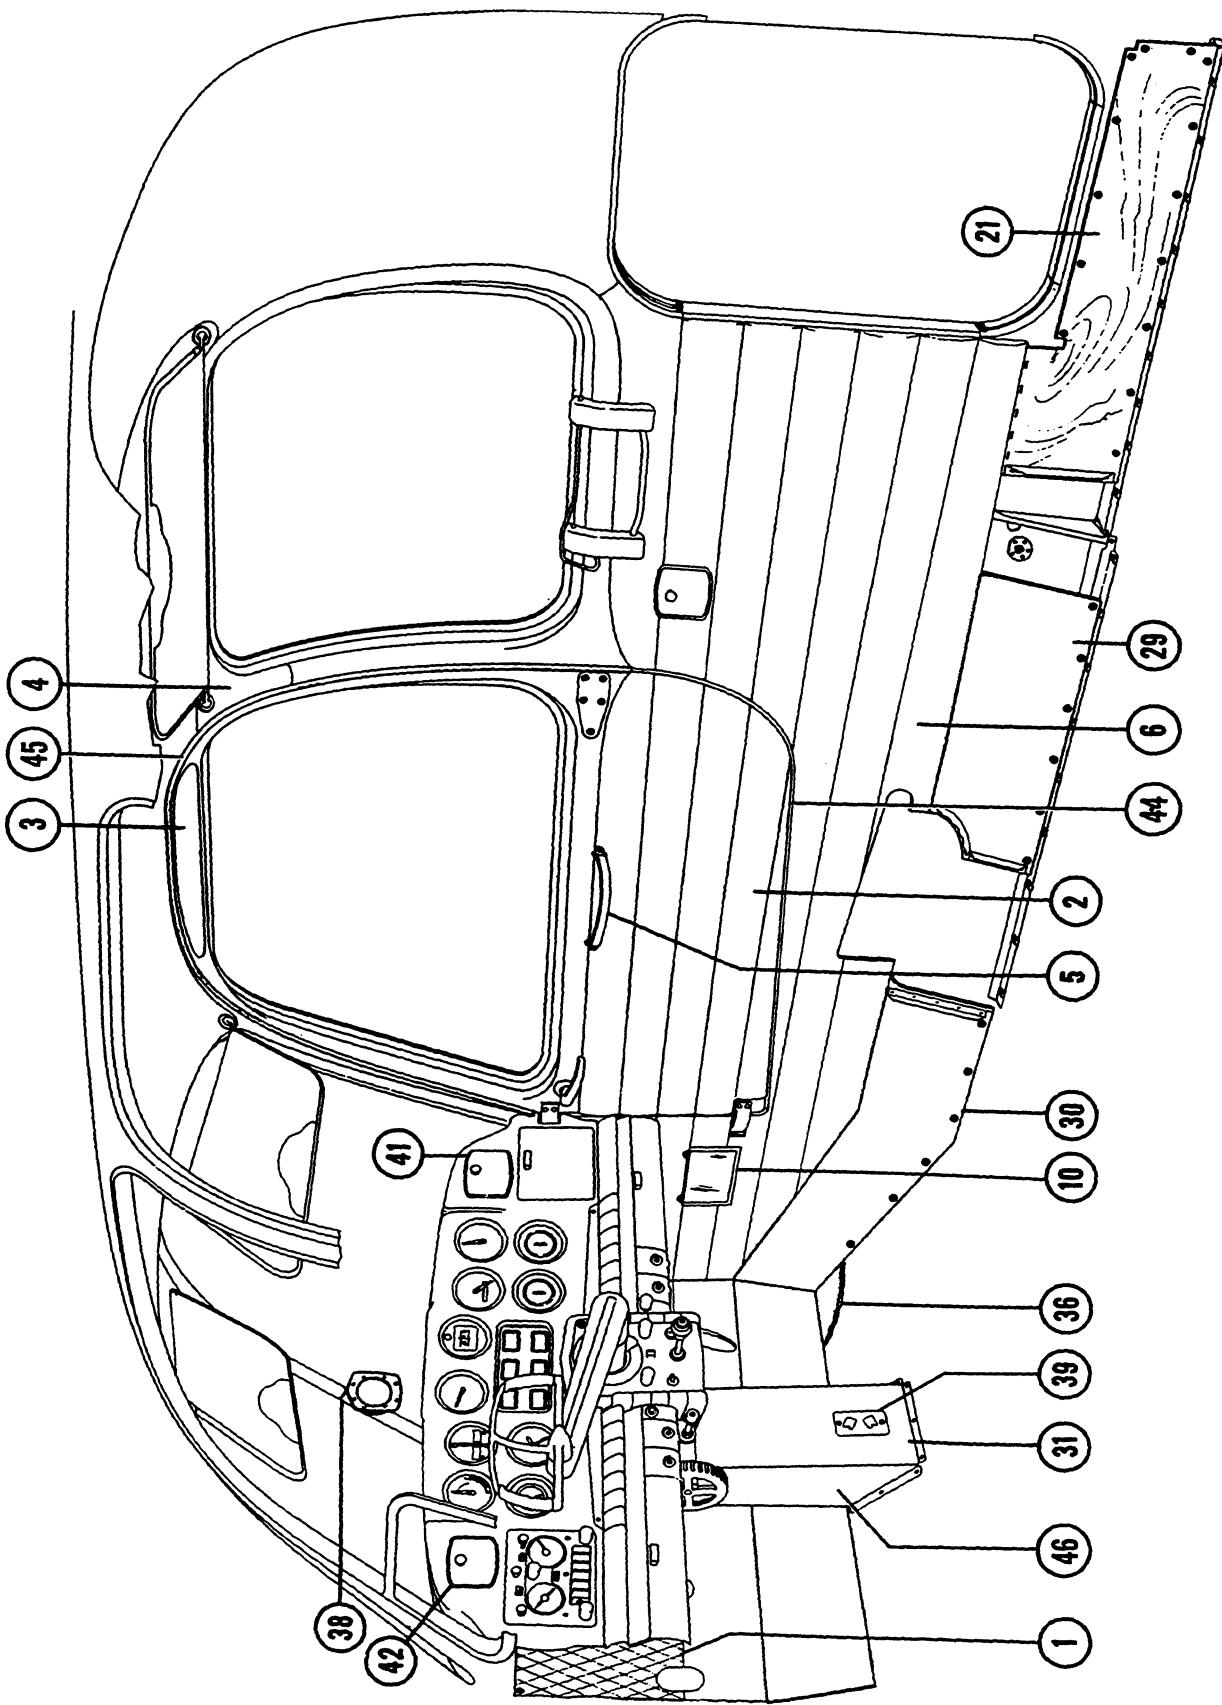


Figure 106. Cabin Furnishings (Sheet 1 of 2 Sheets)

MODEL 35 THRU G35 PARTS CATALOG

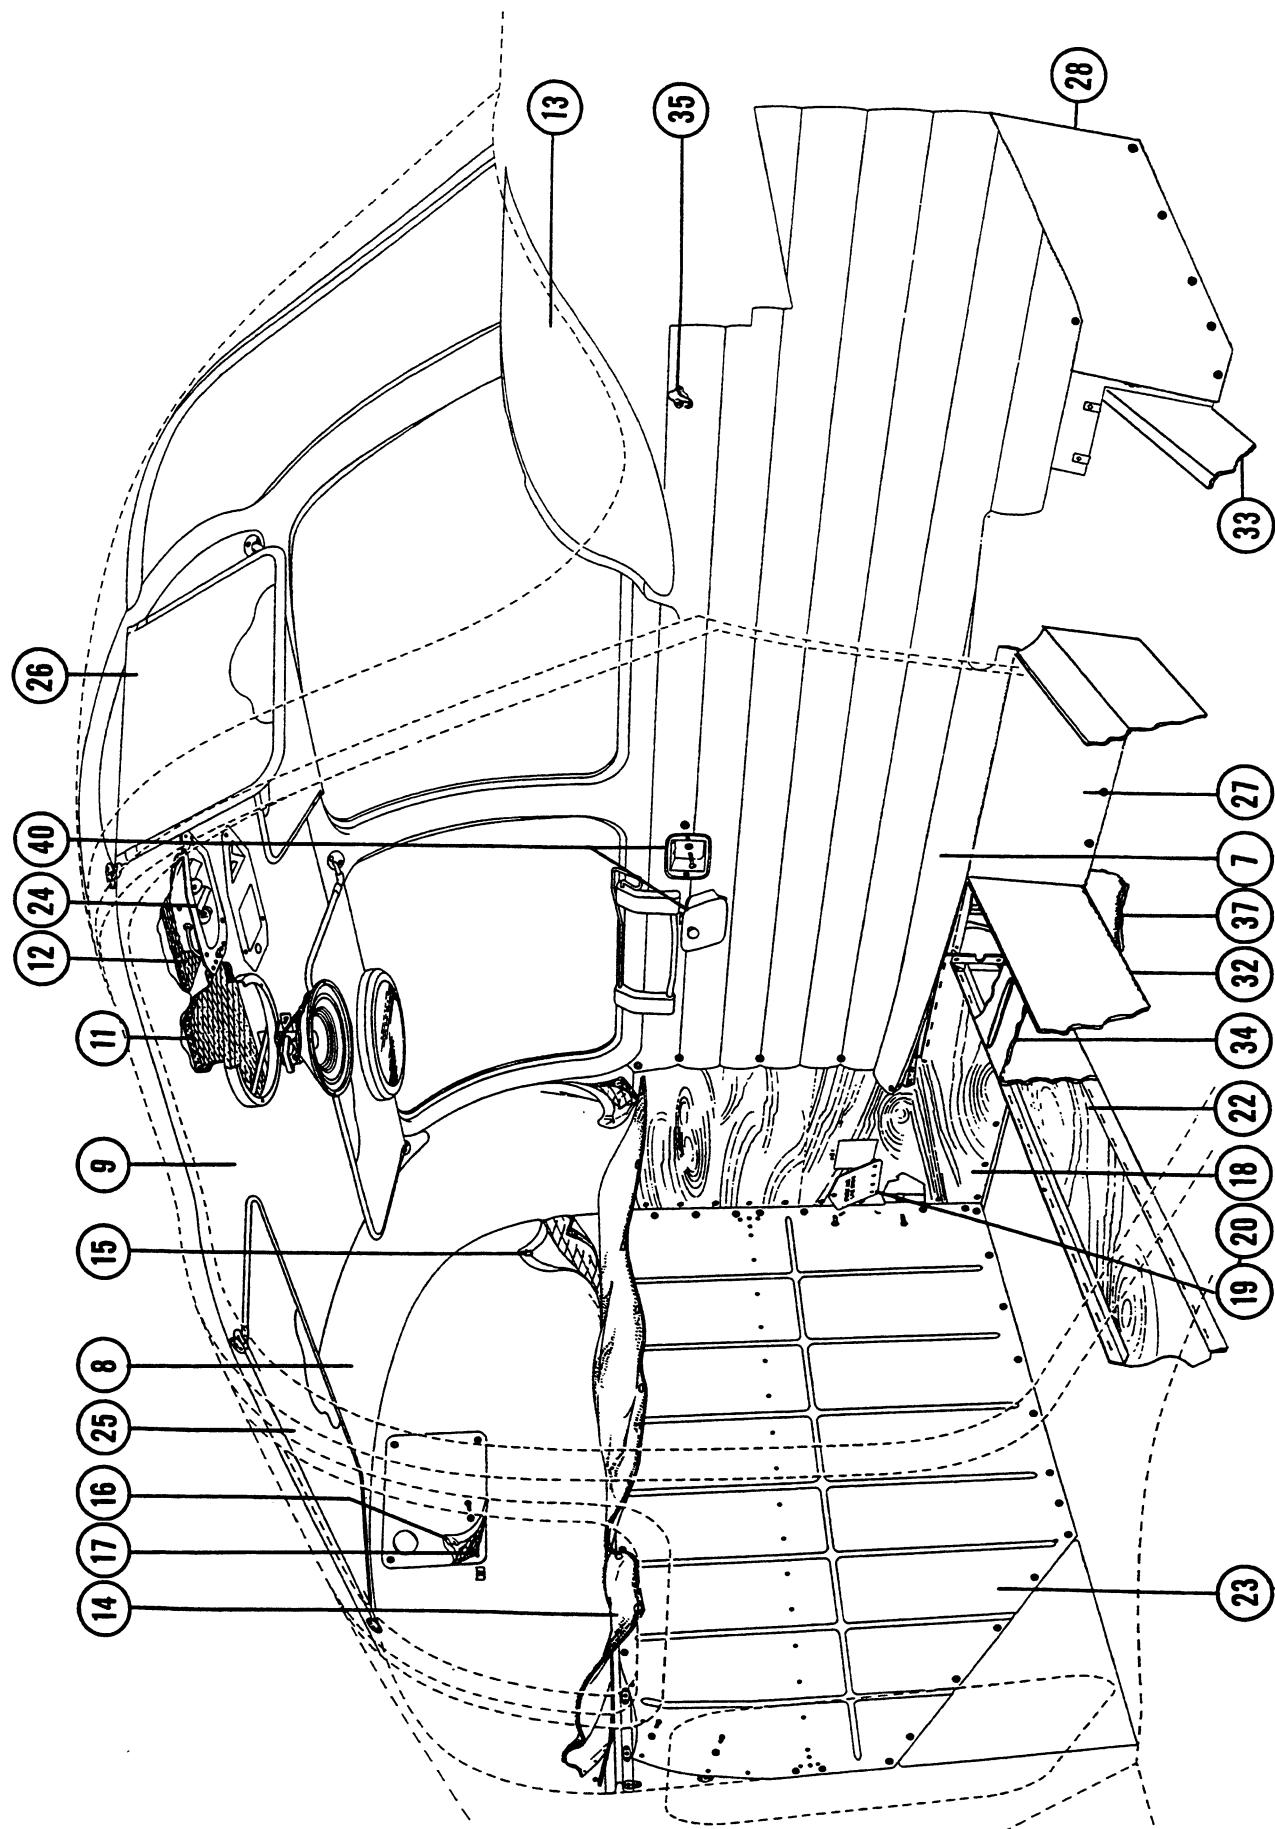


Figure 106. Cabin Furnishings (Sheet 2 of 2 Sheets)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE	
106 - 1	35-534041-100		UPHOLSTERY ASSY, FIREWALL	.	1	A19A30
	35-534200-700		UPHOLSTERY ASSY, FIREWALL	.	1	A23
- 2	35-534200-656		PANEL, CABIN DOOR LOWER UPHOLSTERY	.	1	A
	35-534340-254		PANEL, CABIN DOOR LOWER UPHOLSTERY	.	1	C6D
	35-534303-609		PANEL, CABIN DOOR LOWER UPHOLSTERY	.	1	EFG
- 3	35-534200-666		PANEL, CABIN DOOR UPPER UPHOLSTERY	.	1	
	35-534303-605		PANEL, CABIN DOOR UPPER UPHOLSTERY	.	1	EFG
- 4	35-534041-116		GIMP ASSY, CABIN DOOR	.	1	
- 5	35-534043		STRAP, CABIN DOOR PULL	.	1	
	SK73-1032-6		SCREW	.	2	
	35-534053		BOOT ASSY, RUDDER PEDAL	.	2	
- 6	35-534041-46		PANEL, RIGHT CABIN UPHOLSTERY	.	1	A1
	35-534200-646		PANEL, RIGHT CABIN UPHOLSTERY	.	1	A2
	35-534340-258		PANEL, RIGHT CABIN UPHOLSTERY	.	1	C6DEFG
- 7	35-534041-36		PANEL, LEFT CABIN UPHOLSTERY	.	1	A1
	35-534200-636		PANEL, LEFT CABIN UPHOLSTERY	.	1	A2
	35-534340-268		PANEL, LEFT CABIN UPHOLSTERY	.	1	C6DEFG
- 8	35-534041-10		HEADLINING, REAR CABIN	.	1	A1
	35-534200-62		HEADLINING, REAR CABIN	.	1	A2
- 9	35-534041-2		HEADLINING, FWD CABIN	.	1	A1
	35-534200-604		HEADLINING, FWD CABIN	.	1	A2BCDEFG
	A2733-032		CLIP, UPHOLSTERY	.	1	
	AN455AD4-6		RIVET	.	AR	
- 10	S60-1		FRAME, DATA CARRYING	.	1	
	S60-2		GLASS	.	1	
- 11	35-534041-74		SOUNDPROOFING, RADIO SPEAKER	.	1	
- 12	35-534041-132		SOUNDPROOFING, CABIN DOME LIGHT	.	1	
- 13	35-534300-166		PANEL, WINDSHIELD COWL UPHOLSTERY	.	1	A
- 14	35-534041-26		COVER ASSY, BAGGAGE COMPARTMENT	.	1	A1
	35-534041-276		COVER ASSY, BAGGAGE COMPARTMENT	.	1	A2
- 15	35-534041-126		PANEL, REAR CABIN BULKHEAD UPHOLSTERY	.	1	
- 16	35-534041-34		PANEL, RADIO COVER UPHOLSTERY	.	1	
- 17	35-410160-611		DOOR ASSY, RADIO COVER STA 151	.	1	A
	35-410160-48		SPRING	.	1	
- 18	35-534192-8		PANEL ASSY, LEFT BAGGAGE COMPARTMENT	.	1	A1
	35-534192-8		PANEL ASSY, LEFT BAGGAGE COMPARTMENT	.	1	A2
- 19	35-410094-10		• DOOR, STATIC LINE INSPECTION	.	1	
	99835-1-090		• STUD, DOOR FASTENER	.	1	
- 20	35-410175		• PLACARD, STATIC AIR DRAIN	.	1	
- 21	35-410095		PANEL ASSY, RIGHT BAGGAGE COMPARTMENT	.	1	
- 22	35-410093		PARTITION ASSY, BAGGAGE COMPARTMENT	.	1	A1
- 23	35-410160-10		PLATE, BAGGAGE COMPARTMENT REAR WEB	.	1	
- 24	35-364071-602		LIGHT, CABIN DOME	.	1	
	35-364040-8		• LENS, DOME LIGHT	.	1	
- 25	35-534090		VISOR ASSY, REAR SUN	.	1	B7CDEFG
	35-534012		VISOR ASSY, REAR SUN	.	1	
- 26	35-534079		VISOR ASSY, FWD SUN	.	1	
- 27	35-510091-600		PLATE ASSY, REAR SCUFF	.	1	
	35-534041-78		• CARPET ASSY, SCUFF PLATE	.	1	
- 28	35-534041-232		PLATE ASSY, FWD SCUFF	.	1	A1
	35-534200-84		PLATE ASSY, FWD SCUFF	.	1	A2BCDEFG
	35-534340-276		PANEL ASSY, FWD CABIN SIDE	.	1	C6DEFG
- 29	35-410091-6-1		PLATE ASSY, REAR SCUFF	.	1	
	35-410041-79		• CARPET ASSY, SCUFF PLATE	.	1	
- 30	35-410114-601		PLATE ASSY, FWD SCUFF	.	1	
	35-534041-90		• CARPET ASSY, SCUFF PLATE	.	1	
- 31	35-574009-600		COVER ASSY, CONTROL CABLE	.	1	
- 32	35-410092		PARTITION, CABIN	.	1	A1
	35-410240 SA2		PARTITION, CABIN /USED WITH ADF/	.	1	
- 33	35-410089		PARTITION, CABIN	.	1	A1
	35-534191-602		PARTITION, CABIN	.	1	A2BCDEFG
- 34	35-534067		COVER, REAR SPAR	.	1	A2BCDEFG
- 35	93		HOOK, MICROPHONE	.	1	
	AN515-6R8		SCREW	.	2	
- 36	35-534041-102		CARPET	.	1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
106 - 37	35-534041-106		CARPET.	1	
- 38	35-324128		BRACKET,COMPASS	1	A38A2BCDEFG
	35-324174		ADAPTER,DIRECTION INDICATOR MOUNTING	1	
- 39	35-815144		INDICATOR ASSY,LANDING GEAR VISUAL.	1	
	35-815145		• INDICATOR	1	
	35-815146		• BRACKET ASSY.	1	
	35-815147		• FACE.	1	
- 40	35-534200-602		TRAY ASSY,SIDE PANELS ASH	1	
	410109		• SUPPORT	1	
	L-1148		• FRAME	1	
- 41	35-534200-602		TRAY ASSY,INSTRUMFNT PANEL ASH.	1	A1A2
	L-1148		• FRAME	1	
- 42	35-324020-602		TRAY ASSY,INSTRUMENT PANEL ASH.	1	A1A2
- 43	35-324230		• PLACARD	1	
	L-1148		• FRAME	1	
	50-534033-48		STRIP,WINDLACE HOLD DOWN.	1	
- 44	35-534305-69		WINDLACE.	1	
- 45	35-534300-126		GIMP ASSY	1	
- 46	35-534300-244		UPHOLSTERY.	1	C

PLEASE SPECIFY MATERIAL,COLOR & SHIP SERIAL
NUMBER WHEN ORDERING UPHOLSTERY PANELS &
CARPETS.

MODEL 35 THRU G35 PARTS CATALOG

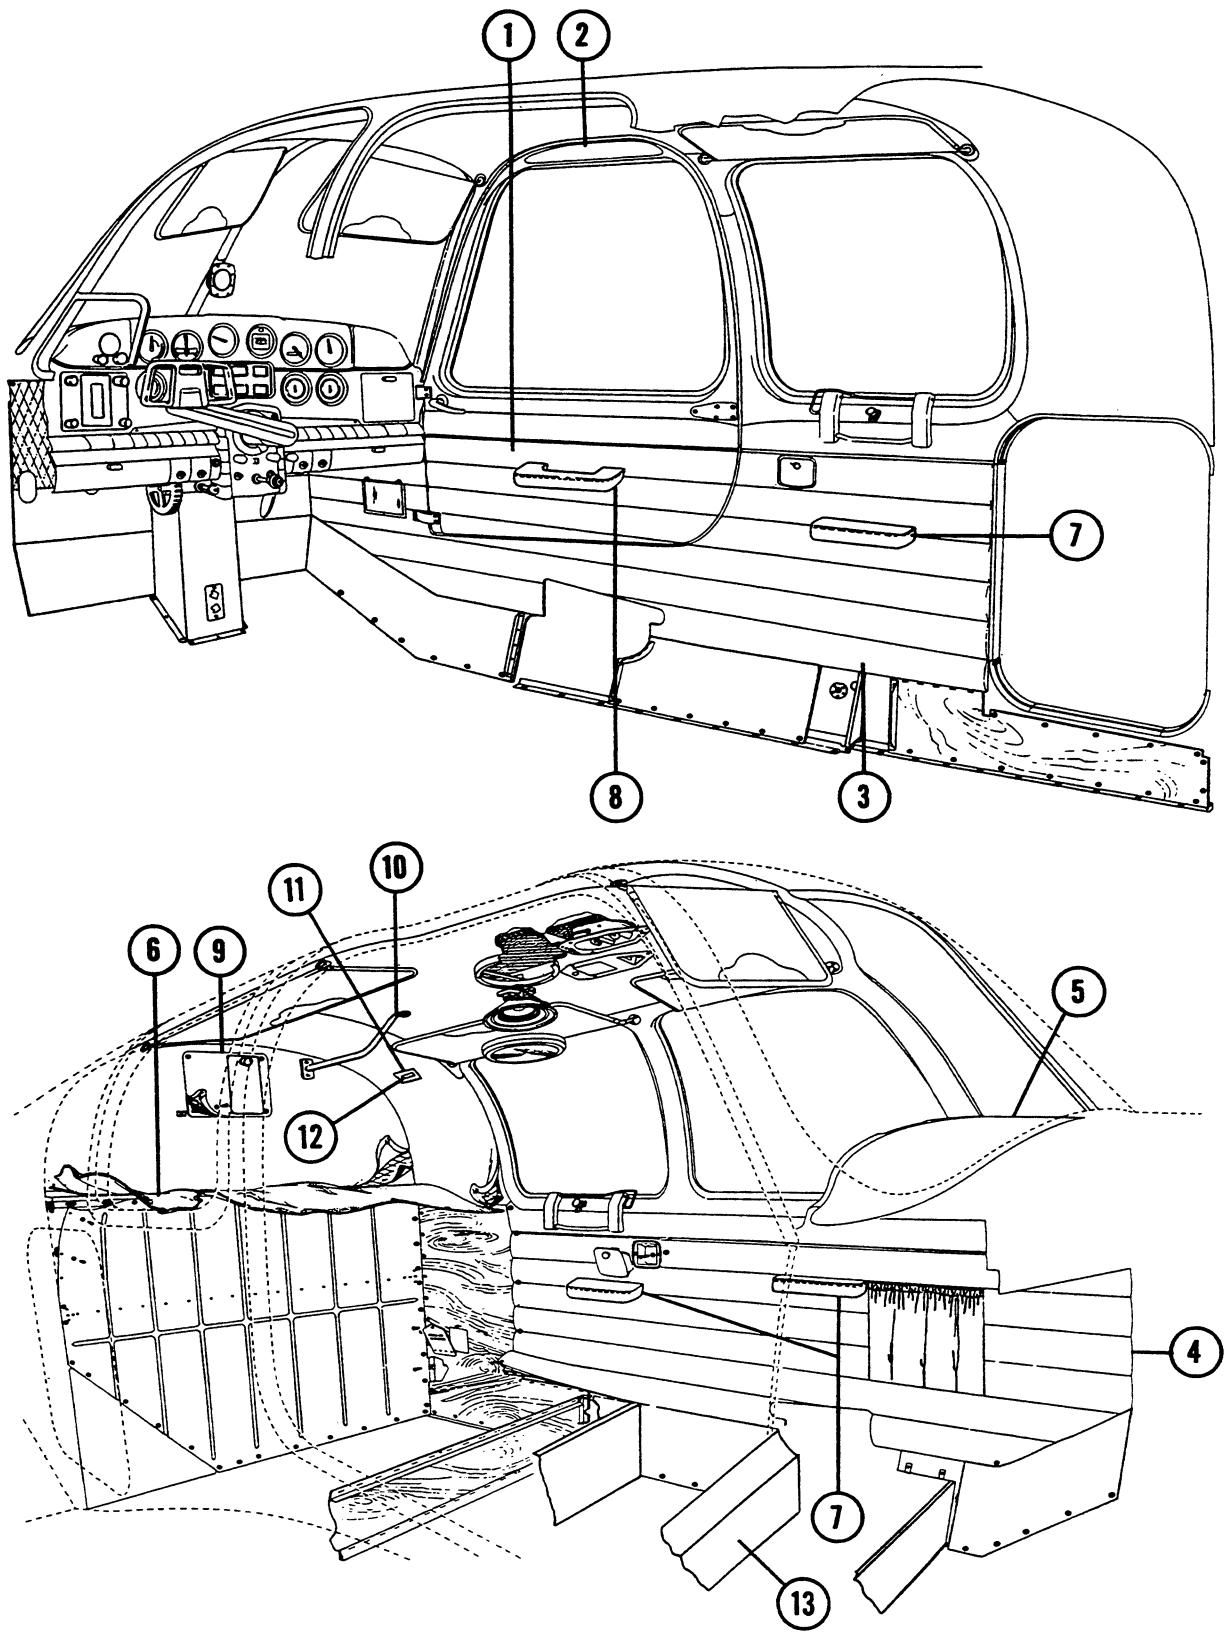


Figure 107. Cabin Furnishings (D2201 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
107 - 1	35-534200 SA56		PANEL,CABIN DOOR LOWER UPHOLSTERY	.	B
- 2	35-534200-666		PANEL,CABIN DOOR UPPER UPHOLSTERY	.	1
- 3	35-534200-845		PANEL,RIGHT CABIN UPHOLSTERY	.	1
- 4	35-534200-842		PANEL,LEFT CABIN UPHOLSTERY	.	1
- 5	35-534041-288		PANEL,WINDSHIELD COWL UPHOLSTERY	.	1
- 6	35-534041-278		COVER ASSY,BAGGAGE COMPARTMENT	.	1
- 7	35-534233		ARMREST ASSY	.	B
	35-534234		ANGLE ASSY,ARMREST	.	BCDEFG
	35-534235		BRACKET ASSY,FRONT ARMREST LH	.	BCDEFG
- 8	35-534232		HANDLE ASSY,CABIN DOOR	.	BCDEFG
	35-534231		BRACKET,CABIN DOOR HANDLE	.	BCDEFG
- 9	35-410160-612		DOOR ASSY,RADIO COVER STA 151	.	B
	35-410160-48		SPRING	.	1
- 10	35-534065		HANGAR ASSY,COAT	.	1
- 11	35-410341		CUP ASSY	.	1
- 12	35-410342		HANDLE	.	1
	35-410343		PIN	.	1
- 13	35-410420 SA2		PARTITION	.	1
	113647F22-6404		STRIP,CHROME MOULDING LH	.	1
	113647F9-02516		STRIP,CHROME MOULDING RH	.	1
	113647F3-0600		STRIP,CHROME MOULDING LH	.	1
	113647F13-03614		STRIP,DOOR CHROME	.	1
	113647F3-00628		STRIP,ARMREST CHROME	.	1

MODEL 35 THRU G35 PARTS CATALOG

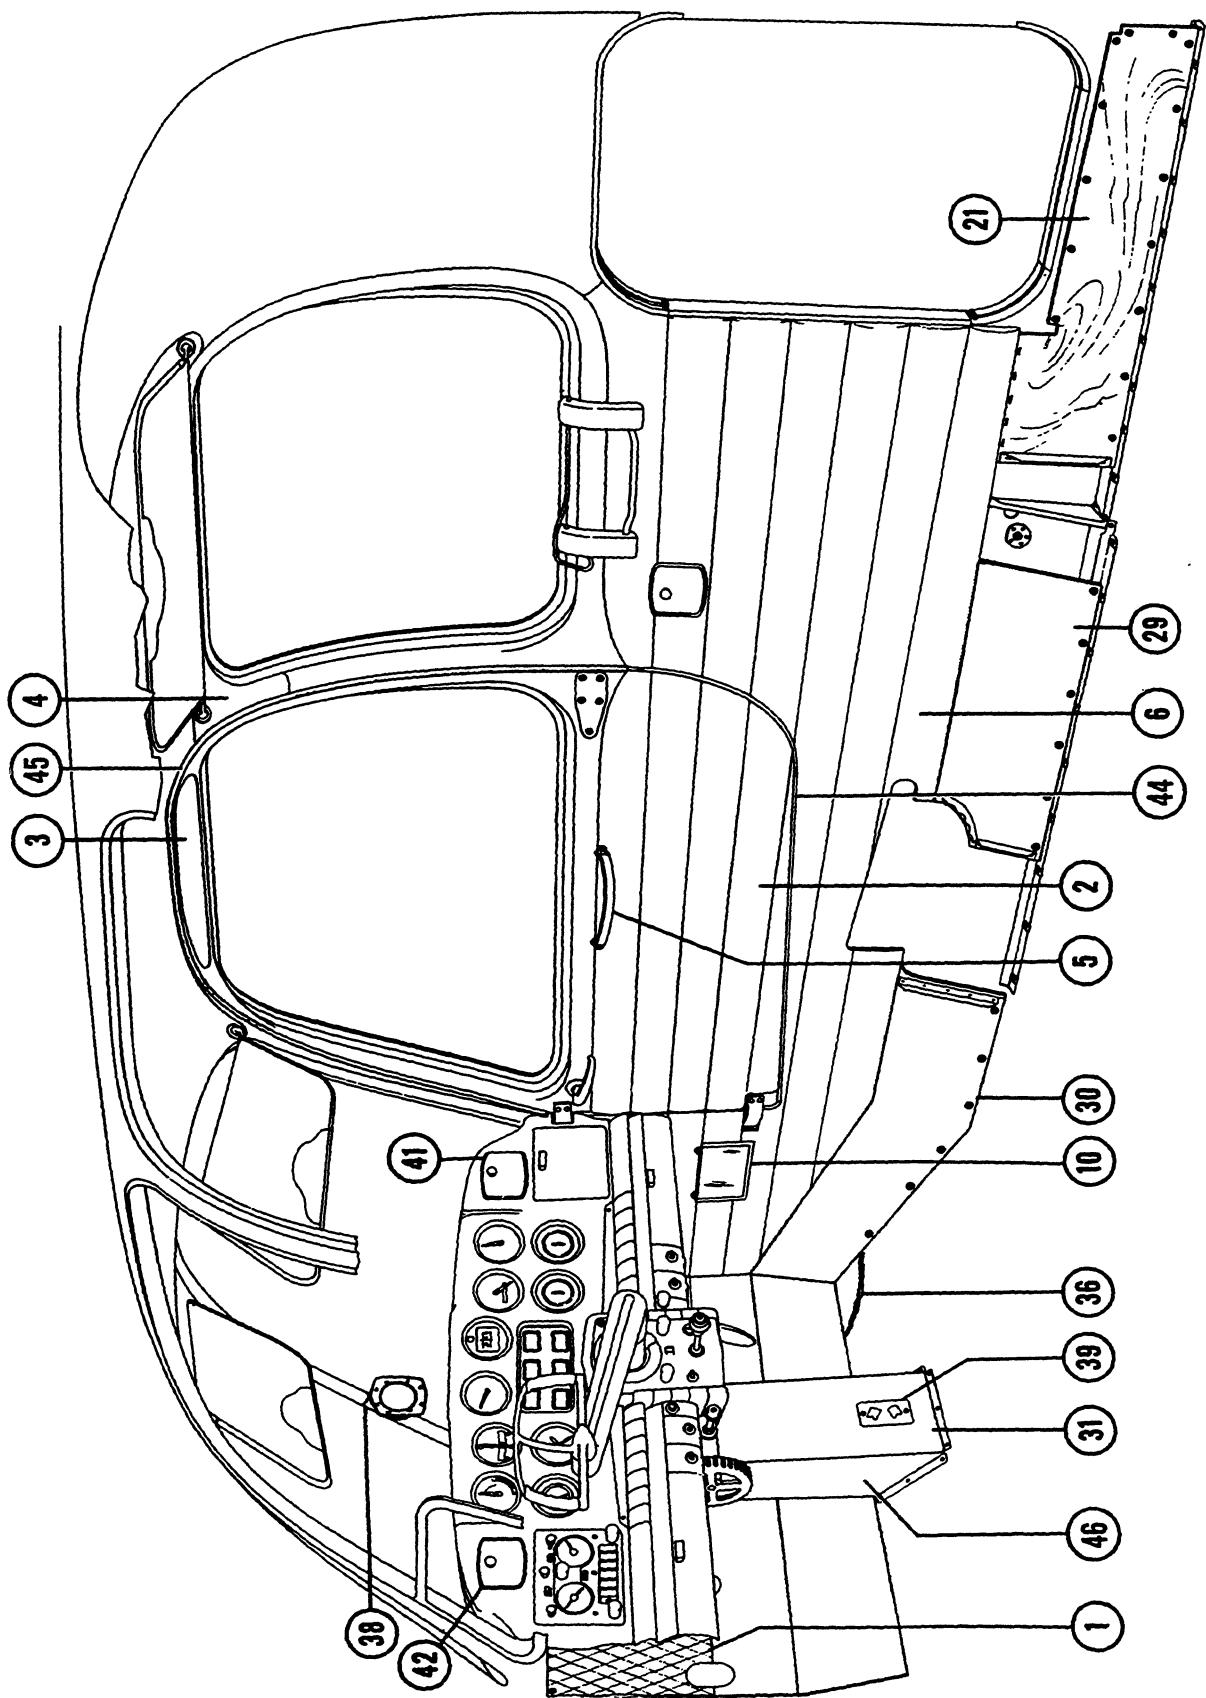


Figure 108. Cabin Furnishings (D2681 thru D4865) (Sheet 1 of 2 Sheets)

MODEL 35 THRU G35 PARTS CATALOG

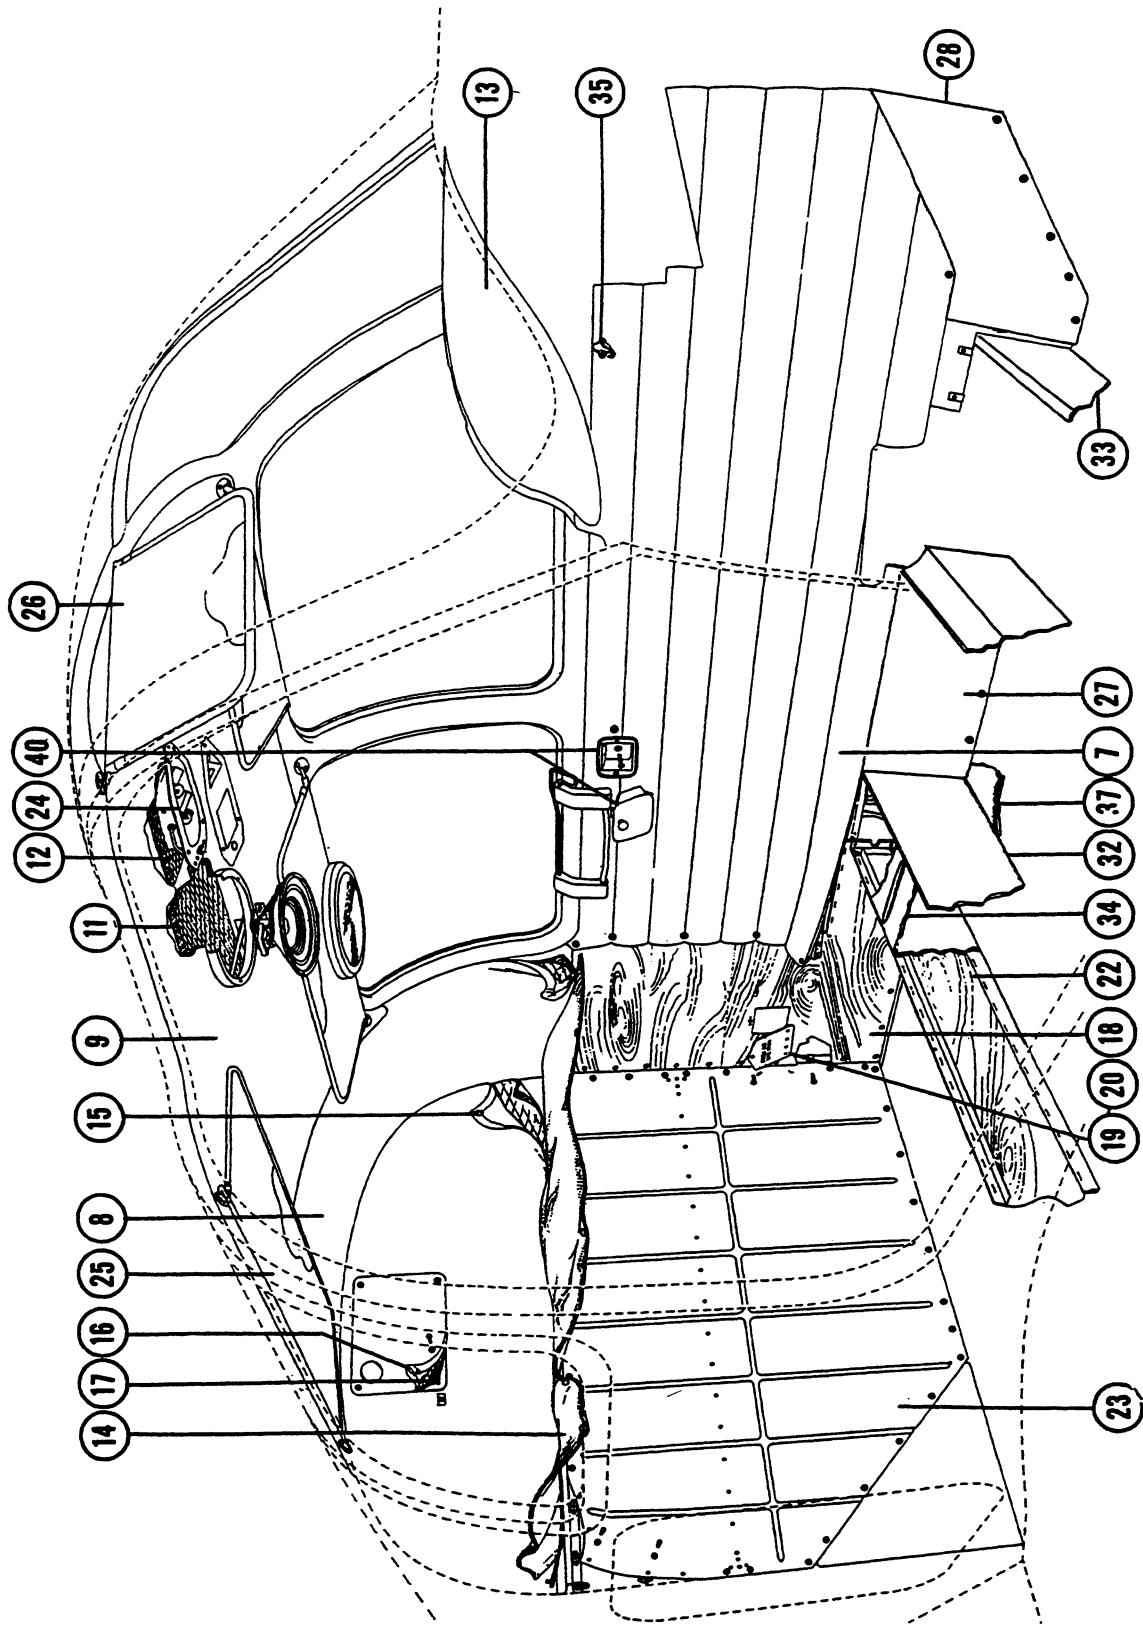


Figure 108. Cabin Furnishings (D2681 thru D4865) (Sheet 2 of 2 Sheets)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
					C E D F G
108 - 1	35-534300-132		UPHOLSTERY ASSY, FIREWALL	1	CDEFG
- 2	35-534300-114		PANEL, CABIN DOOR LOWER UPHOLSTERY	1	C5
	35-534300-254		PANEL, CABIN DOOR LOWER UPHOLSTERY	1	C6DEFG
- 3	35-534300-54		PANEL, CABIN DOOR UPPER UPHOLSTERY	1	CDEFG
- 4	35-534300-126		GIMP ASSY, CABIN DOOR	1	CDEFG
- 6	35-534300-94		PANEL, RIGHT CABIN UPHOLSTERY	1	CDEFG
	35-534300-611		PANEL, RIGHT CABIN UPHOLSTERY	1	EFG
- 7	35-534300-62		PANEL, LEFT CABIN UPHOLSTERY	1	CDEFG
	35-534300-613		PANEL, LEFT CABIN UPHOLSTERY	1	EFG
- 8	35-534300-24		HEADLINING, REAR CABIN	1	CDEFG
- 9	35-534300-2		HEADLINING, FWD CABIN	1	CDEFG
- 10	35-534300-238		FRAME, DATA CARRYING	1	EFG
- 11	35-534300-216		SOUNDPROOFING, RADIO SPEAKER	1	CDEFG
- 12	35-534300-10		SOUNDPROOFING, CABIN TOP	1	CDEFG
- 13	35-534300-166		COVER ASSY, WINDSHIELD COWL	1	CDEFG
- 14	35-534300-156		COVER ASSY, BAGGAGE COMPARTMENT	1	CDEFG
- 15	35-534300-34		PANEL, REAR CABIN BULKHEAD UPHOLSTERY	1	CDEFG
- 16	35-534300-42		COVER, RADIO	1	CDEFG
- 17	35-534300-44		DOOR	1	A1A2BCD
- 18	35-534192		PANEL ASSY, LEFT BAGGAGE COMPARTMENT	1	CDEFG
- 19	35-534192-14		• DOOR ASSY, STATIC LINE INSPECTION	1	CDEFG
	35-534192-10		• • DOOR	1	CDEFG
	99833-P-098		• • NUT	1	CDEFG
	98292-1-090		• • STUD	1	CDEFG
	99836		• • PIN	1	CDEFG
- 20	35-410175		• • PLACARD	1	CDEFG
- 21	35-534193		PLATE ASSY, RIGHT BAGGAGE COMPARTMENT	1	CDEFG
- 22	35-410160-10		PLATE, BAGGAGE COMPARTMENT REAR WEB	1	CDEFG
- 24	35-344140		LIGHT ASSY, CABIN DOME	1	CDEFG
	35-344146		• LENS, DOME LIGHT	1	CDEFG
	896CP		• BULB, DOME LIGHT	3	CDEFG
	CS2611		• SOCKET	3	CDEFG
	35-344147		• LENS	1	CDEFG
	SS-1		• SWITCH, SLIDE	1	CDEFG
	35-344141		• ESCUTCHEON	1	CDEFG
- 25	35-534090		VISOR ASSY, REAR SUN	2	CDEFG
- 26	35-534079		VISOR ASSY, FWD SUN	2	CDEFG
- 27	35-534300-72		PLATE ASSY, LEFT REAR SCUFF	1	C5
	35-534300-272		PLATE ASSY, LEFT REAR SCUFF	1	C6DEFG
- 28	35-534300-84		PLATE ASSY, LEFT FRONT SCUFF	1	C5
	35-534300-276		PLATE ASSY, LEFT FRONT SCUFF	1	C6DEFG
	35-534300-70		PLATE ASSY, LEFT CENTER SCUFF	1	C5
	35-534300-274		PLATE ASSY, LEFT CENTER SCUFF	1	C6DEFG
- 29	35-534300-106		PLATE ASSY, RIGHT REAR SCUFF	1	C5
	35-534300-266		PLATE ASSY, RIGHT REAR SCUFF	1	C6DEFG
- 30	35-534300-102		PLATE ASSY, RIGHT FRONT SCUFF	1	C5
	35-534300-262		PLATE ASSY, RIGHT CENTER SCUFF	1	C6DEFG
	35-534300-104		PLATE ASSY, RIGHT FRONT SCUFF	1	C5
	35-534300-264		PLATE ASSY, RIGHT CENTER SCUFF	1	C6DEFG
- 31	35-574009-600		COVER ASSY, CONTROL CABLE	1	CDEFG
- 32	35-534067		PARTITION, CABIN	1	CDEFG
- 33	35-410274		PARTITION, FWD CABIN	1	CDEFG
	35-534191		PARTITION, REAR CABIN	1	CDEFG
- 34	35-534067		COVER, REAR SPAR / SAME AS 32 /	1	CDEFG
- 35	1730		HOOK, MICROPHONE	1	CDEFG
- 36	35-534041-102		CARPET	1	CDEFG
- 37	35-534041-106		CARPET	1	CDEFG
- 38	35-324128		BRACKET, COMPASS	1	CDEFG
- 39	35-815144		INDICATOR, LANDING GEAR VISUAL	1	CDEFG
			/ SEE PAGE FOR ADDITIONAL PARTS /		
- 40	L-1448		TRAY ASSY, ASH / GDR /	2	CDEFG
	285651		TRAY ASSY, ASH	2	EFG
- 41	35-324231		TRAY ASSY, ASH	2	CDEFG
	35-534016		HEADREST INSTL	1	EFG
	35-534342		• HEADREST	1	FG
	35-534337		• SUPPORT, HEADREST	2	CEDFG
	35-534338		• NUT, HEADREST	2	CEDFG
	AN936A1016		• WASHER	2	CEDFG

MODEL 35 THRU G35 PARTS CATALOG

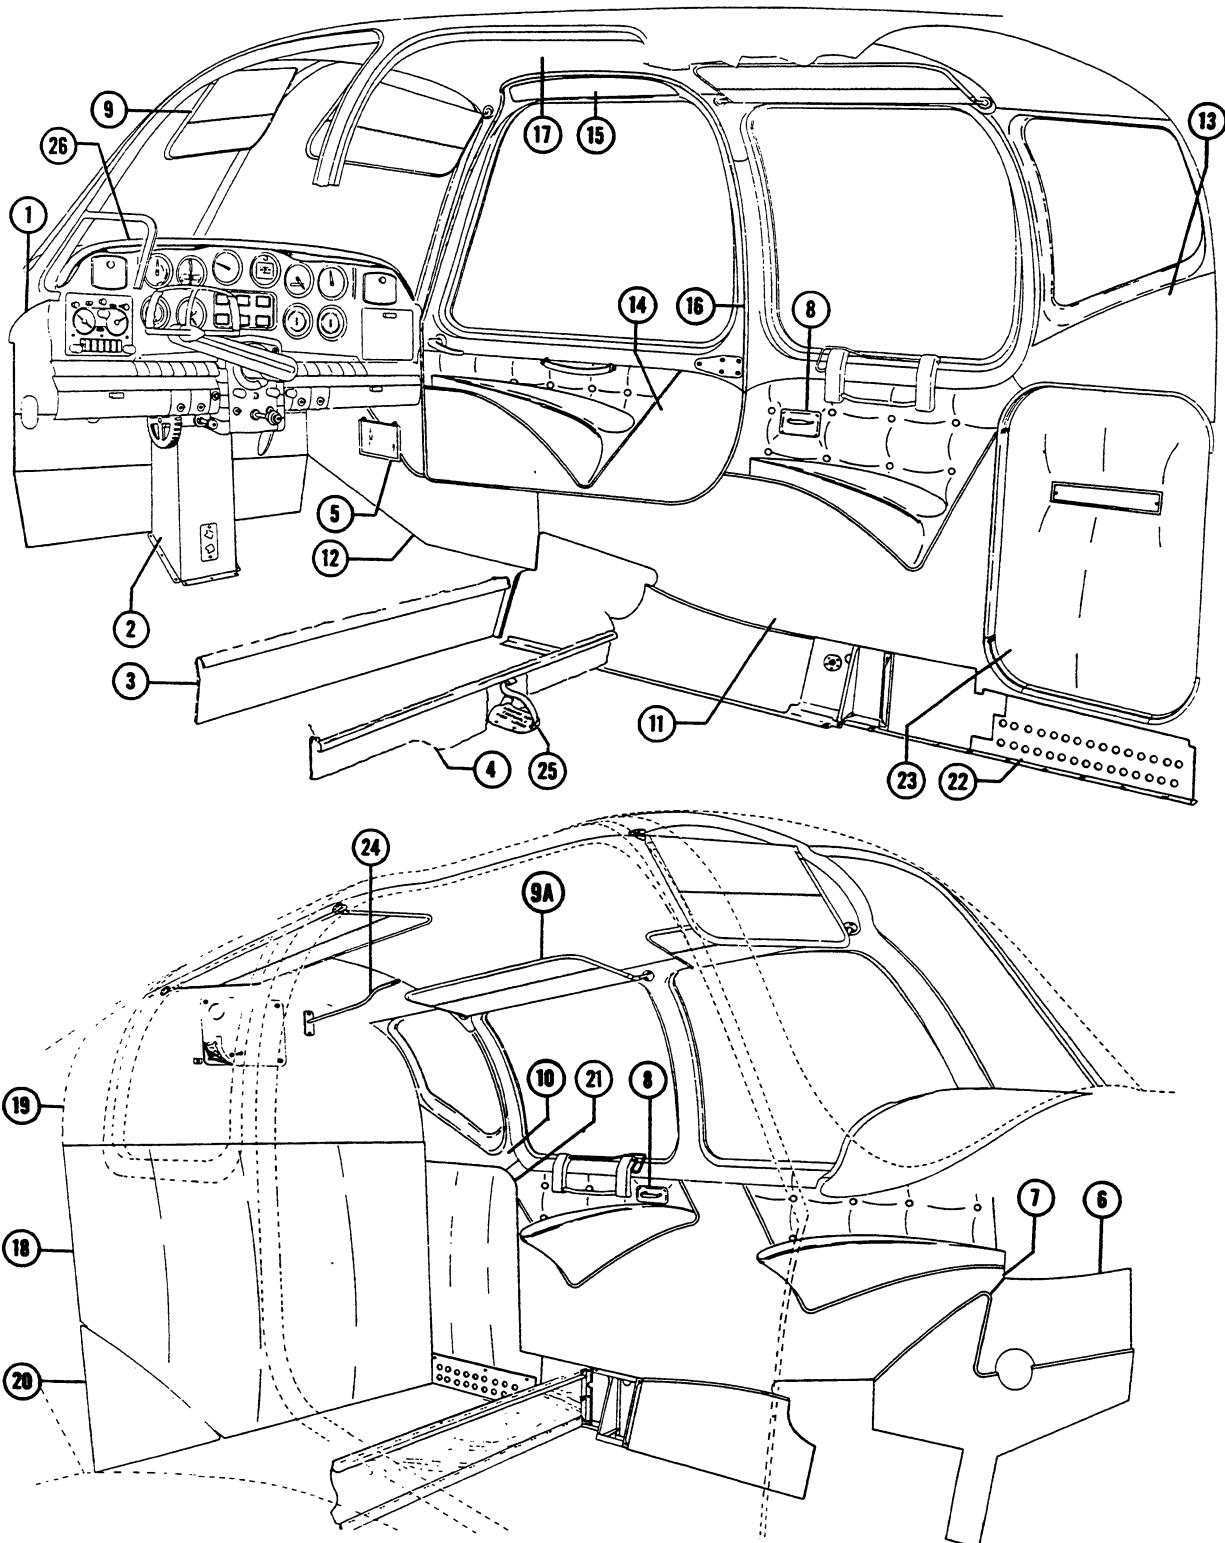


Figure 109. Cabin Furnishings (D4392 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
109 - 1	35-534304-131		UPHOLSTERY ASSY, FIREWALL.	1	G
- 2	35-534304-81		UPHOLSTERY ASSY, PEDESTAL.	1	G
- 3	35-410420-606		PARTITION ASSY, FRONT SEAT FWD.	1	G
- 4	35-534304-622		PARTITION, FRONT SEAT REAR	1	G
- 5	35-534300-238		HOLDER, DATA	1	G
- 6	35-534304-21		PANEL ASSY, FWD SIDE UPHOLSTERY LH.	1	G
- 7	35-534304-614		PANEL ASSY, SIDE UPHOLSTERY LH.	1	G
- 8	35-534242		RECEIVER,ASH.	2	G
- 9	35-534304-139		VISOR ASSY, FRONT SUN.	2	G
- 9A	9A-141		VISOR ASSY, REAR SUN.	2	G
- 10	35-534304-113		PANEL ASSY, REAR HEADLINER UPHOLSTERY LH.	1	G
- 11	35-534304-618		PANEL ASSY, REAR SIDE UPHOLSTERY RH.	1	G
- 12	35-534304-621		PANEL ASSY, FWD SIDE UPHOLSTERY RH.	1	G
- 13	35-534304-53		PANEL ASSY, HEADLINER UPHOLSTERY RH.	1	G
- 14	35-534304-85		PANEL ASSY, CABIN DOOR LOWER UPHOLSTERY.	1	G
- 15	35-534304-93		PANEL ASSY, CABIN DOOR UPPER UPHOLSTERY.	1	G
- 16	35-534304-121		WINDLACE ASSY, STORM SEAL.	1	G
- 17	35-534304-11		PANEL, HEADLINER CENTER UPHOLSTERY	1	G
- 18	35-534304-654		PANEL, REAR LOWER BAGGAGE COMPARTMENT UPHOLSTERY	1	G
- 19	35-534304-57		PANEL, REAR UPPER BAGGAGE COMPARTMENT UPHOLSTERY	1	G
- 20	35-534304-606		PANEL ASSY, COMPARTMENT TRIANGULAR UPHOLSTERY.	1	G
- 21	35-534304-103		PANEL ASSY, BAGGAGE COMPARTMENT UPHOLSTERY LH.	1	G
- 22	35-534304-101		PANEL ASSY, BAGGAGE COMPARTMENT UPHOLSTERY RH.	1	G
- 23	35-534304-97		PANEL ASSY, BAGGAGE COMPARTMENT DOOR UPHOLSTERY.	1	G
- 24	35-534065-6		HANGAR ASSY, COAT.	1	G
- 25	35-534052		BOOT, EMERGENCY HANDCRANK.	1	G
- 26	35-534014		PAD ASSY, GLARE.	1	G

MODEL 35 THRU G35 PARTS CATALOG

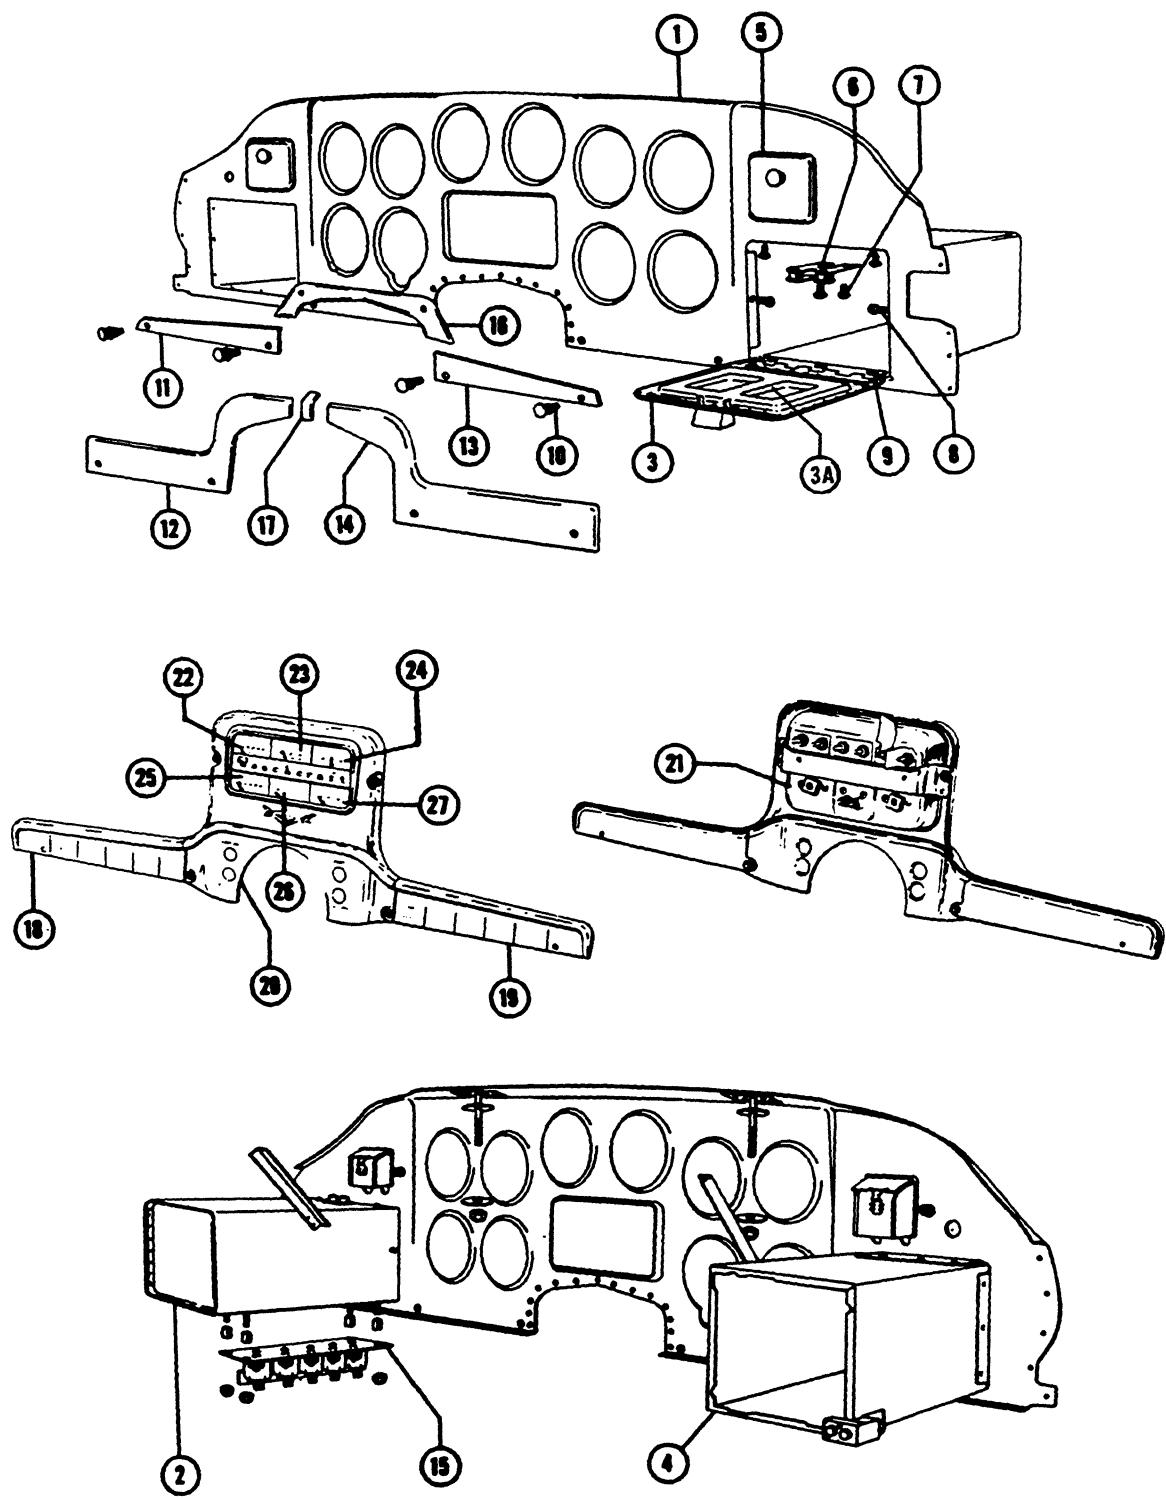


Figure 110. Fixed Instrument Panel Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
110 - 1	35-324020	PANEL ASSY,MAIN INSTRUMENT.	1	AB
	35-324020-10	PANEL ASSY,MAIN INSTRUMENT.	1	B7CDEF
	35-324020-14	PANEL ASSY,MAIN INSTRUMENT.	1	G
- 2	35-324033	BOX ASSY,GLOVE COMPARTMENT.	1	
- 3	35-324031	• DOOR ASSY,GLOVE COMPARTMENT	1	
	35-324032	• • KNOB,GLOVE COMPARTMENT DOOR	1	A
	35-324204	• • KNOB,GLOVE COMPARTMENT DOOR	1	BCDEFG
- 3A	35-324361	• PLACARD,FLIGHT PROCEDURE.	1	
- 1	IX54631	• HOUSING,RADIO	1	A1A11
	35-344100-18	• HOUSING,RADIO	1	A31BCDEFG
- 5	L1148	• TRAY,INSTRUMENT PANEL ASH	2	A1A11
- 6	5	• CATCH ASSY,GLOVE COMPARTMENT DOOR ROLLER.	1	
	5	• CATCH ASSY,STRIKER ROLLER	1	
- 7	AN530-6-6	• SCREW,ATTACHING	3	
- 8	AN530-6-4	• SCREW,ATTACHING	3	
- 9	105744X090-00428	• PIN,GLOVE COMPARTMENT HINGE	1	
- 10	A2733-032	• CLIP,PLACARD ATTACHING.	4	
- 11	35-324024	PLACARD,INSTRUMENT PANEL	1	A1A11
	35-324194	PLACARD,INSTRUMENT PANEL	1	A48
- 12	35-324198	PLACARD,INSTRUMENT PANEL	1	B8
	35-324268	PLACARD,INSTRUMENT PANEL	1	B9
	35-324274	PLACARD,INSTRUMENT PANEL	1	C
	35-324274-2	PLACARD,INSTRUMENT PANEL	1	D
	35-324274-4	PLACARD,INSTRUMENT PANEL	1	E
	35-324358-1	PLACARD,INSTRUMENT PANEL	1	F4
	35-324358	PLACARD,INSTRUMENT PANEL	1	F5
- 13	35-324023	PLACARD,INSTRUMENT PANEL	1	A
- 14	35-324202	PLACARD,INSTRUMENT PANEL	1	B
	35-324275	PLACARD,INSTRUMENT PANEL	1	C
	35-324275-2	PLACARD,INSTRUMENT PANEL	1	D
	35-324275-4	PLACARD,INSTRUMENT PANEL	1	EF4
	35-324275-6	PLACARD,INSTRUMENT PANEL	1	F1C
	35-324362	PLACARD,INSTRUMENT PANEL	1	F11
- 15	35-324062	PANEL,CIRCUIT BREAKER	1	
	CA-5	BREAKER,CIRCUIT	5	
- 16	35-324126	PLACARD,INSTRUMENT PANEL	1	A
	35-324007	STUD,PANEL PLACARD ATTACHING.	6	A
- 17	35-324261	CLIP,PANEL PLACARD ATTACHING.	1	BCDEFG
	1584281	KIT,ENGINE INSTRUMENT CLUSTER	1	G
- 18	1584236	• PLACARD,INSTRUMENT PANEL	1	G
- 19	1584237	• PLACARD,INSTRUMENT PANEL	1	G
	1584239	• CLUSTER ASSY,ENGINE INSTRUMENT	1	G
	AN530-8R8	• SCREW,ATTACHING /NOT USED IN THE 1584281 KIT/	2	
	NAS384-8-10	• SCREW,ATTACHING /NOT USED IN THE 1584281 KIT/	6	
	35-324400-4	• SPACER,INSTRUMENT CLUSTER ATTACHING	2	G
		/NOT USED IN THE 1584281 KIT/		
- 20	1584238	• • COVER,INSTRUMENT CLUSTER.	1	G
- 21	1584258	• • CASE ASSY,INSTRUMENT BACKING.	1	G
- 22	1517126	• • GAGE,FUEL QUANTITY INDICATOR /GREEN/	1	A1
	1517642	• • GAGE,FUEL QUANTITY INDICATOR /BEIGE/	1	A2BC
	35-324302	• • GAGE,FUEL QUANTITY INDICATOR /SMOKE/	1	DE
	1518333	• • GAGE,FUEL QUANTITY INDICATOR /BLACK/	1	ABCDEF
	1518516	• • GAGE,FUEL QUANTITY INDICATOR /BLACK/	1	G
- 23	1512139	• • GAGE,OIL TEMPERATURE /GREEN/	1	A1
	1512573	• • GAGE,OIL TEMPERATURE /BEIGE/	1	A2BC
	35-324314	• • GAGE,OIL TEMPERATURE /SMOKE/	1	DE
	1513018	• • GAGE,OIL TEMPERATURE /BLACK/	1	F
	1513176	• • GAGE,OIL TEMPERATURE /BLACK/	1	G
- 24	1500895	• • GAGE,AMMETER /GREEN/	1	A1
	1501411	• • GAGE,AMMETER /BEIGE/	1	A2BC
	35-324303	• • GAGE,AMMETER /SMOKE/	1	DE
	1501695	• • GAGE,AMMETER /BLACK/	1	ABCDEF
	1501751	• • GAGE,AMMETER /BLACK/	1	G

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
110 - 25	1502360	• • GAGE,FUEL PRESSURE /GREEN/.	•	•	•	•	•	•	1	A1
	1507868	• • GAGE,FUEL PRESSURE /BEIGE/.	•	•	•	•	•	•	1	A2BC
	35-324311	• • GAGE,FUEL PRESSURE /SMOKE/.	•	•	•	•	•	•	1	DE
	1508299	• • GAGE,FUEL PRESSURE /BLACK/.	•	•	•	•	•	•	1	ABCDEF
	1508439	• • GAGE,FUEL PRESSURE /BLACK/.	•	•	•	•	•	•	1	G
- 26	ASP-147	• • GAGE,CYLINDER HEAD TEMPERATURE /GREEN/.	•	•	•	•	•	•	1	A1
	ASP-148B	• • GAGE,CYLINDER HEAD TEMPERATURE /BEIGE/.	•	•	•	•	•	•	1	A2BC
	ASP-300	• • GAGE,CYLINDER HEAD TEMPERATURE /SMOKE/.	•	•	•	•	•	•	1	DE
	ASP-373	• • GAGE,CYLINDER HEAD TEMPERATURE /BLACK/.	•	•	•	•	•	•	1	F
	1513187	• • GAGE,CYLINDER HEAD TEMPERATURE /BLACK/.	•	•	•	•	•	•	1	G
- 27	1507361	• • GAGE,OIL PRESSURE /GREEN/.	•	•	•	•	•	•	1	A1
	1507761	• • GAGE,OIL PRESSURE /BEIGE/.	•	•	•	•	•	•	1	A2BC
	35-324312	• • GAGE,OIL PRESSURE /SMOKE/.	•	•	•	•	•	•	1	DE
	1508300	• • GAGE,OIL PRESSURE /BLACK/.	•	•	•	•	•	•	1	ABCDEF
	1508440	• • GAGE,OIL PRESSURE /BLACK/.	•	•	•	•	•	•	1	G
	35-324020-4	STRIP,CHROME TRIM LH.	•	•	•	•	•	•	1	B10
	35-324020-5	STRIP,CHROME TRIM RH.	•	•	•	•	•	•	1	B10
	35-324020-8	STRIP,CHROME TRIM LH.	•	•	•	•	•	•	1	CDEFG
	35-324020-9	STRIP,CHROME TRIM RH.	•	•	•	•	•	•	1	CDEFG

MODEL 35 THRU G35 PARTS CATALOG

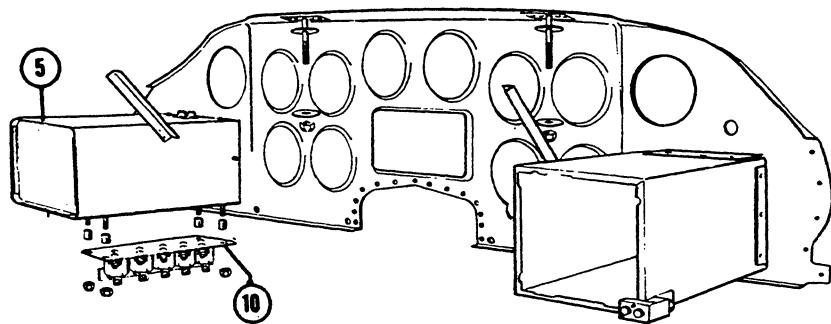
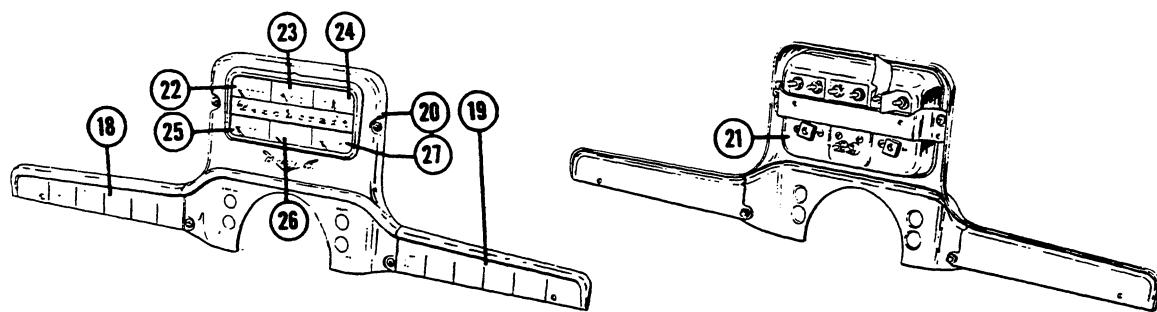
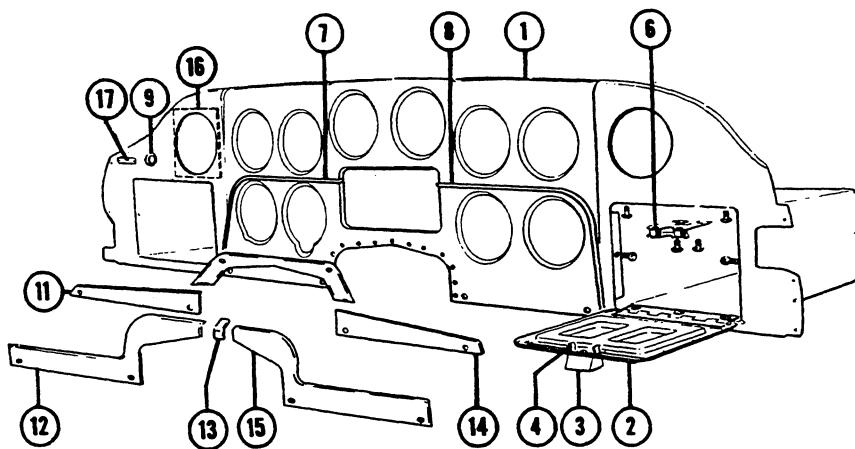


Figure 111. Gyro Fixed Instrument Panel Assembly (D2861 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
111 - 1	35-324020-10	PANEL ASSY,MAIN INSTRUMENT		1	CDEF
	35-324020-14	PANEL ASSY,MAIN INSTRUMENT		1	G
- 2	35-324031	• DOOR ASSY,GLOVE COMPARTMENT		1	
- 3	35-324204	• • KNOB,GLOVE COMPARTMENT DOOR		1	
- 4	5	• • STRIKER,ROLLER CATCH ASSY		1	
	AN530-6-8	• • SCREW,ATTACHING		1	
- 5	35-324033	• BOX ASSY,GLOVE COMPARTMENT		1	
	AN530-6-4	• SCREW,ATTACHING		4	
	AN530-6-6	• SCREW,ATTACHING		3	
- 6	5	• CATCH ASSY,GLOVE COMPARTMENT ROLLER		1	
	AN515-6-6	• SCREW,ATTACHING		2	
- 7	35-324020-8	• MOULDING,INSTRUMENT PANEL LH		1	C
- 8	35-324020-9	• MOULDING,INSTRUMENT PANEL RH		1	C
- 9	35-324115-4	• PLACARD,STALL WARNING		1	C
	35-324115-6	• PLACARD,STALL WARNING		1	DEF4
	35-324115-8	• PLACARD,STALL WARNING		1	F1 F11G
- 10	35-364062	• PANEL ASSY,CIRCUIT BREAKER		1	
	CA-5	• • BREAKER,CIRCUIT		5	
- 11	35-324274	PLACARD,INSTRUMENT PANEL LH		1	C
	35-324274-2	PLACARD,INSTRUMENT PANEL LH		1	D
- 12	35-324274-4	PLACARD,INSTRUMENT PANEL LH		1	E
	35-324358-1	PLACARD,INSTRUMENT PANEL LH		1	F4
	35-324358	PLACARD,INSTRUMENT PANEL LH		1	F1 F11G
- 13	35-324261	CLIP,PLACARD ATTACHING		1	
	AN365-632	SCREW,ATTACHING		1	
- 14	35-324275	PLACARD,INSTRUMENT PANEL RH		1	C
	35-324275-2	PLACARD,INSTRUMENT PANEL RH		1	D
- 12	35-324275-4	PLACARD,INSTRUMENT PANEL RH		1	EF4
	35-324275-6	PLACARD,INSTRUMENT PANEL RH		1	F10
	35-324362	PLACARD,INSTRUMENT PANEL RH		1	F11G
- 16	35-324413	COVER ASSY,SPARE INSTRUMENT CUTOUT		1	DE
	50-320072-8	COVER ASSY,SPARE INSTRUMENT CUTOUT		1	FG
- 17	35-344073-6	PLACARD,RADIO CALL		1	EF4
	35-344073-8	PLACARD,RADIO CALL		1	F1 F11G
	1584281	KIT,ENGINE INSTRUMENT CLUSTER		1	G
- 18	1584236	• PLACARD,INSTRUMENT PANEL LH		1	G
- 16	1584237	• PLACARD,INSTRUMENT PANEL RH		1	G
	1584239	• CLUSTER ASSY,ENGINE INSTRUMENT		1	G
	AN530-8R8	• SCREW,ATTACHING /NOT USED IN THE 1584281 KIT/		2	
	NAS384-8-10	• SCREW,ATTACHING /NOT USED IN THE 1584281 KIT/		6	
	35-324400-4	• SPACER,INSTRUMENT CLUSTER ATTACHING /NOT USED IN THE 1584281 KIT/		2	G
- 20	1584238	• • COVER,INSTRUMENT CLUSTER		1	G
- 21	1584258	• • CASE ASSY,INSTRUMENT BACKING		1	G
- 22	1517126	• • GAGE,FUEL QUANTITY INDICATOR /GREEN/		1	A1
	1517642	• • GAGE,FUEL QUANTITY INDICATOR /BEIGE/		1	A2BC
	35-324302	• • GAGE,FUEL QUANTITY INDICATOR /SMOKE/		1	DE
	1518333	• • GAGE,FUEL QUANTITY INDICATOR /BLACK/		1	ABCDEF
	1518516	• • GAGE,OIL TEMPERATURE /GREEN/		1	G
- 23	1512139	• • GAGE,OIL TEMPERATURE /BEIGE/		1	A1
	1512573	• • GAGE,OIL TEMPERATURE /SMOKE/		1	A2BC
	35-324314	• • GAGE,OIL TEMPERATURE /BLACK/		1	DE
	1513018	• • GAGE,OIL TEMPERATURE /BLACK/		1	F
	1513176	• • GAGE,AMMETER /GREEN/		1	G
- 24	1500895	• • GAGE,AMMETER /BEIGE/		1	A1
	1501411	• • GAGE,AMMETER /SMOKE/		1	A2BC
	35-324303	• • GAGE,AMMETER /BLACK/		1	DE
	1501695	• • GAGE,AMMETER /BLACK/		1	ABCDEF
	1501751	• • GAGE,AMMETER /BLACK/		1	G

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
111 - 25	1507360	.	.	.	GAGE,FUEL PRESSURE /GREEN/	1	A1
	1507868	.	.	.	GAGE,FUEL PRESSURE /BEIGE/	1	A2BC
	35-324311	.	.	.	GAGE,FUEL PRESSURE /SMOKE/	1	DE
	1508299	.	.	.	GAGE,FUEL PRESSURE /BLACK/	1	ABCDEF
- 26	1508439	.	.	.	GAGE,FUEL PRESSURE /BLACK/	1	G
	ASP-147	.	.	.	GAGE,CYLINDER HEAD TEMPERATURE /GREEN/	1	A1
	ASP-148B	.	.	.	GAGE,CYLINDER HEAD TEMPERATURE /BEIGE/	1	A2BC
	ASP-300	.	.	.	GAGE,CYLINDER HEAD TEMPERATURE /SMOKE/	1	DE
	ASP-373	.	.	.	GAGE,CYLINDER HEAD TEMPERATURE /BLACK/	1	F
- 27	1513187	.	.	.	GAGE,CYLINDER HEAD TEMPERATURE /BLACK/	1	G
	1507361	.	.	.	GAGE,OIL PRESSURE /GREEN/	1	A1
	1507761	.	.	.	GAGE,OIL PRESSURE /BEIGE/	1	A2BC
	35-324312	.	.	.	GAGE,OIL PRESSURE /SMOKE/	1	DE
	1508300	.	.	.	GAGE,OIL PRESSURE /BLACK/	1	ABCDEF
	1508440	.	.	.	GAGE,OIL PRESSURE /BLACK/	1	G

MODEL 35 THRU G35 PARTS CATALOG

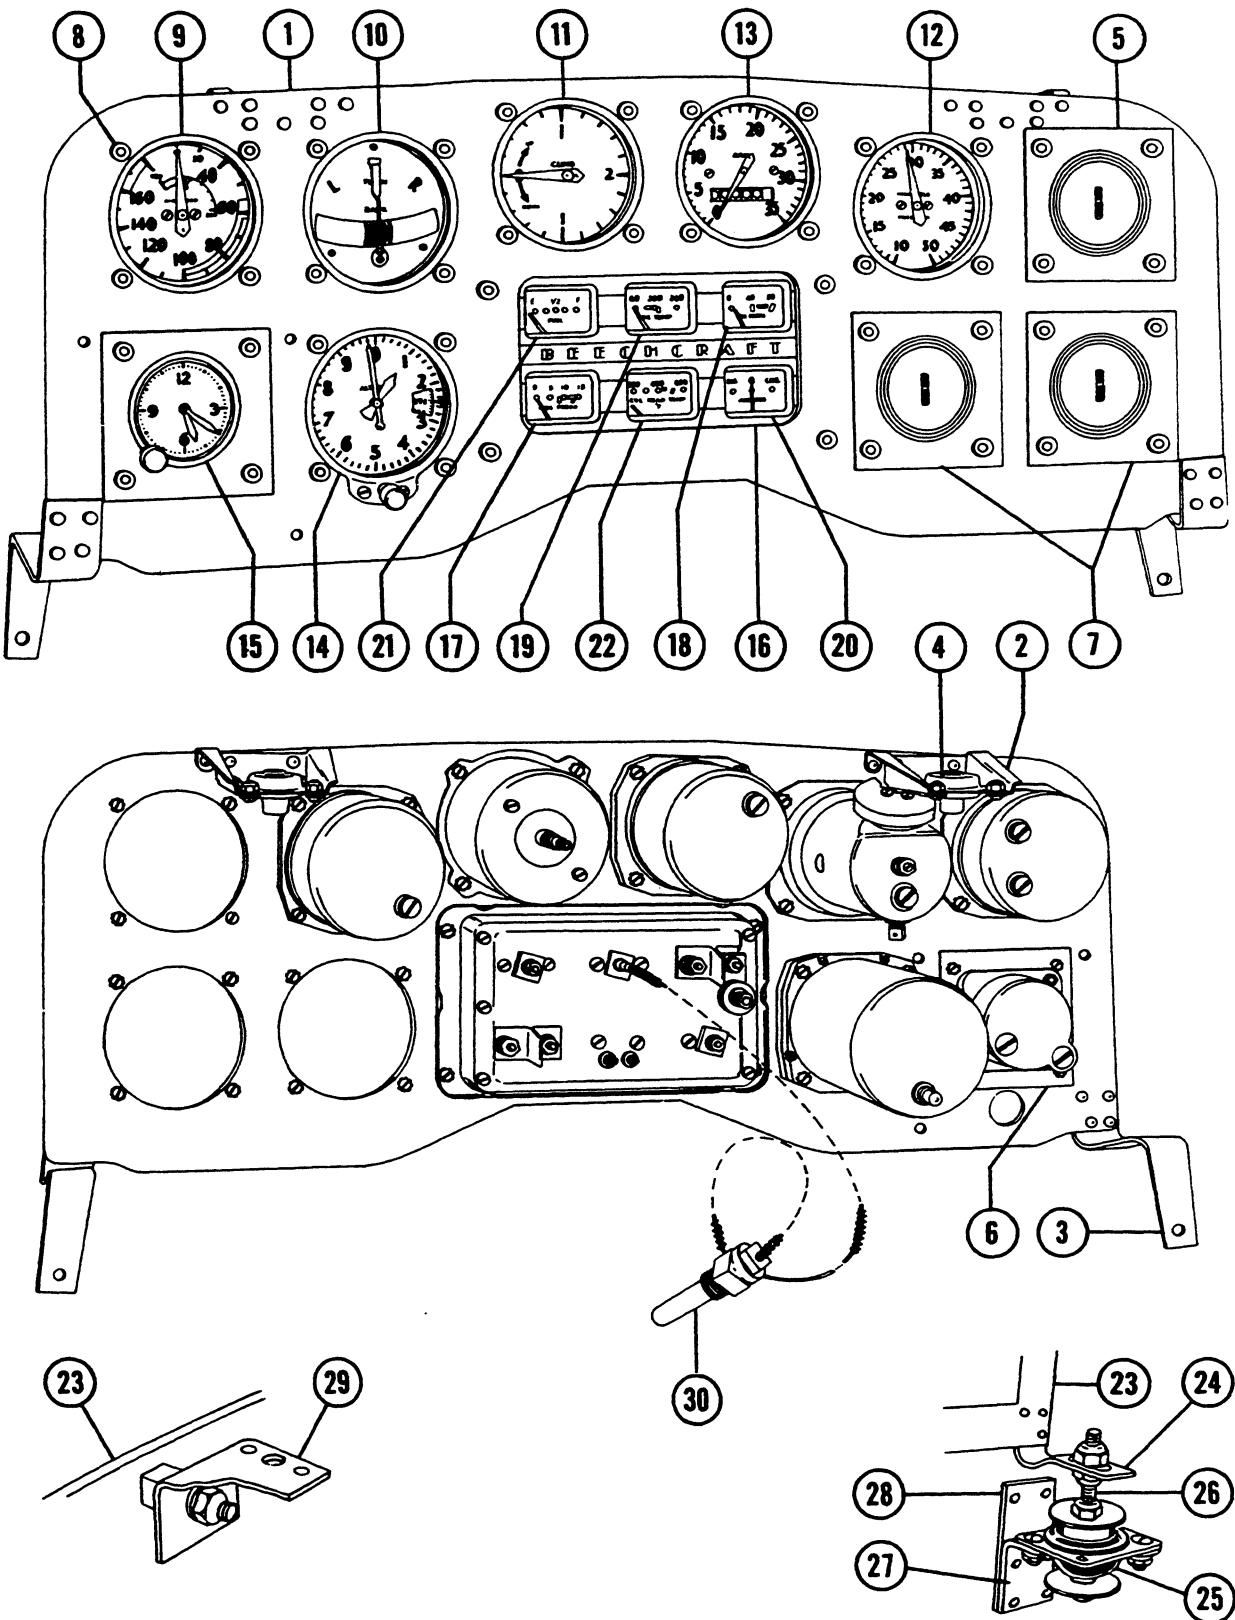


Figure 112. Standard Instrument Panel Assembly (D1 thru D4391)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
112	35-324090-608		PANEL ASSY, STANDARD INSTRUMENT.	1	
- 1	35-324010-608		• PANEL ASSY, INSTRUMENT	1	A1
- 2	35-324010-4		• • BRACKET, LORD MOUNT.	2	A1
- 3	35-324010-6		• • BRACKET, PANEL LOWER MOUNTING.	1	A1
	35-324010-7		• • BRACKET, PANEL LOWER MOUNTING.	1	A1
- 4	156PL-6		• • BUSHING, LORD MOUNT.	2	
	156PL-9		• • BUSHING, LORD MOUNT /USED WITH GYRO/	2	
	AN515-8-6		• • • SCREW, LORD MOUNT BUSHING.	8	
	AN960-8		• • • WASHER, LORD MOUNT RUSHING	8	
	AN365-832		• • NUT, LORD MOUNT BUSHING.	8	
	35-324166-2		• • PANEL, INSTRUMENT.	1	
	35-324166		• • PANEL, INSTRUMENT /SEE INDEX 23/.	1	A1
- 5	35-324076		• • COVER ASSY, INSTRUMENT SPARE CUTOUT.	1	REF A2BCDEFG
	AN515B6-4		• • • SCREW, INSTRUMENT CUTOUT COVER	4	
	AN936B6		• • • WASHER, INSTRUMENT CUTOUT COVER.	4	
- 6	35-324075		• • PLATE, CLOCK ADAPTER	1	
- 7	35-324074		• • COVER, INSTRUMENT CUTOUT	2	
	AN515B6-4		• • • SCREW, INSTRUMENT CUTOUT COVER	12	
	AN936B6		• • • WASHER, INSTRUMENT CUTOUT COVER.	12	
- 8	35-324086		• • INSERT, INSTRUMENT ATTACHING	44	
- 9	988-9-0196		• INDICATOR, AIRSPEED.	1	AB
	35-324297		• INDICATOR, AIRSPEED.	1	C
	35-324229		• INDICATOR, AIRSPEED.	1	D
	35-324229-1		• INDICATOR, AIRSPEED.	1	EFG
	AN515B6-10		• • SCREW, AIRSPEED INDICATOR MOUNTING	4	
	AN936B6		• • WASHER, AIRSPEED INDICATOR MOUNTING.	4	
- 10	S27200A-18		• INDICATOR, TURN & BANK	1	A2B
	17A01-1D1-1-A1		• INDICATOR, TURN & BANK	1	A1
	35-324304		• INDICATOR, TURN & BANK	1	C
	AN515B6-12		• • SCREW, TURN & BANK INDICATOR MOUNTING.	4	
- 11	1223-9-01		• INDICATOR, RATE OF CLIMB	1	AB
	35-324300		• INDICATOR, RATE OF CLIMB	1	CDEFG
	AN515B6-10		• • SCREW, RATE OF CLIMB INDICATOR MOUNTING.	4	
	AN936B6		• • WASHER, RATE OF CLIMB INDICATOR MOUNTING	4	
- 12	990-9-040		• GAGE, MANIFOLD PRESSURE.	1	AB
	35-324305		• GAGE, MANIFOLD PRESSURE.	1	CDEFG
	AN515B6-10		• • SCREW, MANIFOLD PRESSURE GAGE MOUNTING	4	
- 13	1536867		• TACHOMETER, ENGINE	1	A
	1548013		• TACHOMETER, ENGINE	1	B
	35-324306		• TACHOMETER, ENGINE	1	C
	35-324336		• TACHOMETER, ENGINE	1	DE
	35-324336-1		• TACHOMETER, ENGINE	1	F
	1568860		• • SHAFT, TACHOMETER.	1	
- 14	987-9-050		• ALTIMETER	1	AB
	35-324298		• ALTIMETER	1	C
- 15	1792B		• CLOCK	1	AB
	35-324301		• CLOCK	1	CDEFG
	664127		• GYRO, ALTITUDE	1	AB
	35-324308		• GYRO, ALTITUDE	1	CDEFG
	664125		• GYRO, DIRECTIONAL.	1	AB
	35-324307-2		• GYRO, DIRECTIONAL.	1	C
	AN5771-5A		• GAGE, SUCTION.	1	AB
	35-324299		• GAGE, SUCTION.	1	CDEFG
- 16	35-324400-14		• PANEL ASSY, SIX UNIT ENGINE INSTRUMENT	1	
			/ORDER BY SHIP SERIAL/		
	35-324161		• PANEL ASSY, COVER GLASS.	1	
	35-324221		• • PLACARD, BEECHCRAFT.	1	A
	35-324251		• • • PLATE, BEECHCRAFT PLACARD.	1	BCDEFG
- 17	1507360		• • GAGE, FUEL PRESSURE /GREEN/.	1	A1
	1507868		• • GAGE, FUEL PRESSURE /BEIGE/.	1	A2BC
	35-324311		• • GAGE, FUEL PRESSURE /SMOKE/.	1	DE
	1508299		• • GAGE, FUEL PRESSURE /BLACK/.	1	ABCDEF
	1508439		• • GAGE, FUEL PRESSURE /BLACK/.	1	G

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
112 - 18	1507361		• • GAGE,OIL PRESSURE /GREEN/	•	•	•	•	•	•	1	A1
	1507761		• • GAGE,OIL PRESSURE /BEIGE/	•	•	•	•	•	•	1	A2BC
	35-324312		• • GAGE,OIL PRESSURE /SMOKE/	•	•	•	•	•	•	1	DE
	1508300		• • GAGE,OIL PRESSURE /BLACK/	•	•	•	•	•	•	1	ABCDEF
	1508440		• • GAGE,OIL PRESSURE /BLACK/	•	•	•	•	•	•	1	G
- 19	1512139		• • GAGE,OIL TEMPERATURE /GREEN/	•	•	•	•	•	•	1	A1
	1512573		• • GAGE,OIL TEMPERATURE /BEIGE/	•	•	•	•	•	•	1	A2BC
	35-324314		• • GAGE,OIL TEMPERATURE /SMOKE/	•	•	•	•	•	•	1	DE
	1513018		• • GAGE,OIL TEMPERATURE /BLACK/	•	•	•	•	•	•	1	F
	1513176		• • GAGE,OIL TEMPERATURE /BLACK/	•	•	•	•	•	•	1	G
	AN900-10		• • • GASKET,OIL TEMPERATURE	•	•	•	•	•	•	1	
	B817410-1		• • • SEAL	•	•	•	•	•	•	1	
- 20	1500895		• • GAGE,AMMETER /GREEN/	•	•	•	•	•	•	1	A1
	1501411		• • GAGE,AMMETER /BEIGE/	•	•	•	•	•	•	1	A2BC
	35-324303		• • GAGE,AMMETER /SMOKE/	•	•	•	•	•	•	1	DE
	1501695		• • GAGE,AMMETER /BLACK/	•	•	•	•	•	•	1	ABCDEF
	1501751		• • GAGE,AMMETER /BLACK/	•	•	•	•	•	•	1	G
- 21	1517126		• • GAGE,FUEL QUANTITY INDICATOR /GREEN/	•	•	•	•	•	•	1	A1
	1517642		• • GAGE,FUEL QUANTITY INDICATOR /BEIGE/	•	•	•	•	•	•	1	A2BC
	35-324302		• • GAGE,FUEL QUANTITY INDICATOR /SMOKE/	•	•	•	•	•	•	1	DE
	1518333		• • GAGE,FUEL QUANTITY INDICATOR /BLACK/	•	•	•	•	•	•	1	ABCDEF
	1518516		• • GAGE,FUEL QUANTITY INDICATOR /BLACK/	•	•	•	•	•	•	1	G
- 22	ASP-147		• • GAGE,CYLINDER HEAD TEMPERATURE /GREEN/	•	•	•	•	•	•	1	A1
	ASP-148B		• • GAGE,CYLINDER HEAD TEMPERATURE /BEIGE/	•	•	•	•	•	•	1	A2BC
	ASP-300		• • GAGE,CYLINDER HEAD TEMPERATURE /SMOKE/	•	•	•	•	•	•	1	DE
	ASP-373		• • GAGE,CYLINDER HEAD TEMPERATURE /BLACK/	•	•	•	•	•	•	1	F
	1513187		• • GAGE,CYLINDER HEAD TEMPERATURE /BLACK/	•	•	•	•	•	•	1	G
	35-369125		WIRE,THERMOCOUPLE	•	•	•	•	•	•	1	
	C-2400-LP		COMPASS,MAGNETIC	•	•	•	•	•	•	1	A37
	35-324135		COMPASS,MAGNETIC	•	•	•	•	•	•	1	A49
	35-324143-602		COMPASS,MAGNETIC	•	•	•	•	•	•	1	A50
	35-324128		BRACKET,MAGNETIC COMPASS MOUNTING	•	•	•	•	•	•	1	A50
- 23	35-324166		PANEL,INSTRUMENT	•	•	•	•	•	•	1	A2BCDEFG
- 24	35-324166-4		• BRACKET,PANEL LOWER LEFT MOUNTING LH	•	•	•	•	•	•	1	A2BCDEFG
	35-324166-5		• BRACKET,PANEL LOWER LEFT MOUNTING RH	•	•	•	•	•	•	1	A2BCDEFG
- 25	156PL-6		BUSHING,LORD MOUNT	•	•	•	•	•	•	2	
	35-324183		STOP ASSY,MOUNT	•	•	•	•	•	•	2	
	AN8013D2		WASHER	•	•	•	•	•	•	2	
- 26	AN501-416-40		BOLT	•	•	•	•	•	•	2	
	AN365-428		NUT	•	•	•	•	•	•	6	
- 27	35-324211		BRACKET,MOUNT SUPPORT LH	•	•	•	•	•	•	1	A2BCDEFG
	35-324211-1		BRACKET,MOUNT SUPPORT RH	•	•	•	•	•	•	1	A2BCDEFG
- 28	35-324227		DOUBLER,MOUNT BRACKET	•	•	•	•	•	•	2	A2BCDEFG
- 29	35-324158		SUPPORT ASSY,INSTRUMENT PANEL UPPER MOUNTING	•	•	•	•	•	•	2	
	A321		MOUNTING,INSTRUMENT PANEL UPPER	•	•	•	•	•	•	2	A2BCDEFG
	AN960-8		WASHER	•	•	•	•	•	•	4	
	AN365-832		NUT	•	•	•	•	•	•	4	
	35-410291-624		COMPASS	•	•	•	•	•	•	1	
	35-324355		TACHOMETER,ENGINE HOUR COUNTER	•	•	•	•	•	•	1	E4F
	50-320116-2		THERMOMETER,FREE AIR TEMPERATURE	•	•	•	•	•	•	1	DE
	50-320116-6		THERMOMETER,FREE AIR TEMPERATURE	•	•	•	•	•	•	1	FG
	35-324326		COMPASS ASSY	•	•	•	•	•	•	1	C18
	35-324328		COMPASS ASSY	•	•	•	•	•	•	1	DEFG
- 30	35-369125-3		THERMOCOUPLE,BAYONET TYPE	•	•	•	•	•	•	1	
	35-399125		THERMOCOUPLE,WASHER TYPE	•	•	•	•	•	•	1	

MODEL 35 THRU G35 PARTS CATALOG

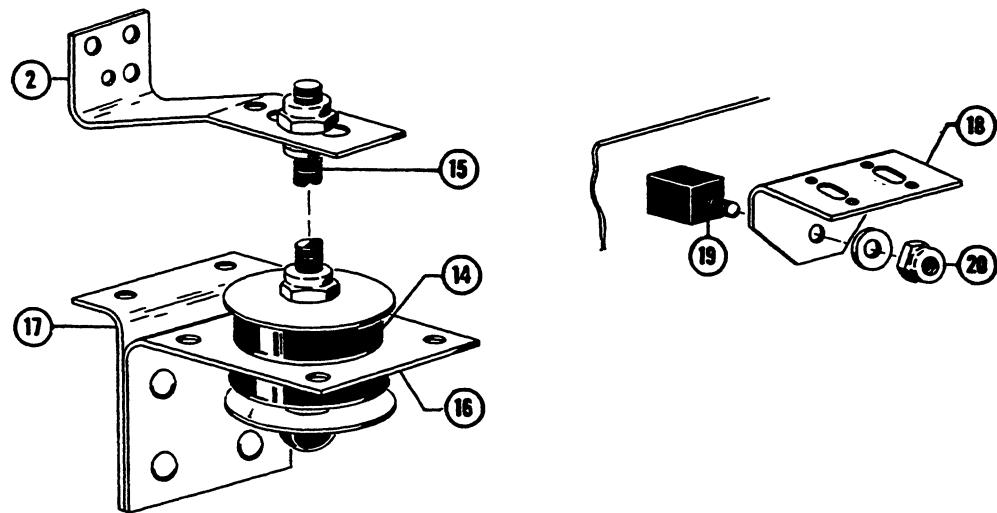
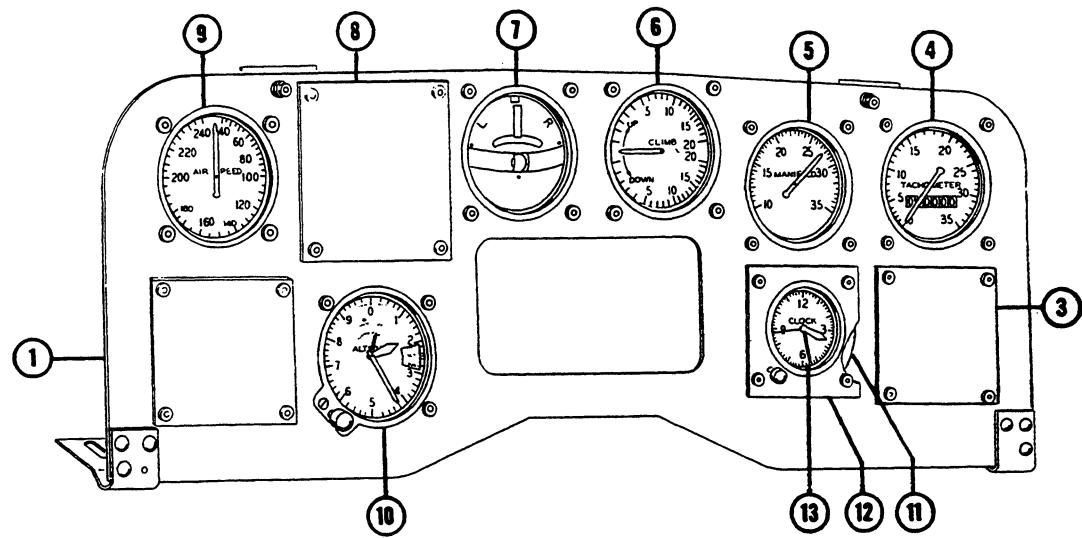


Figure 113. Standard Instrument Panel Assembly (D4391 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
113	35-324260-3	PANEL ASSY, INSTRUMENT	1	G
- 1	35-324166-8	PANEL ASSY, INSTRUMENT BLANK	1	G
- 2	35-324166-4	BRACKET, LOWER MOUNTING LH	1	A2BCDEFG
	35-324166-5	BRACKET, LOWER MOUNTING RH	1	A2BCDEFG
- 3	50-320072-8	COVER ASSY, INSTRUMENT SPARE CUTOUT	2	EFG
	AN515B6-4	SCREW, ATTACHING	4	
- 4	35-324355-3	TACHOMETER, ENGINE	1	G
	AN515B6-4	SCREW, ATTACHING	4	
- 5	35-324335-1	GAGE, MANIFOLD PRESSURE	1	FG
	AN515B6-10	SCREW, ATTACHING	4	
- 6	35-380002	INDICATOR, RATE OF CLIMB	1	G
	AN515B6-14	SCREW, ATTACHING	3	
- 7	35-380003	INDICATOR, TURN & BANK	1	FG
	AN515B6-10	SCREW, ATTACHING	3	
- 8	35-324324-3	COVER ASSY, INSTRUMENT	1	FG
	AN515B6-4	SCREW, ATTACHING	4	
- 9	35-324248-5	INDICATOR, AIRSPEED	1	G
	AN515B6-12	SCREW, ATTACHING	4	
- 10	35-324346-1	ALTIMETER, SENSITIVE	1	FG
	AN515B6-12	SCREW, ATTACHING	4	
- 11	35-324075	ADAPTER, CLOCK	1	
- 12	35-324074	COVER, CLOCK ADAPTER	1	
	AN515B6-4	SCREW, ATTACHING	4	
- 13	A-11MB	CLOCK	1	G
	AN515B6-8	SCREW, ATTACHING	4	
- 14	156PL-6	BUSHING, LORD MOUNT	2	
	35-324183	STOP ASSY, MOUNT	2	
	AN8013D2	WASHER	2	
- 15	AN501-416-40	BOLT	2	
	AN365-428	NUT	6	
- 16	35-324211	BRACKET, MOUNT SUPPORT LH	1	A2BCDEFG
	35-324211-1	BRACKET, MOUNT SUPPORT RH	1	A2BCDEFG
- 17	35-324227	DOUBLER, MOUNT BRACKET	2	A2BCDEFG
- 18	35-324158	SUPPORT ASSY, MOUNTING	2	
- 19	A321	MOUNT, RUBBER	2	
- 20	AN365-832	NUT, ATTACHING	4	
	AN960-8	WASHER, ATTACHING	4	

MODEL 35 THRU G35 PARTS CATALOG

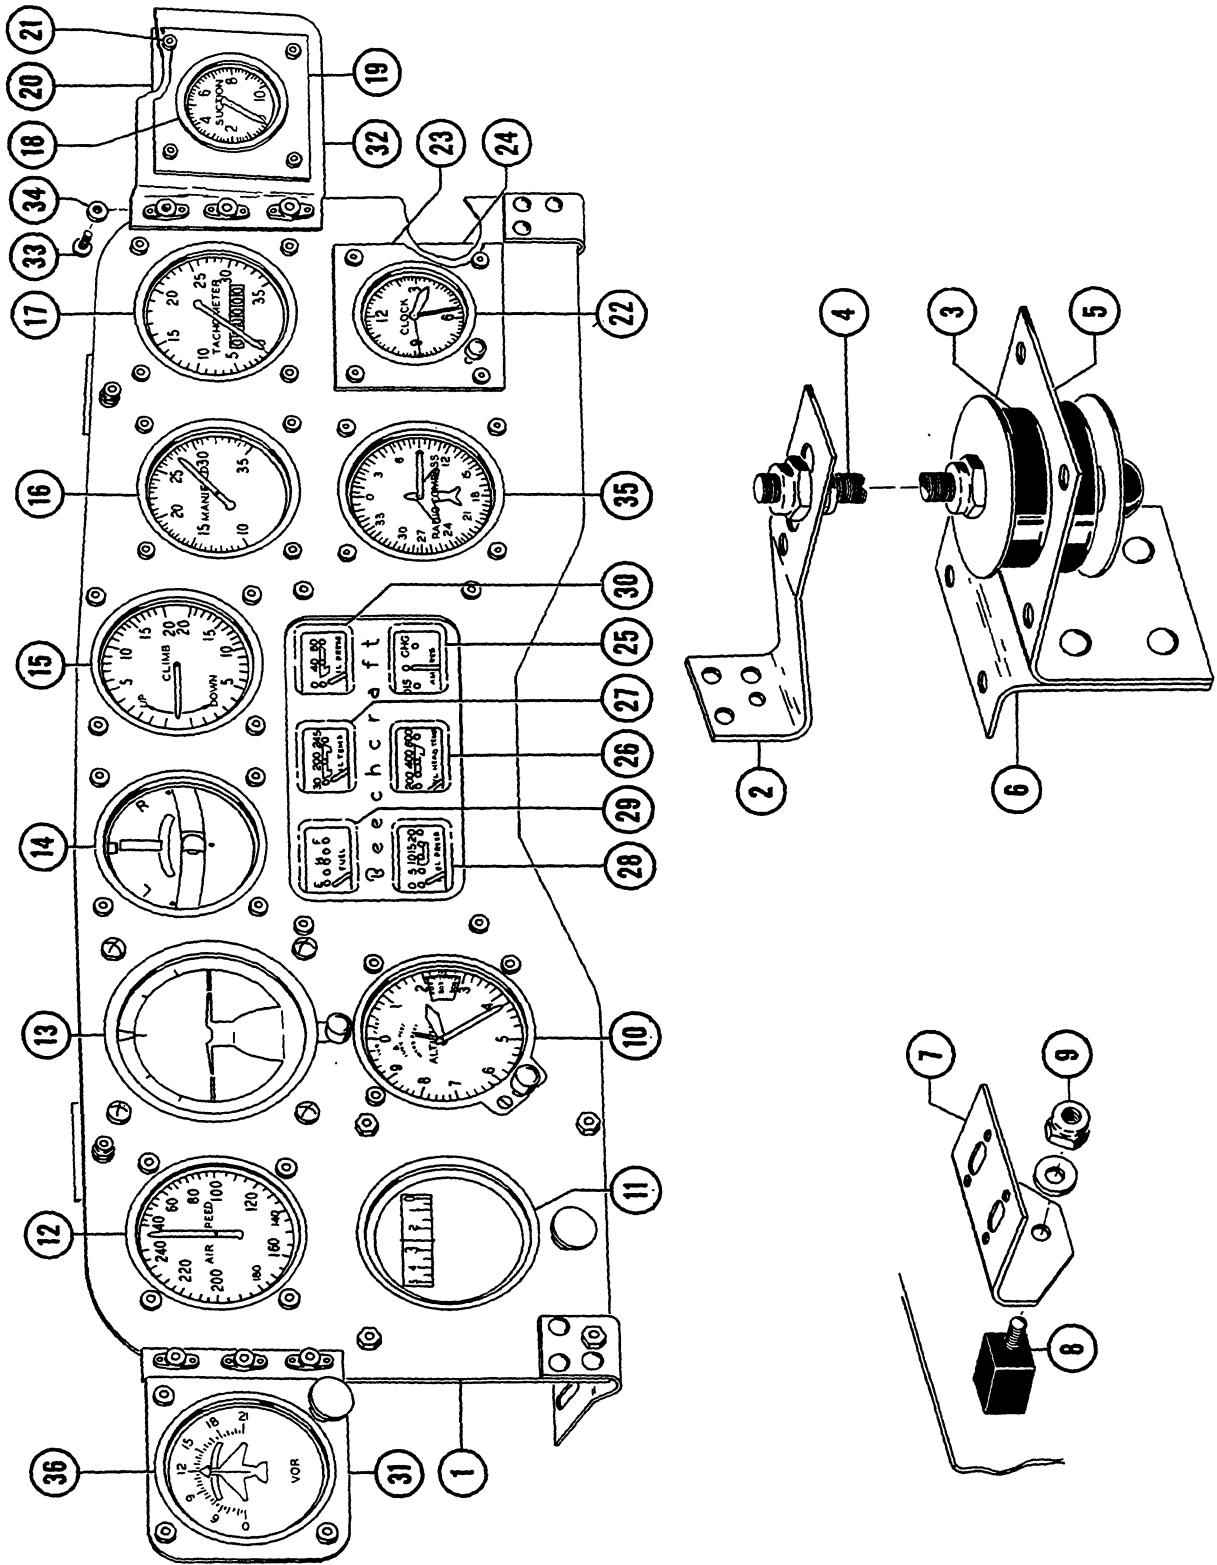


Figure 114. Gyro Instrument Panel Assembly (D2681 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
114	35-324248-601	PANEL ASSY,GYRO INSTRUMENT	1	CDEF
- 1	35-324240	• PANEL ASSY,GYRO INSTRUMENT SHOCK MOUNTED	1	DEF
	35-324166-8	• PANEL ASSY,GYRO INSTRUMENT SHOCK MOUNTED	1	G
- 2	35-324166-4	• BRACKET,LOWER LEFT MOUNTING	1	A2BCDEFG
	35-324166-5	• BRACKET,LOWER RIGHT MOUNTING	1	A2BCDEFG
- 3	156PL-6	BUSHING,LORD MOUNT	2	
	35-324183	STOP ASSY,MOUNT	2	
	AN8013D2	WASHER	2	
- 4	AN501-416-40	BOLT	2	
	AN365-428	NUT	6	
- 5	35-324211	BRACKET,MOUNT SUPPORT	1	A2BCDEFG
	35-324211-1	BRACKET,MOUNT SUPPORT	1	A2BCDEFG
- 6	35-324227	DOUBLER,MOUNT BRACKET	2	A2BCDEFG
- 7	35-324158	SUPPORT ASSY,MOUNTING	2	
- 8	A321	MOUNT,RUBBER	2	
- 9	AN365-832	NUT,ATTACHING	4	
	AN960-8	WASHER,ATTACHING	4	
- 10	35-324298	ALTIMETER,SENSITIVE	1	ABC
	35-324330	ALTIMETER,SENSITIVE	1	D8
	35-324346	ALTIMETER,SENSITIVE	1	D9E
	35-324346-1	ALTIMETER,SENSITIVE	1	FG
	AN515B6-12	SCREW,ATTACHING	4	
	AN936B6	WASHER,ATTACHING	4	
- 11	35-324307-4	GYRO,DIRECTIONAL	1	ABC
	35-324337	GYRO,DIRECTIONAL	1	DE
	35-324351	GYRO,DIRECTIONAL	1	DE
	35-324351-3	GYRO,DIRECTIONAL	1	F
	649742-1PFN	GYRO,DIRECTIONAL	1	G
	AN515B8-10	SCREW,ATTACHING	4	
- 12	35-324297	INDICATOR,AIRSPED	1	ABC
	35-324329	INDICATOR,AIRSPED	1	D
	35-324329-1	INDICATOR,AIRSPED	1	E
	35-324329-5	INDICATOR,AIRSPED	1	F
	35-324248-5	INDICATOR,AIRSPED	1	G
	AN515B6-12	SCREW,ATTACHING	4	
	AN936B6	WASHER,ATTACHING	4	
- 13	35-324309	GYRO,HORIZON	1	ARC
	35-324338	GYRO,HORIZON	1	DE
	35-324338-3	GYRO,HORIZON	1	F
	656768-1FLNC	GYRO,HORIZON	1	G
	AN515R6-12	SCREW,ATTACHING	4	
- 14	35-324304	INDICATOR,TURN & BANK	1	C
	35-324334	INDICATOR,TURN & BANK	1	DE
	35-380003	INDICATOR,TURN & BANK	1	FG
	AN515B6-10	SCREW,ATTACHING	4	
- 15	35-324300	INDICATOR,RATE OF CLIMB	1	C12
	35-324332	INDICATOR,RATE OF CLIMB	1	DE
	35-324347	INDICATOR,RATE OF CLIMB	1	DE
	35-324378	INDICATOR,RATE OF CLIMB	1	DE
	35-324348-1	INDICATOR,RATE OF CLIMB	1	F
	35-380002	INDICATOR,RATE OF CLIMB	1	G
	AN515B6-14	SCREW,ATTACHING	4	
	AN936B6	WASHER,ATTACHING	4	
- 16	35-324305	INDICATOR,MANIFOLD PRESSURE	1	ABC
	35-324335	INDICATOR,MANIFOLD PRESSURE	1	DE
	35-324335-1	INDICATOR,MANIFOLD PRESSURE	1	FG
	AN515B6-10	SCREW,ATTACHING	4	
	AN936B6	WASHER,ATTACHING	4	
- 17	35-324306	TACHOMETER,ENGINE	1	ABC
	35-324336	TACHOMETER,ENGINE	1	DE
	35-324336-1	TACHOMETER,ENGINE	1	F
	35-324355-3	TACHOMETER,ENGINE	1	G
	AN515B6-4	SCREW,ATTACHING	4	
	AN936B6	WASHER,ATTACHING	4	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
114 - 18	35-324299		• GAGE,SUCTION.	•	•	•	•	•	•	1	ABC
	50-320106-2		• GAGE,SUCTION.	•	•	•	•	•	•	1	DE
	50-320106		• GAGE,SUCTION.	•	•	•	•	•	•	1	FG
	AN515B6-12		• SCREW,ATTACHING	•	•	•	•	•	•	4	
- 19	35-324149		• COVER,INSTRUMENT CUTOUT	•	•	•	•	•	•	1	
- 20	35-324148		• ADAPTER,INSTRUMENT CUTOUT	•	•	•	•	•	•	1	
- 21	35-324086		• INSERT,COVER ATTACHING.	•	•	•	•	•	•	4	
	AN515B6-4		• SCREW,ATTACHING	•	•	•	•	•	•	4	
- 22	35-324301		• CLOCK,8 DAY	•	•	•	•	•	•	1	ABC
	35-324333		• CLOCK,8 DAY	•	•	•	•	•	•	1	DE
	35-324333-1		• CLOCK,8 DAY	•	•	•	•	•	•	1	F
	35-380004-1		• CLOCK,8 DAY	•	•	•	•	•	•	1	G
	AN515B6-8		• SCREW,ATTACHING	•	•	•	•	•	•	4	
- 23	35-324074		• COVER,INSTRUMENT CUTOUT	•	•	•	•	•	•	1	
- 24	35-324075		• ADAPTER,INSTRUMENT CUTOUT	•	•	•	•	•	•	1	
	AN515B6-4		• SCREW,ATTACHING	•	•	•	•	•	•	4	
	AN936B6		• WASHER,ATTACHING	•	•	•	•	•	•	4	
	35-324160		• INSTRUMENT ASSY,ENGINE.	•	•	•	•	•	•	1	C
	35-324317		• INSTRUMENT ASSY,ENGINE.	•	•	•	•	•	•	1	DEF
- 25	35-324303		• AMMETER	•	•	•	•	•	•	1	DE
	35-324303-1		• AMMETER	•	•	•	•	•	•	1	F
	1501695		• AMMETER	•	•	•	•	•	•	1	F
- 26	35-324313		• • GAGE,CYLINDER HEAD TEMPERATURE.	•	•	•	•	•	•	1	DE
	35-324313-1		• • GAGE,CYLINDER HEAD TEMPERATURE.	•	•	•	•	•	•	1	F
	A-SP-373		• • GAGE,CYLINDER HEAD TEMPERATURE.	•	•	•	•	•	•	1	F
- 27	35-324314		• • GAGE,OIL TEMPERATURE.	•	•	•	•	•	•	1	DE
	35-324314-1		• • GAGE,OIL TEMPERATURE.	•	•	•	•	•	•	1	F
	1513018		• • GAGE,OIL TEMPERATURE.	•	•	•	•	•	•	1	F
- 28	35-324311		• • GAGE,FUEL PRESSURE.	•	•	•	•	•	•	1	DE
	35-324311-1		• • GAGE,FUEL PRESSURE.	•	•	•	•	•	•	1	F
	1508299		• • GAGE,FUEL PRESSURE.	•	•	•	•	•	•	1	F
- 29	35-324302		• • GAGE,FUEL QUANTITY.	•	•	•	•	•	•	1	DE
	35-324302-1		• • GAGE,FUEL QUANTITY.	•	•	•	•	•	•	1	F
	1518333		• • GAGE,FUEL QUANTITY.	•	•	•	•	•	•	1	F
- 30	35-324312		• • GAGE,OIL PRESSURE.	•	•	•	•	•	•	1	DE
	35-324312-1		• • GAGE,OIL PRESSURE.	•	•	•	•	•	•	1	F
	1508300		• • GAGE,OIL PRESSURE.	•	•	•	•	•	•	1	F
- 31	35-324281		• BRACKET ASSY,LH	•	•	•	•	•	•	1	
- 32	35-324281-1		• BRACKET ASSY.	•	•	•	•	•	•	1	
- 33	AN515-8-6		• SCREW,ATTACHING	•	•	•	•	•	•	3	
- 34	AN936B8		• WASHER,ATTACHING	•	•	•	•	•	•	3	
	35-324413		• COVER ASSY,INSTRUMENT SPARE CUTOUT.	•	•	•	•	•	•	2	
	AN515-6R6		• SCREW,ATTACHING	•	•	•	•	•	•	4	
	AN360-632		• NUT,ATTACHING	•	•	•	•	•	•	4	
	AN960-6		• WASHER,ATTACHING	•	•	•	•	•	•	4	
- 35	I-81		• ORIENTER,ADF-12-C LEAR AUTOMATIC DIRECTION.	•	•	•	•	•	•	1	
			• FINDER /OPTIONAL EQUIPMENT/	•	•	•	•	•	•		
- 36	97930-04		• OMNIMETER,MARCO VHF RANGE NAVIGATOR	•	•	•	•	•	•	1	
			/OPTIONAL EQUIPMENT/	•	•	•	•	•	•		

MODEL 35 THRU G35 PARTS CATALOG

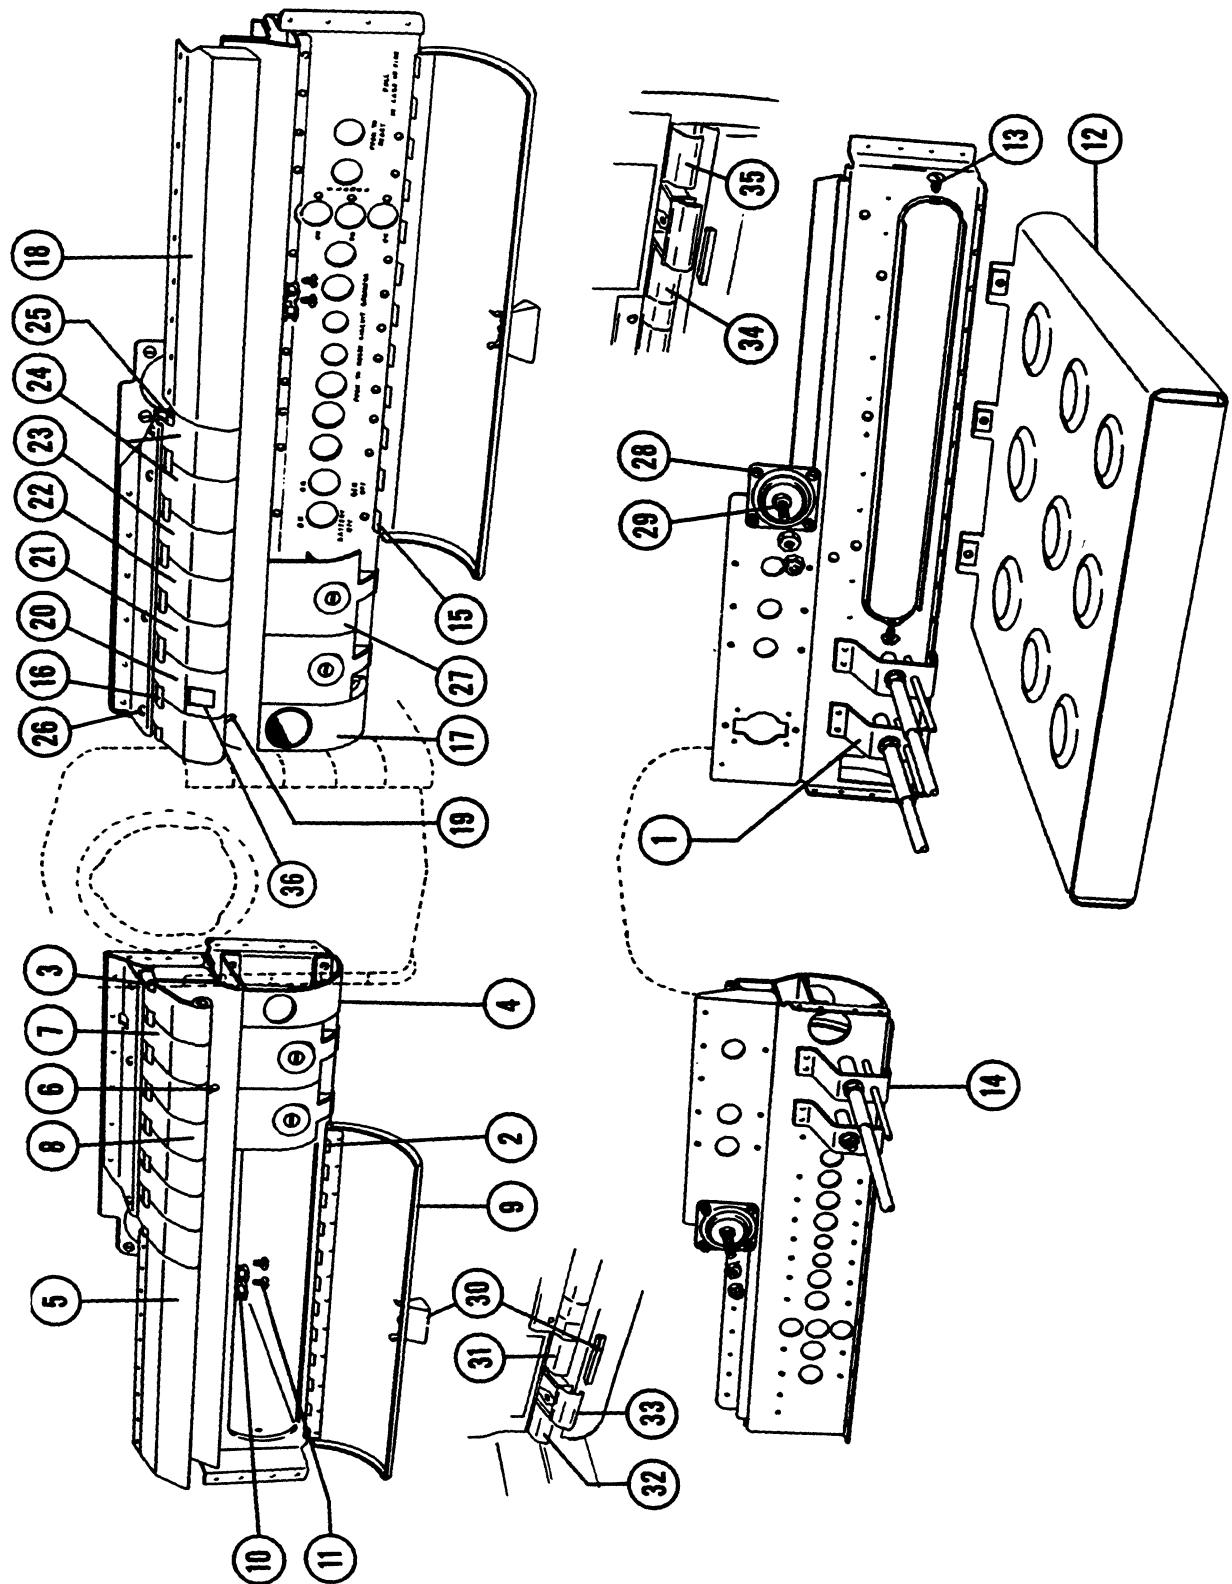


Figure 115. Left and Right Subpanel Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
115 - A	35-324050-601		SUBPANEL ASSY,LEFT.	1	
- 1	35-324050-8		• BRACKET,LEFT SURPANEL	2	
- 2	35-324050-10		• HINGE,LEFT SUBPANEL	1	
- 3	35-324050-12		• HINGE,LEFT SUBPANEL	1	
- 4	35-324054		• FILLER,LEFT SUBPANEL	1	
- 5	35-324051		COVER,LEFT SUBPANEL	1	A1
	35-324057		COVER,LEFT SUBPANEL	1	A11
	35-324078		LEVER,SUBPANEL BLANK.	1	
- 6	35-324082		LOCK ASSY,FLAP SWITCH	1	
	35-324082-2		• BOLT.	1	
	100943-016-007-		• SPRING.	1	
	014-11				
	AN960-4		• WASHER.	1	
- 7	35-324081		LEVER,FLAP SWITCH	1	
- 8	35-324078		LEVER,FUEL SELECTOR SWITCH	1	
	35-324078		LEVER,SUBPANEL RADIO	1	
	35-324078		LEVER,NAVIGATION LIGHT SWITCH	1	
	35-324078		LEVER,SUBPANEL BLANK.	1	
- 9	35-324058		DOOR ASSY,MAP & CIRCUIT BREAKER COMPARTMENT	1	
- 10	5		ROLLER,MAP & CIRCUIT BREAKER COMPARTMENT DOOR	1	
	5		CATCH,MAP & CIRCUIT BREAKER COMPARTMENT DOOR.	1	
	STRIKER				
- 11	AN515-6-6		SCREW,ROLLER ASSY ATTACHING	2	
- 12	35-324003		BOX ASSY,MAP COMPARTMENT	1	
- 13	AN530-6-6		SCREW,MAP COMPARTMENT ATTACHING	5	
B	35-324040-601		SUBPANEL ASSY,RIGHT	1	
- 14	35-324040-8		• BRACKET,RIGHT SUBPANEL	2	
- 15	35-324010-10		• HINGE,SUBPANEL	1	
- 16	35-324040-12		• HINGE,SUBPANEL	1	
- 17	35-324040-3		• FILLER,SUBPANEL	1	
- 18	35-324084		COVER,SUBPANEL	1	
- 19	35-324077		LEVER,LANDING LIGHT SWITCH LOCK	1	
- 20	35-324078		LEVER,LANDING GEAR SWITCH	1	
- 21	35-324078		LEVER,SUBPANEL BLANK.	1	
- 22	35-324124-2		LEVER,LANDING LIGHT SWITCH	1	
- 23	35-324124-4		LEVER,LANDING LIGHT SWITCH	1	
- 24	35-324078		LEVER,SUBPANEL BLANK.	2	
- 25	102361-00908		PIN,LEVER HINGE	1	
- 26	AN515-6-6		SCREW,BLANK LEVER ATTACHING	4	
	AN365-632		NUT,BLANK LEVER ATTACHING	4	
- 27	35-944009		HANDLE ASSY,PUSH PULL CONTROL	2	
	AN8008-7		MOUNT,FLOATING PANEL SHOCK	1	
- 28	AN505-8-6		SCREW,SHOCK MOUNT ATTACHING	4	
	AN960-8		WASHER,SHOCK MOUNT	4	
	AN365-832		NUT,SHOCK MOUNT RETAINER	4	
- 29	AN502-416-32		SCREW,FLOATING PANEL ATTACHING	1	
	AN365-428		NUT,PANEL RETAINER	3	
- 30	35-324032		KNOB,MAP & CIRCUIT BREAKER COMPARTMENT DOOR	1	A
	35-324204		KNOB,MAP & CIRCUIT BREAKER COMPARTMENT DOOR	1	BCDEFG
- 31	35-324196-4		COVER,LEFT SUBPANEL	1	A48BCDEFG
- 32	35-324195		COVER,LEFT SUBPANEL	1	A48BCDEFG
- 33	35-324231		TRAY,ASH.	1	A48BCDEFG
	35-324235		SLIDE ASSY,ASH TRAY	1	A48BCDEFG
- 34	35-324196-3		COVER,RIGHT SUBPANEL	1	A48BCDEFG
- 35	35-324196-2		COVER,RIGHT SUBPANEL	1	A48BCDEFG
- 36	35-324412-3		ICON.	1	

MODEL 35 THRU G35 PARTS CATALOG

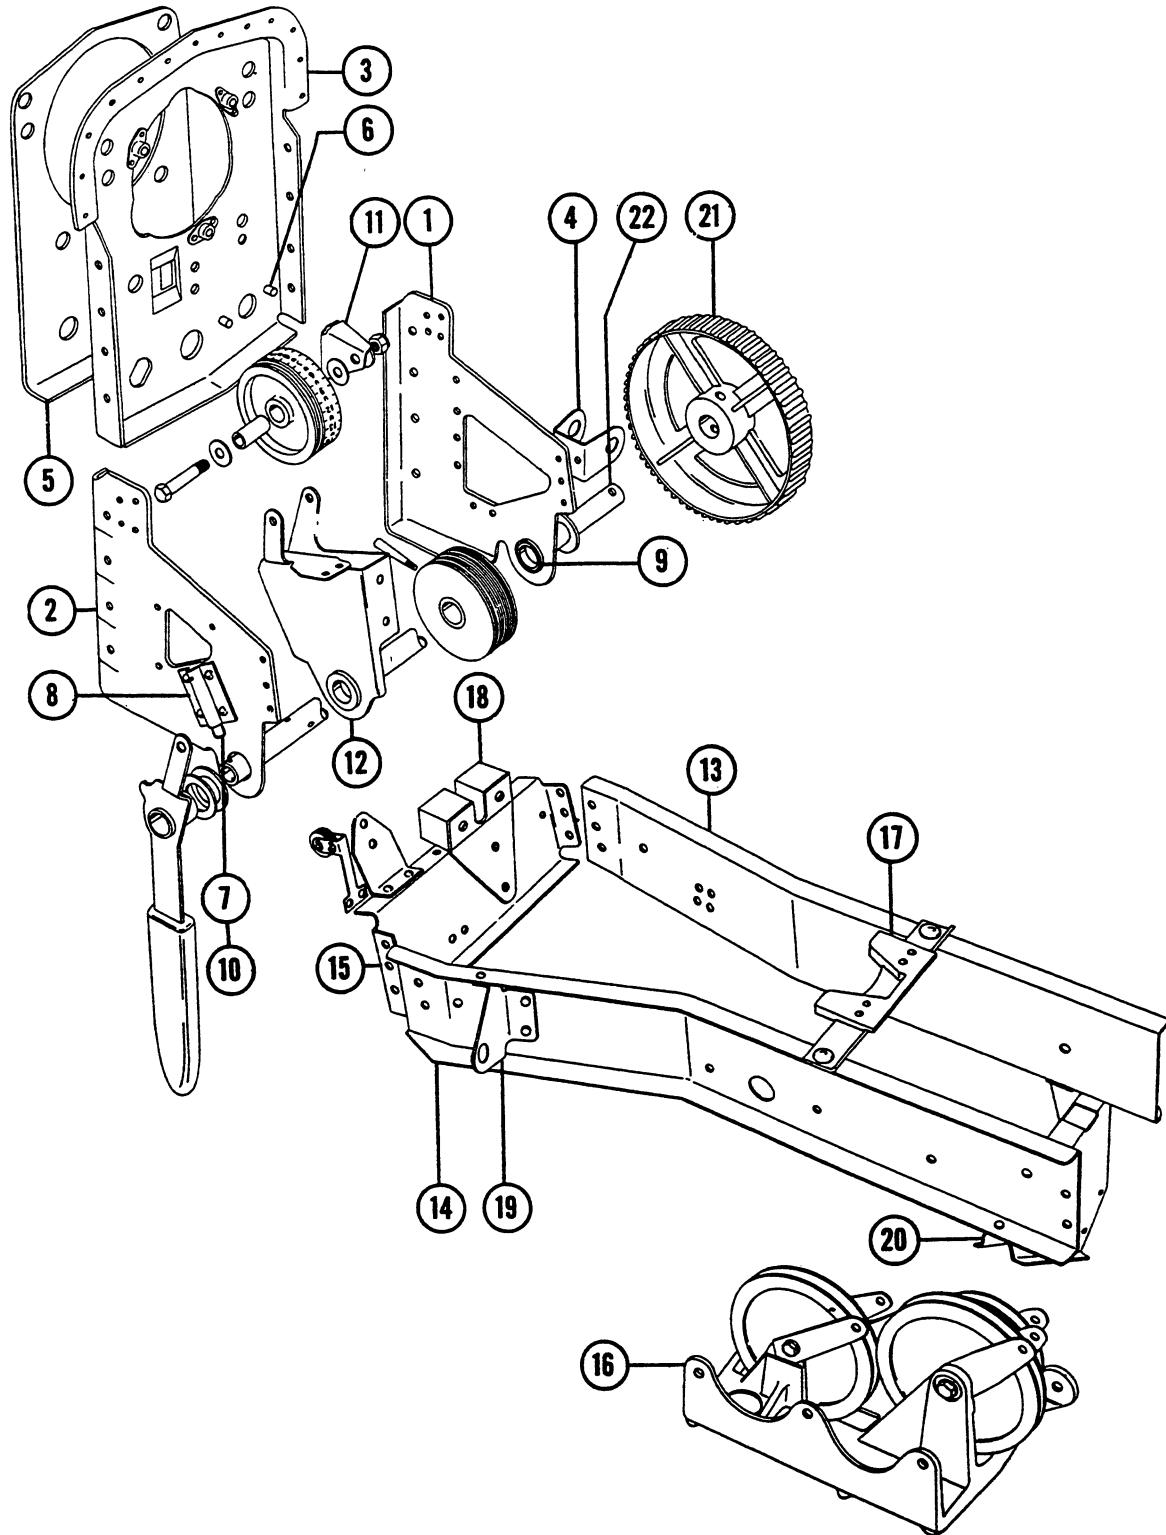


Figure 116. Center Instrument Panel Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
116	35-324025		PANEL ASSY,CENTER INSTRUMENT.	1	
- 1	35-324025-2		• SUPPORT,LEFT CENTER PANEL	1	
- 2	35-324025-5		• SUPPORT,RIGHT CENTER PANEL	1	
- 3	35-324025-6		• PANEL,CENTER INSTRUMENT /LESS PLACARD/	1	
- 4	35-324072		• SUPPORT,CARBURETOR MIXTURE CONTROL	1	
- 5	35-324026-2		• PLACARD,CENTER INSTRUMENT PANEL	1	A1
	35-324026-6		• PLACARD,CENTER INSTRUMENT PANEL	1	A2B
	35-324026-4		• PLACARD,CENTER INSTRUMENT PANEL	1	C
	35-324026-8		• PLACARD,CENTER INSTRUMENT PANEL	1	D
	35-324026-10		• PLACARD,CENTER INSTRUMENT PANEL	1	EF4
	35-324026-12		• PLACARD,CENTER INSTRUMENT PANEL	1	F5
	35-324363		• PLACARD,CENTER INSTRUMENT PANEL	1	G
- 6	35-324029		• STUD,CENTER INSTRUMENT	2	
- 7	35-324034		• PIN,CENTER INSTRUMENT	1	
- 8	35-324035		• RETAINER,CENTER INSTRUMENT	1	
- 9	F-631		• BEARING,CENTER INSTRUMENT OILITE	1	
	336F832		• NUT,CENTER INSTRUMENT ANCHOR	2	
- 10	100943-035-005-	020-12	• SPRING,CENTER INSTRUMENT	1	
- 11	35-324113		• BRACKET,TAB DIAL INDICATOR	1	
- 12	35-324073		BRACKET,UPPER FWD PULLEY	1	
- 13	35-324069		CHANNEL,FWD PULLEY BRACKET	1	
- 14	35-324070		CHANNEL,FWD PULLEY BRACKET	1	
- 15	35-324021		SUPPORT,FWD PULLEY BRACKET	1	
- 16	35-524126-2		BRACKET,UPPER FWD PULLEY	1	
- 17	35-524234		STOP,PULLEY BRACKET	1	
- 18	35-524233		STOP,PULLEY BRACKET	1	
- 19	35-410119		BRACKET,PARKING BRAKE ATTACHING	1	
- 20	35-410019		BRACKET,AILERON PULLEY	1	
	AN3-4A		BOLT,STOP ATTACHING	2	
	AN960-10L		WASHER,STOP ATTACHING	2	
	AN365-1032		NUT,STOP ATTACHING	2	
	AN3-4A		BOLT,BRACKET ATTACHING	6	
	AN960-10L		WASHER,BRACKET ATTACHING	6	
	AN365-1032		NUT,BRACKET ATTACHING	6	
- 21	35-524542		WHEEL,ELEVATOR TAB CONTROL	1	
	AN3-16A		BOLT,CONTROL WHEEL ATTACHING	1	
	AN960-10		WASHER,CONTROL WHEEL ATTACHING	1	
	AN365-1032		NUT,CONTROL WHEEL ATTACHING	1	
- 22	35-524532		TUBE,CONTROL WHEEL	1	
	AN960-816L		WASHER,CONTROL WHEEL TUBE	1	
	AN960-1016		WASHER,CONTROL WHEEL TUBE	1	
	AN960-1016L		WASHER,CONTROL WHEEL TUBE	1	

MODEL 35 THRU G35 PARTS CATALOG

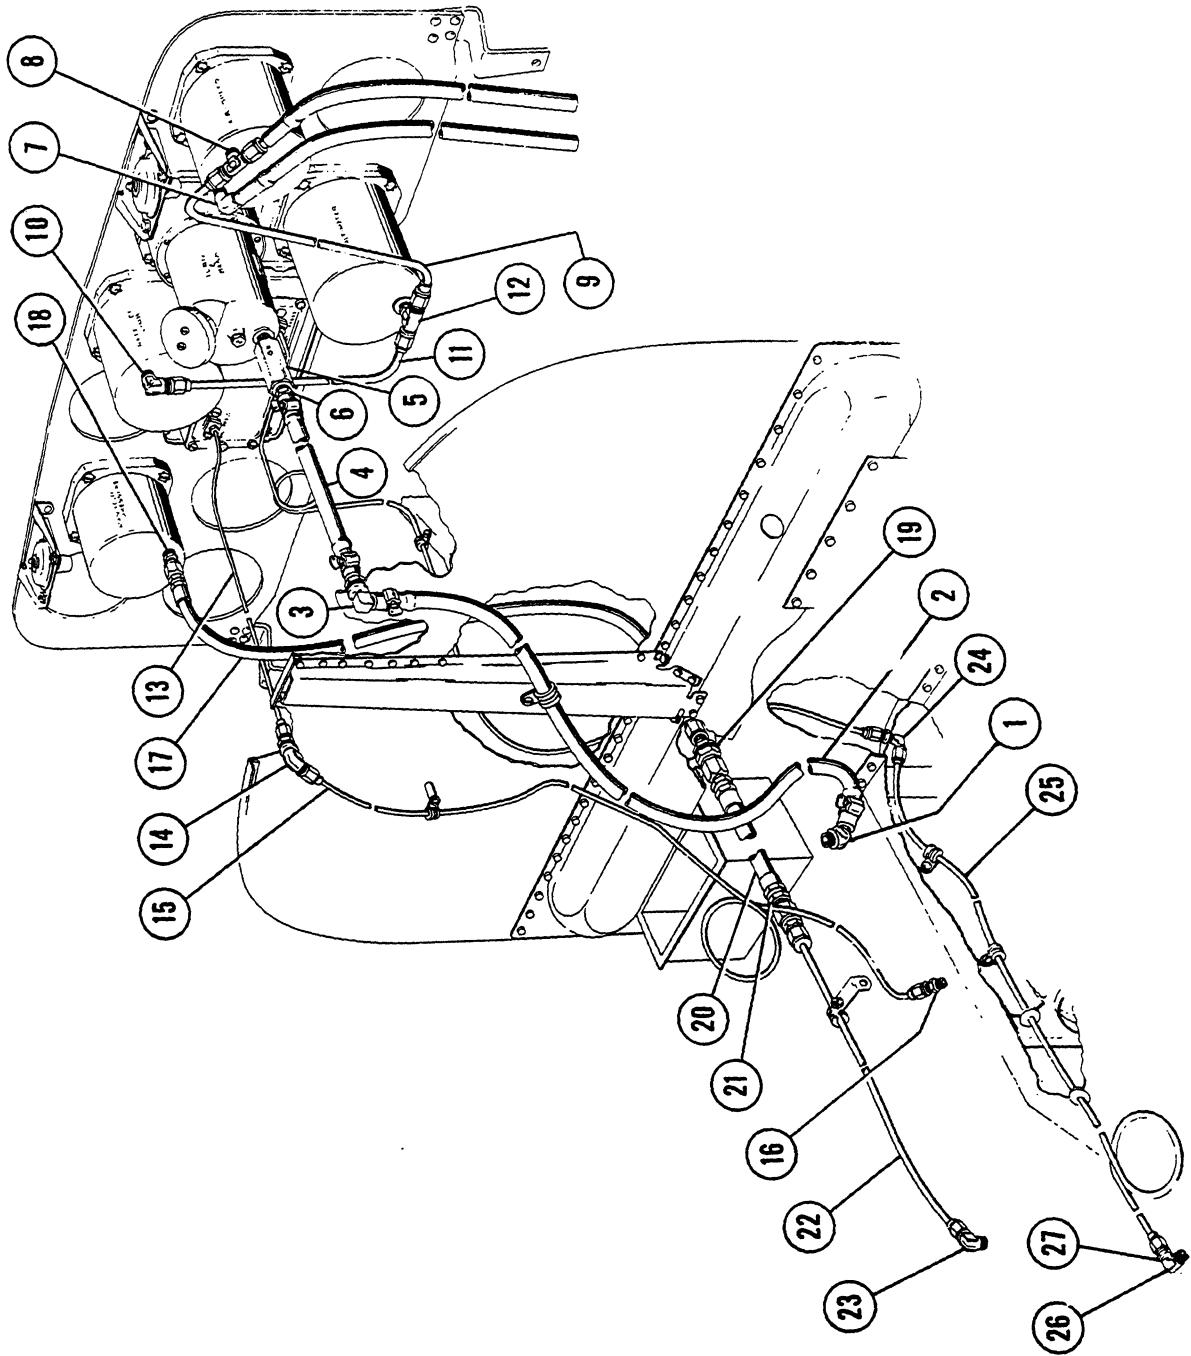


Figure 117. Instrument Plumbing System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
117 - 1	AN842-4D		ELBOW,VACUUM PUMP	1	
	AN912-3		BUSHING,VACUUM PUMP ELBOW	1	
- 2	AN833-4-120		HOSE,VACUUM PUMP TO FIREWALL	1	
	AN748-22		CLAMP,PUMP TO FIREWALL HOSE	2	
	AN742-8		CLAMP,PUMP TO FIREWALL HOSE	1	
	AN515-8-6		SCREW,FIREWALL HOSE CLAMP	1	
	AN365-832		NUT,FIREWALL HOSE CLAMP	1	
- 3	AN848-4D		ELBOW,FIREWALL HOSE CONNECT	1	
	AN960D716		WASHER,FIREWALL HOSE CONNECT	1	
	AN316-7R		NUT,FIREWALL HOSE CONNECT	1	
- 4	AN883-4-48		TUBE,FIREWALL TO THROTTLING VALVE	1	
	AN748-22		CLAMP,THROTTLING VALVE TUBE	2	
- 5	1521-1-A		VALVE,TURN & BANK THROTTLING	1	A51
	35-324144		VALVE,TURN & BANK THROTTLING	1	A52
- 6	AN840-4D		ADAPTER,THROTTLING VALVE	1	
- 7	AN842-4D		ELBOW,AIRSPED INDICATOR	1	
- 8	AN825-4D		TEE,AIRSPED INDICATOR	1	
- 9	35-324094		TUBE,AIRSPED TO ALTIMETER	1	
- 10	AN822-4D		ELBOW,RATE OF CLIMB INDICATOR	1	
- 11	35-324095		TUBE,RATE OF CLIMB TO ALTIMETER	1	
- 12	AN825-4D		TEE,ALTIMETER CONNECT	1	
- 13	35-939052		LINE,TO INSTRUMENT OIL PRESSURE	1	
- 14	AN833-2D		ELBOW,FIREWALL OIL LINE	1	
	AN960-516		WASHER,OIL LINE	1	
	AN924-2D		NUT,ELBOW RETAINING	1	
- 15	35-939047		LINE,TO ENGINE OIL PRESSURE	1	
	AN742-2		CLAMP,LINE ATTACHING	1	
	100696D1-06-016		SPACER,CLAMP MOUNTING	1	
	AN526-832-16		SCREW,CLAMP ATTACHING	1	
	AN960-8		WASHER,CLAMP MOUNTING	1	
	AN365-832		NUT,CLAMP RETAINER	1	
- 16	AN816-2B		NIPPLE,TO ENGINE OIL LINE	1	
- 17	AN6270-4-28		TUBE,MANIFOLD PRESSURE	1	
- 18	AN816-4B		NIPPLE,MANIFOLD PRESSURE	1	
- 19	AN832-4D		UNION,FIREWALL PRESSURE LINE	1	
	AN960A716		WASHER,FIREWALL PRESSURE LINE	1	
	AN924-4		NUT,FIREWALL PRESSURE LINE	1	
- 20	AN6270-4-9		HOSE,MANIFOLD PRESSURE FWD	1	
- 21	AN815-4D		UNION,FWD HOSE CONNECTING	1	
- 22	35-910240		TUBE,TO ENGINE MANIFOLD	1	
- 23	7-846-2		FITTING ASSY,MANIFOLD	1	
	35-910245		BRACKET,LINE MOUNTING	1	
	AN742-6C		CLAMP,LINE ATTACHING	1	
	AN526-832-8		SCREW,CLAMP ATTACHING	1	
	AN960-8		WASHER,CLAMP MOUNTING	1	
	AN365-832		NUT,CLAMP RETAINER	1	
	35-924127		LINE,TO INSTRUMENT FUEL	1	
	AN742-4C		CLAMP,LINE SUPPORT	1	
	AN526-832-8		SCREW,CLAMP ATTACHING	1	
	AN365-832		NUT,CLAMP RETAINER	1	
	AN960-8		WASHER,CLAMP MOUNTING	1	
- 24	AN833-2D		ELBOW,FUEL PRESSURE LINE	1	
	AN924-2D		NUT,PRESSURE LINE RETAINER	1	
	AN960-516		WASHER,PRESSURE LINE RETAINER	1	
- 25	35-924126		LINE,FWD FUEL PRESSURE	1	
	AN742-4C		CLAMP,LINE SUPPORT	2	
	AN526-832-8		SCREW,CLAMP ATTACHING	2	
	AN960-8		WASHER,CLAMP MOUNTING	2	
	AN365-832		NUT,CLAMP RETAINER	2	
	AN931-2-9		GROMMET,FUEL PRESSURE LINE	2	
- 26	AN914-1		ELBOW,PRESSURE LINE TO ENGINE	1	
- 27	AN816-2D		NIPPLE,PRESSURE LINE TO ENGINE	1	

MODEL 35 THRU G35 PARTS CATALOG

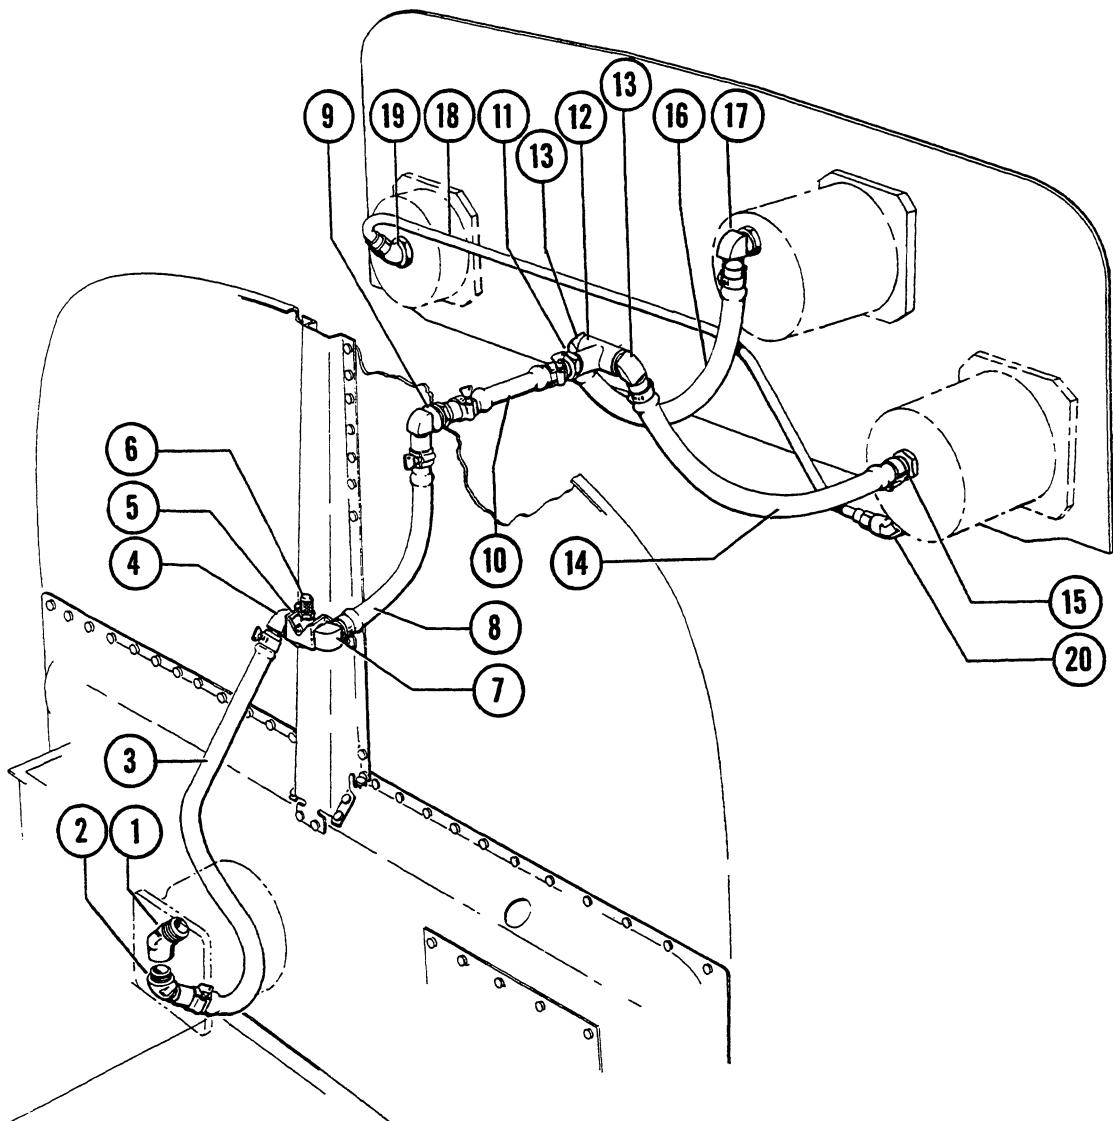


Figure 118. Gyro Instrument Plumbing System (D2681 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS	USABLE							
			1	2	3	4	5	6	7	PER ASSY	ON CODE
118	35-324280	LINES INSTL,GYRO INSTRUMENT PANEL VACUUM.	1	CDEFG
- 1	AN915-3	• ELBOW,VACUUM PUMP	1	
- 2	AN842-8D	• ELBOW,VACUUM PUMP	1	
- 3	35-324280-10	• HOSE ASSY,PUMP TO VALVE	1	
	AN737-30	• CLAMP,ATTACHING	2	
- 4	AN842-8D	• ELBOW,SUCTION RELIEF VALVE	1	
- 5	35-415395	• BRACKET ASSY,SUCTION RELIEF VALVE	1	
- 6	3V-195	• VALVE,SUCTION RELIEF	1	
	AN913-1D	• PLUG,SUCTION RELIEF VALVE	1	
- 7	AN842-8D	• ELBOW,SUCTION RELIEF VALVE	1	
- 8	35-324280-14	• HOSE ASSY,VALVE TO BULKHEAD	1	
	AN737-30	• CLAMP,ATTACHING	2	
- 9	AN848-8D	• ELBOW,BULKHEAD	1	
	AN960-1216L	• WASHER	1	
	AN936A1216	• WASHER	1	
	AN924-8D	• NUT	1	
- 10	35-324280-12	• HOSE ASSY,BULKHEAD ELBOW TO TEE	1	
	AN737-30	• CLAMP,ATTACHING	2	
- 11	AN840-8D	• ADAPTER	1	
- 12	AN917-3D	• TEE	1	
	AN912-2D	• BUSHING	1	
- 13	AN842-6	• ELBOW	2	
- 14	35-324280-6	• HOSE ASSY,TEE TO DIRECTIONAL GYRO	1	
	AN737-26	• CLAMP,ATTACHING	2	
- 15	AN840-6	• ADAPTER,DIRECTIONAL GYRO CONNECTING	1	
- 16	35-324280-8	• HOSE ASSY,TEE TO GYRO HORIZON	1	
	AN737-26	• CLAMP,ATTACHING	2	
- 17	AN844-6	• ELBOW,GYRO HORIZON CONNECTING	1	
- 18	35-324170	• TUBE ASSY,SUCTION GAGE TO DIRECTIONAL GYRO	1	
- 19	AN822-4D	• ELBOW,SUCTION GAGE CONNECTING	1	
- 20	AN822-4-4D	• ELBOW,DIRECTIONAL GYRO CONNECTING	1	

MODEL 35 THRU G35 PARTS CATALOG

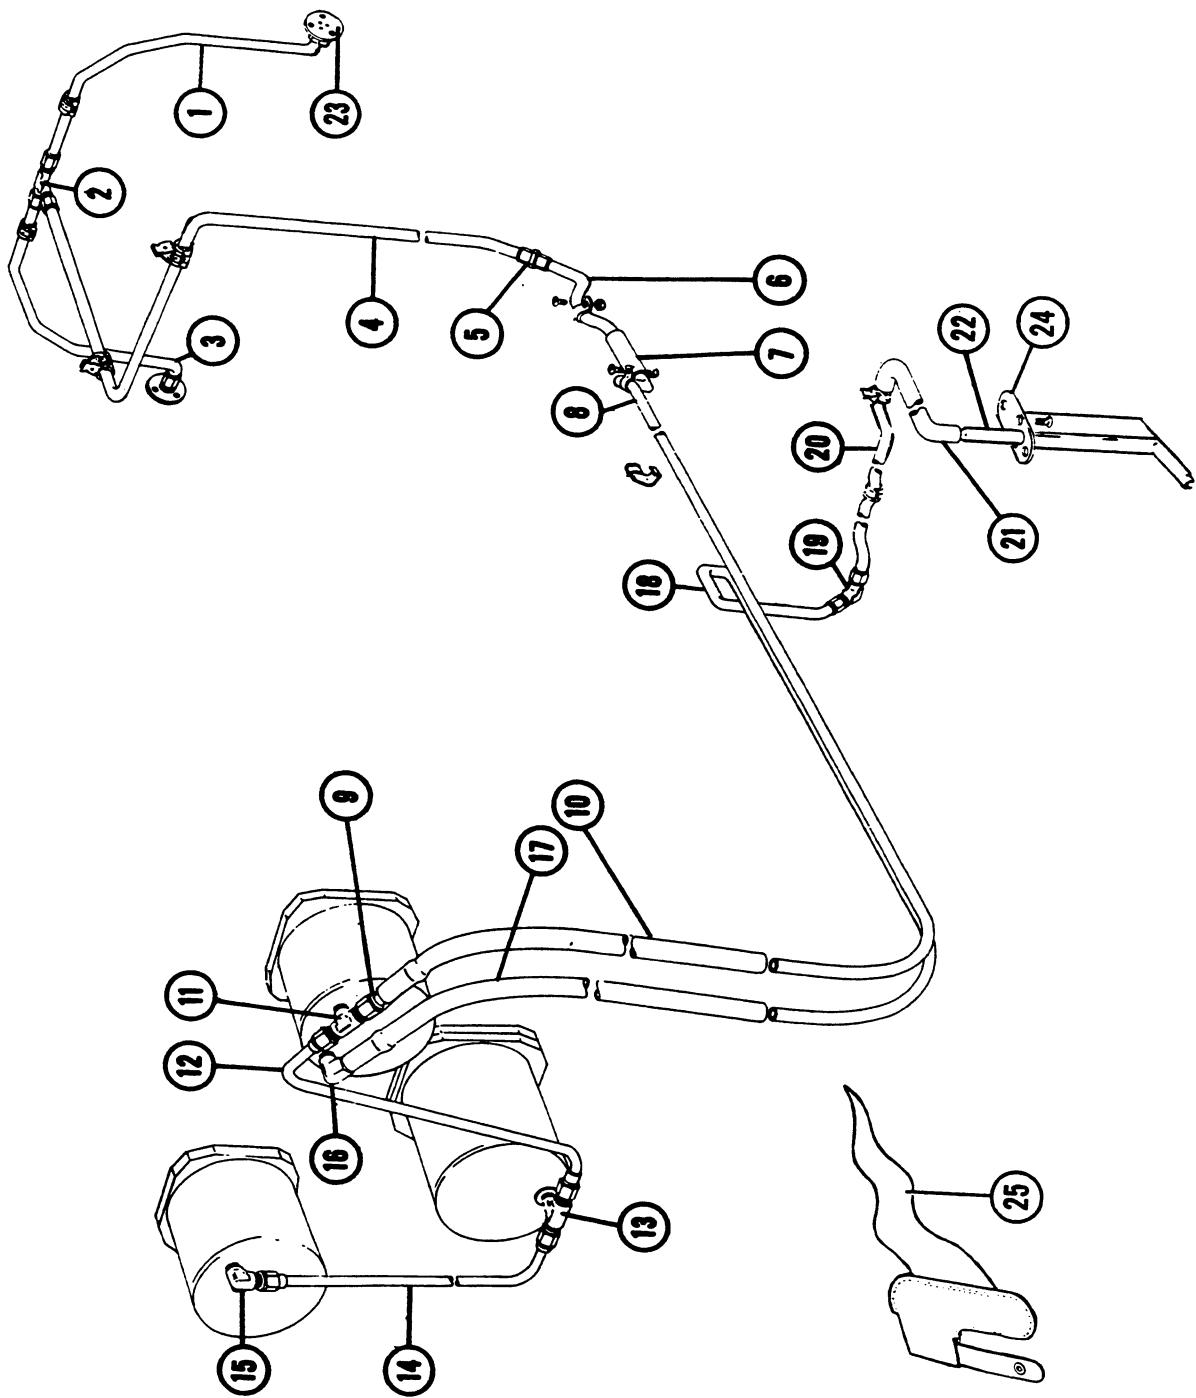


Figure 119. Static Pressure and Pitot Plumbing (D2681 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
119	35-324323		LINE INSTL,PITOT & INSTRUMENT	1	CDEFG
- 1	35-324092	.	TUBE ASSY,FUSELAGE FITTING STATIC PRESSURE	1	
- 2	AN824-4D	.	TEE,FUSELAGE STATIC PRESSURE LINE	1	
- 3	35-324091	.	TUBE ASSY,FUSELAGE FITTING STATIC PRESSURE	1	
- 4	35-324093	.	TUBE ASSY,STATIC PRESSURE TEE TO UNION	1	
- 5	AN815-4D	.	UNION,FUSELAGE STATIC PRESSURE LINE	1	
- 6	35-324098	.	TUBE ASSY,UNION TO STATIC PRESSURE DRAIN	1	
- 7	35-324323-7	.	HOSE,FUSELAGE STATIC PRESSURE	1	
- 8	35-324100	.	TUBE,STATIC PRESSURE DRAIN TO RUBBER TUBING	1	
- 9	35-324099	.	TUBE ASSY,AIRSPED STATIC PRESSURE	1	CDE
- 10	35-324323-1	.	HOSE ASSY,AIRSPED STATIC PRESSURE	1	
- 11	AN826-4D	.	TEE,STATIC PRESSURE	1	
- 12	35-324178	.	TUBE ASSY,ALTIMETER TO AIRSPED STATIC PRESSURE	1	CD8
	35-324350	.	TUBE ASSY,ALTIMETER TO AIRSPED STATIC PRESSURE	1	D9EFG
- 13	AN826-4D	.	TEE,ALTIMETER STATIC PRESSURE	1	
- 14	35-324180	.	TUBE ASSY,ALTIMETER TO VERTICAL SPEED STATIC PRESSURE	1	CD8
	35-324349	.	TUBE ASSY,ALTIMETER TO VERTICAL SPEED STATIC PRESSURE	1	D9EFG
- 15	AN822-4D	.	ELBOW,VERTICAL SPEED STATIC PRESSURE	1	
- 16	AN840-4D	.	ADAPTER,PITOT LINE	1	CDE
	AN823-4D	.	ELBOW,PITOT LINE	1	FG
- 17	35-324323-1	.	HOSE ASSY,AIRSPED TO PITOT LINE	1	FG
- 18	35-324096	.	TUBE ASSY,PITOT PRESSURE	1	CDE
	35-324323-9	.	TUBE ASSY,PITOT PRESSURE	1	FG
- 19	AN833-4D	.	ELBOW,PITOT PRESSURE LINE	1	CDE
	AN821-4D	.	ELBOW,PITOT PRESSURE LINE	1	FG
- 20	35-324097	.	TUBE ASSY,PITOT PRESSURE	1	CDE
	35-324323-11	.	TUBE ASSY,PITOT PRESSURE	1	FG
- 21	35-324323-5	.	HOSE ASSY,PITOT PRESSURE	1	CDE
	35-324323-17	.	HOSE ASSY,PITOT PRESSURE	1	FG
- 22	35-321117	.	TUBE ASSY,PITOT	1	
- 23	35-400212	.	FITTING,FUSELAGE STATIC PRESSURE	2	
- 24	35-361108-8	.	BASE	1	
- 25	45-590060	.	COVER ASSY,PITOT TUBE /USED WITH UNHEATED TUBE/	1	

MODEL 35 THRU G35 PARTS CATALOG

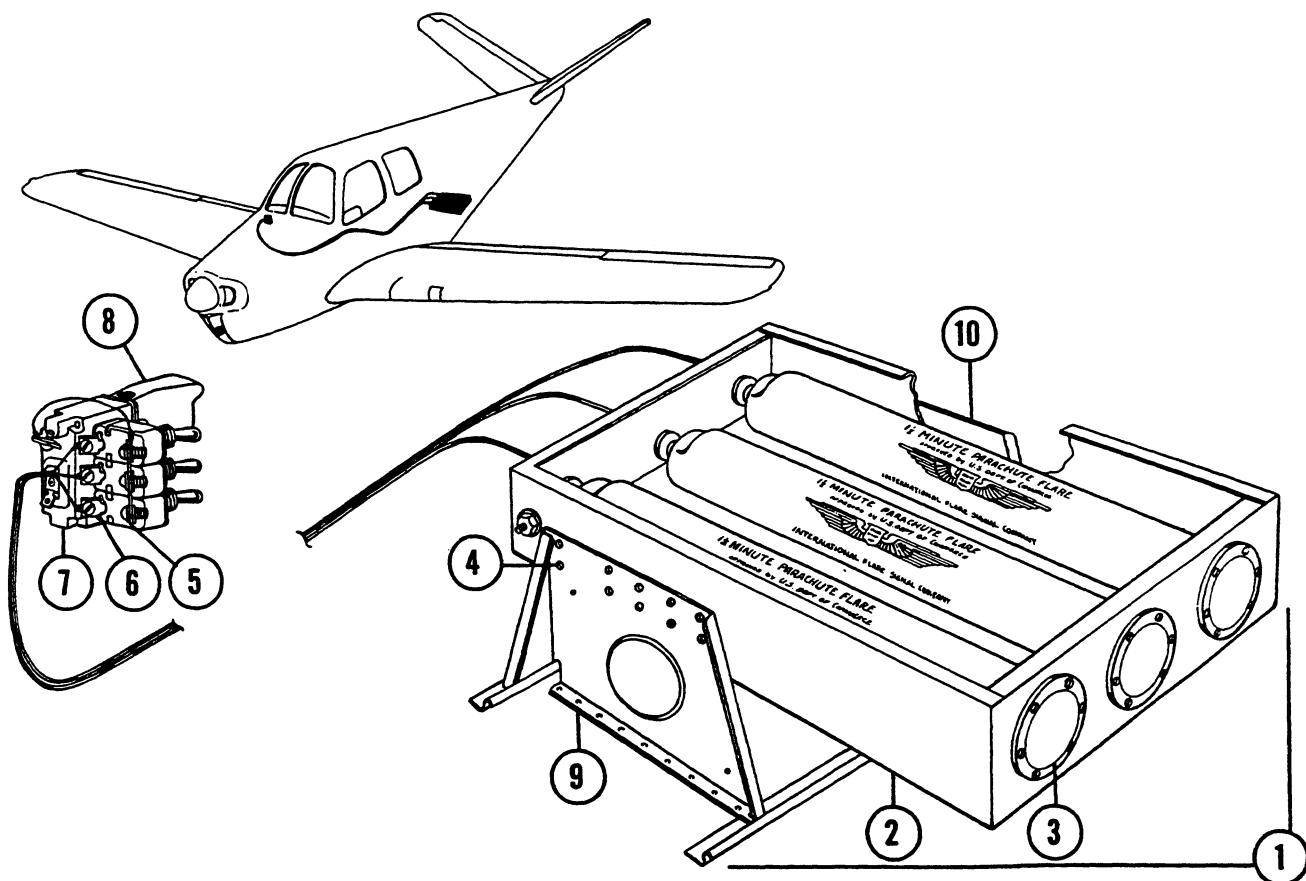


Figure 120. Flare Assembly

FIG. & INDEX NO.	PART NO.		DESCRIPTION						UNITS PER ASSY	USABLE ON CODE	
			1	2	3	4	5	6	7		
120	35-502	KIT,COMPLETE FLARE INSTL.	1	
-	1 35-264001-600	FLARE ASSY.	1	
-	2 1-1/2-PF-11	• BRACKET ASSY,THREE UNIT	1	
-	3 1-1/2-PF-1	• FLARE,SIGNAL.	3	
-	4 AN515-4-6	• SCREW,BRACKET ATTACHING	18	
	AN365-440	• NUT,BRACKET ATTACHING	18	
-	5 35-364027	• BAR,BUS	1	
-	6 8801K-7	• SWITCH,FLARE SELECTOR	3	
-	7 8750K-11	• BREAKER,CIRCUIT	1	
-	8 AN3028-3	• GUARD,SWITCH	1	
	35-364034-2	• PLACARD,FLARE	1	AB
	35-364034-4	• PLACARD,FLARE	1	CDEFG
	AN5156R8	• SCREW,ATTACHING	2	
	AN960-6	• WASHER	2	
-	9 35-410104	BRACKET,FWD FLARE SUPPORT	1	
-	10 35-410103	BRACKET,AFT FLARE SUPPORT	1	

MODEL 35 THRU G35 PARTS CATALOG

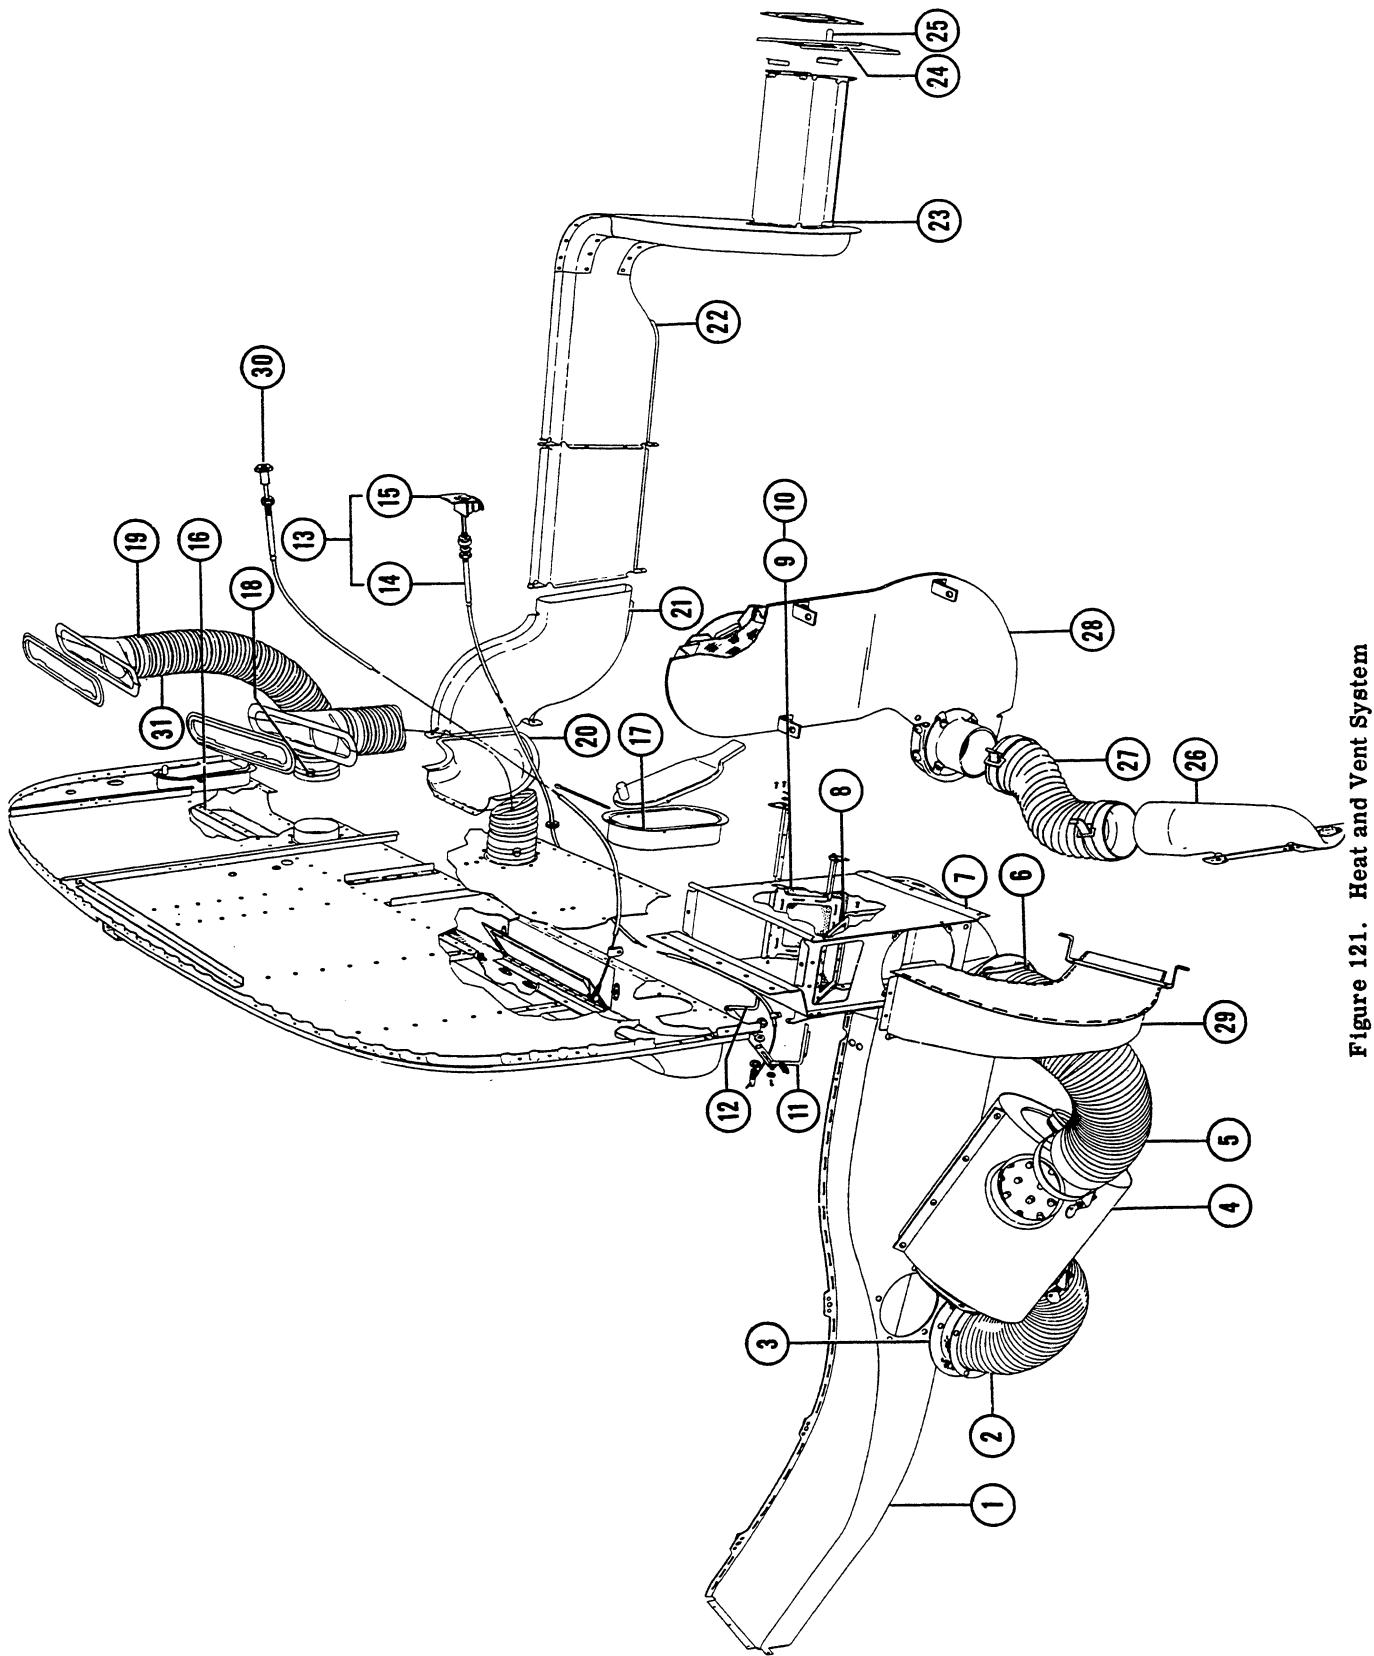


Figure 121. Heat and Vent System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
121 - 1	35-550502-601		DUCT ASSY,COLD AIR INLET.	.	1
- 2	111716XZ6-12		DUCT,INLET HEATER	.	1
- 3	35-550503-2		RING,HEATER DUCT RETAINING.	.	1
	35-550558		EXHAUST,HEATER.	.	1
- 4	186		HEATER ASSY	.	1
	186C		HEATER ASSY	.	1
- 5	111716XZ6-23		DUCT,HEATER OUTLET.	.	1
- 6	35-550503-4		RING,DUCT RETAINING	.	1
- 7	35-550026		VALVE ASSY,HEAT CONTROL	.	1
- 8	35-550026-18	.	• DAMPER ASSY,CONTROL VALVE	.	1
	35-550026-20	.	• • DAMPER,CONTROL VALVE	.	1
	35-550026-24	.	• • SEAL,CONTROL DAMPER	.	1
	35-550026-30	.	• • KEY,CONTROL DAMPER.	.	1
- 9	35-550026-26	.	• DAMPER ASSY,FIRE CONTROL	.	1
- 10	35-550026-28	.	• • DAMPER,FIRE CONTROL	.	1
	35-550026-32	.	• • SEAL,CONTROL DAMPER	.	1
	35-550026-30	.	• • KEY,CONTROL DAMPER.	.	1
	35-550026-14	.	• ARM,CRANK CONNECTING.	.	1
- 11	35-550034	.	• ARM,DAMPER CONTROL CRANK	.	1
- 12	35-550035	.	• ARM,FIRE CONTROL DAMPER CRANK	.	1
	100942-031-008-		SPRING,DAMPER RETURN.	.	1
	022-22				
- 13	35-944007-2		CONTROL ASSY,VALVE	.	1
- 14	35-944020-2	.	• CONTROL ASSY,/LESS HANDLE/	.	1
- 15	35-944009	.	• HANDLE ASSY,CONTROL	.	1
	102933S4-0312-		SPACER,CONTROL ATTACHING	.	1
	0095				
	35-550520		PIN,CONTROL ATTACHING	.	1
- 16	35-415330-28		DUCT,FIREWALL TRANSFER	.	1
- 17	35-550022-600		VALVE,OUTLET	.	1
	35-550023	.	• DOOR,OUTLET VALVE	.	1
	35-550024	.	• FRAME,OUTLET VALVE	.	1
- 18	35-415333		COLLAR,DEFROSTER DUCT ATTACHING	.	1
- 19	35-550501-2		DUCT,DEFROSTER.	.	1
	35-405312		FLANGE,DEFROSTER OUTLET	.	1
	35-405312-1		FLANGE,DEFROSTER OUTLET	.	1
	35-405317		ADAPTER,DEFROSTER OUTLET	.	1
	35-405317-1		ADAPTER,DEFROSTER OUTLET	.	1
- 20	35-415330-38		DUCT,FIREWALL TRANSFER AIR	.	1
- 21	35-550518-28		DUCT,FWD CABIN AIR	.	1
- 22	35-550518-30		DUCT ASSY,CABIN AIR	.	1
	35-550040-620		DUCT ASSY,CABIN AIR	.	1
- 23	35-550518-32		DUCT ASSY,REAR CABIN AIR	.	1
	35-550040-618		DUCT ASSY,REAR CABIN AIR	.	1
	35-550518-22		COVER,AIR DUCT OUTLET	.	1
- 24	35-550518-26		COVER,AIR DUCT OUTLET SLIDE	.	1
- 25	35-550514		HANDLE,OUTLET SLIDE VALVE	.	1
	104036-1-008-		SEAL,SLIDE VALVE FELT	.	1
	0110				
	35-410152		CAP,CABIN VENT	.	1
	35-410153		DUCT,CABIN EXHAUST VENT	.	1
	18-3946		SCREEN,EXHAUST VENT	.	1
	35-410154		VALVE,EXHAUST VENT	.	1
	35-410156	.	• SHUTTER,EXHAUST VENT	.	1
	35-410155	.	• PLATE,EXHAUST VALVE	.	1
	PK78XZ-8-10		SCREW,VALVE ATTACHING CHROMEPLATED	.	4
- 26	35-115260		DUCT ASSY,COLD AIR WING	.	1
- 27	111728E6-16		DUCT,FLEXIBLE WING	.	1
- 28	35-550526		DUCT ASSY,COLD AIR FUSELAGE	.	1
- 29	35-550525		DUCT,HEATER EXHAUST	.	1
- 30	35-550523		CONTROL,HEAT & VENT CUTOFF	.	1
	112149-2		GROMMET,FIREWALL	.	1
	112136-2		GROMMET,FIREWALL	.	1
	49338		FASTENER	.	1
- 31	111728-6E6-50		DUCT	.	1

MODEL 33 THRU G35 PARTS CATALOG

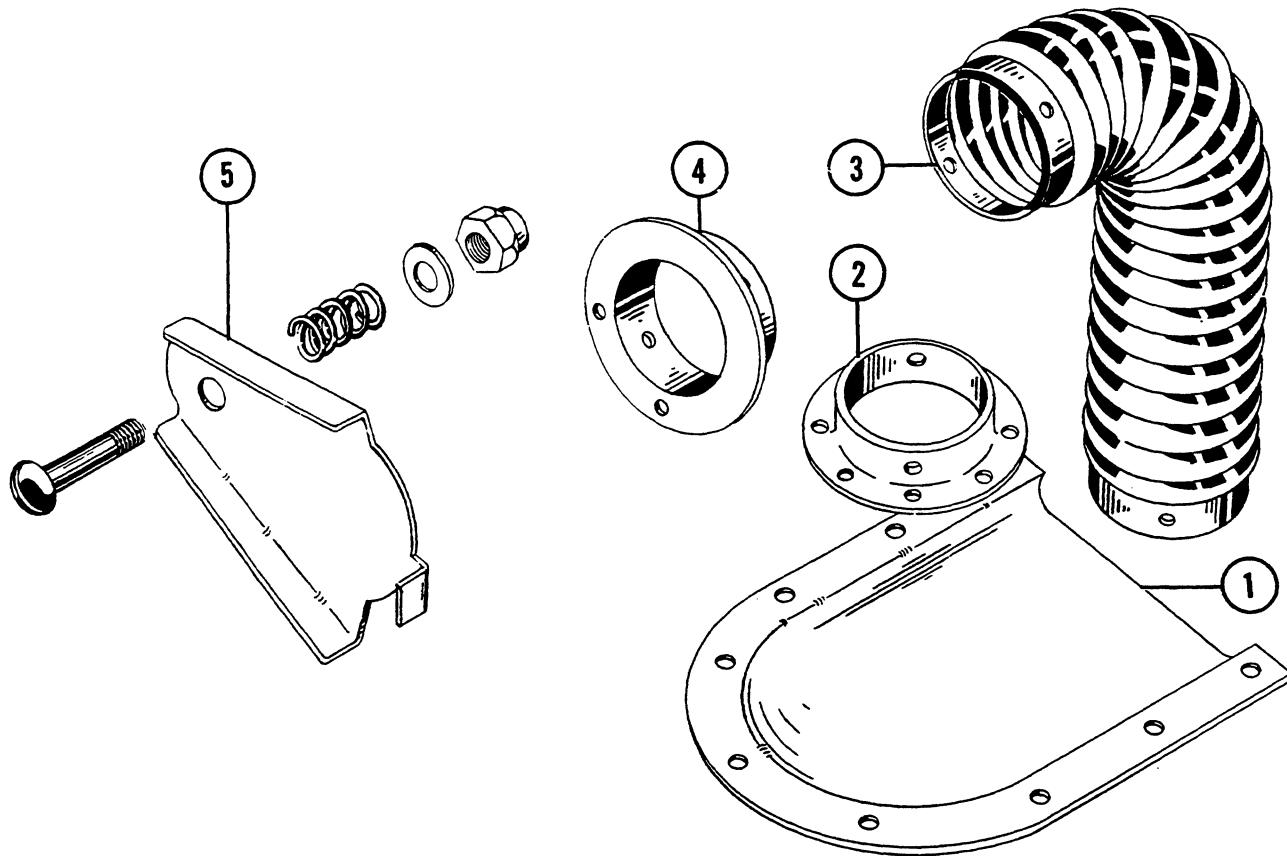


Figure 122. Vent System

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
122 -	1 35-410152	VENT.	1	CDEFG
-	2 35-415333	COLLAR.	1	CDEFG
-	3 35-550541-2	DUCT.	1	CDEFG
-	4 35-550554	COLLAR.	1	CDEFG
-	5 35-534067-5	DOOR.	1	CDEFG

MODEL 35 THRU G35 PARTS CATALOG

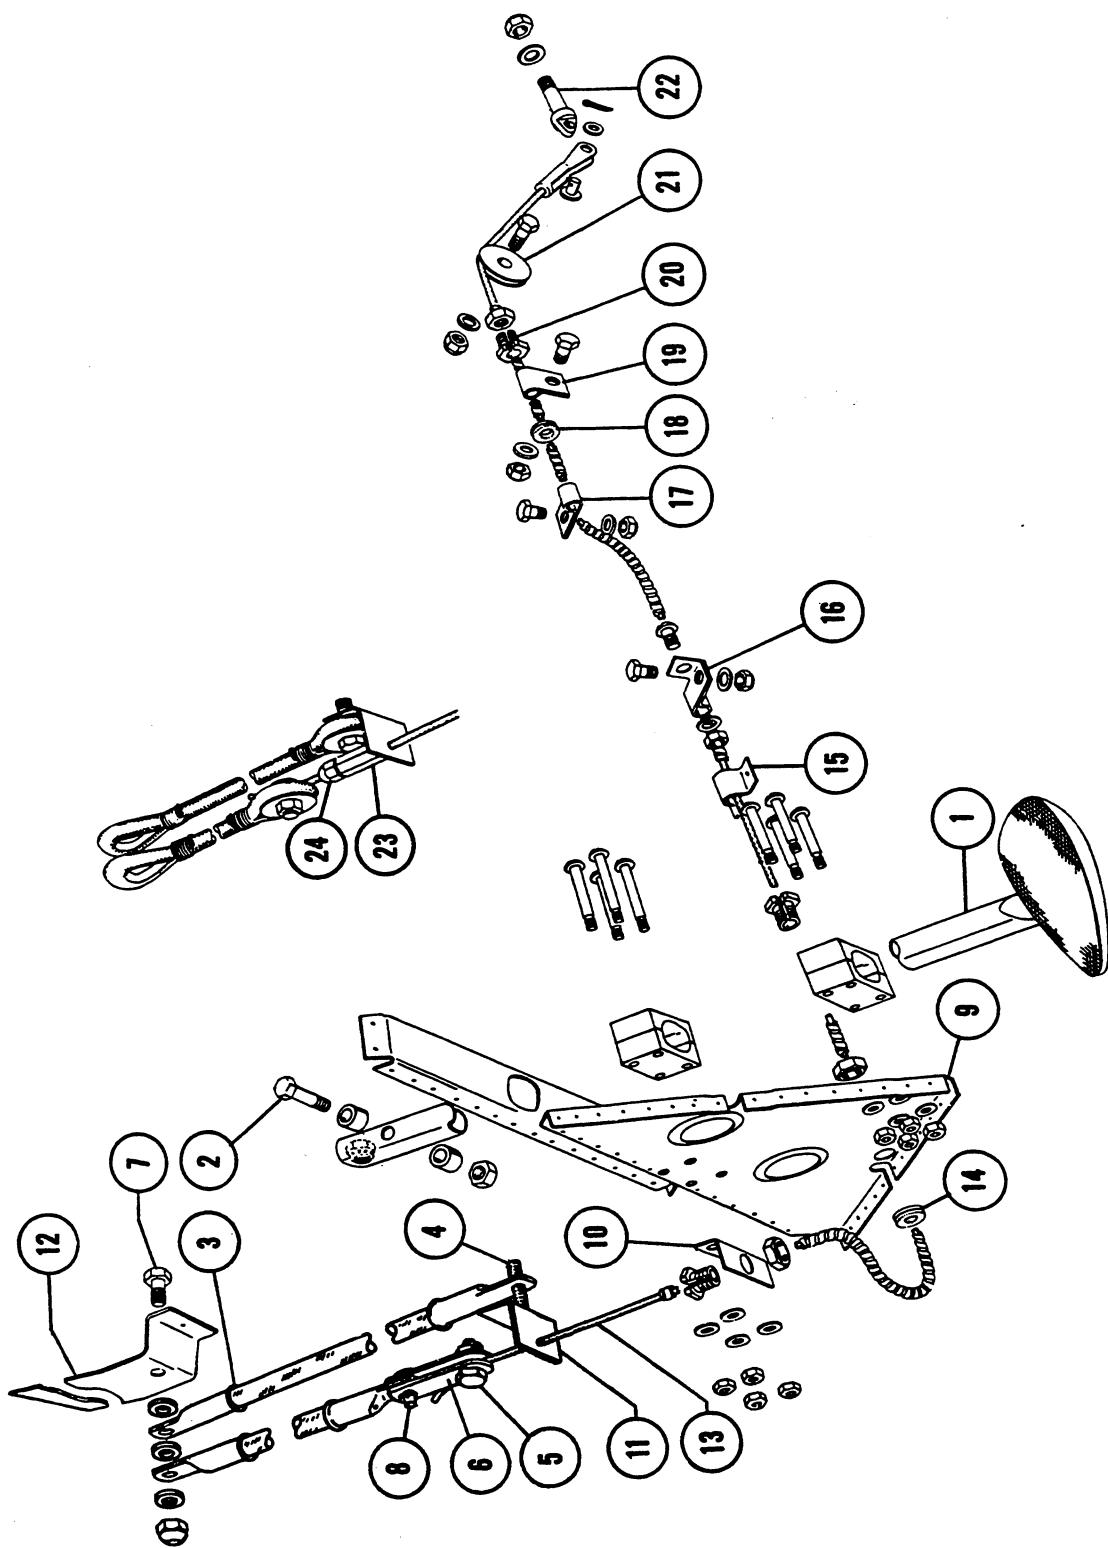


Figure 123. Assist Step Retract Assembly

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
123 - 1	35-410241-12		STEP ASSY,ASSIST.	1	
- 2	AN3-27A		BOLT.	1	
	AN365-1032		NUT	1	
	102933D4-0500-		BUSHING	2	
- 3	35-410243		CORD,ASSIST STEP RETRACT.	2	
- 4	AN3-5A		BOLT.	1	B12CDEFG
	AN960-10		WASHER.	1	B12CDEFG
	AN365-1032		NUT	1	B12CDEFG
	AN23-14A		BOLT.	1	AB11
	AN365-1032		NUT	1	AB11
	AN960-10		WASHER.	1	AB11
	108492A10-102		WASHER.	1	AB11
	100696D09-07-		SPACER.	1	AB11
	012										
- 5	35-410248		BOLT.	1	
	AN960-416		WASHER.	1	B12CDEFG
	AN960-416		WASHER.	3	AB11
	AN365-428		NUT	1	
	100696D16-09-		BUSHING	1	AB11
	012										
	100951DD032-		WASHER.	2	AB11
	008-102										
- 6	35-410247		STRAP	2	B12CDEFG
- 7	AN3-5A		BOLT.	1	B12CDEFG
	AN3-11A		BOLT.	1	AB11
	AN960-10		WASHER.	1	B12CDEFG
	AN960-102		WASHER.	2	
	100696D10-07-		SPACER.	1	AB11
	020										
	100951DD032-		WASHER.	1	AB11
	006-102										
	AN365-1032		NUT	1	
- 8	AN393-7		PIN	1	
	AN380-2-2		PIN	1	B12CDEFG
- 9	35-410160-38		SUPPORT,ASSIST STEP	1	
	35-410242		BLOCK ASSY,SUPPORT.	2	
- 10	35-410245		ANGLE,CABLE TO CORD ATTACHING	1	
- 11	35-410271		ANGLE,CABLE TO CORD ATTACHING	1	
- 12	35-410160-42		BRACKET,RETRACT CORD ATTACHING	1	
- 13	35-410244		CABLE,ASSIST STEP /INCLUDES CABLE & HOUSING/	1	
	S167-130		HOUSING,CABLE	1	
- 14	AN931-4-7		GROMMET,ASSIST STEP CABLE /STA 151/	1	
	S123		BUSHING,ASSIST STEP CABLE	1	
- 15	35-410246		CLIP,ASSIST STEP CABLE /STA 140/	1	
- 16	AN755-4		CLAMP,ASSIST STEP CABLE /STA 84-125/	1	
- 17	AN742-4		CLAMP,ASSIST STEP CABLE /STA 63/	1	
- 18	112149-2		GROMMET	1	
	112436-2		RETAINER	1	
	49338		FASTENER	2	
- 19	AN742-4		CLAMP,ASSIST STEP CABLE /STA 41/	1	
- 20	S123		BUSHING,ASSIST STEP CABLE	1	
- 21	AN210-1A		PULLEY,ASSIST STEP CABLE	1	
	35-410251		BRACKET,PULLEY	1	
- 22	AN42-6A		BOLT,NOSE WHEEL CABLE CLAMP	1	
	AN393-7		PIN,NOSE WHEEL CABLE	1	
	AN960-10L		WASHER,NOSE WHEEL CABLE	1	
	AN380-1-2		PIN,NOSE WHEEL CABLE	2	C4DEFG
	35-410273		LINK,STEP TO NOSE WHEEL CABLE SHEAR	2	
	35-410434		CABLE,STEP RETRACT	1	
- 23	35-524287		NUT	1	A3C28A29
- 24	35-524288		SCREW	1	A3C28A29
	100696S08-04-		SPACER	1	A56B11
	108										

MODEL 35 THRU G35 PARTS CATALOG

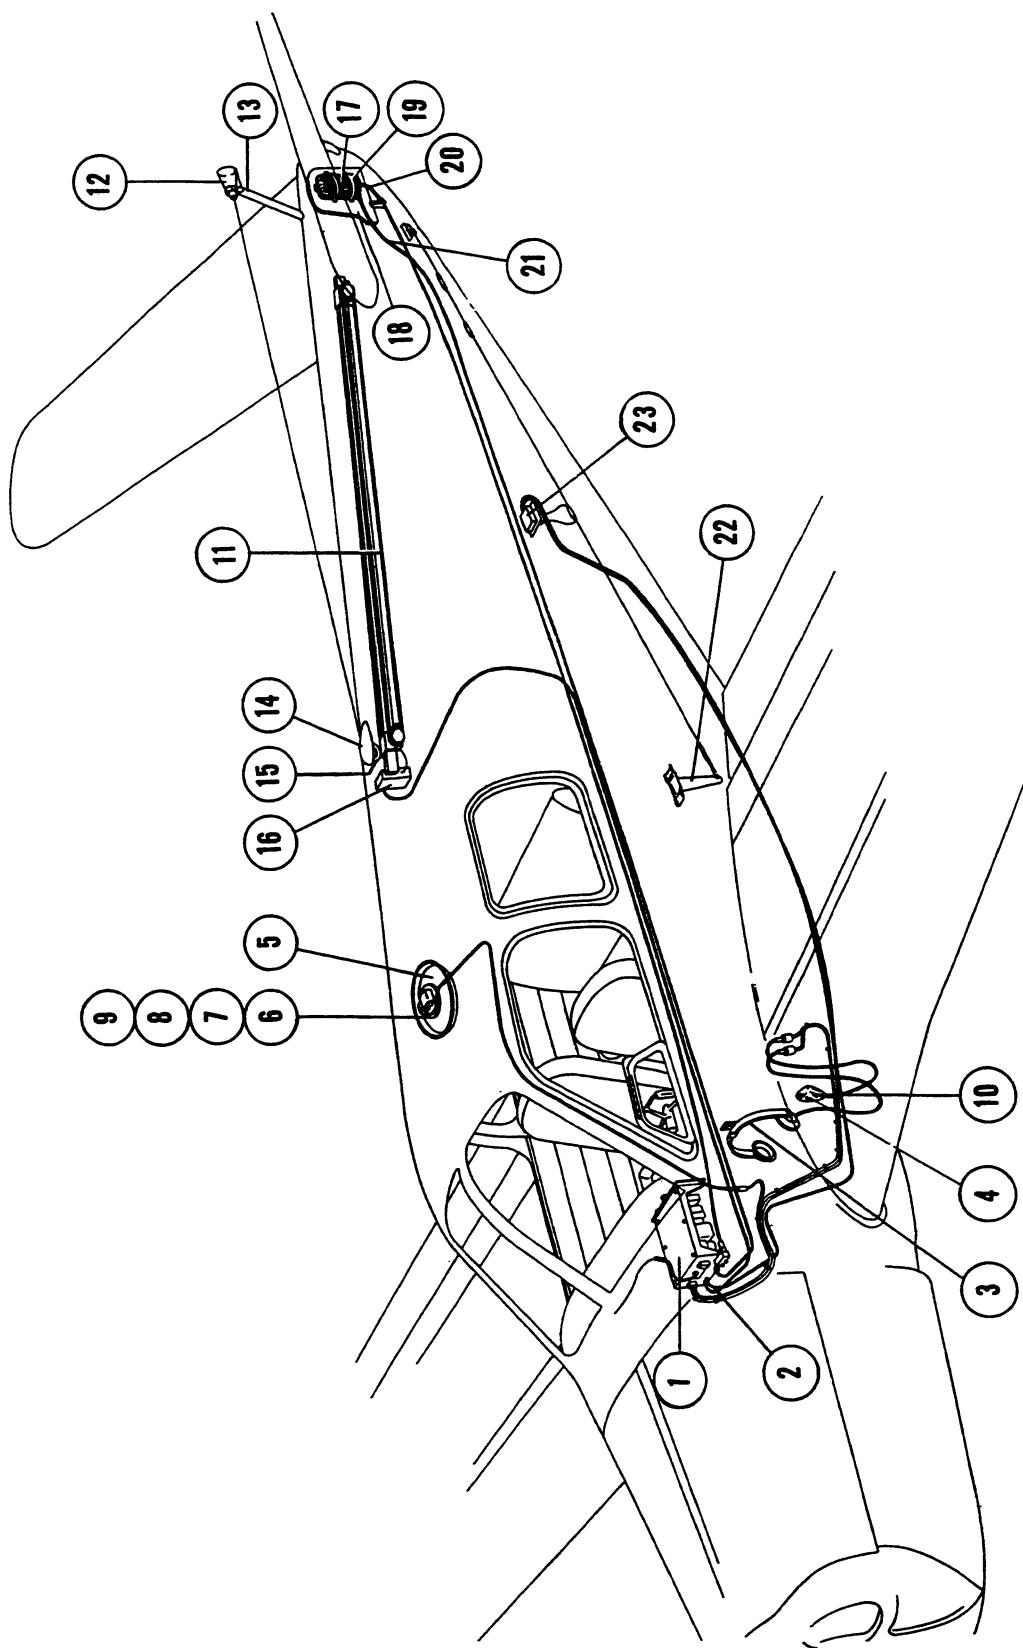


Figure 124. Radio and Antenna System

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
124 - 1	1X54980		RECEIVER,RADIO TRANSMITTER.	.	A1A11
- 2	1X54746		CABLE ASSY,PHONE & SPEAKER.	.	A1A11
- 3	3775-BB-BTA		HEADPHONE	.	A1A11
- 4	95-344441		MICROPHONE,ELECTRO-VOICE.	.	A1A11
- 5	70E171X42A-1		SPEAKER ASSY.	.	A57
	S10340		SPEAKER,6 INCH.	.	A59
	35-344028		ADAPTER,SPEAKER /USE WITH S10340/	.	A57
- 6	35-344035		BRACKET ASSY,SPEAKER.	.	2 A1A11
- 7	35-344036		ADAPTER ASSY,SPEAKER.	.	A1A11
- 8	35-344026		ESCUTCHEON,SPEAKER.	.	A1A11
- 9	35-344027		GRILL,SPEAKER	.	A1A11
- 10	35-344018		SUPPORT,MICROPHONE.	.	A1A11
- 11	1X54794		ANTENNA ASSY,TRAILING	.	A58
	30K482199		/FOR D1961 THRU D2148 ANT REFER TO FIG.	/	
			. WIRE,7 STRANDS OF .035 ANTENNA.	.	A1A11
- 12	35-344043		CONE ASSY,ANTENNA	.	A1A11
	35-344064		INSULATOR-TRAILING ANTENNA.	.	A1A11
- 13	35-344008		MAST ASSY,ANTENNA	.	A1A11
	AN931-10-14		GROMMET,ANTENNA MAST.	.	A1A11
	35-344005		SUPPORT,REAR ANTENNA.	.	A1A11
	35-344005-1		SUPPORT,REAR ANTENNA.	.	A1A11
- 14	35-344039		COVER ASSY,PULLEY	.	A1A11
- 15	35-344023		SUPPORT,PULLEY.	.	A1A11
	35-344004		PULLEY ASSY,/USE WITH NEW ANTENNA/.	.	A1A11
	100696D8-06-007		/PRIOR TO D1501/		
	100696D8-06-010		SPACER,PULLEY	.	A1A11
- 16	51C51996		COIL ASSY,LOAD.	.	A1A11
	1X54910		CABLE ASSY.	.	A1A11
- 17	1X54853		ANTENNA ASSY,LOOP	.	A1A11
- 18	35-344037		. FRAME,LOOP.	.	A1A11
- 19	35-344038		. SHIELD,LOOP	.	A1A11
	1X55280		ANCHOR ASSY,SHAFT	.	A1A11
	AN960A716		. WASHER,ANCHOR	.	A1A11
- 20	47K54671		SHAFT,LOOP FLEXIBLE	.	A1A11
- 21	1X54915		COAXIAL,LOOP.	.	A1A11
	AN931-9-13		GROMMET,CABLE	.	2 A1A11
	AN931-4-7		GROMMET,CABLE	.	A1A11
- 22	35-344012		MAST ASSY,FWD	.	A1A11
	35-344010-606		WIRE ASSY,ANTENNA	.	A1A11
	35-344010-2		WIRE,ATTACHING.	.	2 A1A11
	AN100C3		THIMBLE,WIRE ATTACHING.	.	2 A1A11
- 23	1X54566		RECEIVER,MARKER	.	A1A11
	AN931-7-11		GROMMET,ANTENNA CABLE	.	2 A1A11
	1X54940		ANTENNA ASSY,MARKER	.	2 A1A11
	1X54930		CABLE,MARKER ANTENNA.	.	2 A1A11
	AN931-7-11-16		GROMMET,ANTENNA CABLE	.	2 A1A11

MODEL 35 THRU G35 PARTS CATALOG

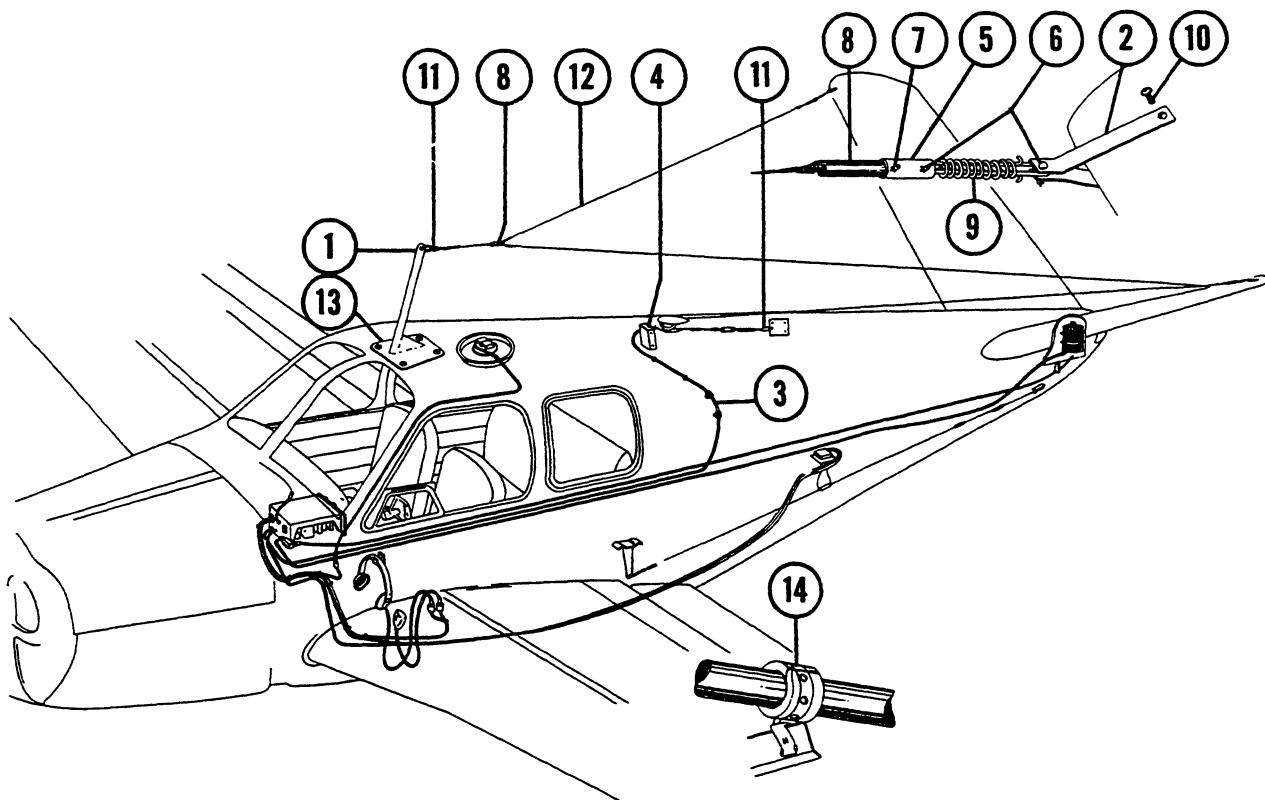


Figure 125. Fixed Antenna

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
125 - 1	35-344077	MAST ASSY		1	A53
- 2	35-344078	STRAP		4	A53
- 3	1X54910	CABLE ASSY.		1	A53
- 4	51C51996	COIL ASSY, LOAD.		1	A53
	AN530-8-6	SCREW		3	A53
- 5	37A4821	SHACKLE		2	A53
- 6	AN392-7	PIN		4	A53
	AN380-2-1	PIN		4	A53
- 7	AN392-2-1	PIN		2	A53
	AN380-2-1	PIN		2	A53
- 8	IN-88	INSULATOR		2	A53
- 9	S147	SPRING.		2	A53
- 10	AN515-8-8	SCREW		4	A53
- 11	AN100C3	THIMBLE		2	A53
- 12	35-344075-2	WIRE, ANTENNA.		1	A53
- 13	AN507-632R6	SCREW		4	A53
	AN365-632	NUT		4	A53
- 14	49245	BAND, HARNESS.		4	A53
	49296	CLIP.		4	A53

MODEL 35 THRU G35 PARTS CATALOG

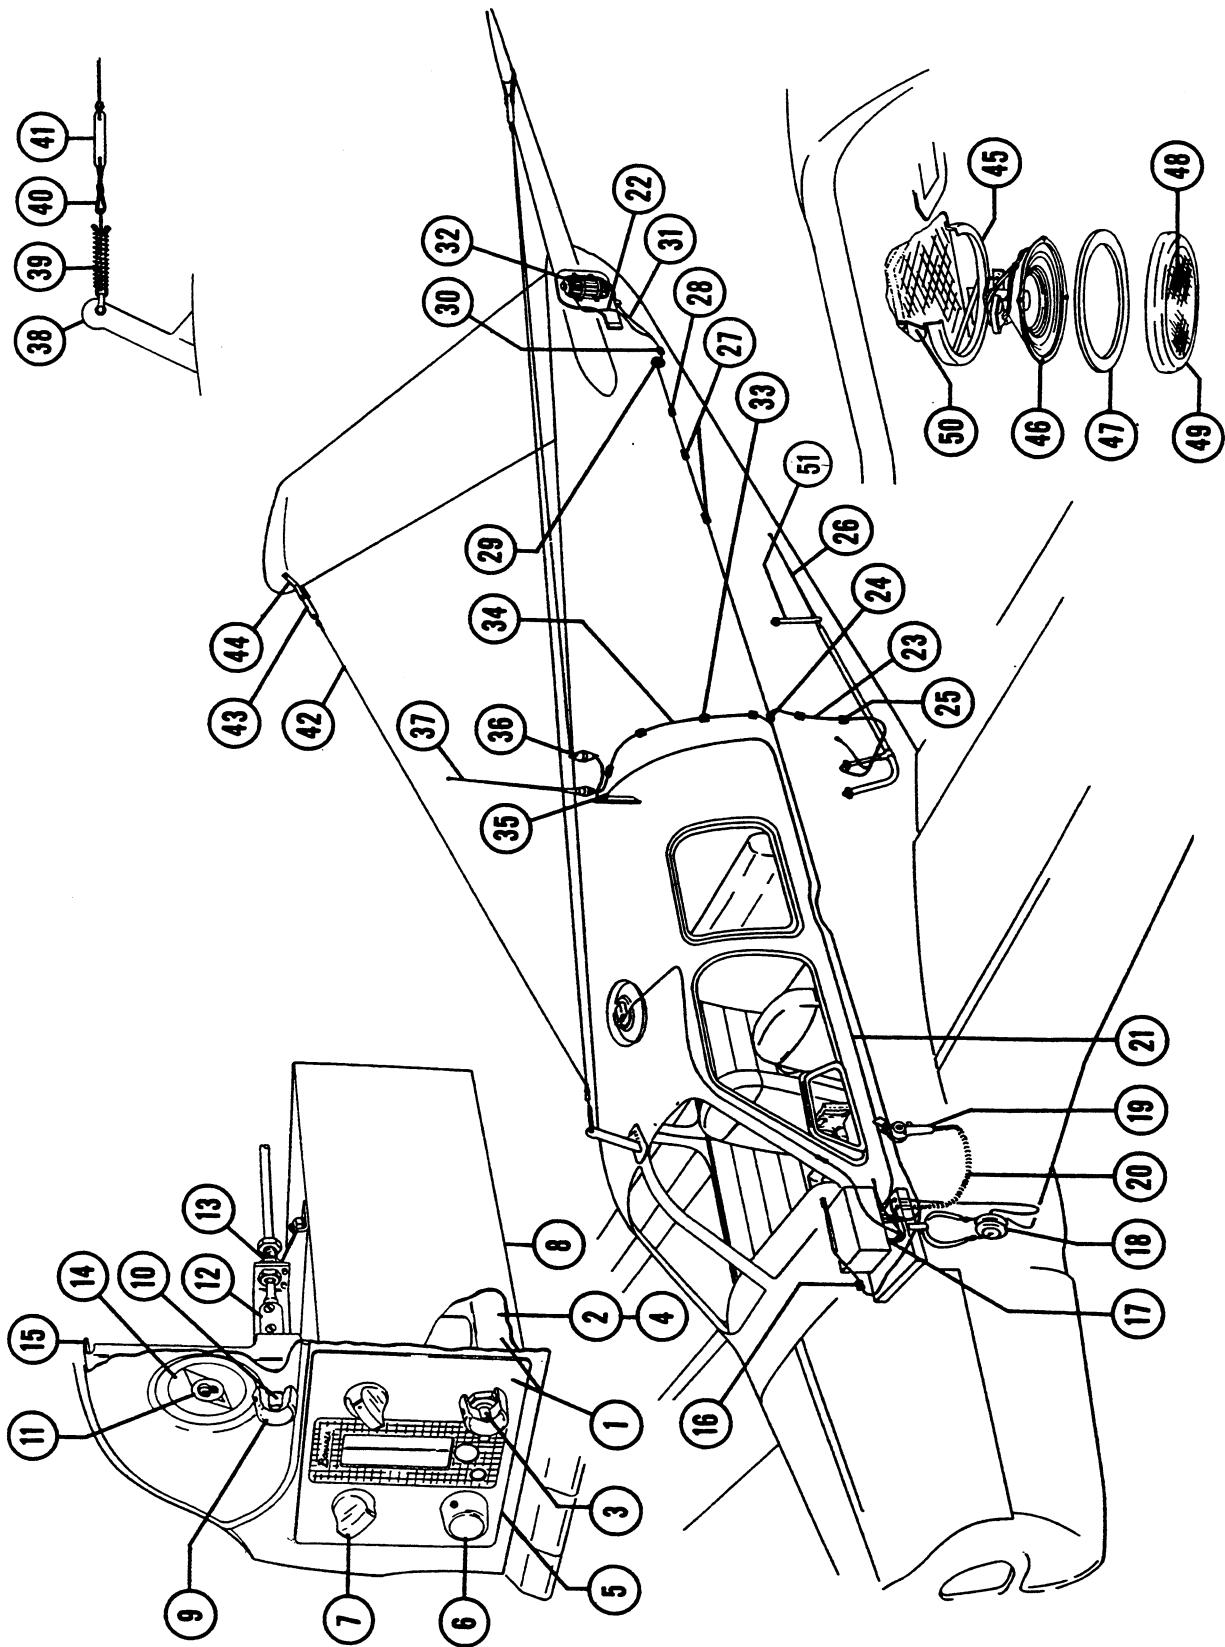


Figure 126. Radio and Antenna System (D2119 thru D2126 and D2149 thru D2484)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
126 - 1	35-344131	RADIO ASSY.		1	A31BCDEFG
- 2	MI-19655-AX	• RADIO		1	A31BCDEFG
- 3	35-344131-2	• SHAFT		1	A31BCDEFG
- 4	35-344131-4	• CHASSIS		1	A31BCDEFG
- 5	35-344136	• PANEL		1	A31BCDEFG
- 6	35-344120-8	• KNOB		2	A31BCDEFG
- 7	35-344119	• KNOB		2	A31BCDEFG
- 8	35-344100-18	HOUSING		1	A31BCDEFG
- 9	35-344120-10	KNOB ASSY		1	A31BCDEFG
- 10	35-344105	PINION		1	A31BCDEFG
- 11	35-344102	GEAR ASSY		1	A31BCDEFG
- 12	15	COUPLER		1	A31BCDEFG
- 13	ALB-5055	NUT,LOCK		1	A31BCDEFG
- 14	35-344104	PLACARD		1	A31BCDEFG
	AN526-632-6	SCREW		4	A31BCDEFG
	AN960-6	WASHER		4	A31BCDEFG
	AN365-632	NUT		4	A31BCDEFG
- 15	35-344101	BRACKET ASSY		1	A31BCDEFG
- 16	29244	BAND		1	A31BCDEFG
	49296	CLIP		1	A31BCDEFG
- 17	35-344111	HARNESS ASSY,MAIN RADIO		1	A31BCDEFG
- 18	35-344190-4	HEADPHONE		1	A31BCDEFG
- 19	95-344441	MICROPHONE		1	A31BCDEFG
- 20	4001-23	• CORD,RETRACTABLE		1	A31BCDEFG
	93	• HOOK		1	A31BCDEFG
- 21	35-344115	CABLE ASSY,RANGE ANTENNA		1	A31BCDEFG
- 22	35-344113	CABLE ASSY,LOOP		1	A31BCDEFG
- 23	35-344112	CLIP ASSY,MARKER BEACON		1	A31BCDEFG
- 24	49246	BAND		1	A31BCDEFG
	49296	CLIP		1	A31BCDEFG
- 25	49244	BAND		2	A31BCDEFG
	49296	CLIP		2	A31BCDEFG
- 26	35-344159-600	ANTENNA,MARKER BEACON		1	A31BCDEFG
- 27	29246	BAND		2	A31BCDEFG
	49296	CLIP		2	A31BCDEFG
- 28	49246	BAND		1	A31BCDEFG
	49196	CLIP		1	A31BCDEFG
- 29	AN931-9-13	GROMMET		1	A31BCDEFG
- 30	49160	BAND		1	A31BCDEFG
- 31	35-344114	CABLE ASSY,LOOP DRIVE		1	A31BCDEFG
- 32	35-344109	LOOP ASSY		1	A31BCDEFG
- 33	49245	BAND		4	A31BCDEFG
	49296	CLIP		4	A31BCDEFG
- 34	35-344118	CABLE ASSY,TRANSMITTER		1	A31BCDEFG
- 35	8610	CONNECTOR		1	A31BCDEFG
- 36	IN-79	INSULATOR		1	A31BCDEFG
- 37	MI-5908-X	WHIP		1	A31BCDEFG
- 38	35-344127	MAST ASSY		1	A31BCDEFG
	AN115-8	SHACKLE		1	A31BCDEFG
	NAS220-10	SCREW		1	A31BCDEFG
	AN365-832	NUT		1	A31BCDEFG
- 39	S147	SPRING		1	A31BCDEFG
- 40	AN100C3	THIMBLE		1	A31BCDEFG
- 41	IN-88	INSULATOR		1	A31BCDEFG
- 42	35-344100-14	ANTENNA		1	A31BCDEFG
- 43	IN-88	INSULATOR		1	A31BCDEFG
	AN392-19	PIN		1	A31BCDEFG
	AN380-2-1	PIN,COTTER		1	A31BCDEFG
- 44	35-344078	STRAP		2	A31BCDEFG
	AN515-8-8	SCREW		2	A31BCDEFG
- 45	35-344036	ADAPTER		1	A31BCDEFG
- 46	35-344124	SPEAKER ASSY		1	A31BCDEFG
- 47	35-344028	ADAPTER		1	A31BCDEFG
- 48	35-344027	GRILL		1	A31BCDEFG
- 49	35-344026	ESCUTCHEON		1	A31BCDEFG
- 50	35-344035	BRACKET		2	A31BCDEFG
- 51	35-344160-2	SUPPORT		1	A31BCDEFG

MODEL 35 THRU G35 PARTS CATALOG

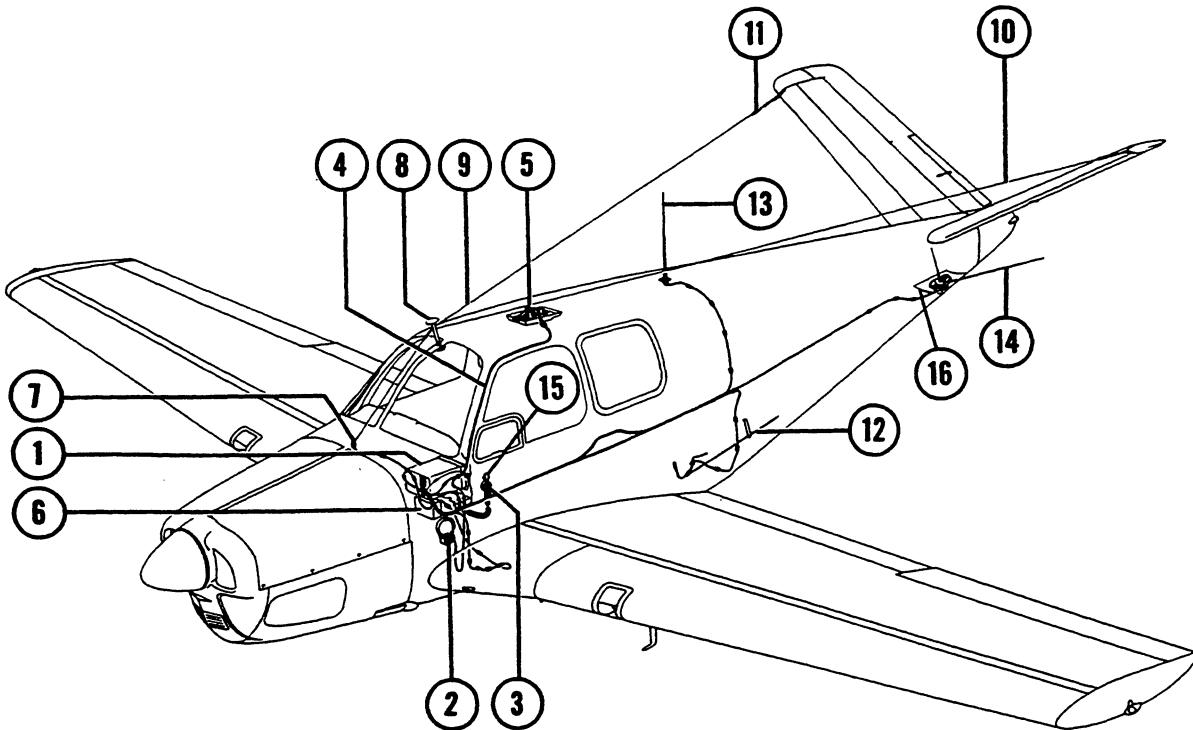


Figure 127. Radio And Antenna System

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
127	35-344150	RADIO INSTL	1	B9C20
	35-344190	RADIO INSTL	1	C21
- 1	LTRA-5	• RADIO	•	•	•	•	•	•	1	B9C20
	LTRA-6	• RADIO	•	•	•	•	•	•	1	C21
	35-344193	• RADIO ASSY.	•	•	•	•	•	•	1	DEFG
	35-344193-1	• • RADIO	•	•	•	•	•	•	1	
	35-344194	• • PLACARD,RADIO TRANSMITTER	•	•	•	•	•	•	1	
	35-344190-20	• RHEOSTAT,RADIO LIGHT DIMMER	•	•	•	•	•	•	1	E10FG
:	35-324087	• KNOB,RADIO LIGHT	•	•	•	•	•	•	1	E10FG
	35-344207	• PLACARD,RADIO LIGHT	•	•	•	•	•	•	1	E10FG
- 2	3775-BB-BTA	• HEADPHONE	•	•	•	•	•	•	1	
	35-344190-4	• HEADPHONE	•	•	•	•	•	•	1	C21
- 3	35-344150-2	• MICROPHONE	•	•	•	•	•	•	1	
	35-344190-2	• MICROPHONE	•	•	•	•	•	•	1	C21
	4001-23	• CORD,/1 FOOT LONG/ /KOIL/	•	•	•	•	•	•	1	
- 4	35-364125	• HARNESS ASSY	•	•	•	•	•	•	1	
- 5	35-344158	• SPEAKER ASSY	•	•	•	•	•	•	1	
	A-3005	• • TRANSFORMER,/MERRIT TRANSFORMER CO./	•	•	•	•	•	•	1	
	A-8101	• • TRANSFORMER,/STANCOR CO./ /ALTERNATE FOR.	•	•	•	•	•	•	1	
		/MERRIT TRANSFORMER CO./ A-3005/								
- 6	S10340	• • SPEAKER,/OPE/	•	•	•	•	•	•	1	
	LD5	• DYNAMOTOR	•	•	•	•	•	•	1	
	35-344178	• COVER,DYNAMOTOR	•	•	•	•	•	•	1	
- 7	IN-79	• INSULATOR	•	•	•	•	•	•	1	
	SL500097	• INSULATOR	•	•	•	•	•	•	1	C21

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
127 - 8	35-344127	• MAST ASSY,RANGE ANTENNA	• • • • • • •	1	B9
	35-344164	• MAST ASSY,RANGE ANTENNA	• • • • • • •	1	CDEFG
	35-344162	• • INSERT ASSY,RANGE ANTENNA MAST	• • • • • • •	1	
	35-344163	• • MAST,RANGE ANTENNA	• • • • • • •	1	
- 9	35-344150-16	• WIRE,ANTENNA	• • • • • • •	1	
	35-344190-16	• WIRE,ANTENNA	• • • • • • •	1	C21DEFG
- 10	35-344150-18	• WIRE,ANTENNA	• • • • • • •	1	
	35-344190-18	• WIRE,ANTENNA	• • • • • • •	1	C21DEFG
- 11	IN-88	• INSULATOR	• • • • • • •	1	
	SL720243	• INSULATOR	• • • • • • •	2	C21DEFG
	AN100C3	• THIMBLE	• • • • • • •	1	
	S147	• SPRING	• • • • • • •	2	
	35-344078	• STRAP,ANTENNA	• • • • • • •	4	
- 12	35-344159-8	• BEACON,ANTENNA MARKER	• • • • • • •	1	
	35-344160-2	• SUPPORT	• • • • • • •	1	
- 13	63851-24R	• ANTENNA,WHIP	• • • • • • •	1	
	63851-22R	• ANTENNA,WHIP	• • • • • • •	1	C21DEFG
	35-344155	• GASKET,WHIP ANTENNA	• • • • • • •	1	
- 14	62950-02	• ANTENNA,OMNI	• • • • • • •	1	
	35-344148	• GRILL ASSY,SPEAKER	• • • • • • •	1	B9CD10
	35-344169	• GRILL,SPEAKER	• • • • • • •	1	B9EFG
	35-344141	• ESCUTCHEON,SPEAKER	• • • • • • •	1	
	35-344152	• FRAME,SPEAKER	• • • • • • •	1	
- 15	95-344441	• HOOK	• • • • • • •	1	
- 16	35-344150	• PLATE	• • • • • • •	1	

MODEL 35 THRU G35 PARTS CATALOG

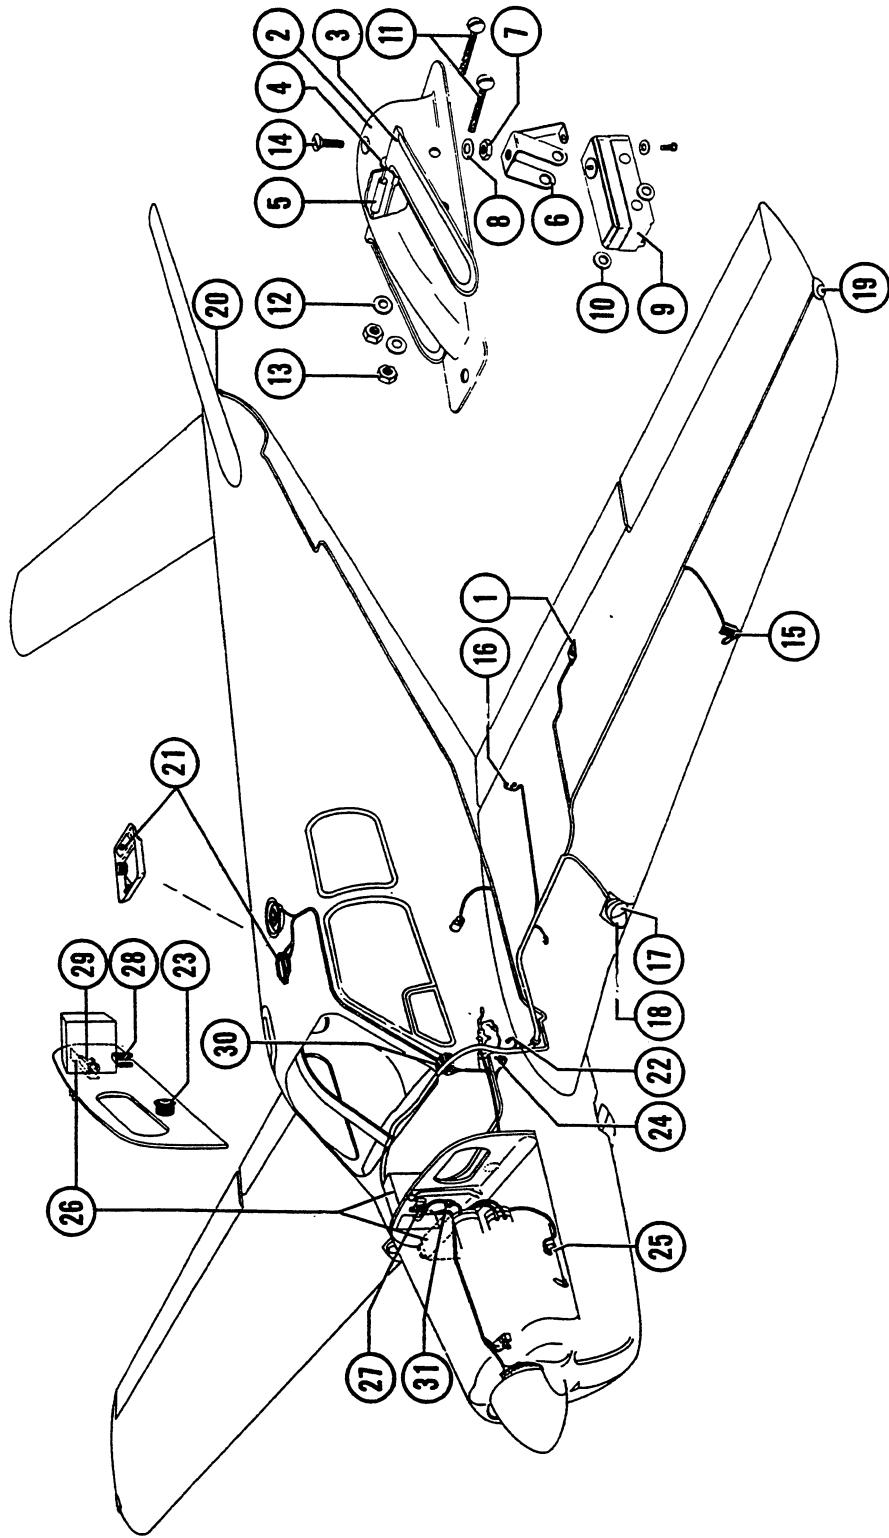


Figure 128. Electrical Installation (Sheet 1 of 2 Sheets)

MODEL 35 THRU G35 PARTS CATALOG

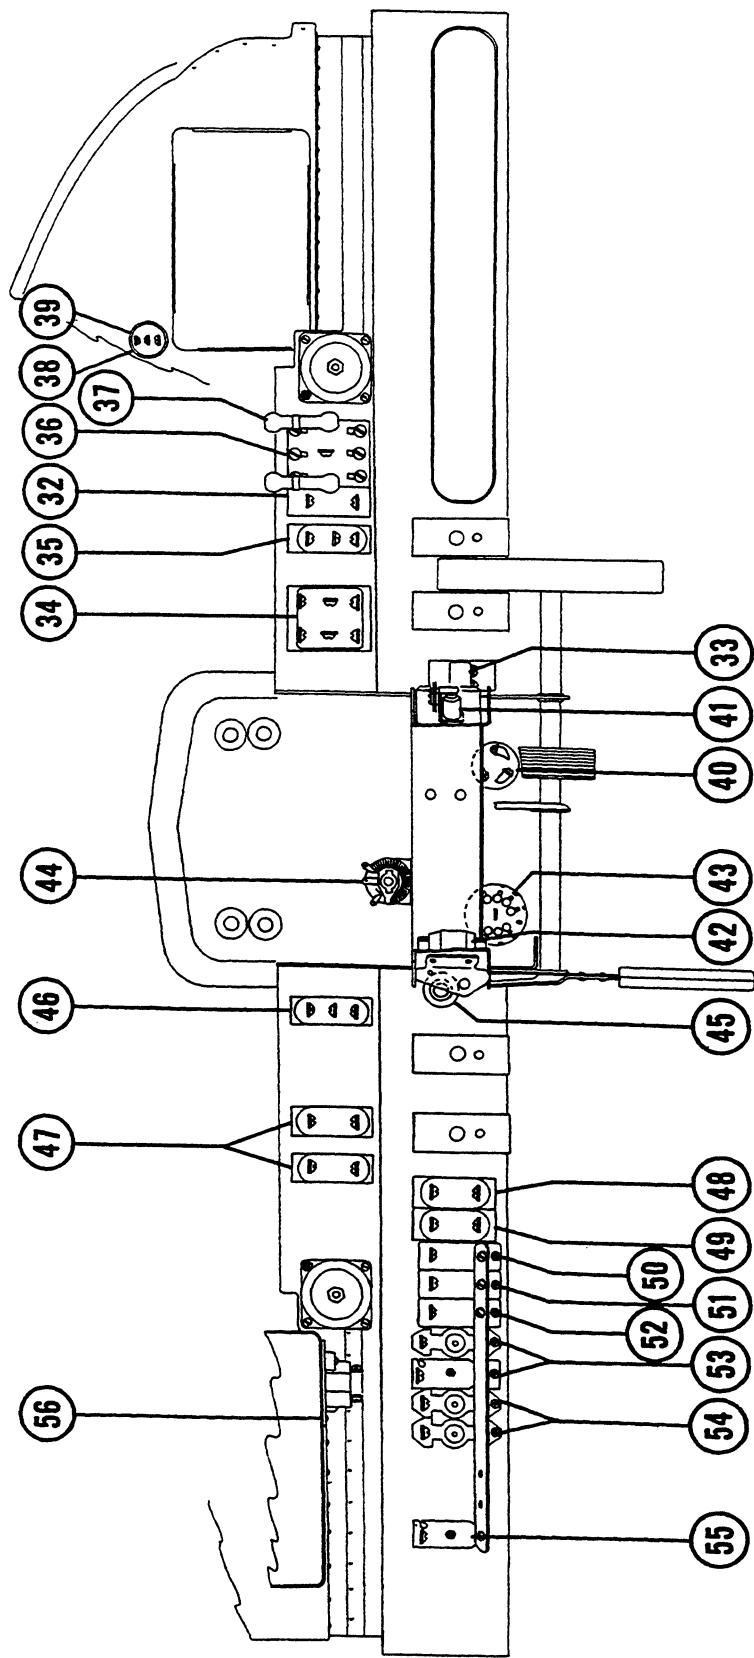


Figure 128. Electrical Installation (Sheet 2 of 2 Sheets)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
128 - 1	35-361006-602		SWITCH ASSY,STALL WARNING	1	AB
- 2	35-361008		• HOUSING	1	AB
- 3	35-361007		• VANE ASSY	2	AB
- 4	35-361014		• BEARING	2	AB
- 5	35-361009		• CAM	1	AB
- 6	35-361011		• YOKE ASSY	1	AB
- 7	AN340-6		• NUT	1	AB
- 8	100951CL032-004-012		• WASHER.	1	AB
- 9	YZ-R35		• SWITCH,MICRO.	1	AB
- 10	AN960A6		• WASHER.	2	AB
- 11	AN526-632R16		• SCREW	2	AB
- 12	AN960A6L		• WASHER.	2	AB
- 13	22TM-62		• NUT	2	AB
- 14	AN507-632-7		• SCREW	1	AB
- 15	151		UNIT,WING DETECTOR /STALL WARNING/.	1	CDEFG
- 16	35-361119-602		SWITCH ASSY,FLAP ACTUATOR LIMIT	2	D1D2
	45-361115-601		SWITCH ASSY,FLAP ACTUATOR LIMIT	2	D11EFG
- 17	4522		LIGHT,SEALED BEAM LANDING	1	
- 18	35-115238		DEFLECTOR,LANDING LIGHT	1	
	35-115238-1		DEFLECTOR,LANDING LIGHT	1	
	35-115136-2		PANE ASSY,LANDING LIGHT	1	
	35-115136-3		PANE ASSY,LANDING LIGHT	1	
- 19	35-361702-2		LIGHT,WING TIP CLEARANCE.	1	
	35-361702-4		LIGHT,WING TIP CLEARANCE.	1	
	FL1-101		UNIT,FLASHER.	2	
- 20	35-364010		LIGHT,TAIL.	1	
- 21	35-364071-602		LIGHT,CABIN DOME.	1	AB
	35-344140		LIGHT,CABIN DOME.	1	CDEFG
	35-344146		LENS,CABIN DOME LIGHT	1	CDEFG
	896CP		• BULB,CABIN DOME	3	CDEFG
	SC-2611		• SOCKET.	3	CDEFG
	35-344147		• LENS,INSTRUMENT LIGHT	1	CDEFG
	SS-1		• SWITCH,SLIDE.	1	CDEFG
	35-344141		• ESCUTCHEON.	1	CDEFG
- 22	35-364069		LIGHT ASSY,FUEL UNIT.	1	
	1-02-000		HORN,STALL WARNING.	1	CDEFG
- 23	318		HORN,LANDING GEAR WARNING	1	
	35-364134		HORN,LANDING GEAR WARNING	1	CDEFG
	143S4S		FLASHER,12 VOLT TUNG-SOL.	1	
- 24	AN3210-1		SWITCH,LANDING GEAR WARNING HORN.	1	
	35-410267		BRACKET,LANDING GEAR WARNING HORN SWITCH.	1	A1
	35-410217-34		BRACKET,LANDING GEAR WARNING HORN SWITCH.	1	A2B
	35-364126		BRACKET,LANDING GEAR WARNING HORN SWITCH.	1	CDEFG
- 25	V3-1		SWITCH,THROTTLE WARNING HORN.	1	
- 26	AW12-25		BATTERY,12 VOLT	1	A3A54
	R33		BATTERY,12 VOLT /READING BATTERY/	1	A3A55BCDEFG
			/ALTERNATE FOR AW1Z-25/		
	HT14T		JUMPER,BONDING.	1	
- 27	6041H105		RELAY,MASTER.	1	
- 28	6221-25		REGULATOR,VOLTAGE	1	AB8
	118891		REGULATOR,VOLTAGE	1	B9CDEFG
	50131		CONDENSER,VOLTAGE REGULATOR	1	AB8
	CA-35		BREAKER,GENERATOR CIRCUIT	1	
- 29	35-369129-702		RELAY ASSY,PROPELLER CONTROL.	1	A43A44
	35-369139-706		RELAY ASSY,PROPELLER CONTROL.	1	A28A29
- 30	35-364076		RELAY,LANDING GEAR DYNAMIC BRAKE.	1	A1
- 31	1464		RELAY,STARTER	1	AB
	1453		RELAY,STARTER	1	CDEFG
- 32	AN3022-2		SWITCH,RADIO.	1	A43A44A27
- 33	9023		SWITCH,STARTER.	1	A9CDEFG
- 34	35-364059		SWITCH,FLAP POSITION.	1	
- 35	8906K513		SWITCH,FUEL INDICATOR	1	AB
	AN3022-3		SWITCH,FUEL INDICATOR	1	CDEFG

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE ON CODE
				PER ASSY	
128 - 36	AN3226-3		SWITCH,NAVIGATION LIGHT	1	
- 37	1006		RESISTOR,NAVIGATION LIGHT SWITCH.	1	
- 38	TYPE 130		INDICATOR,RED STALL WARNING	1	
- 39	AN3121-1813		BULB,STALL WARNING LANDING GEAR FLAP INDICATOR.	5	
	35-364084-4		LANDING GEAR,FLAP POSITION LIGHT INDICATOR. . .	2	
			LIGHT RED		
	35-364084-2		LANDING GEAR,FLAP POSITION LIGHT INDICATOR. . .	2	
			GREEN		
	35-364002-8		HOOD.	4	A60
	35-364078-14		INSERT.	4	A60
	CO 82339-2		SOCKET.	4	A60
	1012		RESISTOR,100 OHM.	4	A60
- 40	8712K2		SWITCH,PROPELLER PITCH CHANGE	1	
	8905K514		SWITCH,/USE WITH ELECTRIC GOVERNOR/.	1	
- 41	4QA2A		RELAY,STALL WARNING LIGHT	1	AB
- 42	CA-5		BREAKER,LANDING GEAR WARNING CIRCUIT.	1	
- 43	V86532		SWITCH ASSY,IGNITION.	1	
- 44	0147		RHEOSTAT,INSTRUMENT LAMP.	1	
	0145		RHEOSTAT,INSTRUMENT LAMP.	1	CDEFG
	35-364072		ADAPTER,INSTRUMENT LAMP RHEOSTAT SHAFT.	1	
	TX-11		SHAFT,FLEXIBLE.	1	
	255		BEARING,PANEL	1	
	35-324087		KNOB,INSTRUMENT LAMP RHEOSTAT	1	
- 45	35-364060		LIGHTER ASSY,CIGARETTE.	1	
	35-324060-602		LIGHTER & KNOB,CIGARETTE.	1	
	810-2		ELEMENT	1	
- 46	AN3022-3		SWITCH,LANDING GEAR POSITION.	1	AB
	8905K818		SWITCH,LANDING GEAR POSITION.	1	CDEFG
- 47	AN3022-2		SWITCH,LANDING LIGHT.	2	
- 48	AN3022-7		SWITCH,BATTERY EMERGENCY.	1	
- 49	AN3027-2		SWITCH,GENERATOR EMERGENCY.	1	
- 50	D6751-1-20		BREAKER,LANDING GEAR CIRCUIT.	1	
- 51	D6751-1-10		BREAKER,PROPELLER SWITCH CIRCUIT.	1	
- 52	D6751-1-10		BREAKER,RADIO CIRCUIT	1	
- 53	PSM-20		BREAKER,FLAP & INSTRUMENT LIGHT CIRCUIT	2	
- 54	PSM-20		BREAKER,LANDING LIGHT CIRCUIT	2	
- 55	PSM-5		BREAKER,NAVIGATION LIGHT CIRCUIT.	1	
- 56	35-364062		PANEL ASSY,AUTOMATIC CIRCUIT BREAKER.	1	
	CA-5		BREAKER,AUTOMATIC CIRCUIT	5	

MODEL 35 THRU G35 PARTS CATALOG

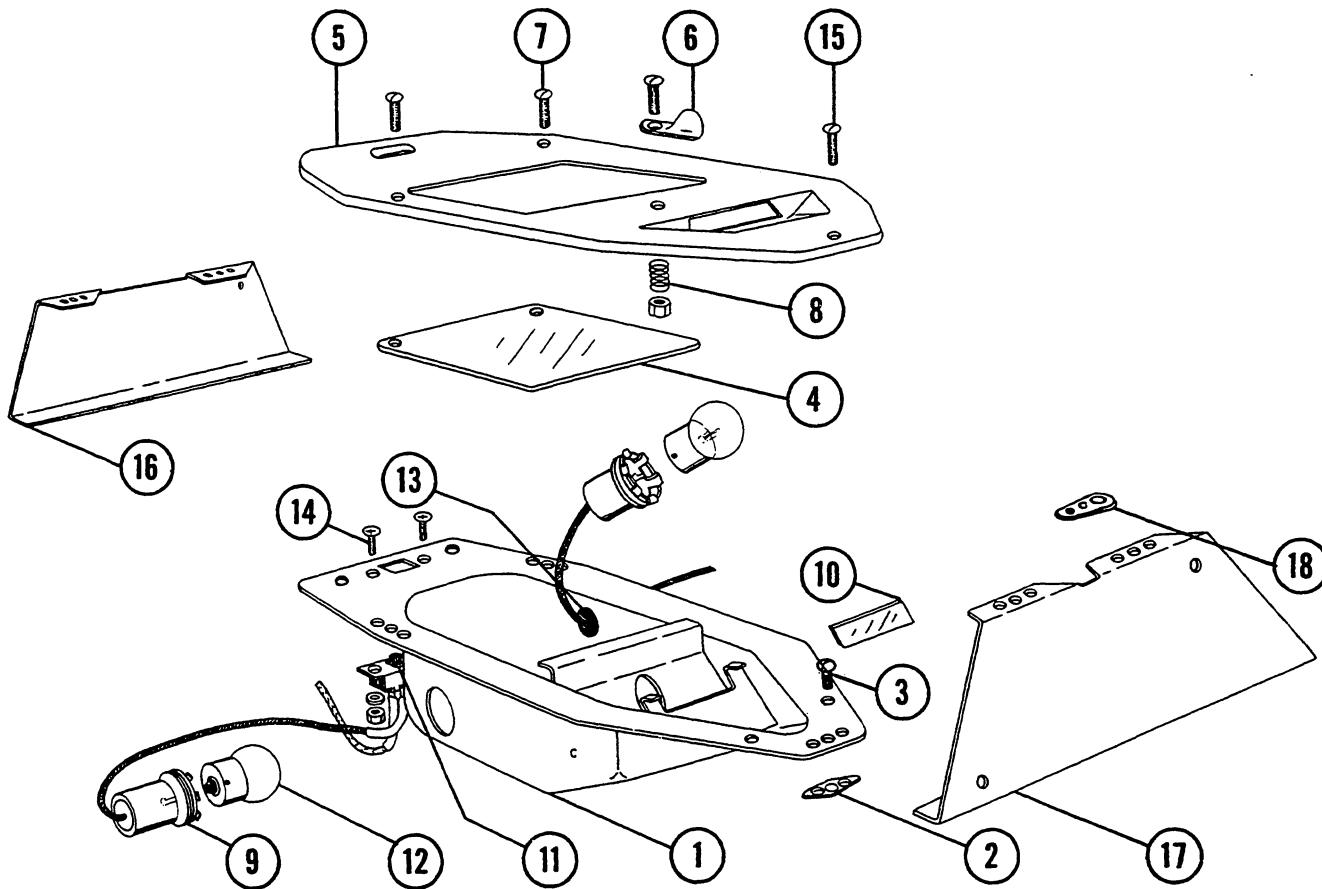


Figure 129. Cabin Dome Light Assembly

FIG. & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
		1 2 3 4 5 6 7		
129	35-364071-602	LIGHT ASSY,CABIN DOME	1	AB
	35-364040	• LIGHT ASSY,CABIN DOME	1	AB
- 1	35-364040-12	• • BODY ASSY,DOME LIGHT	1	AB
- 2	A6162-6Z-1	• • • NUT,COVER ATTACHING	3	AB
- 3	PK79XZ-6-8	• • • SCREW,DOME BODY ATTACHING	4	AB
- 4	35-364040-8	• • • LENS,DOME LIGHT	1	AB
- 5	35-364040-10	• • • COVER ASSY,DOME LIGHT	1	AB
- 6	35-364022	• • • SHUTTER,COVER ASSY	1	AB
- 7	AN515C6-10	• • • SCREW,SHUTTER ATTACHING	1	AB
	AN365D632	• • • NUT,SHUTTER RETAINER	1	AB
- 8	100943-016-006-012-16	• • • SPRING,SHUTTER TENSION.	1	AB
- 9	SC2611	• SOCKET,DOME LIGHT	2	AB
- 10	35-364073	• LENS,INSTRUMENT LIGHT	1	AB
- 11	SS-1	• SWITCH,DOME LIGHT	1	AB
- 12	89	• BULB,DOME LIGHT	2	AB
- 13	AN931-3-5	• GROMMET,LIGHT LEAD WIRE	1	AB
- 14	AN507-440-5	• SCREW,SWITCH ATTACHING.	2	AB
	AN365-440	• NUT,SWITCH RETAINER	2	AB
- 15	NAS384-6-10	• SCREW,COVER RETAINER.	3	AB
- 16	35-405303	BRACKET,DOME LIGHT MOUNTING	1	AB
- 17	35-405304	BRACKET,DOME LIGHT MOUNTING	1	AB
- 18	A6163-6Z-3	• NUT,DOME LIGHT BODY ATTACHING	4	AB

MODEL 35 THRU G35 PARTS CATALOG

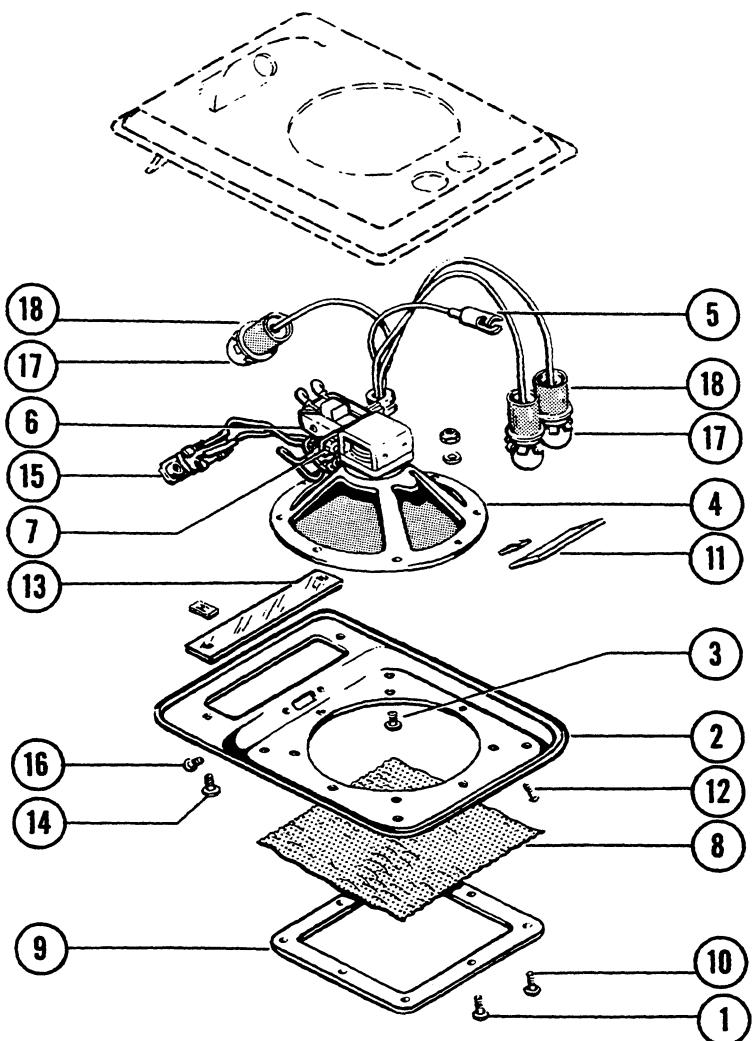


Figure 130. Dome Light and Radio Speaker (D2681 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
					CDEFG
130	35-344140-602		LIGHT & RADIO SPEAKER ASSY,DOME	.	1
- 1	NAS387-632-10P		• SCREW,ATTACHING	• • • • •	4
- 2	35-344141		• FRAME,DOME COVER	• • • • •	1
	35-344158		• SPEAKER ASSY	• • • • •	1
- 3	AN507-632R7		• SCREW,ATTACHING	• • • • •	4
- 4	S10340		• • SPEAKER,/OPERADIO MANUFACTURING COMPANY/	• • • • •	1
- 5	402		• • DISCONNECT	• • • • •	1
- 6	A8101		• • TRANSFORMER,/STANCOR/	• • • • •	1
- 7	AN515-6R6		• • SCREW,ATTACHING	• • • • •	2
	AN365-632		• • NUT,ATTACHING	• • • • •	2
- 8	35-344167		• GRILL,RADIO	• • • • •	1
- 9	35-344152		• FRAME,RADIO GRILL	• • • • •	1
- 10	NAS387-632-10P		• SCREW,ATTACHING	• • • • •	4
- 11	35-344147		• LENS,INSTRUMENT LIGHT /RED/	• • • • •	1
- 12	AN530-4R6		• SCREW,ATTACHING	• • • • •	2
	NAS446-1		• NUT,ATTACHING	• • • • •	2
- 13	35-344146		• LENS,DOME LIGHT /WHITE/	• • • • •	1
- 14	AN530-4R6		• SCREW,ATTACHING	• • • • •	2
	NAS446-1		• NUT,ATTACHING	• • • • •	2
- 15	SS-1		• SWITCH,DOME LIGHT /STL/	• • • • •	1
- 16	NAS387-440-8P		• SCREW,ATTACHING	• • • • •	2
	AN365-440		• NUT,ATTACHING	• • • • •	2
	102933D1-0200-		• SPACER,ATTACHING	• • • • •	2
	0250				
- 17	89		• BULB,LIGHT 6 CABIN DOME /TSL/	• • • • •	3
- 18	SC2611		• SOCKET,/COH/	• • • • •	3

MODEL 35 THRU G35 PARTS CATALOG

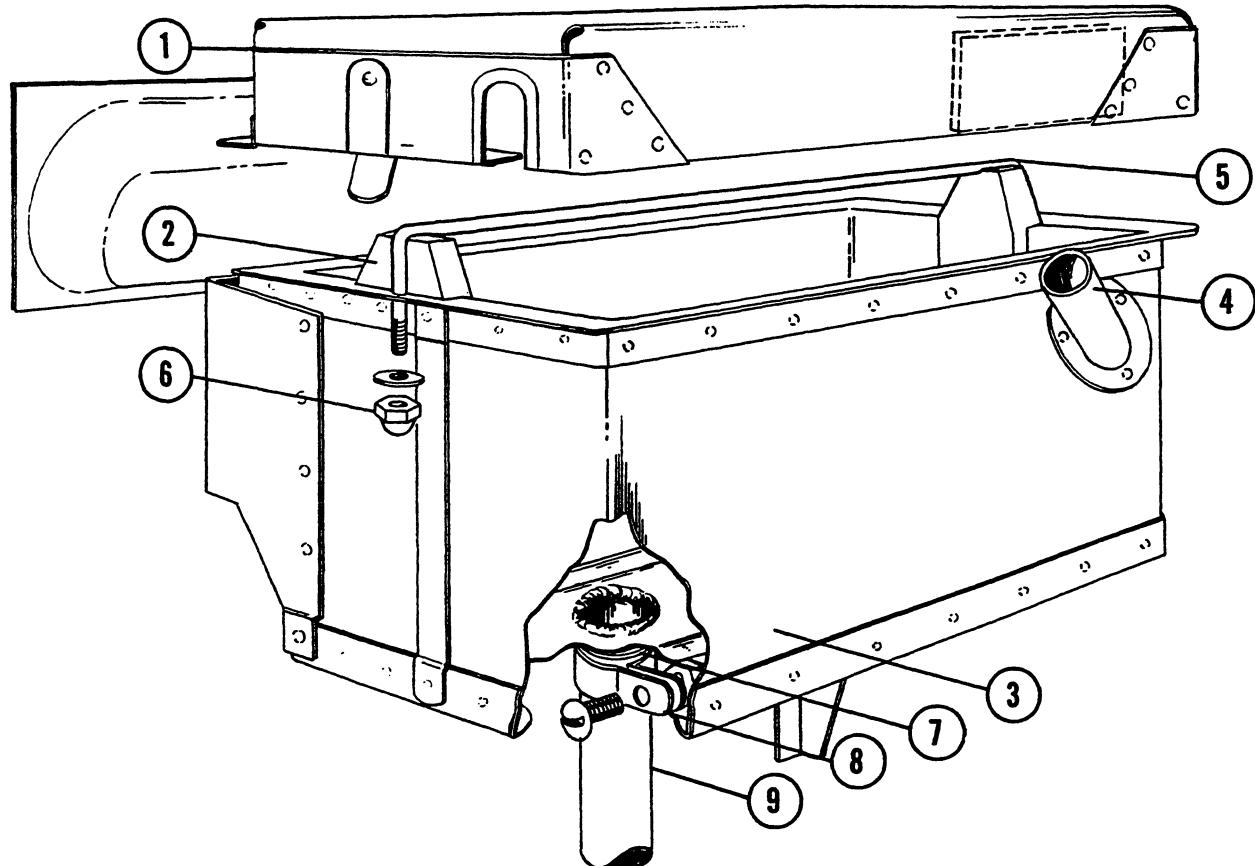


Figure 131. Battery Box Assembly (D1 thru D1116)

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
131	35-415367-600								BOX ASSY, BATTERY	.	1
- 1	35-415367-12								• COVER ASSY.	.	1
- 2	35-415370								• BLOCK	.	2
	35-415376								• BLOCK	.	2
- 3	35-415367-22								• BOX ASSY.	.	1
- 4	35-910252								• • ADAPTER	.	1
- 5	35-415359								• ROD	.	1
- 6	AN365-1032								• NUT	.	2
	108492510-014								• WASHER	.	2
- 7	35-415367-26								• TUBE	.	1
- 8	AN742-12								• CLAMP	.	1
	AN526-1032-6								• SCREW	.	1
	AN365-1032								• NUT	.	1
- 9	35-415367-24								• TUBE	.	1

MODEL 35 THRU G35 PARTS CATALOG

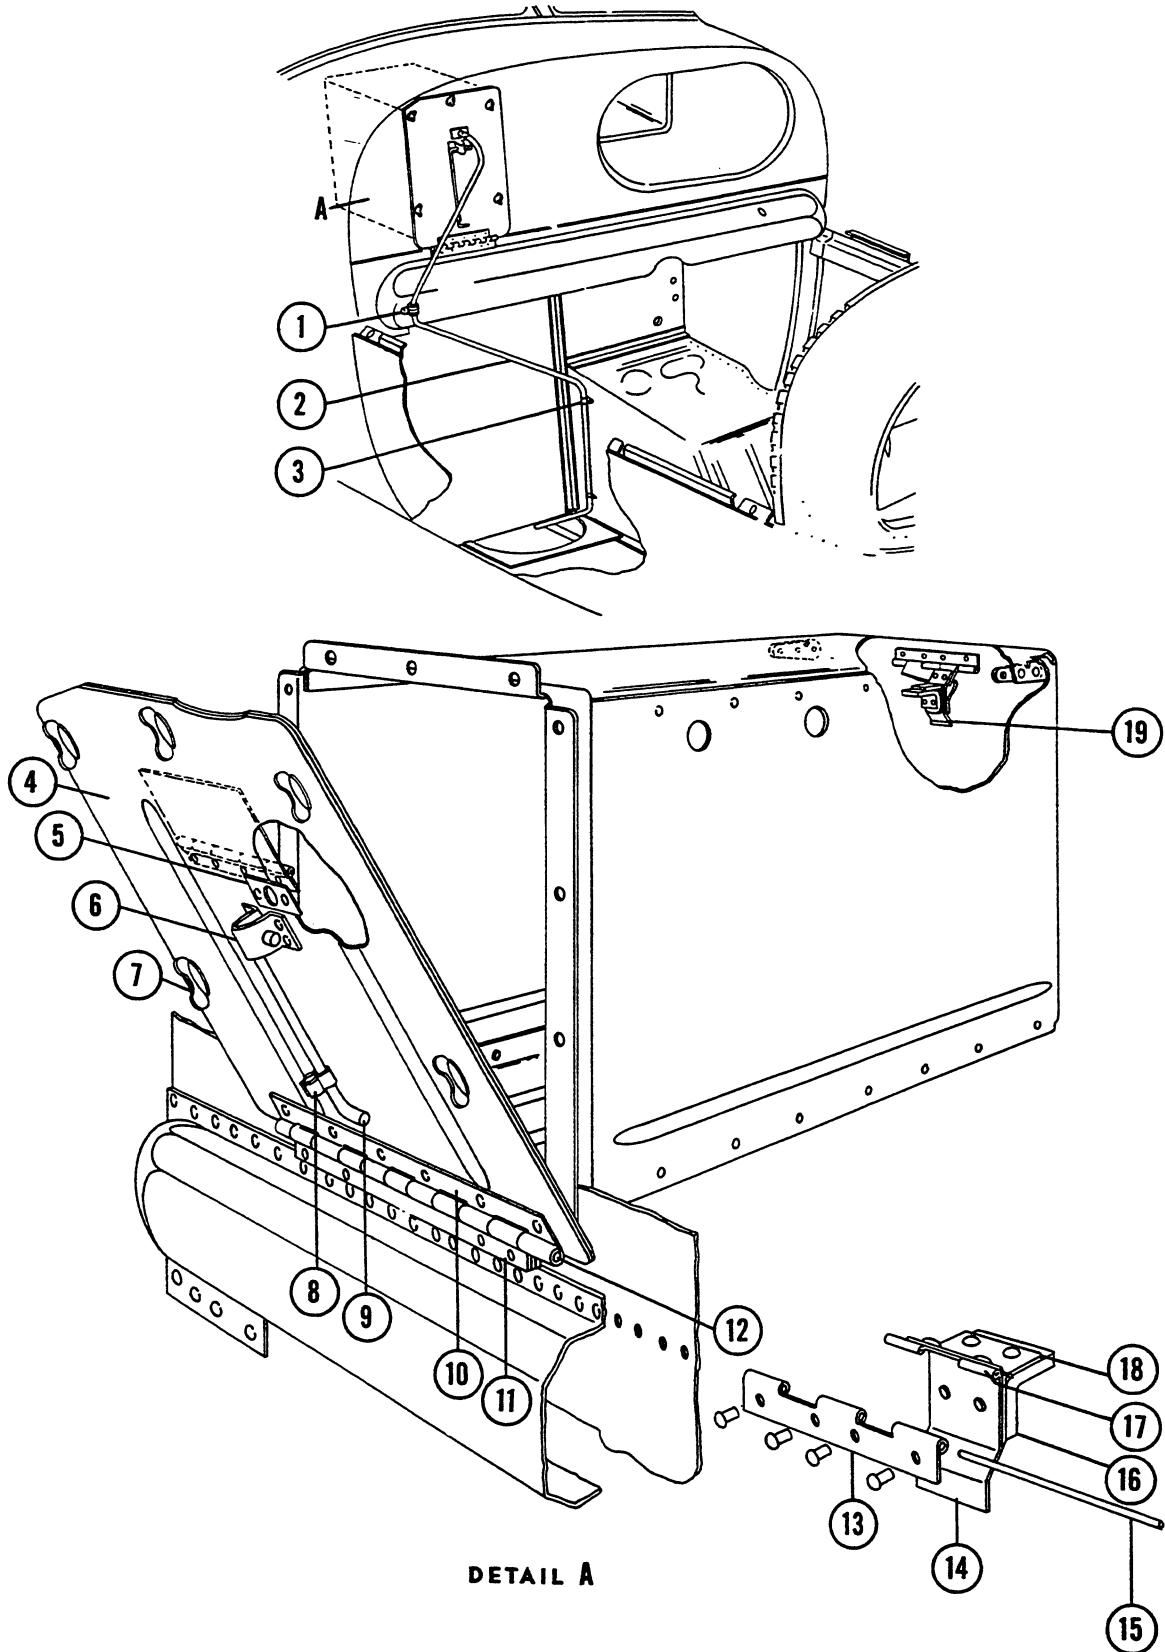


Figure 132. Battery Box Assembly (D1117 thru D1910)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
132	35-415400		BOX ASSY, BATTERY	1	A54
- 1	AN3125-2	.	• CLAMP	1	A54
- 2	35-369001-4	.	• TUBE	1	A54
- 3	AN742D6	.	• CLAMP	2	A54
- 4	35-415400-4	.	• DOOR	1	A54
- 5	35-415403	.	• GUIDE	1	A54
- 6	35-910109	.	• BRACKET	1	A54
- 7	W99899-2--130 99785-2	.	• STUD	5	A54
- 8	185678	.	• PIN	5	A54
- 9	35-910108	.	• CLIP	1	A54
- 10	35-415400-6	.	• SUPPORT	1	A54
- 11	35-415400-8	.	• HINGE	1	A54
- 12	AN253-2-669	.	• HINGE	1	A54
- 33	35-415400-12	.	• HINGE	2	A54
- 14	35-415400-14	.	• HOLDDOWN	2	A54
- 15	AN253-2-250	.	• PIN	2	A54
- 16	35-415400-18	.	• CUSHION	2	A54
- 17	35-415400-10	.	• HINGE	2	A54
- 18	35-415400-16	.	• ANGLE	2	A54
- 19	35-415401	.	• SPRING	1	A54

MODEL 35 THRU G35 PARTS CATALOG


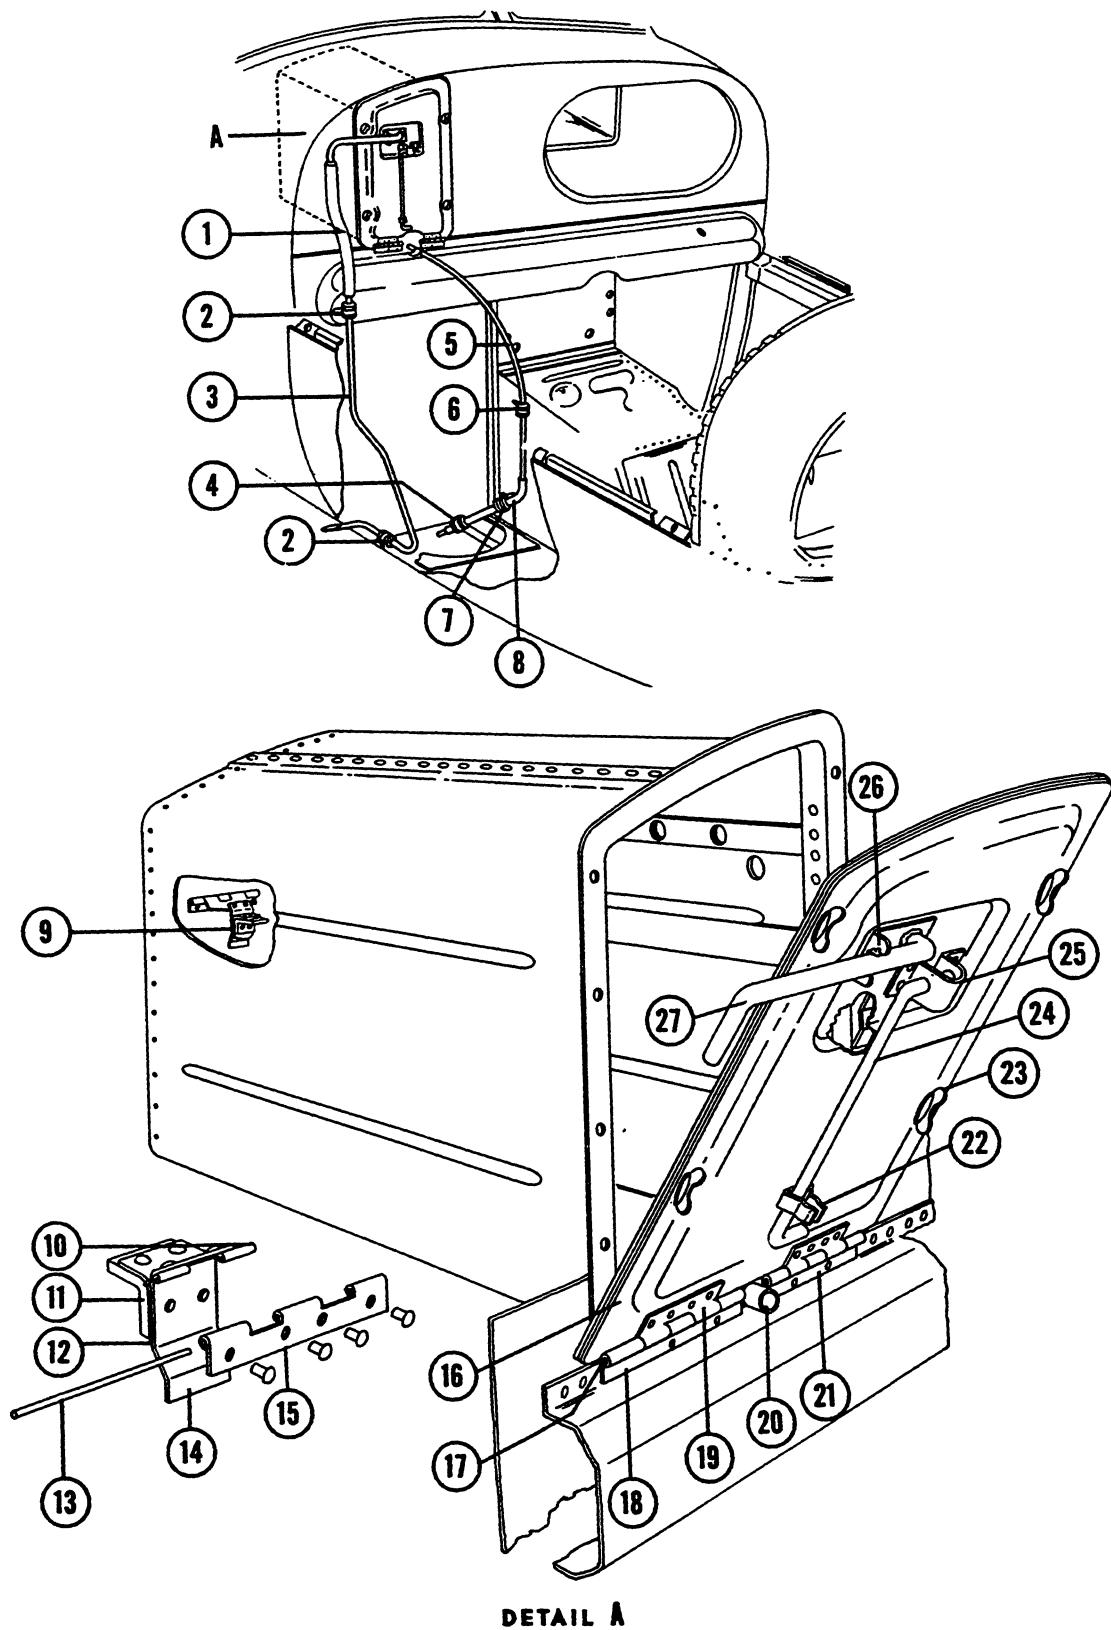


Figure 133. Battery Box Assembly (D1911 thru D4865)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION								UNITS PER ASSY	USABLE ON CODE
									1	2	3	4	5	6	7			
133 - 1	35-369001-10	TUBE.	1	A55
- 2	AN742-10C	CLAMP	2	A55
- 3	35-369150	TUBE.	1	A55
- 4	AN742D10	CLAMP	1	A55
- 5	35-369001-12	TUBE.	1	A55
- 6	AN742-8	CLAMP	1	A55
- 7	AN742D10	CLAMP	1	A55
- 8	35-369151	TUBE.	1	A55
	35-415410	BOX ASSY,BATTERY	1	A55
- 9	35-415401	.	SPRING.	1	A55
- 10	35-415410-28	.	HINGE	2	A55
- 11	35-415410-32	.	CUSHION	2	A55
- 12	35-415410-42	.	ANGLE	2	A55
- 13	AN253-2-250	.	PIN	2	A55
- 14	35-415410-34	.	HOLDDOWN	2	A55
- 15	35-415410-26	.	HINGE	2	A55
- 16	35-415410-16	.	DOOR	1	A55
- 17	105774C090-	.	PIN	2	A55
	00218																	
- 18	35-415510-12	.	HINGE	1	A55
- 19	35-415410-24	.	HINGE	2	A55
- 20	35-415410-4	.	TUBE	1	A55
- 21	35-415410-14	.	HINGE	1	A55
- 22	185678	.	CLIP	1	A55
- 23	W99839-1-.120	.	STUD	4	A55
	99799	.	PIN	4	A55
- 24	35-910108	.	ROD	1	A55
- 25	35-415410-44	.	BRACKET	1	A55
- 26	35-415410-20	.	BRACKET	1	A55
- 27	35-415410-22	.	TUBE	1	A55
	P-86	CABLE,BATTERY	1	A55

MODEL 35 THRU G35 PARTS CATALOG

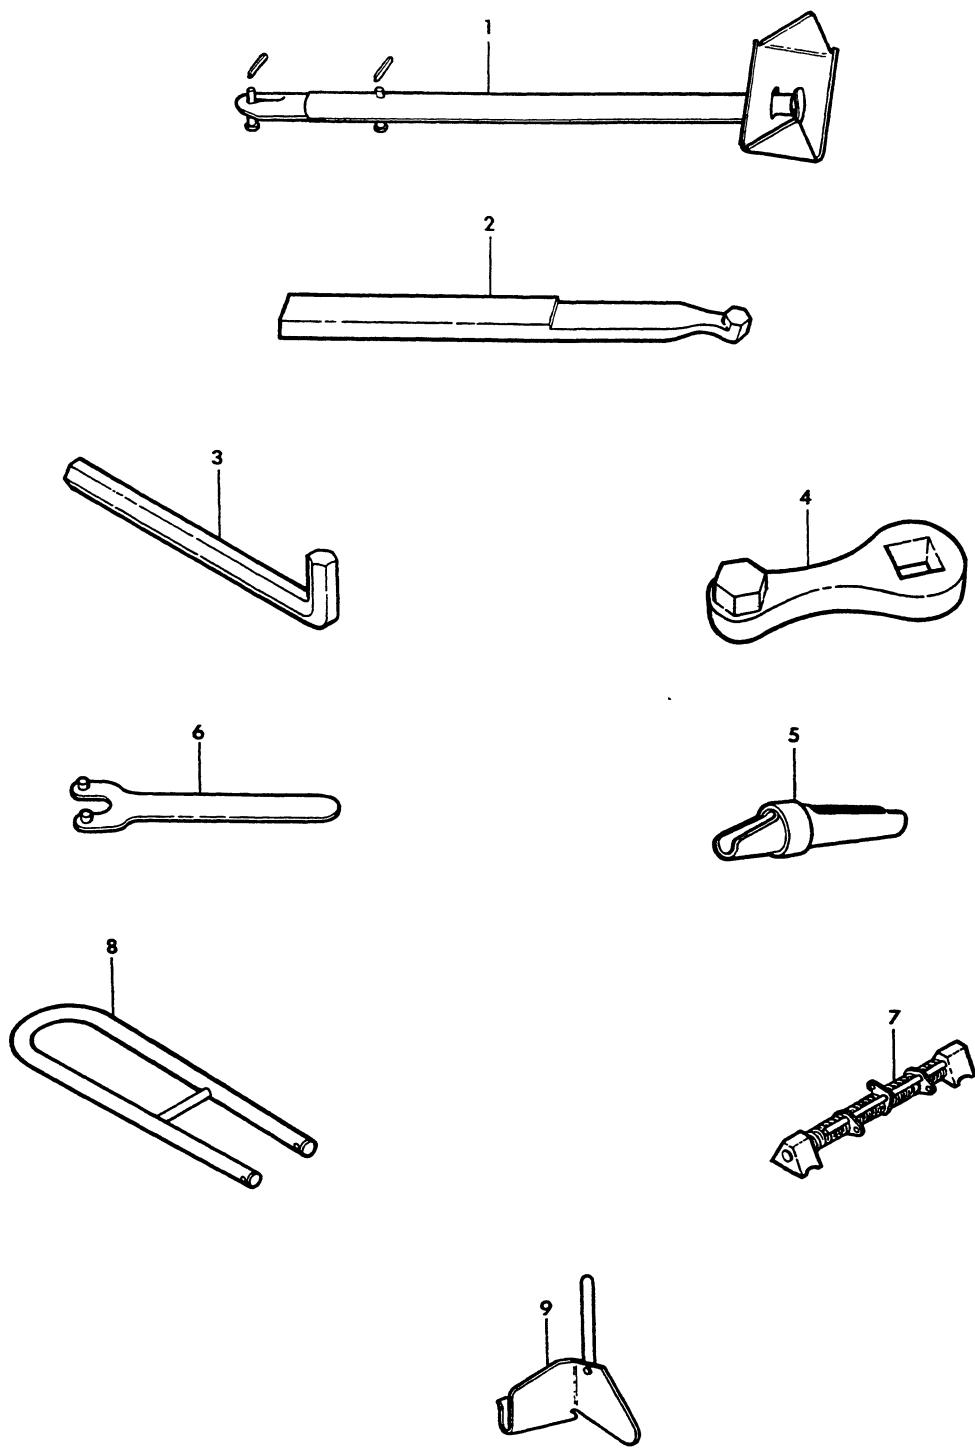

35-17-24

Figure 134. Loose Tools and Equipment

MODEL 35 THRU G35 PARTS CATALOG

FIG. & ITEM NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
- 1	35-590021		SUPPORT ASSY, TAIL TIE DOWN.	1	
- 2	TS1222-4		WRENCH, UPR FWD & AFT, LWR AFT WING BOLT /9/16/ . . .	1	
	TS1222-3		WRENCH, LWR FWD WING BOLT /5/8/	1	A2BCDEFG
- 3	TS1222-7		WRENCH, LWR FWD WING BOLT /1/2/	1	A1
- 4	TS1171-3		ADAPTER, LWR FWD WING BOLT TORQUE WRENCH /5/8/ . . .	1	A1
	TS1171-1		ADAPTER, UPR FWD & AFT, LWR AFT NUT TORQUE	1	
			WRENCH /3/4/		
	TS1171-1		ADAPTER, LWR FWD NUT TORQUE WRENCH /3/4/	1	A1
	TS1171-2		ADAPTER, LWR FWD NUT TORQUE WRENCH /7/8/	1	
- 5	35-590006		ADAPTER, MAIN WHEEL JACK	1	
- 6	35-590009		WRENCH, THROTTLE NUT	1	
- 7	35-590076		SHAFT, DIFFERENTIAL.	1	A2BCDEFG
- 8	36-590015-1		HANDLE ASSY, TOW	1	
- 9	35-524190		LOCK ASSY, CONTROL COLUMN.	1	
	8200-100-922		WRENCH, SPANNER /USE WITH B200 PROPELLER/.	1	
	TK1016		MANDREL, PITCH CONTROL MOUNTING.	1	
	932		JACK, LIFTING.	1	
	932-5-68		EYEBOLT, JACK ATTACH POINT	1	
	810-3		JIG, ELEVATOR TRAVEL CHECK	1	
	35-910277		WINTER BAFFLE INSTL	NP	
	35-910278		• BAFFLE.	2	
	35-910279		• PLACARD	1	
	AN515-8-7		• SCREW	10	
	AN960-8		• WASHER.	10	
	AN365-832		• NUT	10	
	35-590090		COMPUTER, HORSE POWER & FUEL FLOW.	1	
	35-590049-103		HANDBOOK, 35 PILOTS OPERATING.	1	
	35-590049-101		HANDBOOK, A35 & B35 PILOTS OPERATING	1	
	35-590057-97		HANDBOOK, C35 PILOTS OPERATING	1	
	35-590061-7		HANDBOOK, D35 PILOTS OPERATING	1	
	35-590069-23		HANDBOOK, E35 PILOTS OPERATING	1	
	35-590071-13		HANDBOOK, F35 PILOTS OPERATING	1	
	35-590072-9		HANDBOOK, G35 PILOTS OPERATING	1	
	35-590096		MANUAL, 35 SHOP.	1	
	35-590028		CATALOG, 35 THRU G35 PARTS	1	
	98-38441		PASSENGER INFO CARD	1	
	AF5-1		LOG BOOK, AIRPLANE	1	
	EF5-1		LOG BOOK, ENGINE	1	

MODEL 35 THRU G35 PARTS CATALOG

BLANK PAGE

MODEL 35 THRU G35 PARTS CATALOG

BLANK PAGE

MODEL 35 THRU G35 PARTS CATALOG

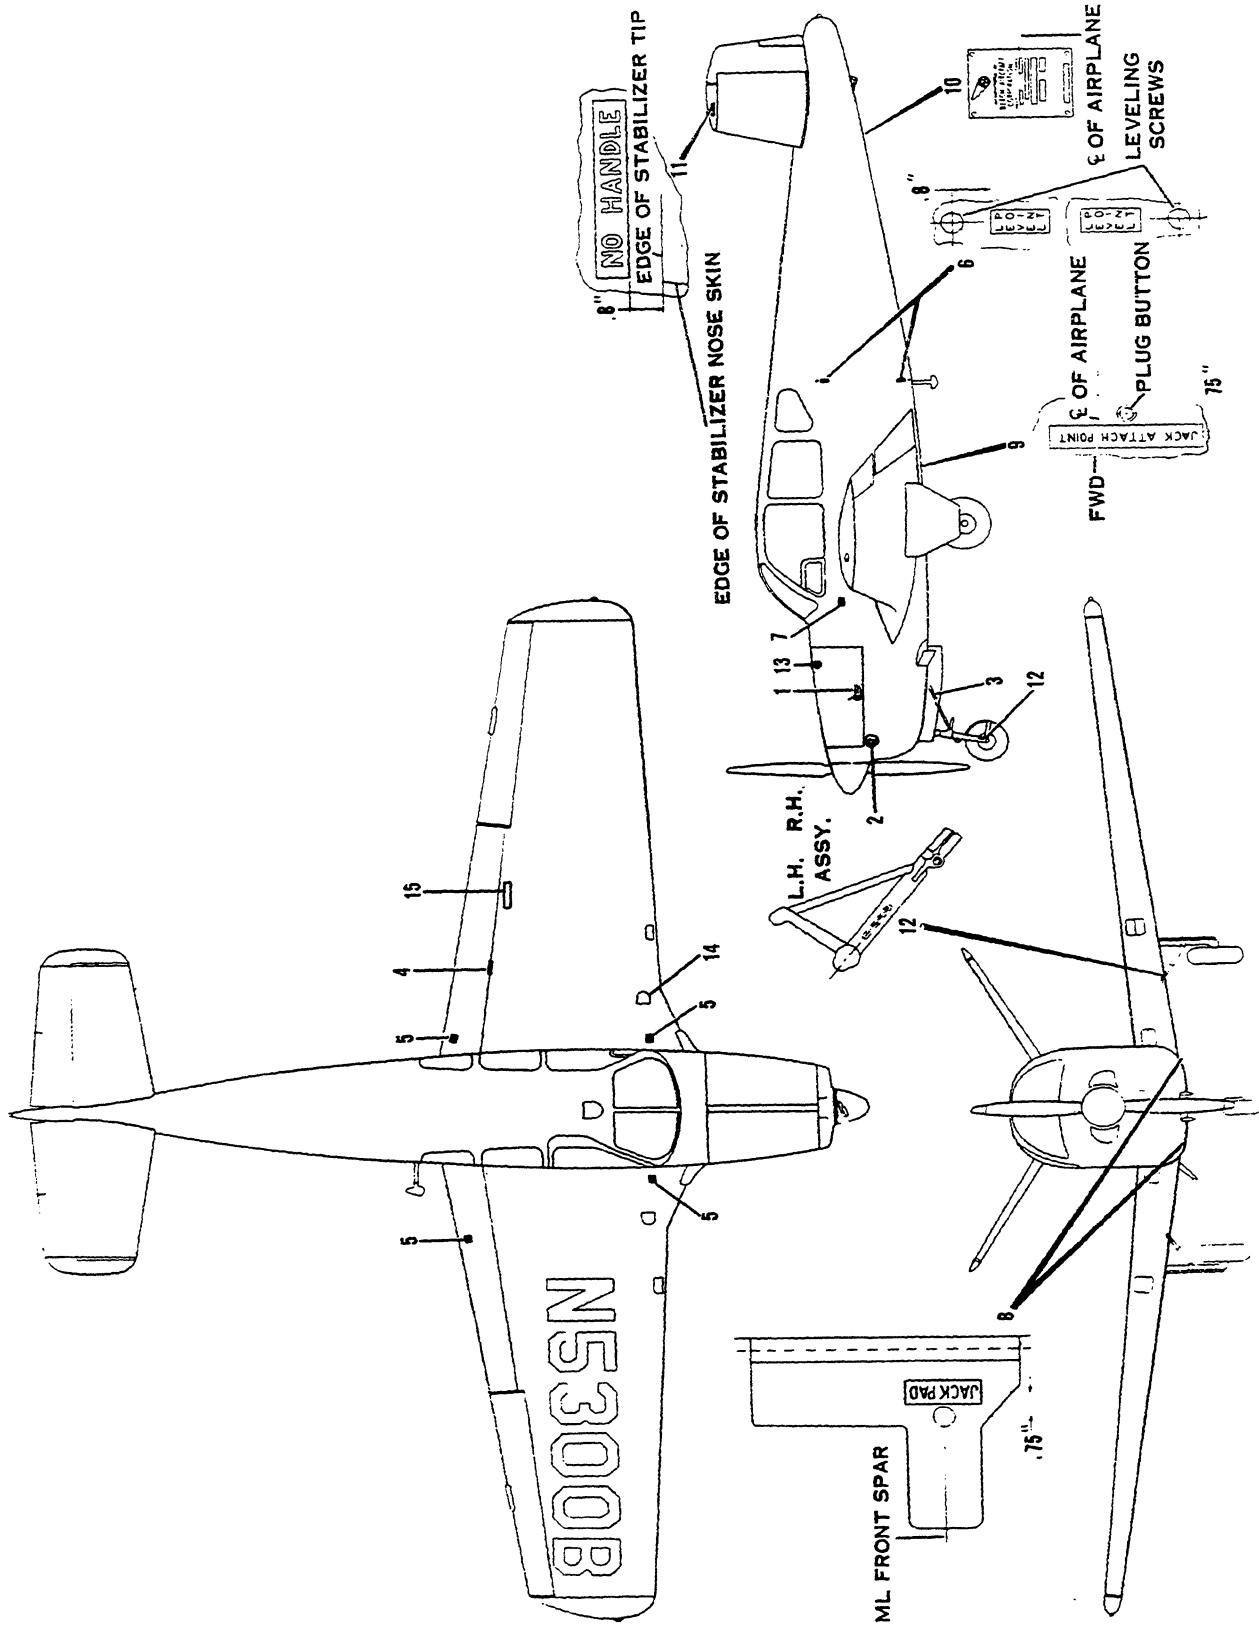


Figure 136. Exterior Marking

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
136	35-000020	HANDBOOK,G35 BONANZA.	.	NP	AB
	35-000019	MARKINGS,EXTERIOR	.	NP	C
	35-000029	MARKINGS,EXTERIOR	.	NP	D
	BS479	SPECIFICATION,FINISH.	.	NP	E
	BS492	SPECIFICATION,FINISH.	.	NP	F
	35-000054	MARKINGS,EXTERIOR	.	NP	G
- 1	35-000025	• EMBLEM.	.	2	AB
	35-000027	• EMBLEM.	.	2	CDE
	35-000051	• MARK, ENGINE HORSEPOWER.	.	2	E
	35-000028	• EMBLEM.	.	2	F
	35-000053	• EMBLEM.	.	2	G
- 2	35-000019-1	• INSIGNIA,BEECHCRAFT B	.	2	F
- 3	35-825192	• PLACARD,NOSE GEAR RETRACT ROD	.	1	G
- 4	35-000026	• PLACARD,20 DEGREE FLAP INDICATION	.	1	ABCDEF
	35-160019	• PLACARD,20 DEGREE FLAP INDICATION	.	1	G
- 5	112733-2	• PLACARD,NO STEP /BLACK/	.	4	
	112733-4	• PLACARD,NO STEP/RED//ALTERNATE FOR 112733-2/	.	4	
- 6	35-410169	• PLACARD,LEVEL POINT	.	2	CDEFG
- 7	35-361016	• PLACARD,GROUND HERE	.	2	ABCDEF
	35-361016-1	• PLACARD,GROUND HERE	.	2	G
- 8	112735	• PLACARD,JACK PAD.	.	2	
- 9	112736	• PLACARD,JACK ATTACH POINT	.	1	
- 10	111745	• PLACARD,MODEL	.	1	CDEFG
- 11	115081-1	• PLACARD,NO HANDLE /BLACK/	.	2	DEFG
	115081-3	• PLACARD,NO HANDLE /RED/	.	2	DEFG
		/ALTERNATE FOR 115081-1/			
- 12	112734	• PLACARD,HEAT TREATED ASSY	.	6	ABCDFG
- 13	112738	• PLACARD,OIL	.	1	ABCDE
- 14	112732	• PLACARD,FUEL	.	2	ABCDEF
- 15	35-361015	• PLACARD,DO NOT HANDLE	.	1	AB

MODEL 35 THRU G35 PARTS CATALOG

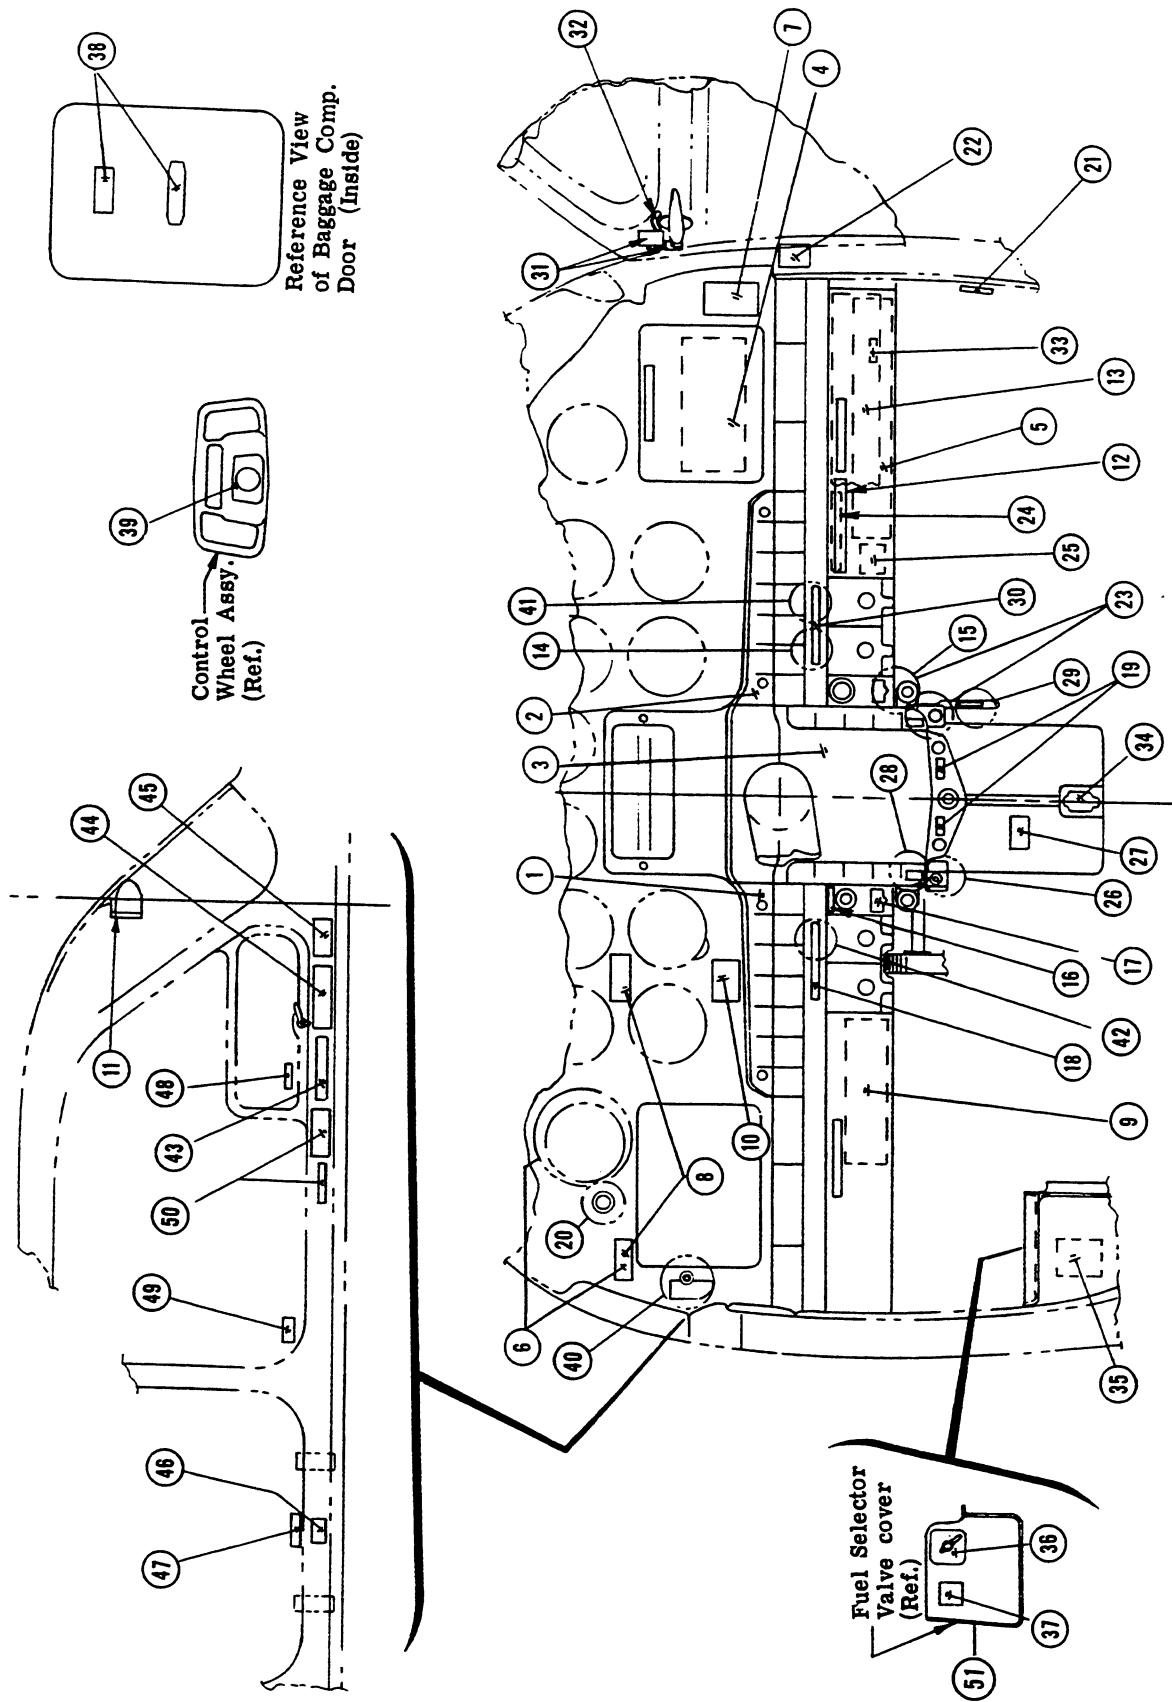


Figure 137. Interior Placards

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
137 - 1	35-324024	SWITCH,LH PANEL		1	A1A11
	35-324184	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	A61
		/ALTERNATE LOCATION FOR CODE A1 REF INDEX 40/			
	35-324194	SWITCH,LH PANEL		1	A48
	35-324205	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	A48
	35-324198	SWITCH,LH PANEL		1	B8
	35-324199	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	B8
	35-324268	SWITCH,LH PANEL		1	B9
	35-324269	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	B9
	35-324274	SWITCH,LH PANEL		1	C
	35-324278	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	C
	35-324274-2	SWITCH,LH PANEL		1	D
	35-324278-2	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	D
	35-324274-4	SWITCH,LH PANEL		1	E
	35-324278-4	SWITCH,AUXILIARY BOOST PUMP /OPTIONAL/.		1	E
	35-324358-1	SWITCH,LH PANEL OR /OPTIONAL/ AUXILIARY FUEL.		1	F4
		INSTL /OPTIONAL/ /ALTERNATE LOCATION OF FUEL INSTL SWITCH PRIOR TO CODE E REF INDEX 36/			
	35-324358	SWITCH,LH PANEL /ACS/ OR /OPTIONAL/ AUXILIARY		1	F5
		INSTL			
	1584236	SWITCH,LH PANEL OR /OPTIONAL/ AUXILIARY FUEL.		1	G
		FUEL INSTL			
- 2	35-324023	SWITCH,RH PANEL		1	A
	35-324137	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	A1
	35-324182	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	A2
	35-324202	SWITCH,RH PANEL		1	B
	35-324203	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	B
	35-324275	SWITCH,RH PANEL		1	C
	35-324279	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	C
	35-324275-2	SWITCH,RH PANEL		1	D
	35-324279-2	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	D
	35-324275-4	SWITCH,RH PANEL		1	EF4
	35-324279-4	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	EF4
	35-324275-6	SWITCH,RH PANEL		1	F5
	35-324279-6	SWITCH,AUXILIARY FUEL INSTL /OPTIONAL/.		1	F5
	1584237	SWITCH,RH PANEL /ACS/ /AUXILIARY FUEL INSTL		1	G
		/OPTIONAL/ SAME/			
- 3	35-324026-2	PANEL,CENTER CONTROL.		1	A1
	35-324026-6	PANEL,CENTER CONTROL.		1	A2B
	35-324026-4	PANEL,CENTER CONTROL.		1	C
	35-324026-8	PANEL,CENTER CONTROL.		1	D
	35-324026-10	PANEL,CENTER CONTROL.		1	EF4
	35-324026-12	PANEL,CENTER CONTROL.		1	F5
	35-324363	PANEL,CENTER CONTROL.		1	G
- 4	35-324117-6	INSTRUCTIONS,FLIGHT & EMERGENCY		1	EF4
		/ALTERNATE LOCATION PRIOR TO D35 REF INDEX 9/			
	35-324117-8	INSTRUCTIONS,FLIGHT & EMERGENCY		1	F14F15G3
	35-324361	INSTRUCTIONS,FLIGHT & EMERGENCY		1	F16F17G
		/ALTER LOCATIONS WITH RADIOS REF INDEX 50/			
- 5	35-324122	COVER,CIRCUIT BREAKER COMPARTMENT		1	A
	35-324122-2	COVER,CIRCUIT BREAKER COMPARTMENT		1	B
	35-324286	COVER,CIRCUIT BREAKER COMPARTMENT		1	C24
	35-324288	COVER,CIRCUIT BREAKER COMPARTMENT		1	C25DE
	35-324288-2	COVER,CIRCUIT BREAKER COMPARTMENT		1	F4
	35-324288-4	COVER,CIRCUIT BREAKER COMPARTMENT		1	F5
	35-324288-6	COVER,CIRCUIT BREAKER COMPARTMENT		1	G
	35-324288-8	COVER,CIRCUIT BREAKER COMPARTMENT		1	G
		/USE WITH 50 AMP GENERATOR/			
- 6	35-324123	LIMITATIONS,FLIGHT /ON ASH TRAY/.		1	A1
	35-324230-2	LIMITATIONS,FLIGHT /ON ASH TRAY OR ALTERNATE		1	A2
		LOCATION REF INDEX 45/			
- 7	35-400456	INSTRUCTIONS,DOOR /DOOR SILL OR PANEL/.		1	

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
137 - 8	35-344073-2	CALL,RADIO.		1	B
	35-344073-4	CALL,RADIO.		1	CD
	35-344073-6	CALL,RADIO.		1	EF4
	35-344073-8	CALL,RADIO.		1	F5G
- 9	35-324117-2	INSTRUCTIONS,FLIGHT		1	AB
	35-324117-4	INSTRUCTIONS,FLIGHT		1	C
	35-324117-6	INSTRUCTIONS,FLIGHT /ALTER LOCATION FOR OPTIONAL RADIO REF INDEX 4/		1	D
- 10	35-534353	INSTRUCTIONS,SELECTOR VALVE		1	ABC26
- 11	35-324360	CORRECTION,COMPASS /FOR 35-324328 INSTL/.		1	
- 12	35-324118-2	COVER,IDENTIFICATION.		1	AB
	35-324118-4	COVER,IDENTIFICATION.		1	C
- 13	35-324006-2	PANEL,CIRCUIT BREAKER		1	AB
	35-324006-4	PANEL,CIRCUIT BREAKER		1	C
	35-324006-6	PANEL,CIRCUIT BREAKER		1	DEF4
	35-324006-8	PANEL,CIRCUIT BREAKER		1	F5G
- 14	35-324101-2	SPARE,CABIN HEAT OR		1	AB
	35-324101-4	SPARE,CABIN HEAT OR		1	CD
	35-324101-6	SPARE,CABIN HEAT OR		1	EF4
	35-324101-8	SPARE,CABIN HEAT OR		1	F5G
- 15	35-324256	HANDLE,PARKING BRAKE.		1	FG
		/ALTERNATE LOCATION REF INDEX 29/			
- 16	35-324109-2	STARTER		1	AB
	35-324109-4	STARTER		1	C
	35-324109-6	STARTER		1	DEF4
	35-324109-8	STARTER		1	F5G
- 17	35-324103-2	MIXTURE,FUEL.		1	AB
	35-324103-4	MIXTURE,FUEL.		1	CD
	35-324103-6	MIXTURE,FUEL.		1	EF4
	35-324103-8	MIXTURE,FUEL.		1	F5G
- 18	35-324102-2	HEAT,COWL FLAP & CARBURETOR		1	AB
	35-324102-4	HEAT,COWL FLAP & CARBURETOR		1	CD
	35-324102-6	HEAT,COWL FLAP & CARBURETOR		1	EF4
	35-324102-8	HEAT,COWL FLAP & CARBURETOR		1	F5G
- 19	35-550099	VENT,INDIVIDUAL HEAT /NOT USED PRIOR TO J35/.		1	
- 20	35-324115-2	WARNING,STALL		1	AB
	35-324115-4	WARNING,STALL		1	C
	35-324115-6	WARNING,STALL		1	DEF4
	35-324115-8	WARNING,STALL		1	F5G
- 21	35-410355-1	RELEASE,EMERGENCY DOOR.		1	A
	35-410355-3	RELEASE,EMERGENCY DOOR.		1	BC
	35-410355-5	RELEASE,EMERGENCY DOOR.		1	D
	35-410355-7	RELEASE,EMERGENCY DOOR.		1	EFG
- 22	35-400456	INSTRUCTIONS,DOOR CLOSURE		1	ABCD12
- 23	35-364186-2	PITOT INSTL,HEATED /OPTIONAL/.		1	A2B
	35-364186-4	PITOT INSTL,HEATED /OPTIONAL/.		1	C
	35-364186-6	PITOT INSTL,HEATED /OPTIONAL/.		1	DEF4
	35-364186-8	PITOT INSTL,HEATED /OPTIONAL/.		1	F19
	35-361158	PITOT INSTL,HEATED /OPTIONAL/.		1	F20G
	35-361100-6	TUBE,PITOT /OPTIONAL/.		1	G
- 24	35-324192-2	BREAKER,HEATED PITOT CIRCUIT.		1	A2B
	35-324192-4	BREAKER,HEATED PITOT CIRCUIT.		1	C
	35-324192-6	BREAKER,HEATED PITOT CIRCUIT.		1	D
	35-324192-8	BREAKER,HEATED PITOT CIRCUIT.		1	EF4
	35-324192-10	BREAKER,HEATED PITOT CIRCUIT.		1	F5G
- 25	35-324185	BREAKER,BOOST PUMP CIRCUIT.		1	
- 26	35-921225-1	SWITCH,FUEL BOOST PUMP.		1	F4
	35-921225-3	SWITCH,FUEL BOOST PUMP.		1	F5G
		/ALTERNATE LOCATIONS REF INDEXES 1 & 40/			
- 27	35-910296	BAFFLE,WINTER FRONT /NOT USED PRIOR TO J35/.		1	
- 28	35-924213	PRIMER,ENGINE /MAY BE OMITTED/.		1	A62BCDEFG
		/ALTERNATE LOCATION REF INDEX 26/			
- 29	35-324119	HANDLE,PARKING BRAKE.		1	ABCDEF1
		/ALTERNATE LOCATION REF INDEX 15/			

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
137 - 30	35-324368		HEAT,PARKING BRAKE & CABIN. /NOT USED PRIOR TO H35/	1	
- 31	50-400335	LATCH,CABIN DOOR.	1	EFG
	50-400336	LATCH,CABIN DOOR. /ALTERNATE LOCATION REF INDEX 32/	1	EFG
- 32	35-400388	LATCH,CABIN DOOR.	1	A
	35-400428	LATCH,CABIN DOOR. /ALTERNATE LOCATION REF INDEX 31/	1	BCD
- 33	35-324239-4	BREAKER,PRIMER CIRCUIT.	1	BCDEFG
- 34	35-815148-1	INDICATOR,LANDING GEAR POSITION	1	A
	35-815148-3	INDICATOR,LANDING GEAR POSITION	1	BC
	35-815148-5	INDICATOR,LANDING GEAR POSITION	1	D
	35-815148-7	INDICATOR,LANDING GEAR POSITION	1	EF
	35-815148-9	INDICATOR,LANDING GEAR POSITION	1	G
- 35	111745	MODEL & SERIAL.	1	AB
- 36	35-924123-2	SELECTOR,VALVE /WITHOUT AUXILIARY FUEL/	1	AB
	35-924138-2	SELECTOR,VALVE /WITHOUT AUXILIARY FUEL/ /USED WITH 35-924230 UNIT/	1	B
	35-924123-4	SELECTOR,VALVE /WITHOUT AUXILIARY FUEL/	1	
	35-924138-4	SELECTOR,VALVE /WITHOUT AUXILIARY FUEL/ /USED WITH 35-924230 UNIT/	1	C2
	35-924138-6	SELECTOR,VALVE /WITHOUT AUXILIARY FUEL/	1	DEF4
	35-924138-8	SELECTOR,VALVE /WITHOUT AUXILIARY FUEL/	1	F5G
	35-924176-2	SELECTOR,VALVE /USED WITH AUXILIARY FUEL/	1	AB
	35-924139-2	SELECTOR,VALVE /USED WITH AUXILIARY FUEL/ /USED WITH 35-924230 UNIT/	1	B
	35-924176-4	SELECTOR,VALVE /USED WITH AUXILIARY FUEL/	1	
	35-924139-4	SELECTOR,VALVE /USED WITH AUXILIARY FUEL/ /USED WITH 35-924230 UNIT/	1	C2
	35-924139-6	SELECTOR,VALVE /USED WITH AUXILIARY FUEL/	1	DEF4
	35-924139-8	SELECTOR,VALVE /USED WITH AUXILIARY FUEL/	1	F5G
- 37	35-924133-2	SELECTOR,FUEL TANK.	1	A21B
	35-924133-4	SELECTOR,FUEL TANK.	1	C26
- 38	35-410149	EQUIPMENT,BAGGAGE DOOR STANDARD	1	A1
	35-924185	FUEL,BAGGAGE DOOR AUXILIARY /OPTIONAL/	1	A1
	35-410373	EQUIPMENT,BAGGAGE DOOR STANDARD	1	A2BCDE
	35-410442	EQUIPMENT,BAGGAGE DOOR STANDARD	1	F
	35-534315	EQUIPMENT,BAGGAGE DOOR STANDARD	1	G
- 39	35-524607	WHEEL,CONTROL	1	ABCDE
	35-524630	WHEEL,CONTROL	1	FG
- 40	35-369148	SWITCH,BOOST PUMP	1	A1
		/ALTERNATE LOCATIONS REF INDEXES 1 & 26/		
- 41	35-324188-2	VENT,AIR CONDITIONED.	1	AB
	35-324188-4	VENT,AIR CONDITIONED.	1	C
	35-324188-6	VENT,AIR CONDITIONED.	1	D
	35-324188-8	VENT,AIR CONDITIONED.	1	EF4
	35-324188-10	VENT,AIR CONDITIONED.	1	F5G
- 42	35-324102	SPARE,/SEE INDEX 18/	1	
- 43	35-324340	INSTRUCTIONS,EMERGENCY	1	FG
- 44	35-410395-2	INSTRUCTIONS,SELECTOR VALVE	1	B
	35-410395-4	INSTRUCTIONS,SELECTOR VALVE	1	C
- 45	35-324230-6	:LIMITATIONS,FLIGHT	1	A2B
		/ALTERNATE LOCATION REF INDEX 6/		
	35-324230-4	LIMITATIONS,FLIGHT	1	C
	35-324230-6	LIMITATIONS,FLIGHT	1	DEF4
	35-324230-8	LIMITATIONS,FLIGHT	1	F5G
- 46	35-534352	INSTRUCTIONS,WINDOW	1	DEFG
- 47	35-410329	:INSTRUCTIONS,WINDOW	1	
- 48	35-410326	INSTRUCTIONS,WINDOW	1	
- 49	35-000061	PAINT,NEW /90 DAY/	1	
- 50	35-324117-6	INSTRUCTIONS,FLIGHT & EMERGENCY	1	EF4
		/STANDARD LOCATION REF INDEX 4/		
	35-324117-8	INSTRUCTIONS,FLIGHT & EMERGENCY /ALTER LOCATION WITH OPTIONAL RADIO REF INDEX 4/	1	F14F21
	35-324361	INSTRUCTIONS,FLIGHT & EMERGENCY /ALTER LOCATION WITH OPTIONAL RADIO REF INDEX 4/	1	F16F17G
- 51	35-924100-602	COVER ASSY,FUEL UNIT.	1	

MODEL 35 THRU G35 PARTS CATALOG


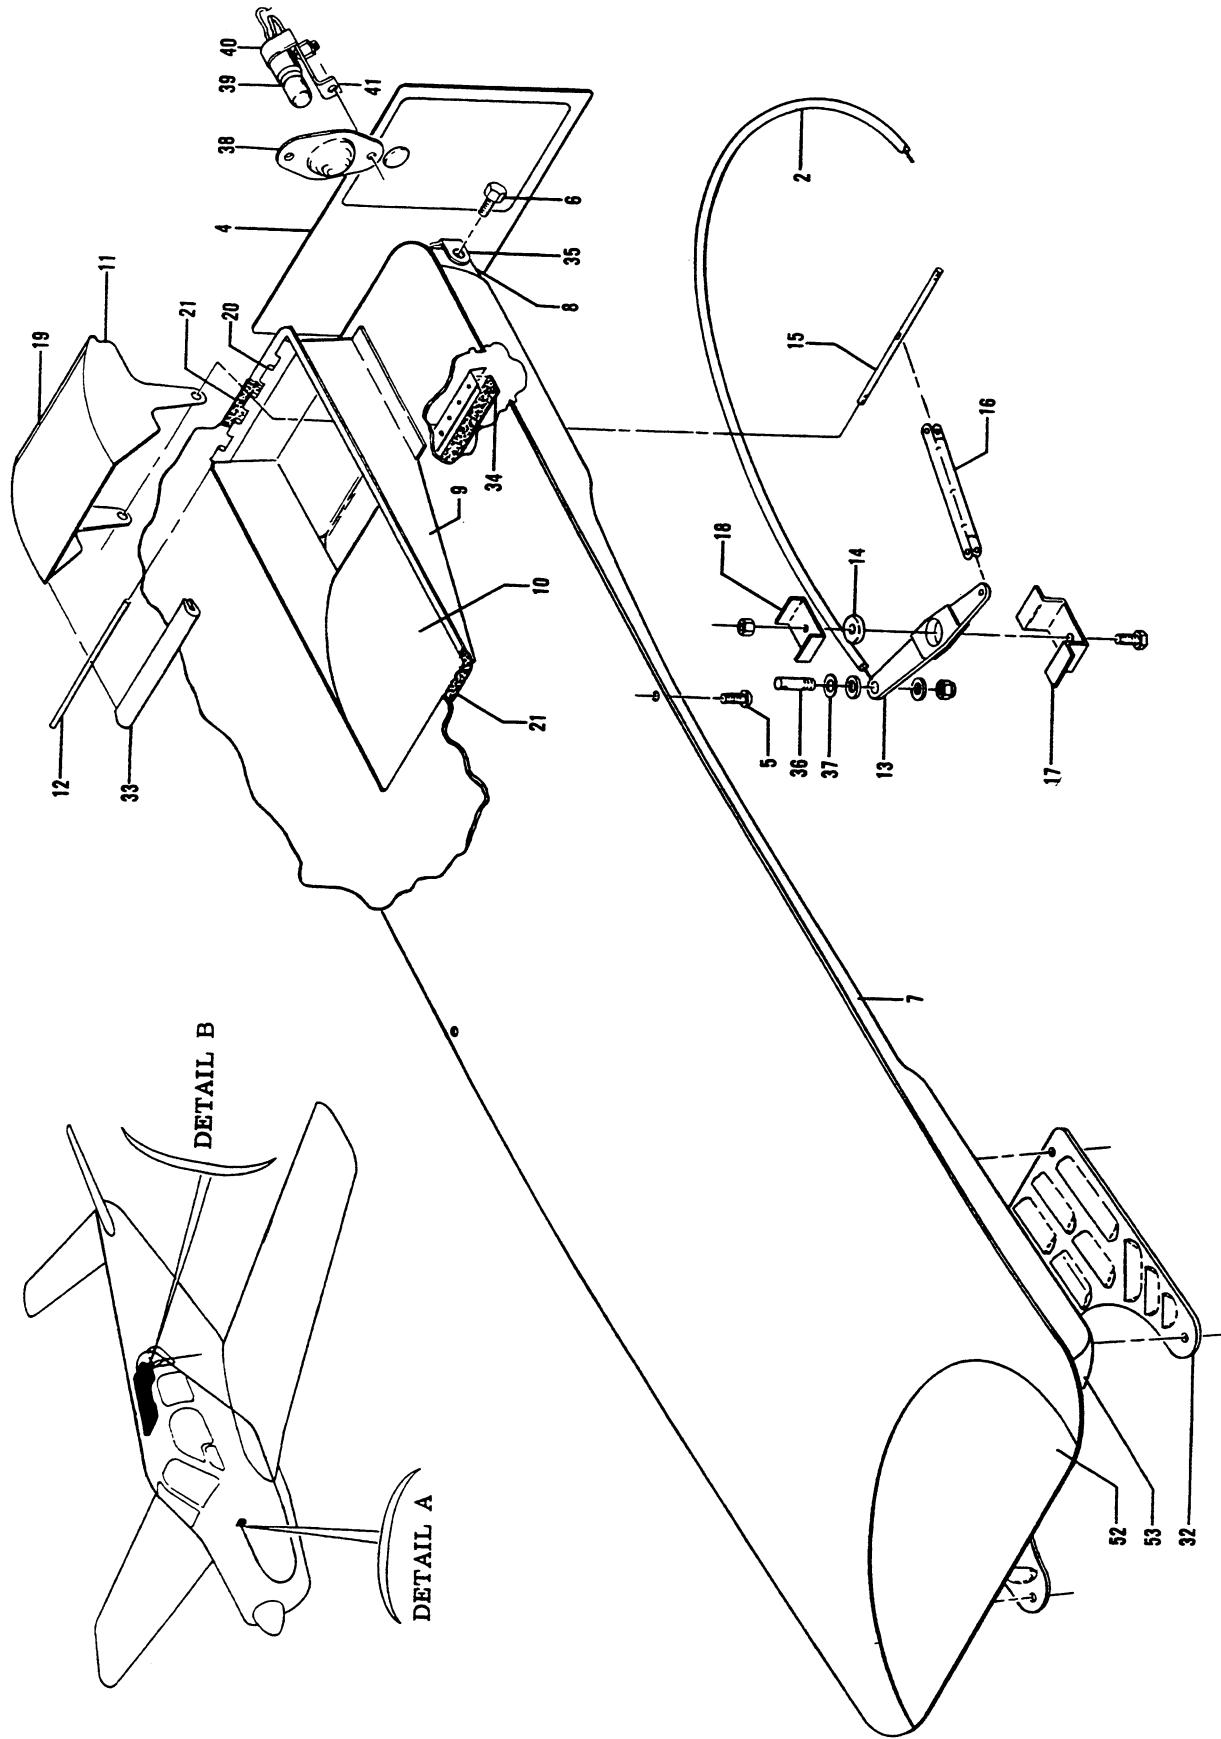


Figure 138. Cabin Air Conditioner (Sheet 1 of 2 sheets)

MODEL 35 THRU G35 PARTS CATALOG

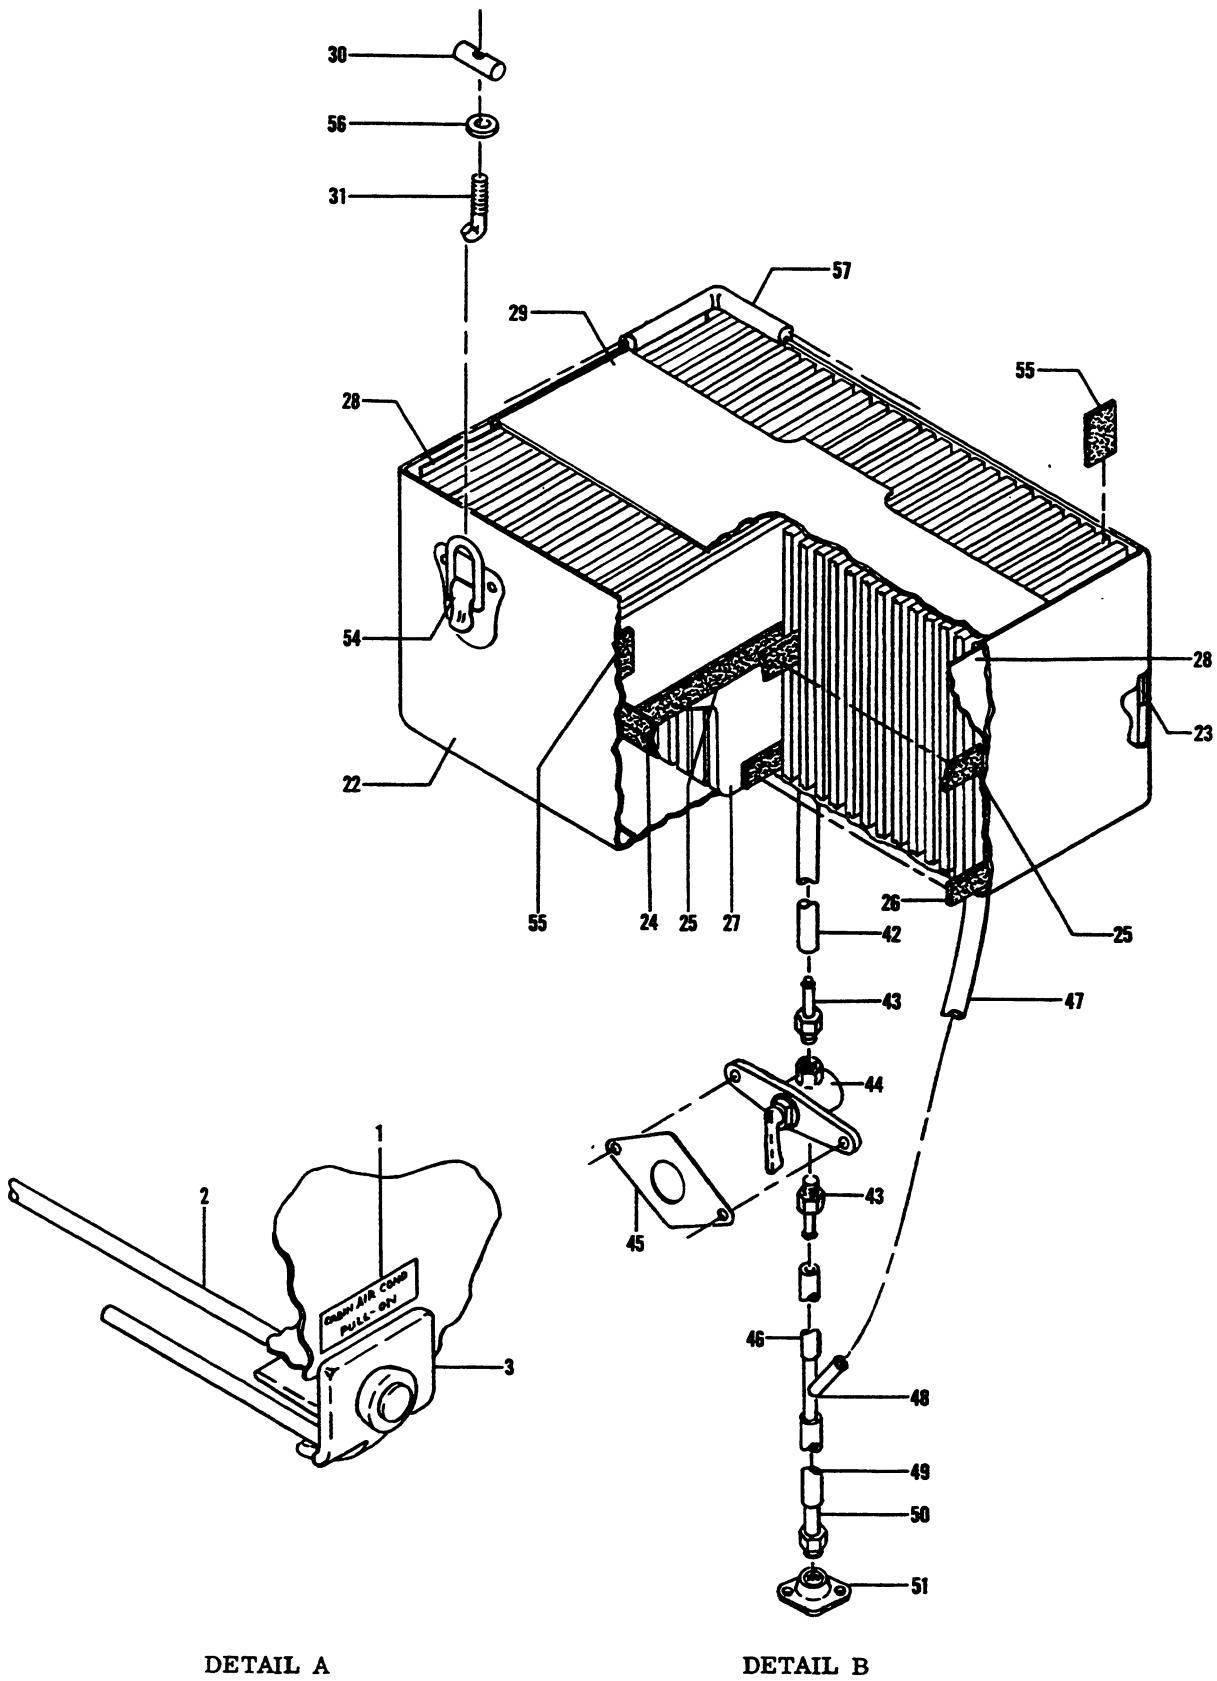

DETAIL A

DETAIL B

Figure 138. Cabin Air Conditioner (Sheet 2 of 2 sheets)

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
138									CABIN AIR CONDITIONER INSTL		
	35-324188-2	.	PLACARD, Cabin Air Conditioner Pull-On	1	A, B	
	35-324188-4	.	PLACARD, Cabin Air Conditioner Pull-On	1	C	
	35-324188-6	.	PLACARD, Cabin Air Conditioner Pull-On	1	D	
	35-324188-8	.	PLACARD, Cabin Air Conditioner Pull-On	1	E, F4	
- 1	35-324188-10	.	PLACARD, Cabin Air Conditioner Pull-On	1	F5, G	
- 2	35-554002	.	CONTROL ASSY	1		
- 3	35-944009	.	HANDLE	1		
- 4	35-410160-26	.	COVER ASSY	1		
	35-554001SA7	.	AIR CONDITIONER ASSY (Supercedes 35-554001).	1	A, B	
	35-554001SA10	.	AIR CONDITIONER ASSY (Supercedes 35-554001-2)	1	C, D, E, F, G	
	35-554003	.	DUCT ASSY	1	A, B	
	35-554003-24	.	DUCT ASSY	1	C, D, E, F, G	
		(ATTACHING PARTS)									
- 5	AN525-1032-12	.	SCREW	2		
	10K75	.	RIVNUT	2		
- 6	AN3-3A	.	BOLT	2		
	AN960-10	.	WASHER	2		
	AN365-1032	.	NUT	2		
		-----* -----</td <td data-kind="ghost"></td>									
- 7	35-554001SA11	.	PAN ASSY, Air Duct (Supercedes 35-554001-8)	1		
	35-554001SA12	.	PAN ASSY, Air Duct (Supercedes 35-554001-22)	1	C, D, E, F, G	
- 8	35-554015	.	BRACKET, Attaching LH	1		
	35-554015-1	.	BRACKET, Attaching RH	1		
- 9	35-554016	.	CHANNEL, Inlet	2		
-10	35-554017	.	FAIRING, Inlet	1		
		(ATTACHING PARTS)									
	AN515-6R7	.	SCREW	26		
	AN960D6L	.	WASHER	26		
	WIS632-BC100	.	NUTPLATE	26		
		-----* -----</td <td data-kind="ghost"></td>									
-11	35-554018	.	SCOOP ASSY, Air Inlet	1		
		(ATTACHING PARTS)									
-12	105774C-ZA00410	.	HINGE PIN	1		
		-----* -----</td <td data-kind="ghost"></td>									
	35-554019	.	ARM ASSY, Scoop Control	1		
		(ATTACHING PARTS)									
	AN3-6A	.	BOLT	1		
	AN960-10	.	WASHER	1		
	AN365-1032	.	NUT	1		
		-----* -----</td <td data-kind="ghost"></td>									
-13	35-554019-6	.	ARM	1		
-14	LS-3	.	BEARING	1		
-15	35-554020	.	TUBE, Scoop Control	1		
		(ATTACHING PARTS)									
	AN960-416L	.	WASHER	2		
	AN380-2-2	.	COTTER PIN	4		
		-----* -----</td <td data-kind="ghost"></td>									
-16	35-554021	.	LINK, Scoop Control	1		
		(ATTACHING PARTS)									
	AN392-11	.	PIN	2		
	AN380-2-2	.	COTTER PIN	2		
		-----* -----</td <td data-kind="ghost"></td>									
-17	35-554003-14	.	BRACKET	1		
-18	35-554003-16	.	BRACKET	1		
-19	35-554003-10	.	HINGE, Scoop Half	1		
-20	35-554003-12	.	HINGE, Fairing Half	1		
-21	35-554010	.	GASKET, Top Skin	1		
	35-554004	.	PAN ASSY, Evaporative	1		

MODEL 35 THRU G35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1	2	3	4	5	6	7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
138											
-22	35-554004-16	.	.	.	WELD ASSY, Pan	1	
-23	35-554004-4	.	.	.	SEAL, 9.18 In. Long	2	
-24	35-554004-8	.	.	.	SEAL, 9.75 In. Long	2	
-25	35-554004-6	.	.	.	SEAL, 6.75 In. Long	32	
-26	35-554004-10	.	.	.	SPACER	32	
-27	490	.	.	.	WICK, Air Conditioner (Supercedes 35-554022-2 & -4)	31	
-28	35-554023	.	.	.	RACK, Wick	1	
-29	35-554025	.	.	.	BAFFLE, Wick	1	
-30	35-554012	.	.	.	NUT, Pan Attaching	4	
-31	35-554013	.	.	.	HOOK, Pan Attaching	4	
-32	35-554014	.	.	.	PLATE, Air Diffuser	1	
					(ATTACHING PARTS)						
	AN530-4-8	.	.	.	SCREW	8	
					-----*						
-33	114232-00408	.	EXTRUSION, Air Scoop	1	
-34	35-554003-26	.	GASKET, Pan	1	
-35	35-554011	.	BRACKET, Mounting	1	
			(ATTACHING PARTS)								
	AN3-4A	.	BOLT	2	
	AN960-10	.	WASHER	2	
	AN365-1032	.	NUT	2	
			-----*								
-36	35-554026	.	PIN, Control Attaching	1	
-37	102933S5ZH0096	.	SPACER	1	
	AN960-416	.	WASHER	1	
	AN365-428	.	NUT	1	
-38	35-344006	.	COVER, Antenna Signal Light	1	
			(ATTACHING PARTS)								
	AN526-632-8	.	SCREW	2	
	AN960-6	.	WASHER	2	
	AN365-632	.	NUT	2	
			-----*								
-39	NE48	.	BULB	1	
	35-554001SA8	.	LIGHT ASSY, Antenna Signal	1	
-40	2610	.	SOCKET, Light	1	
			(ATTACHING PARTS)								
	AN515-8-6	.	SCREW	1	
	AN365-832	.	NUT	1	
			-----*								
-41	35-554028	.	ANGLE, Antenna Signal Light Attaching	1	
-42	1/4 ID X 1/16	.	DRAIN TUBE, Air Conditioner To Shutoff Valve	1	
-43	AN840-4D	.	ADAPTER	2	
-44	104HD1/8X1/8	.	VALVE, Drain Shutoff	1	
-45	35-050048-6	.	ESCUTCHEON, Drain Shutoff Valve	1	F, G
			(ATTACHING PARTS)								
	NAS222-10	.	SCREW	2	
	AN365-428	.	NUT	2	
			-----*								
-46	1/4 ID X 1/16	.	DRAIN TUBE, Shutoff Valve to Y	1	
-47	1/4 ID X 1/16	.	OVERFLOW TUBE, Air Conditioner to Y	1	
-48	35-554027	.	Y CONNECTOR ASSY, Drain & Overflow Lines	1	
-49	1/4 ID X 1/16	.	DRAIN & OVERFLOW TUBE, Y Connector to Skin	1	
-50	AN840-4D	.	ADAPTER	1	
-51	AC-865-1	.	FLANGE	1	
-52	35-050048-2	.	COVER	1	
-53	35-050048-4	.	PAN	1	
-54	5952-1/4	.	LATCH, Wick Pan	4	
-55	35-554004-20	.	SPACER	64	
-56	100951N032ZB	.	WASHER	4	
-57	112416-03400	.	EXTRUSION, Wick Pan	1	